


REAR A-ARM GUARDS (ALUMINIUM)

CAN AM

Outlander 500/700 (2023+)

Kood 02.30908VP

Version 14082023

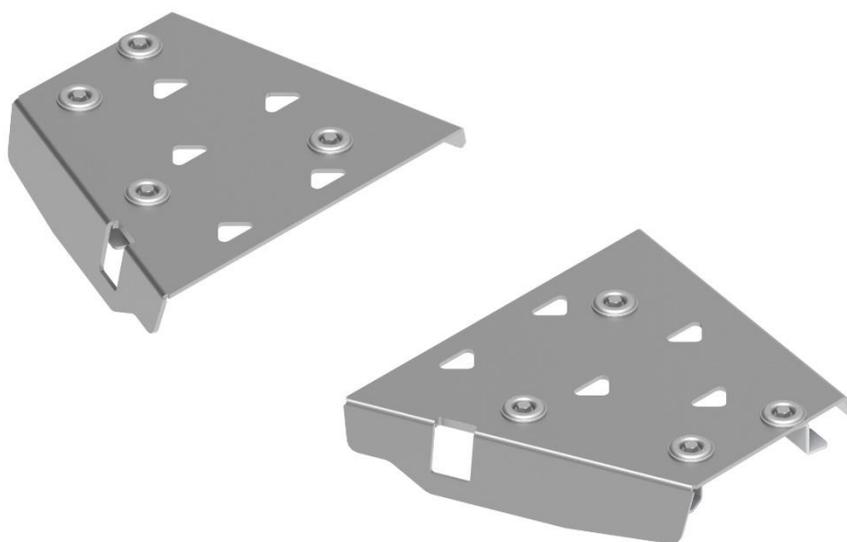


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right arm guard	02.30908K	1
2	Rear left arm guard	02.30909K	1
3	Installation bracket	02.5710	8
4	Dished washer	14.503	8
5	Bolt M6x12 DIN 933	OT.02.02.030	8
6	Washer Ø6/15 SFS 3738	OT.04.03.020	8

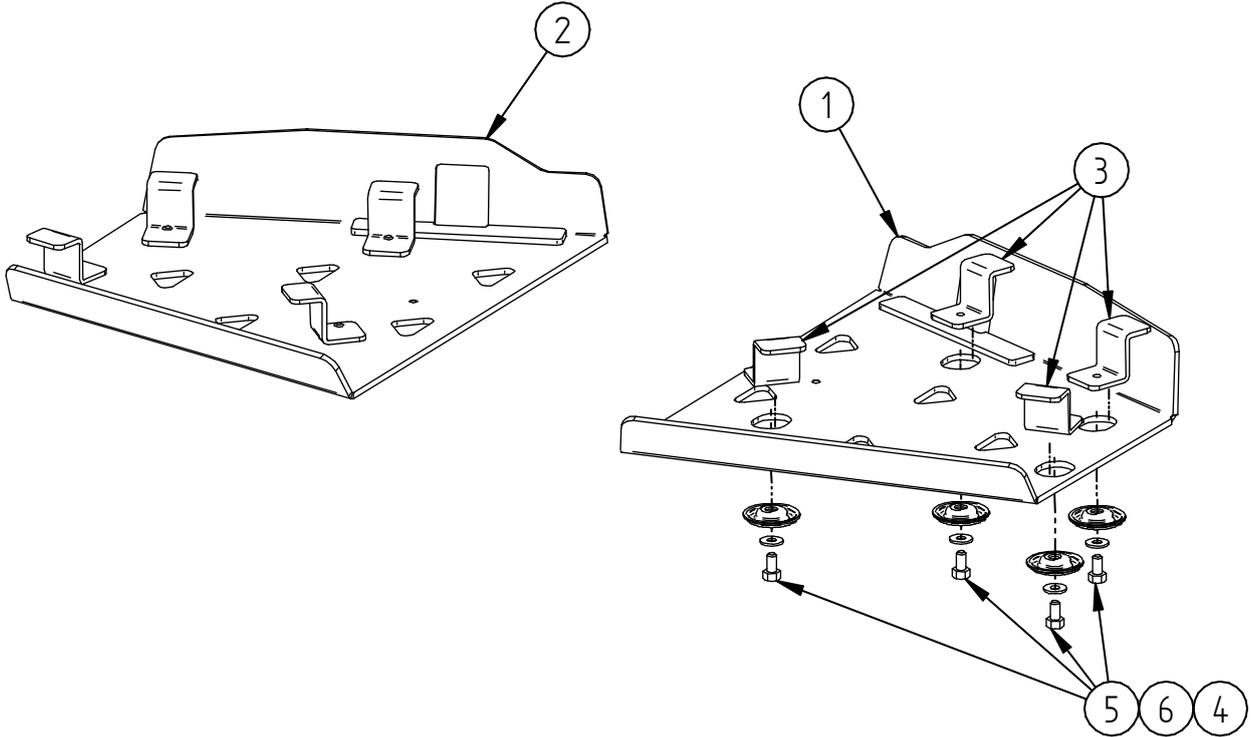

TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10mm

FITTING INSTRUCTIONS




NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

Step 1

Install rear arm protections 02.30908K and 02.30909K. For installing use brackets 02.5710.

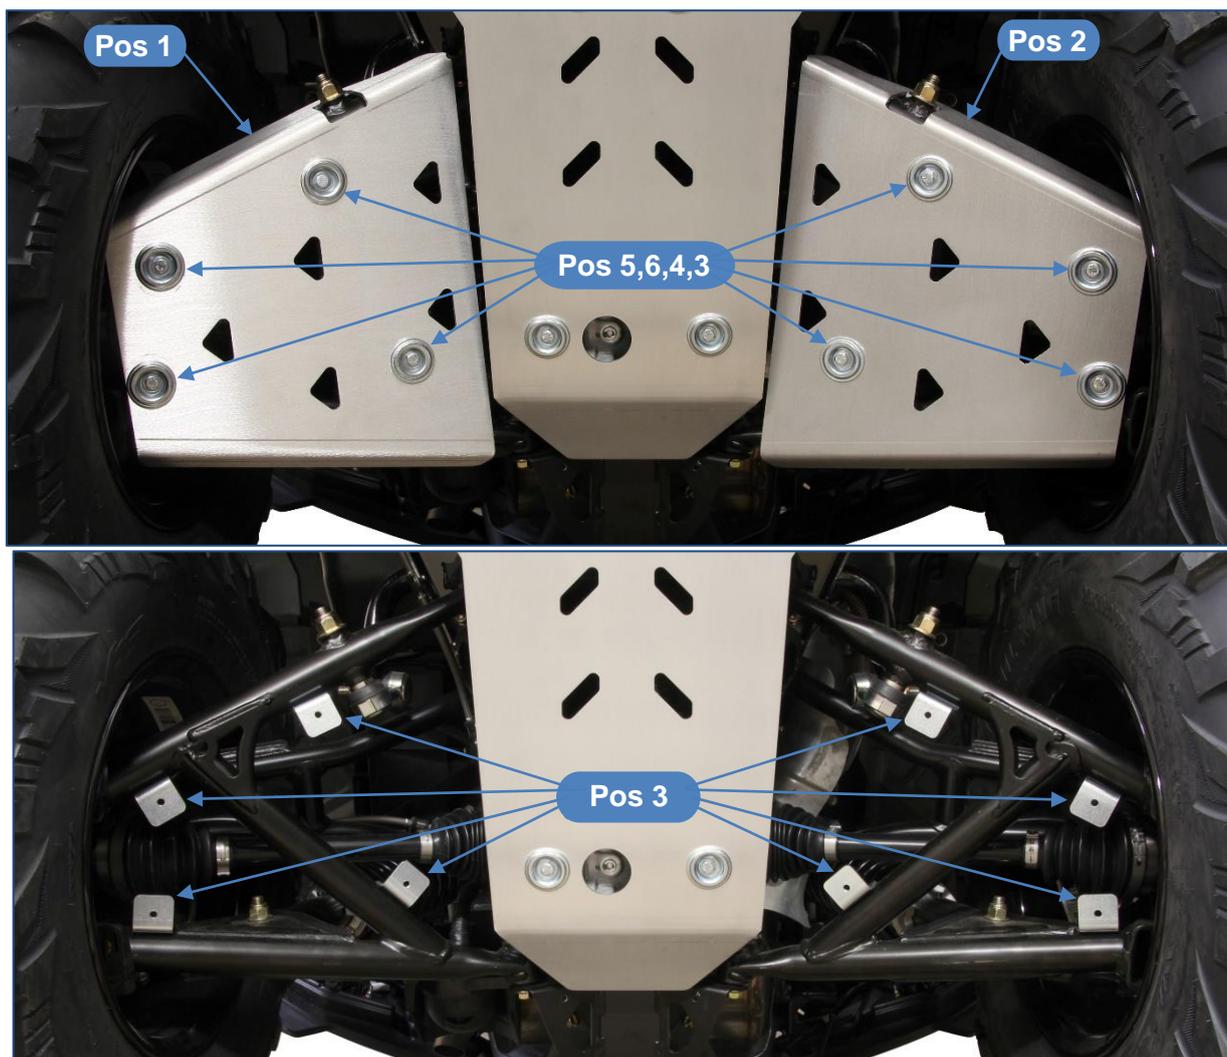

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

