


FRONT A-ARM GUARDS (PLASTIC)

DOWNLOAD MULTILINGUAL
USER MANUAL

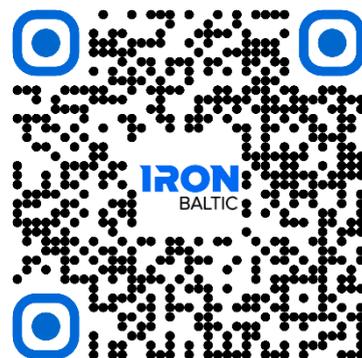

code.ironbaltic.com/u/LyDE9FYn

CAN AM

Outlander 500/700 (2023+)

Code 02.31006VP

Version 28082023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front right arm guard	02.31006	1
2	Front left arm guard	02.31007	1
3	Installation bracket	02.8210	4
4	Dished washer	14.503	6
5	Bolt M6x16 DIN 933	OT.02.02.050	4
6	Bolt M6x25 DIN 933	OT.02.02.070	2
7	Washer Ø6/15 SFS 3738	OT.04.03.020	8
8	Nyloc nut M6 DIN985	OT.03.02.030	2

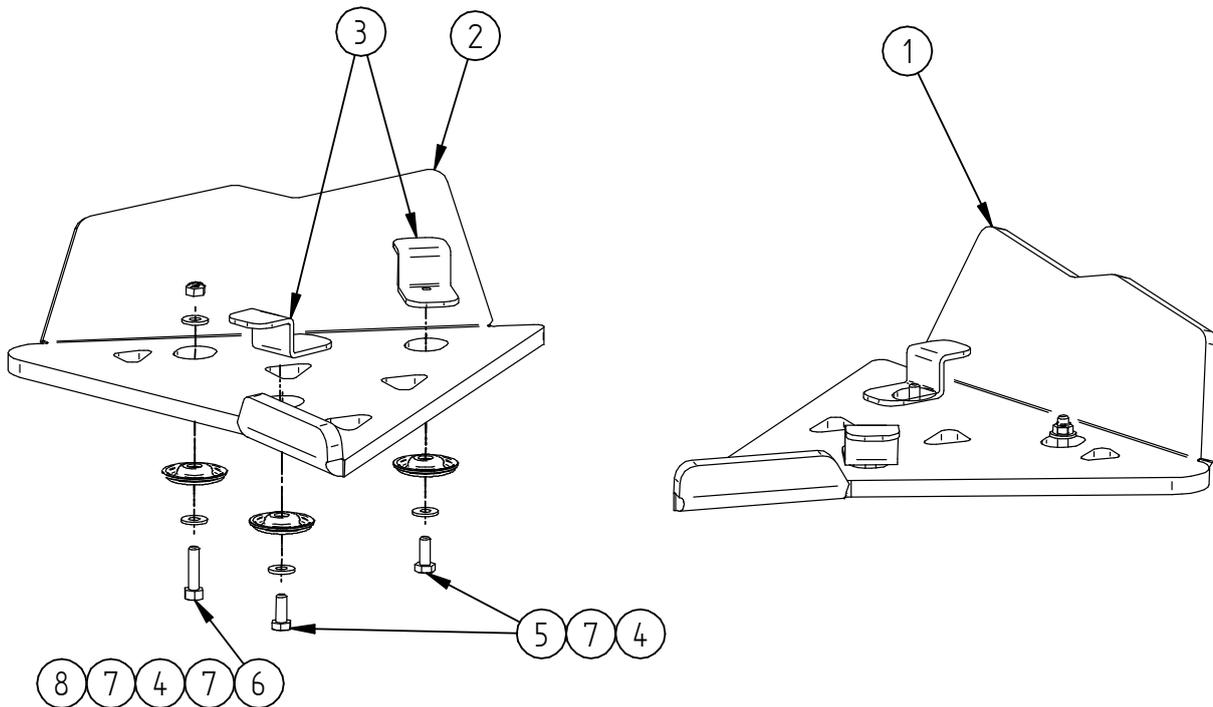

TOOLS REQUIRED FOR INSTALLATION:

- Spanner 10mm
- Socket wrench 10mm

FITTING INSTRUCTIONS





NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

Step 1

Install front arm protections 02.31006 and 02.31007. For installing use brackets 02.8210.

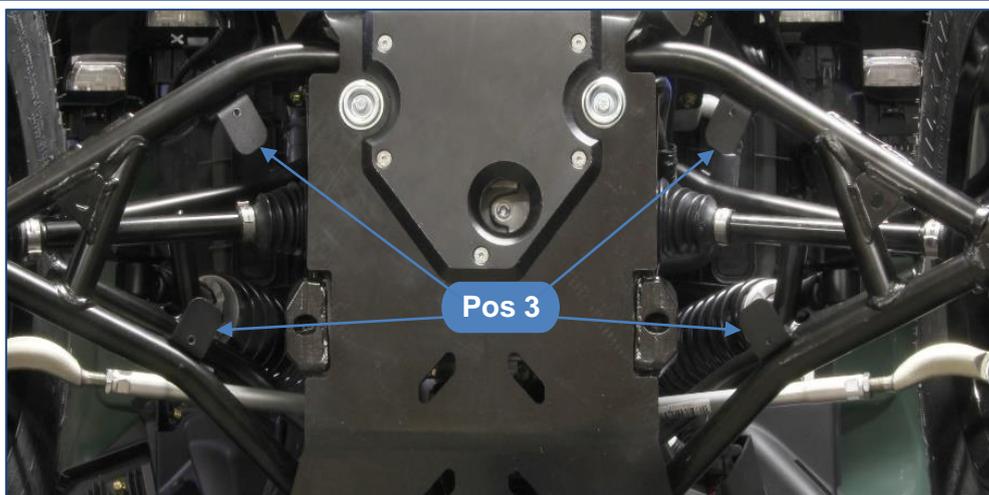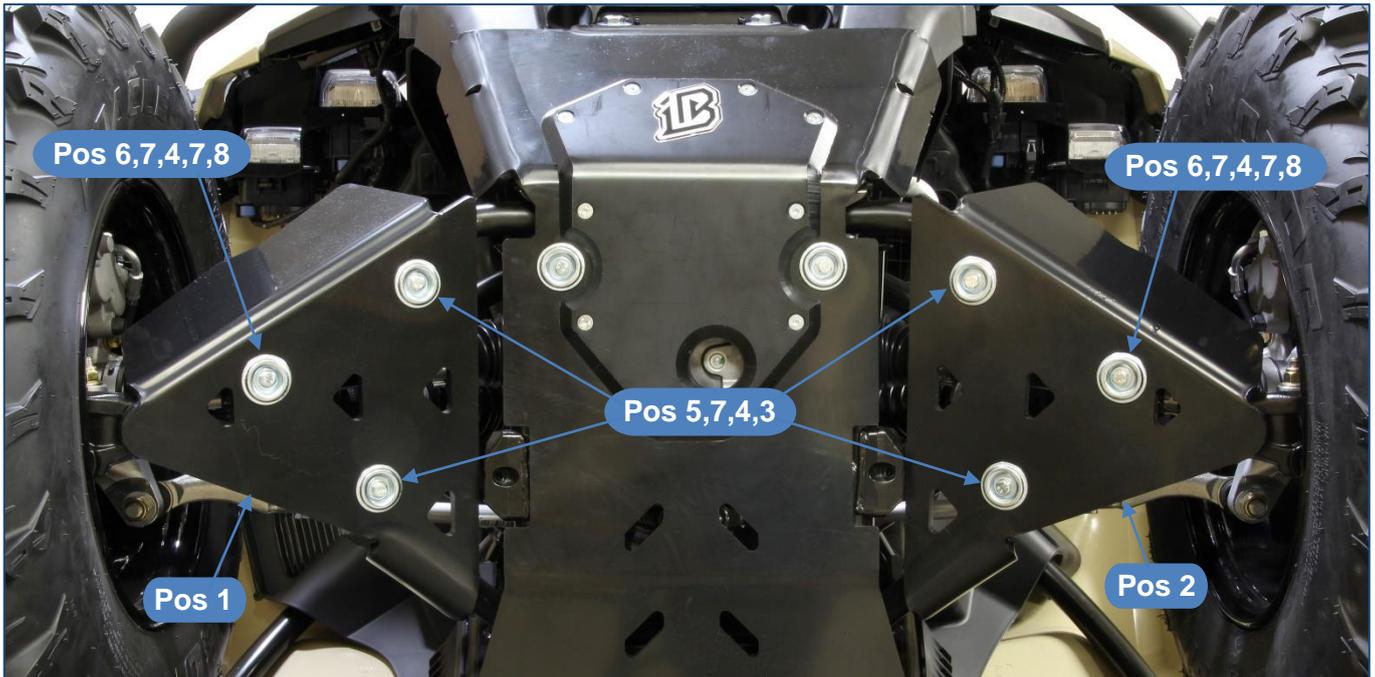

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

