



## REAR A-ARM GUARDS (PLASTIC)

### CAN AM

### Outlander 500/700 (2023+)

Code 02.31008VP

Version 28082023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Kood	Kogus
1	Rear right arm guard	02.31008	1
2	Rear left arm guard	02.31009	1
3	Installation bracket	02.5710	8
4	Dished washer	14.503	8
5	Bolt M6x16 DIN 933	OT.02.02.050	8
6	Washer Ø6/15 SFS 3738	OT.04.03.020	8

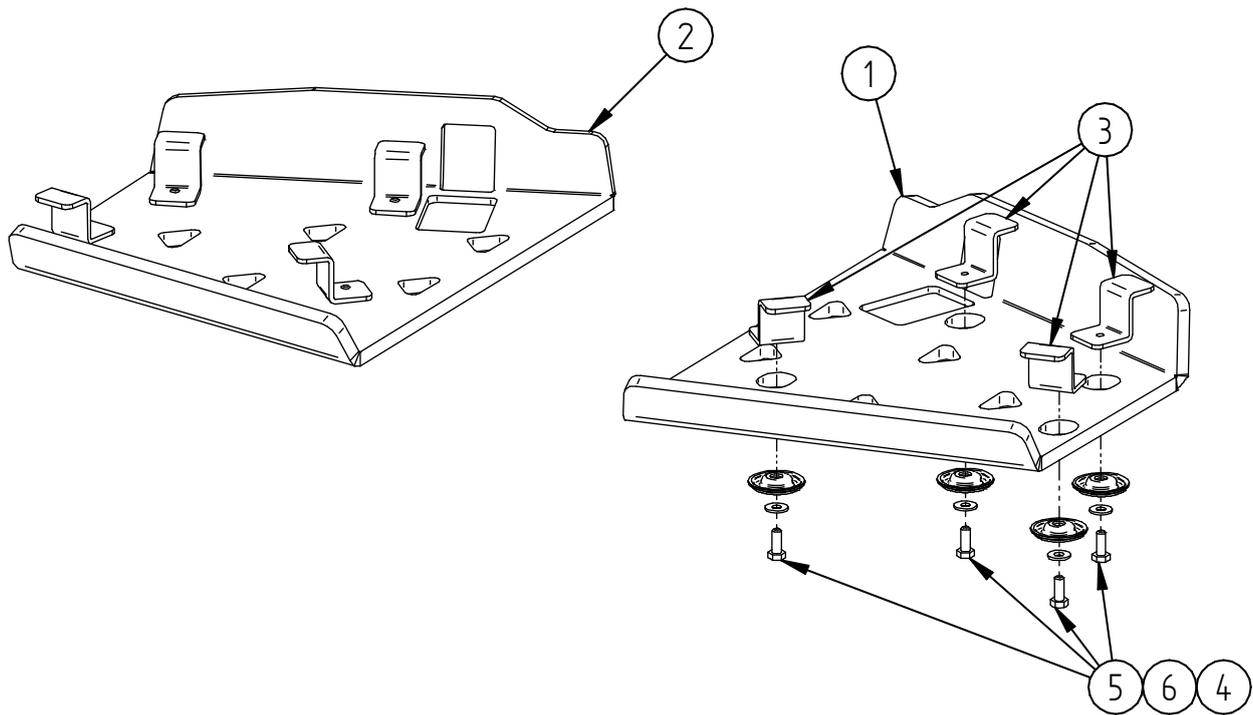

## TOOLS REQUIRED FOR INSTALLATION:



- Socket wrench 10mm

# FITTING INSTRUCTIONS




**NB!**

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

## Step 1

Install rear arm protections 02.31008 and 02.31009. For installing use brackets 02.5710.

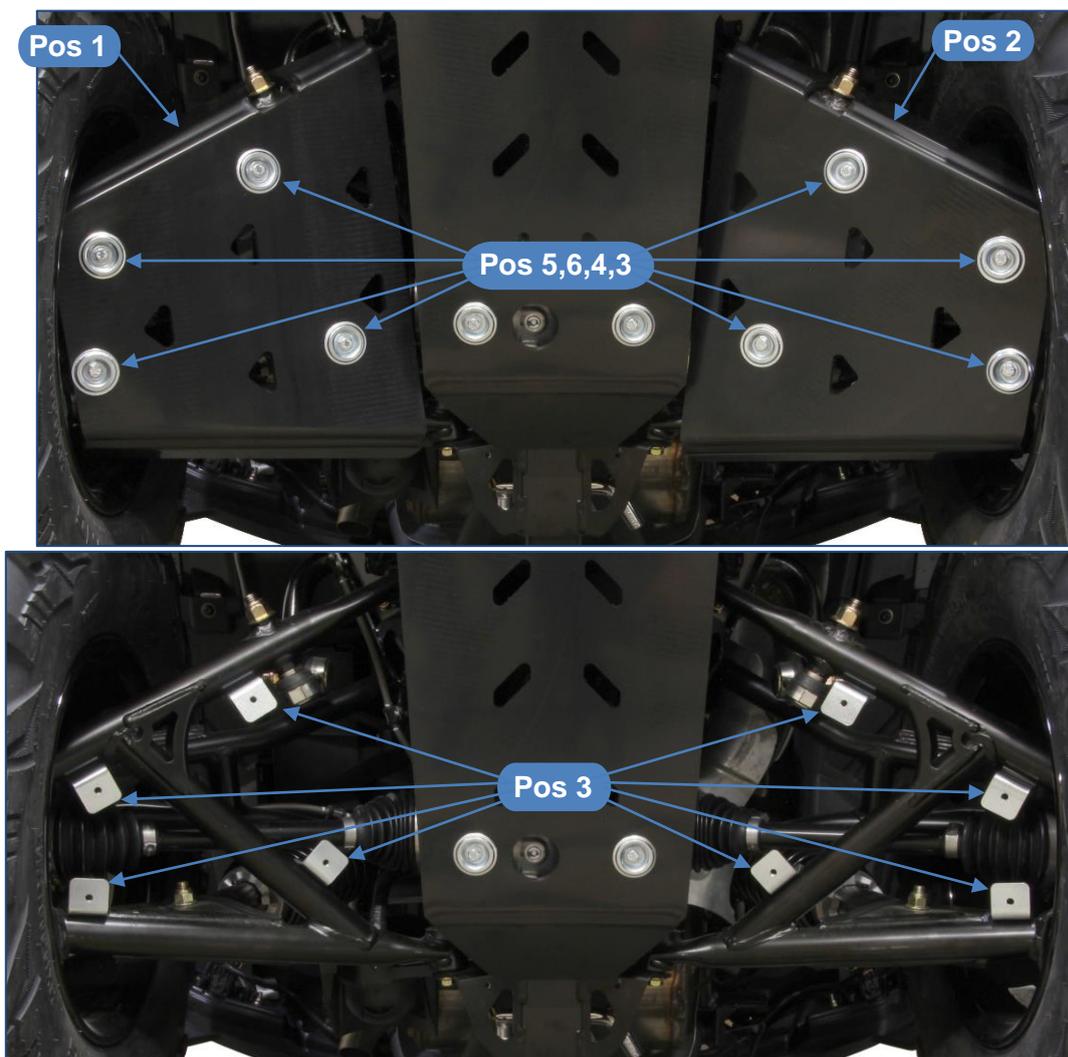

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

