

IRON BALTIC

ALUMINIUM SKID PLATE

CFMOTO UFORCE U10 PRO

Code 02.33300

Version 31012025



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/iByrn0LP

SPECIFICATION

Pos.	Description	Code	Amount
1	Front part	02.33301K	1
2	Middle part	02.33302	1
3	Rear part	02.33303	1
4	Right side protection	02.33304K	1
5	Left side protection	02.33305K	1
6	Right front A-arm protection	02.33306	1
7	Left front A-arm protection	02.33307	1
8	Right rear A-arm protection	02.33308	1
9	Left rear A-arm protection	02.33309	1
10	Connecting plate	02.5006	18
11	Dished washer	14.503	87
12	Bolt M6x14 DIN933	OT.02.02.040	48
13	Bolt M6x16 DIN933	OT.02.02.050	25
14	Bolt M6x25 DIN933	OT.02.02.070	6
15	Bolt M6x30 DIN933	OT.02.02.080	2
16	Bolt M8x20 DIN933	OT.02.02.180	4
17	Bolt M8x25 DIN933	OT.02.02.190	2
18	Washer Ø6/15 SFS3738	OT.04.03.020	81





NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10 mm
- Socket wrench 13 mm
- Allen key 4 mm
- Allen key 6 mm

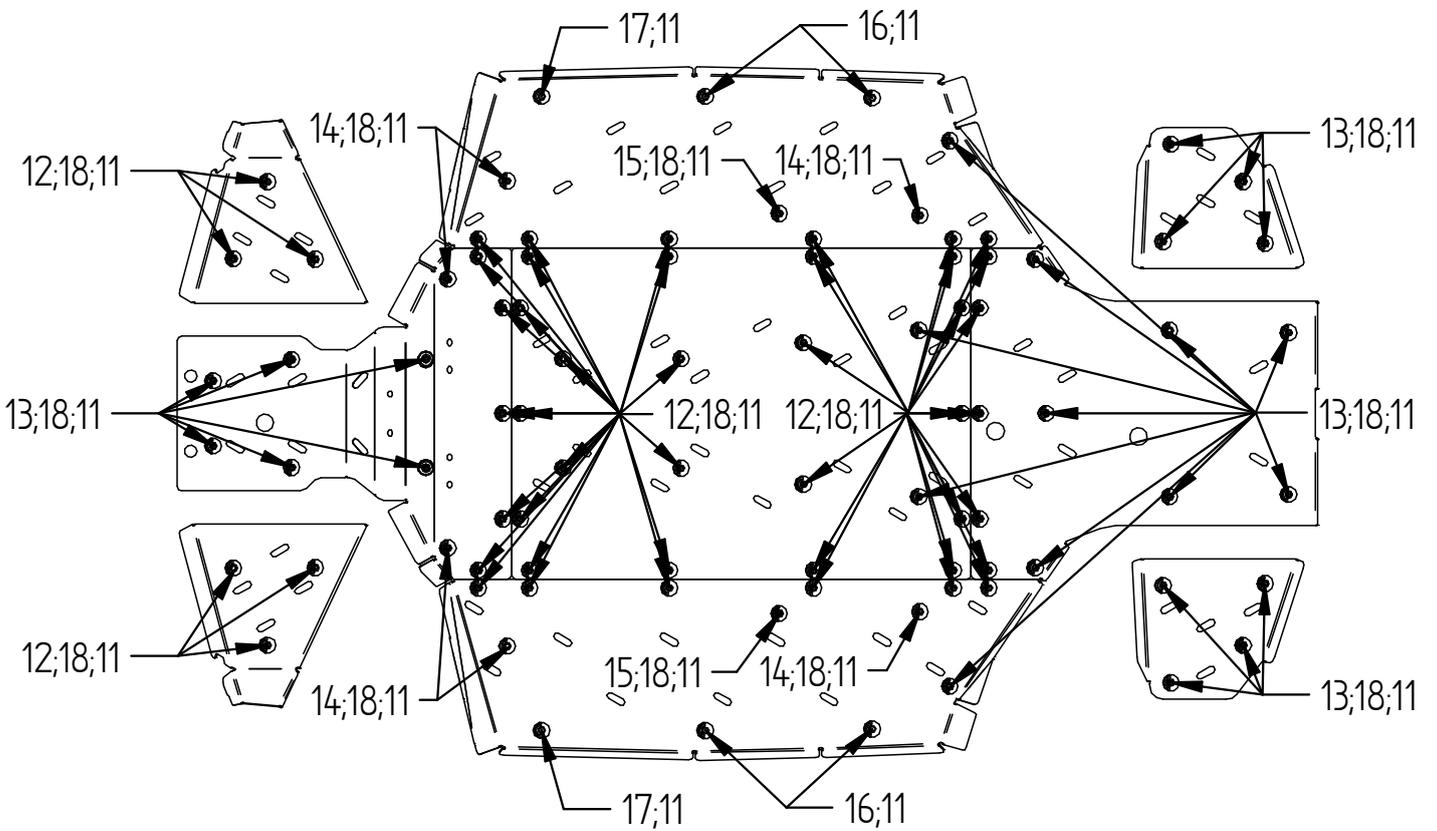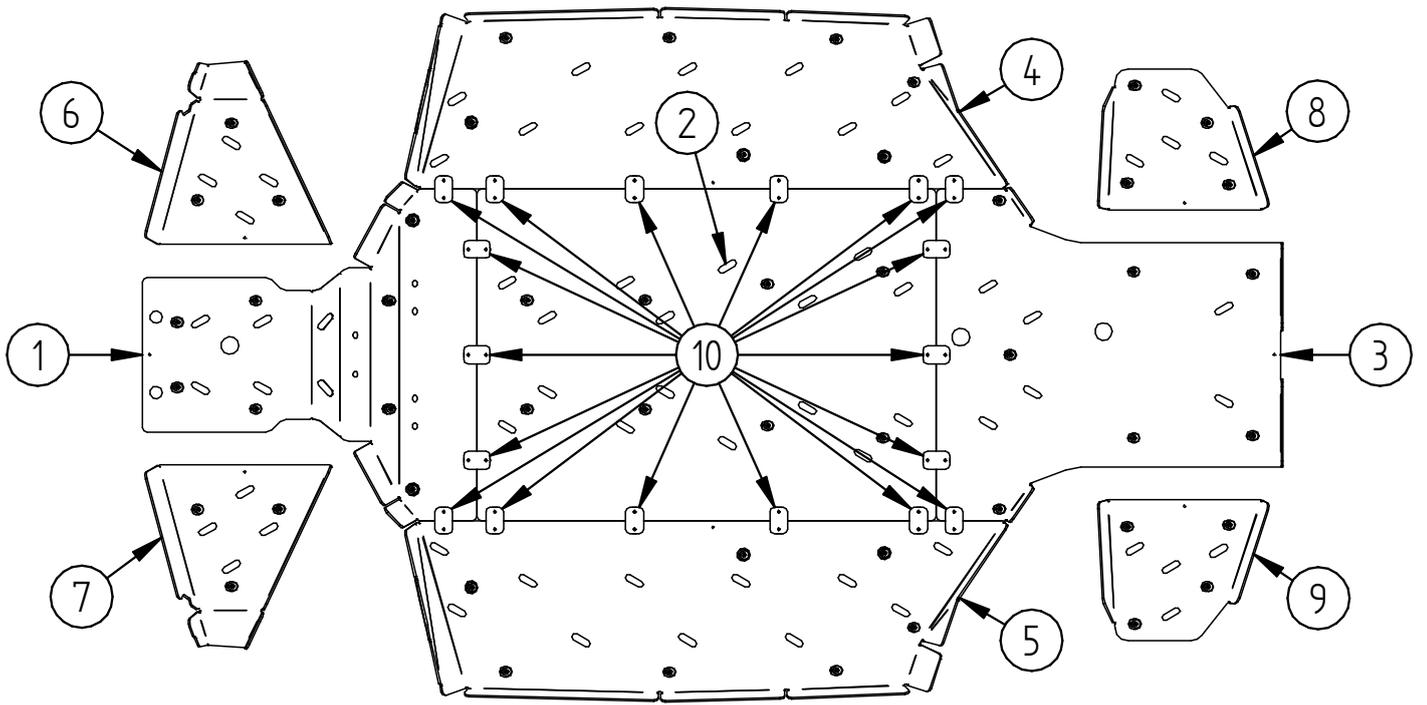


FITTING INSTRUCTIONS

Step 1 Remove all original skid plate parts.




Step 2 Install front part (Pos.1). For fastening use M6x16 bolts (Pos.13), M6x25 bolts (Pos.14), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

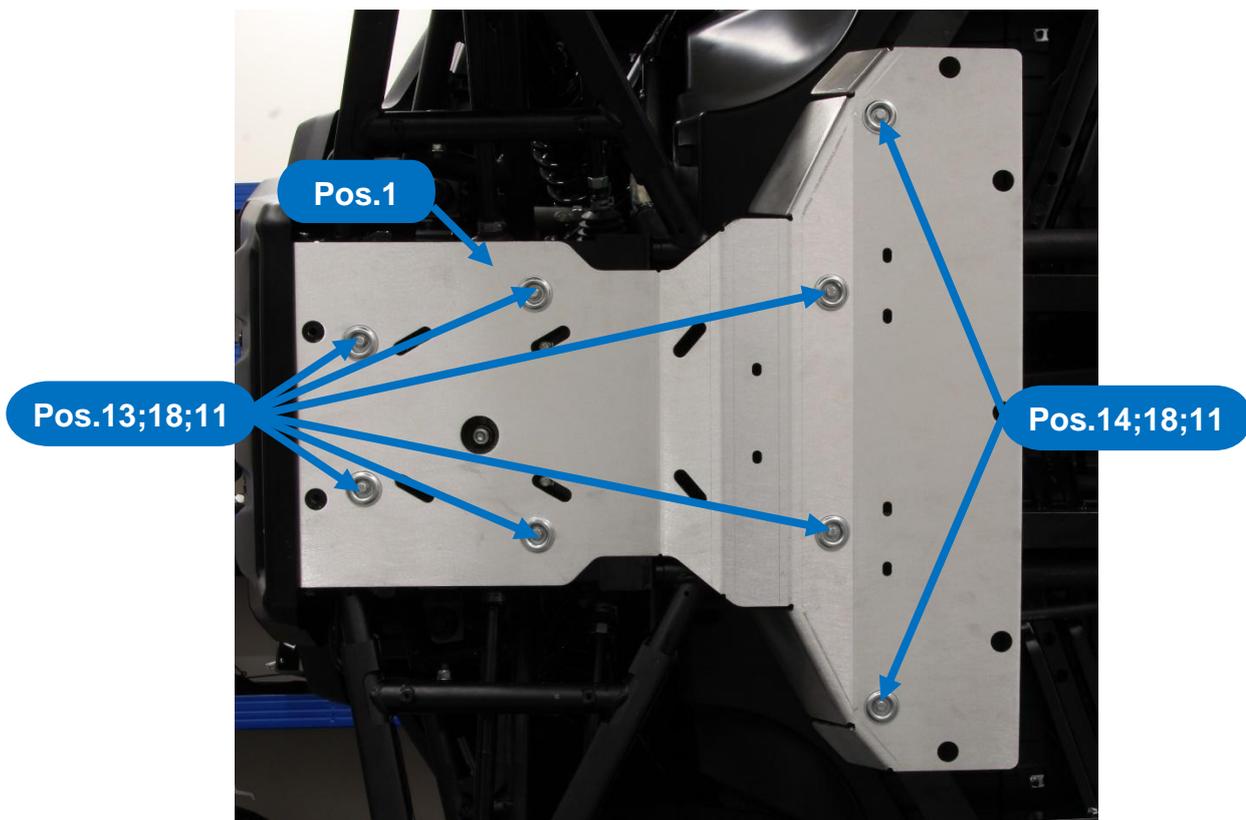


Step 3

Install connecting plates (Pos.10) to front part (Pos.1). For fastening use M6x14 bolts (Pos.12), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

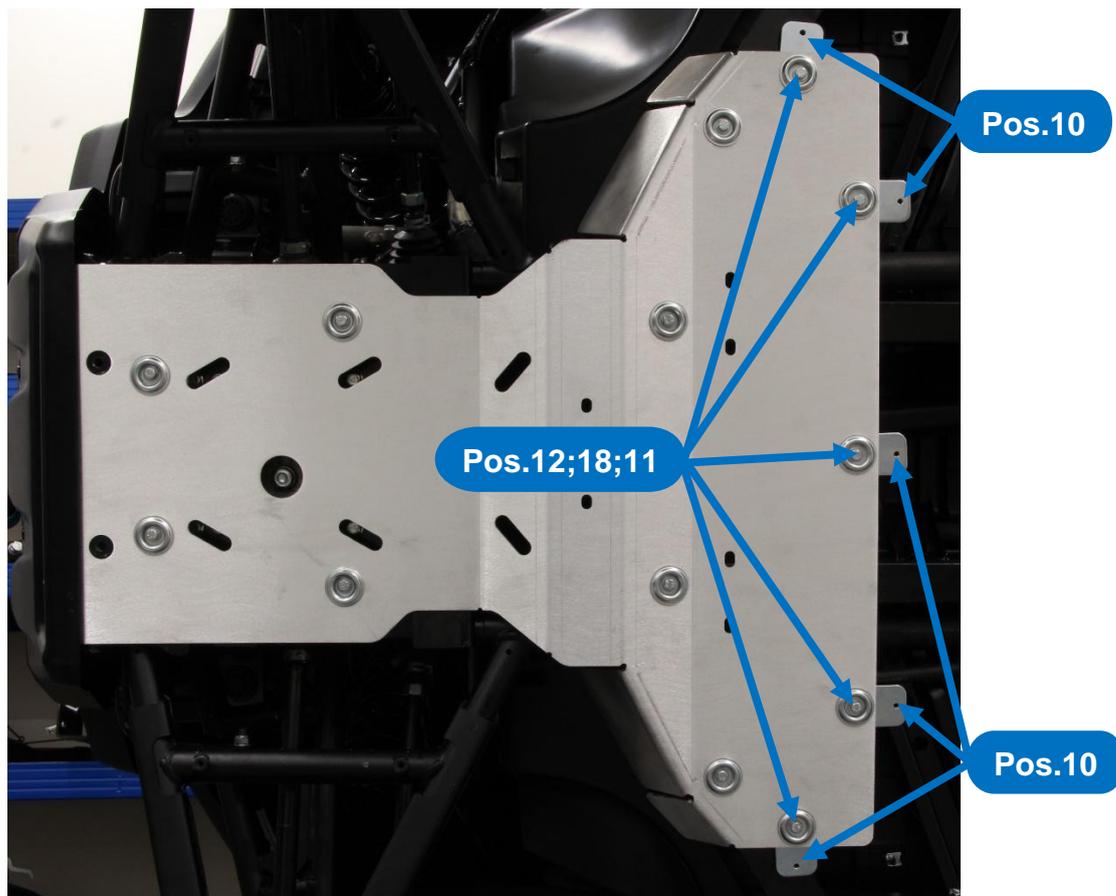


Step 4

Install middle part (Pos.2). For fastening use M6x14 bolts (Pos.12), M6x16 bolts (Pos.13), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

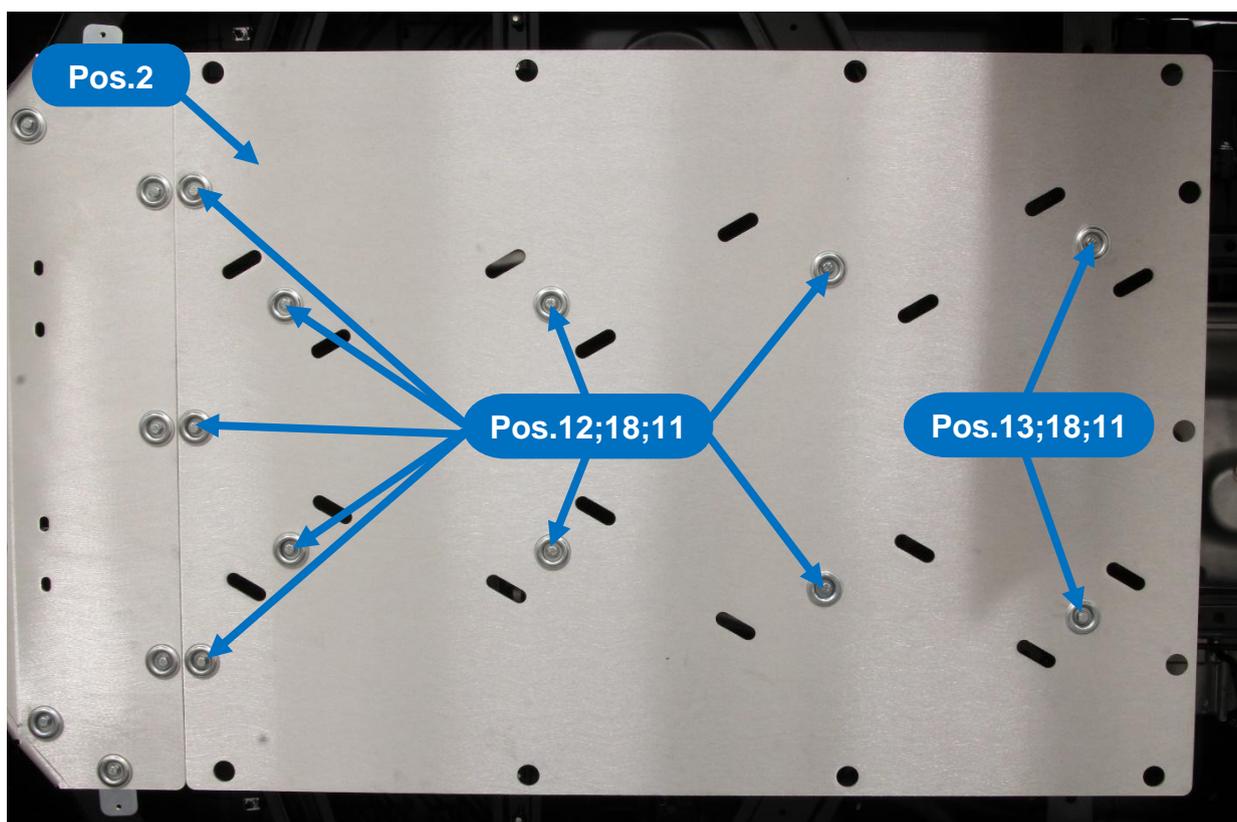


Step 5

Install connecting plates (Pos.10) to middle part (Pos.2). For fastening use M6x14 bolts (Pos.12), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

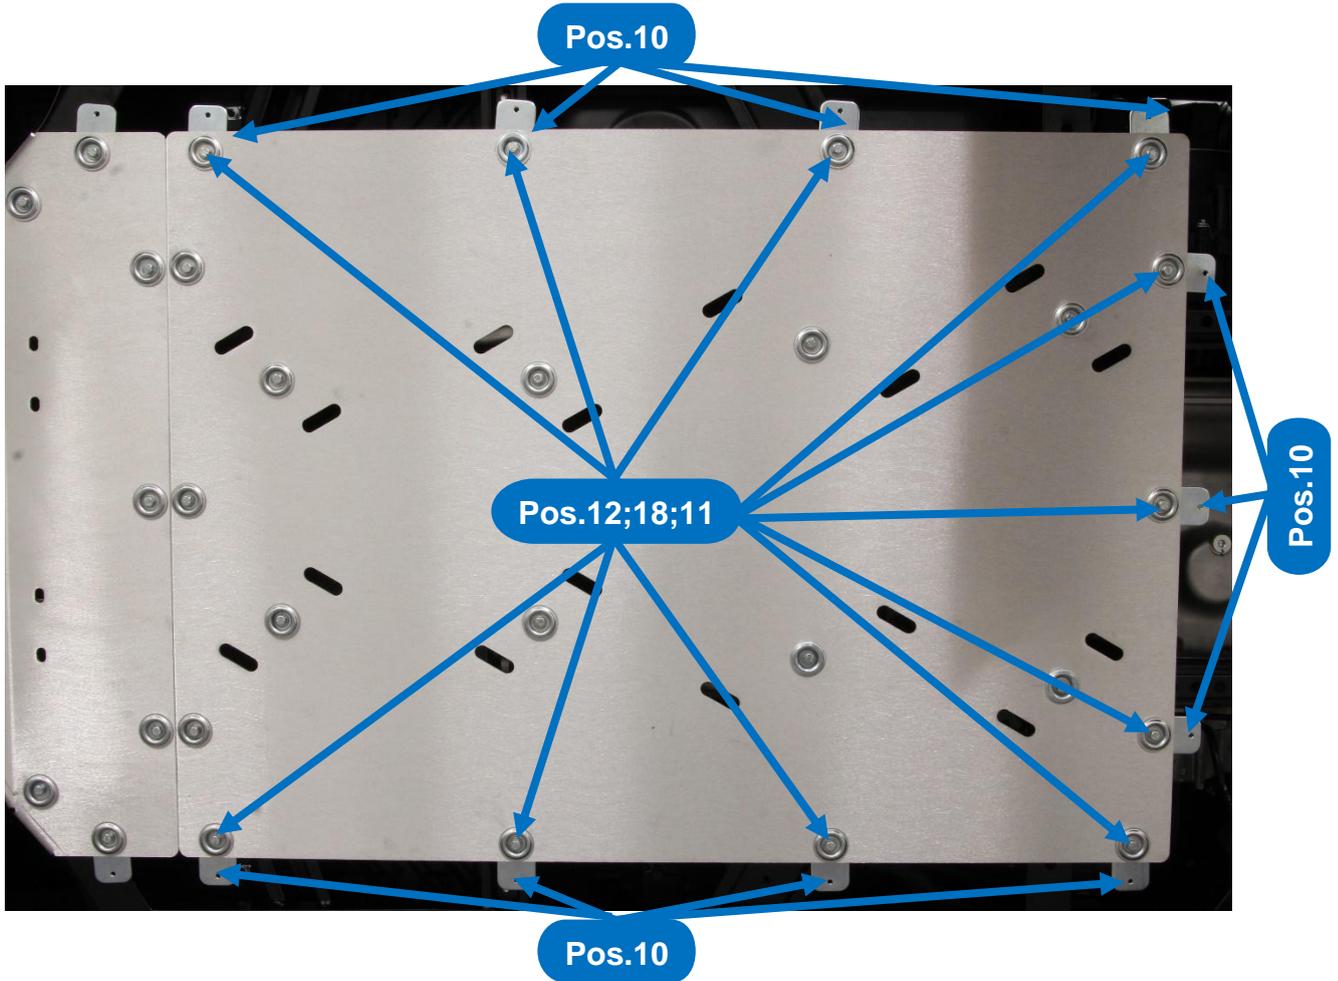


Step 6

Install rear part (Pos.3). For fastening use M6x14 bolts (Pos.12), M6x16 bolts (Pos.13), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

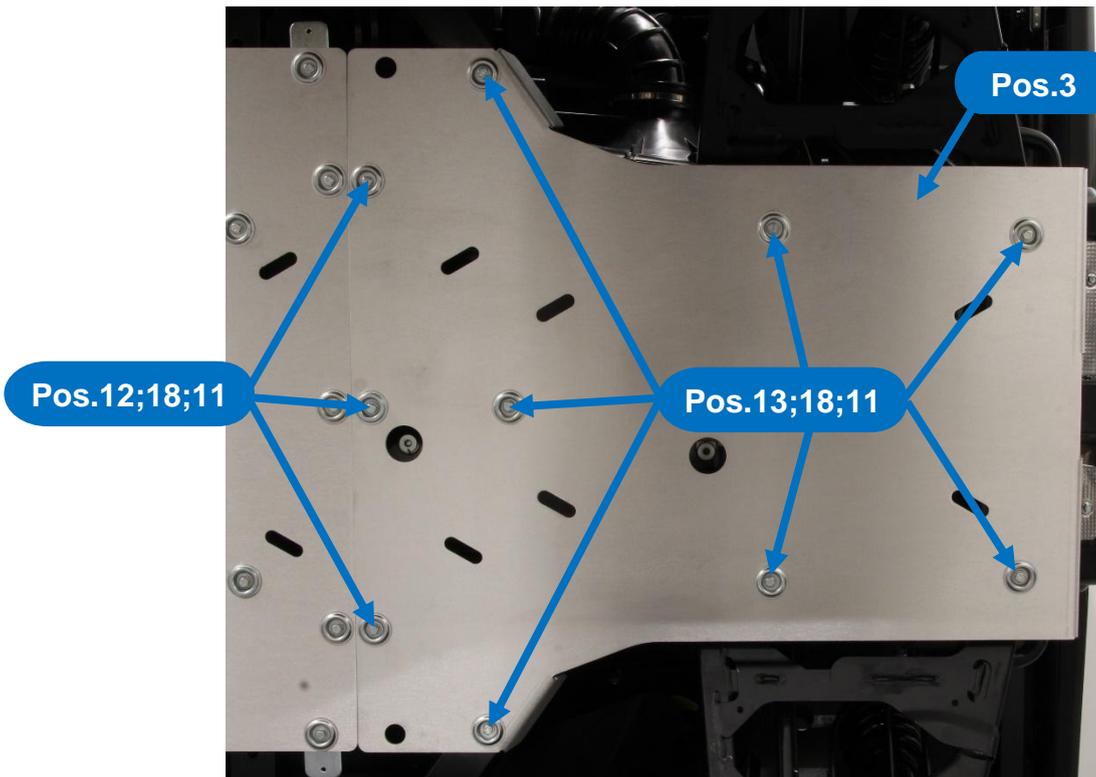


Step 7

Install connecting plates (Pos.10) to rear part (Pos.3). For fastening use M6x14 bolts (Pos.12), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

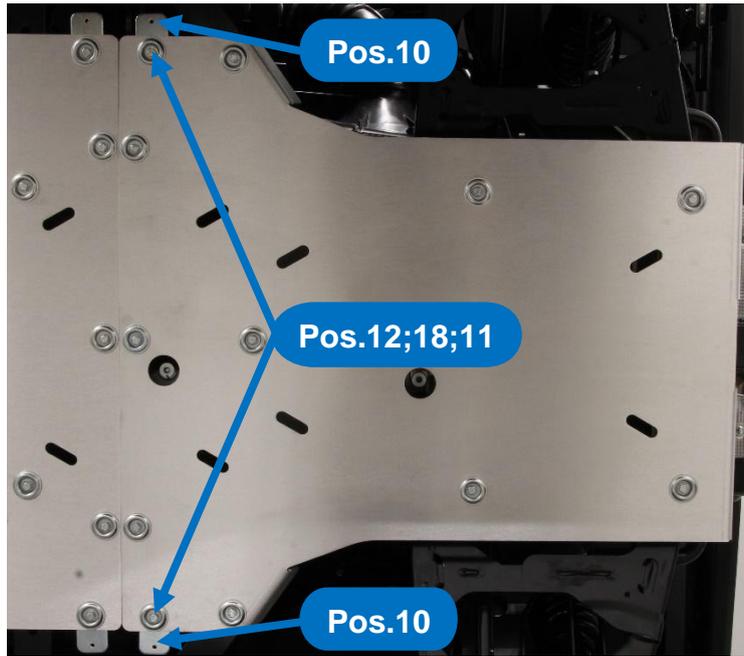


Step 8

Install right side protection (Pos.4) and left side protection (Pos.5). For fastening use M6x14 bolts (Pos.12), M6x16 bolts (Pos.13), M6x25 bolts (Pos.14), M6x30 bolts (Pos.15), M8x20 bolts (Pos.16), M8x25 bolts (Pos.17), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

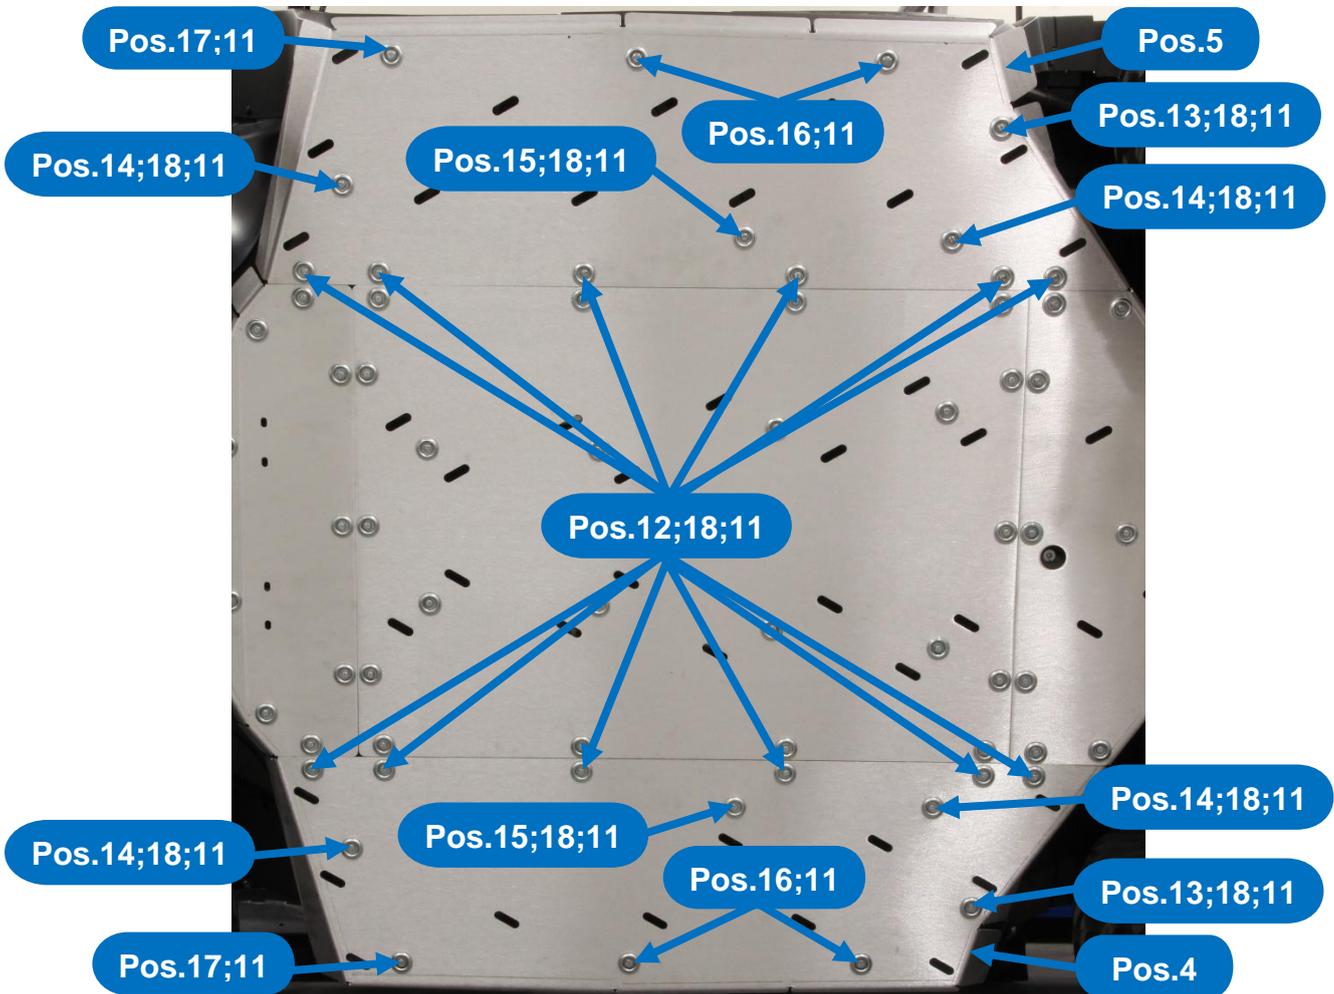


Step 9

Install front right (Pos.6) and front left A-arm protection (Pos.7). For fastening use M6x14 bolts (Pos.12), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

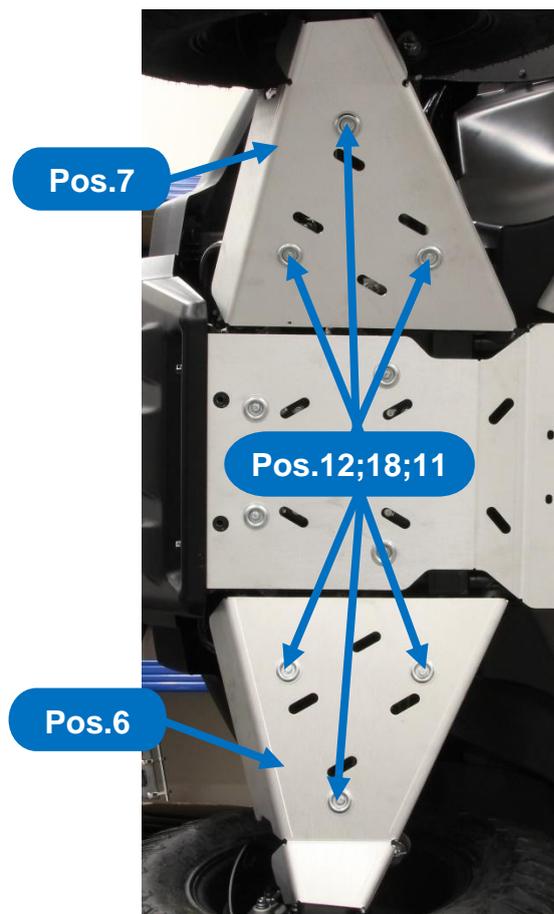

Step 10

Install rear right (Pos.8) and rear left A-arm protection (Pos.9). For fastening use M6x16 bolts (Pos.13), Ø6/15 washers (Pos.18) and dished washers (Pos.11).

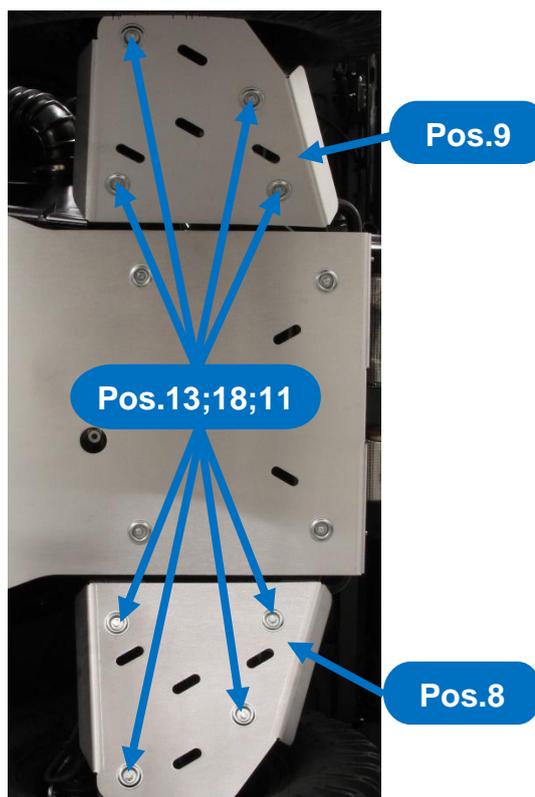



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

