

FRONT A-ARM GUARDS (PLASTIC)


CAN-AM

OUTLANDER 850/1000 (2025+)

OUTLANDER 850/1000 MAX (2025+)

Code 02.33406VP

Version 22052025

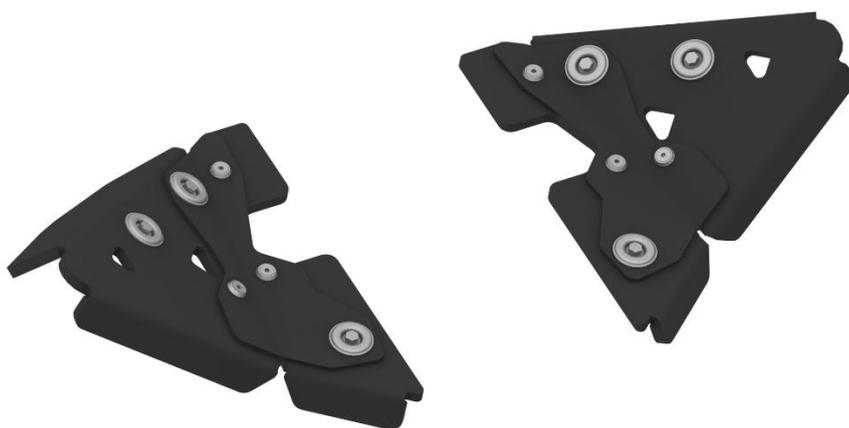


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front right control arm protection part 1	02.33406K	1
2	Front right control arm protection part 2	02.33407K	1
3	Front right control arm protection connecting plate	02.33408	1
4	Front left control arm protection part 1	02.33409K	1
5	Front left control arm protection part 2	02.33410K	1
6	Front left control arm protection connecting plate	02.33411	1
7	Bracket 1	02.5710	2
8	Bracket 2	02.8210	2
9	Conical washer 6	14.502	6
10	Dished washer	14.503	6
11	Bolt M6x20 DIN7991	OT.02.04.030	6
12	Bolt M6x20 DIN933	OT.02.02.060	4
13	Bolt M6x25 DIN933	OT.02.02.070	2
14	Washer Ø6/15 SFS3738	OT.04.03.020	6
15	Washer Ø6/18 DIN9021	OT.04.02.020	2
16	Nyloc nut M6 DIN985	OT.03.02.030	2

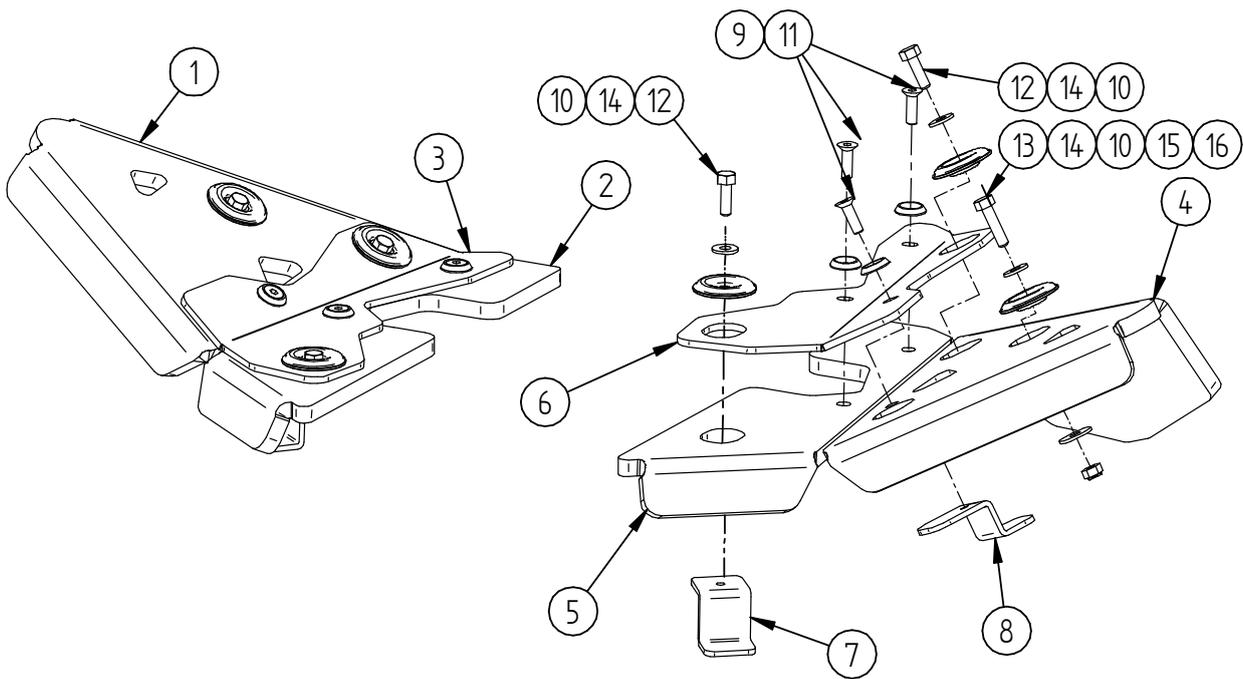

TOOLS REQUIRED FOR INSTALLATION:



- Socket wrench 10mm
- Spanner 10mm
- Allen wrench 4mm


FITTING INSTRUCTIONS





NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**


Step 1 Assemble the front control arm protections.

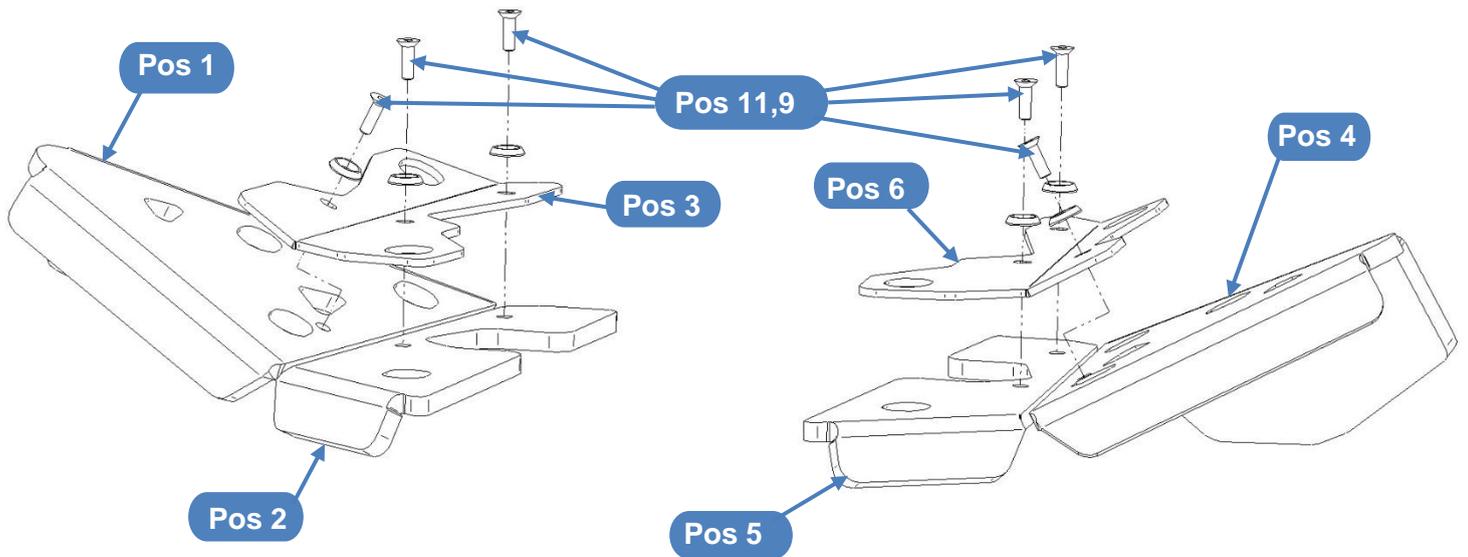

Step 2 Install protections to the front control arms.

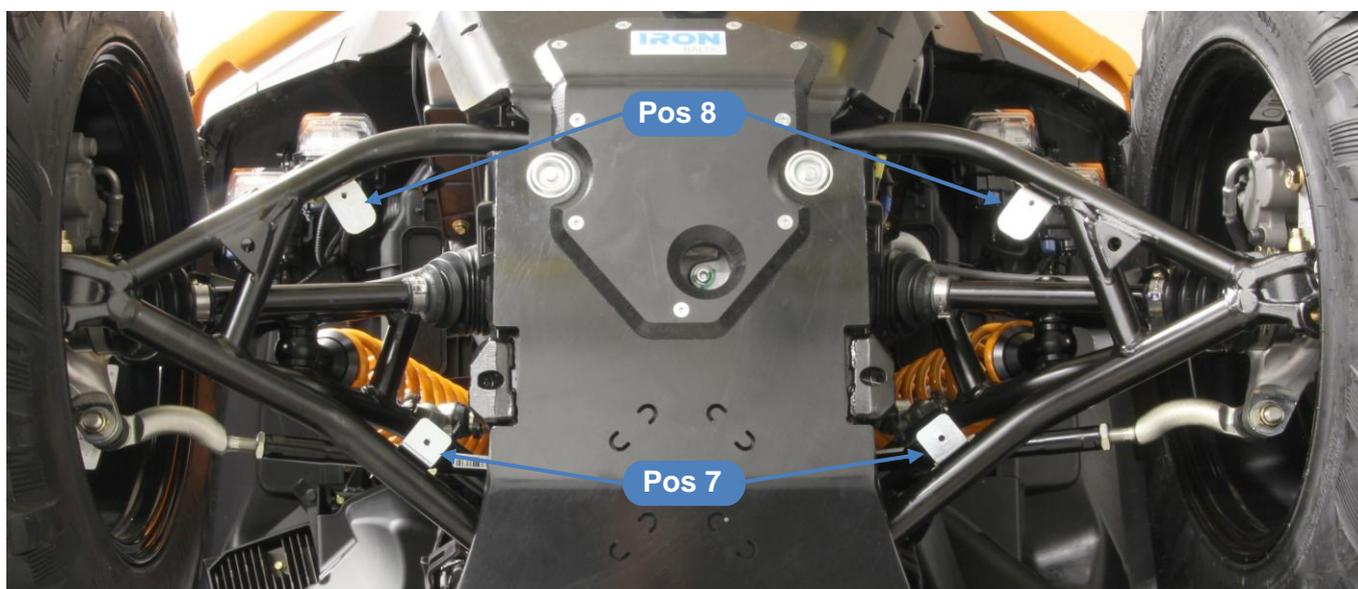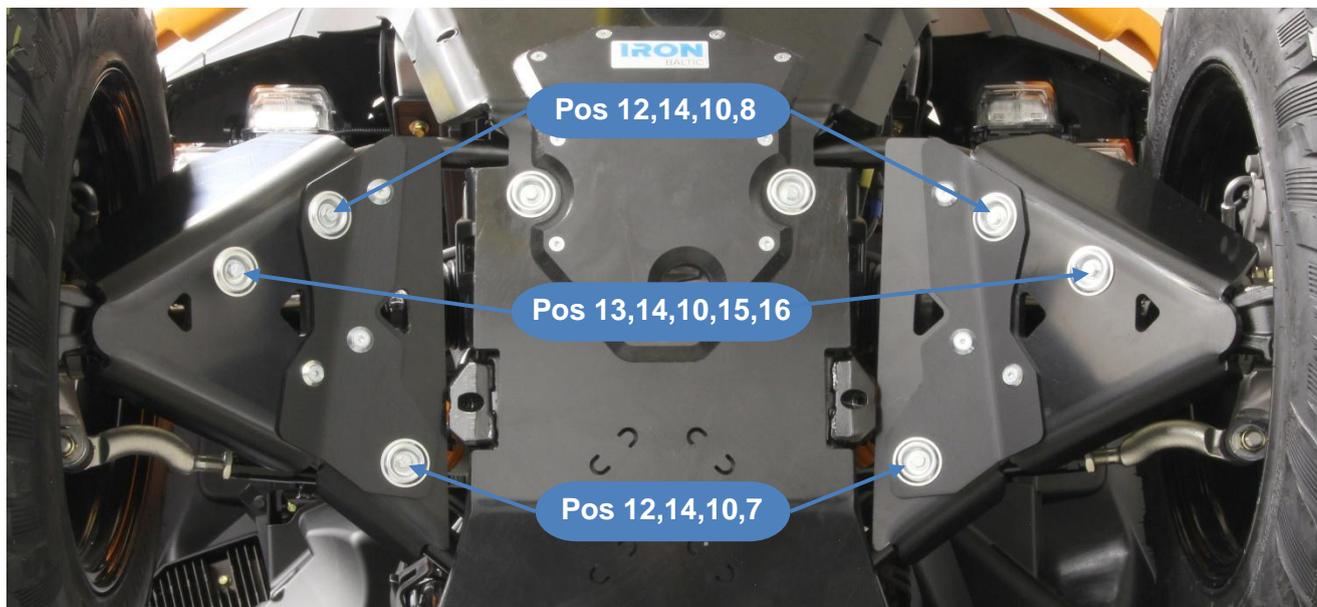

NB! If you want to use skid plate with the original Can-Am snow plow adapter, install only parts 02.33406K and 02.33409K (Pos. 1 and Pos. 4).

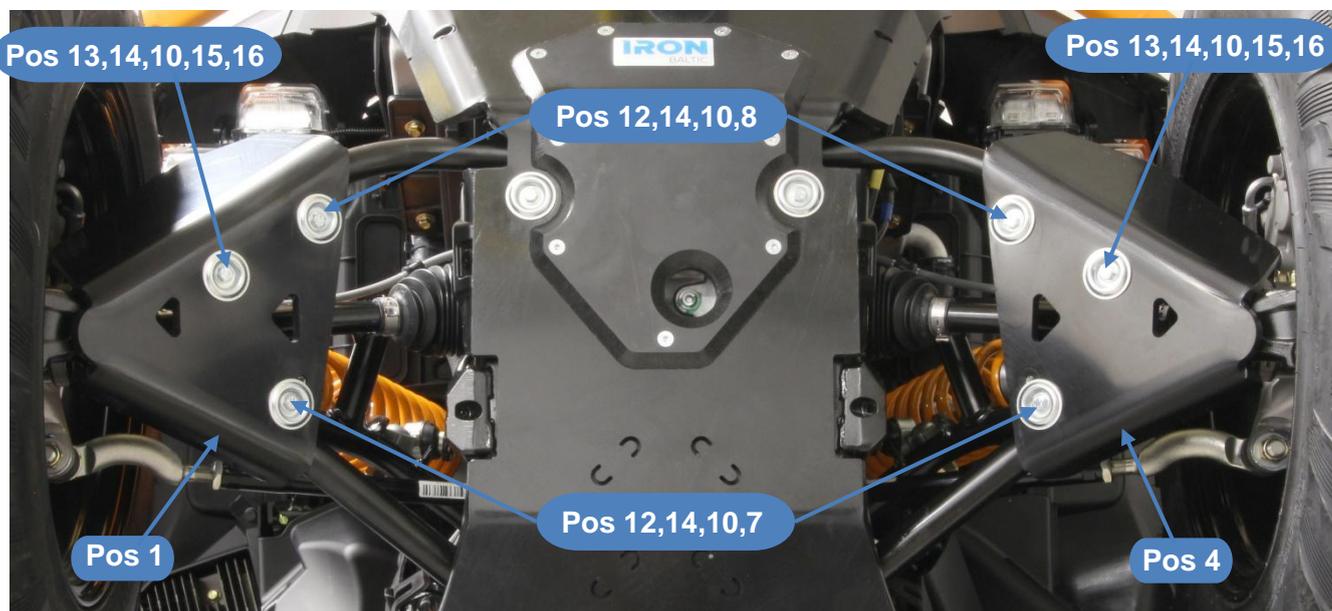

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

