



REAR A-ARM GUARDS (PLASTIC)


CAN-AM

OUTLANDER 850/1000 (2025+)

OUTLANDER 850/1000 MAX (2025+)

Code 02.33412VP

Version 21012025

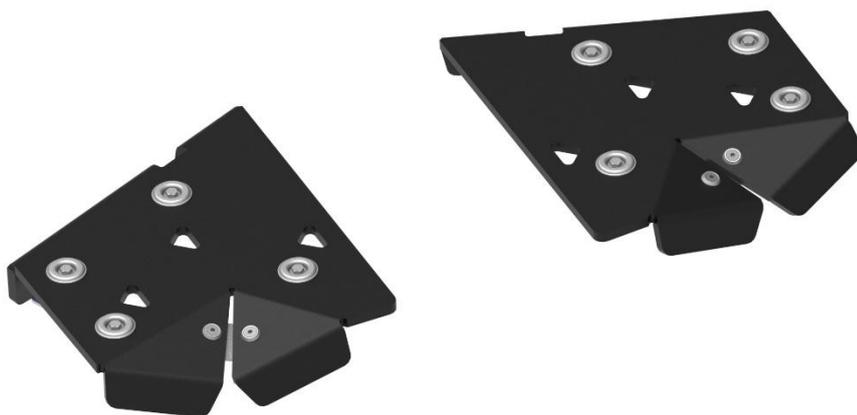


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right control arm protection	02.33412	1
2	Rear left control arm protection	02.33413	1
3	Rear control arm protection bracket 1	02.33514	2
4	Rear right control arm protection bracket 2	02.33515	1
5	Rear left control arm protection bracket 2	02.33516	1
6	Rear control arm protection bracket 3	02.5710	4
7	Connecting plate 20°	02.8311	2
8	Conical washer 6	14.502	4
9	Dished washer	14.503	8
10	Bolt M6x16 DIN933	OT.02.02.050	8
11	Bolt M6x20 DIN7991	OT.02.04.030	4
12	Washer Ø6/15 SFS 3738	OT.04.03.020	8

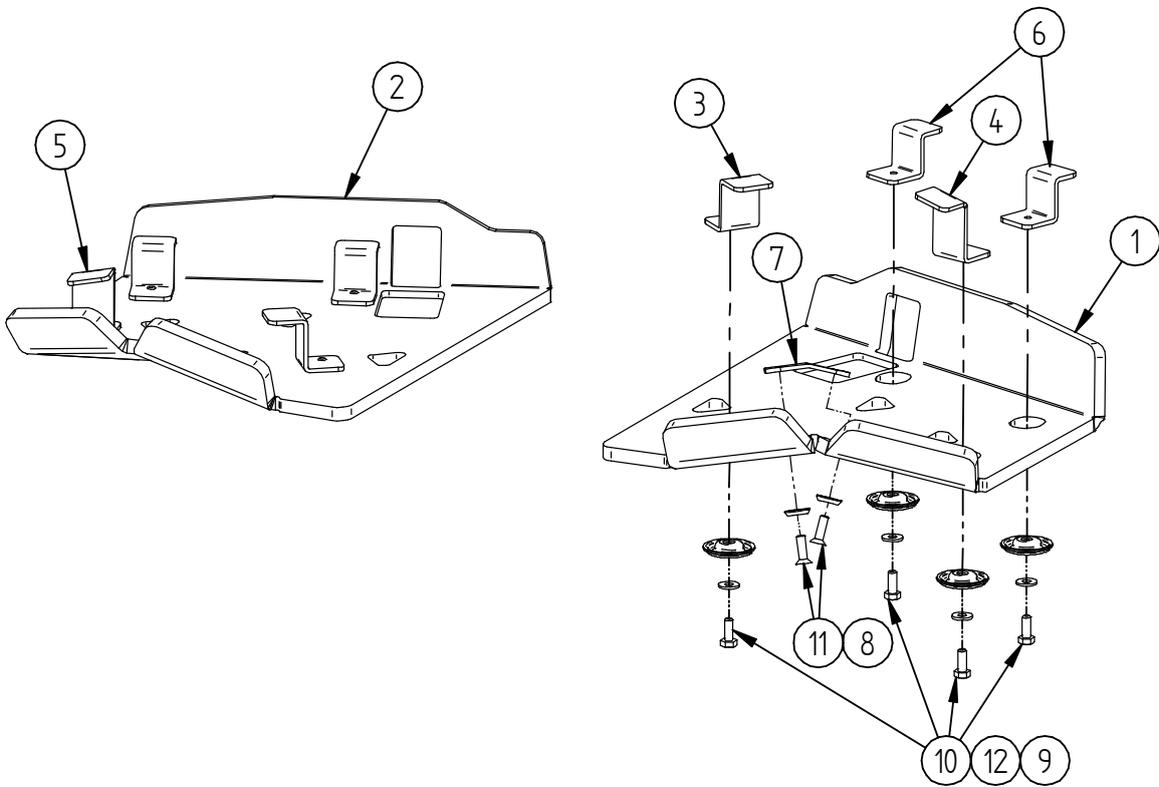

TOOLS REQUIRED FOR INSTALLATION:



- Socket wrench 10mm
- Allen wrench 4mm




NB!


**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

FITTING INSTRUCTIONS

Step 1 Install plates 02.8311 (Pos. 7) to the rear control arm protections (Pos. 1 and Pos. 2).

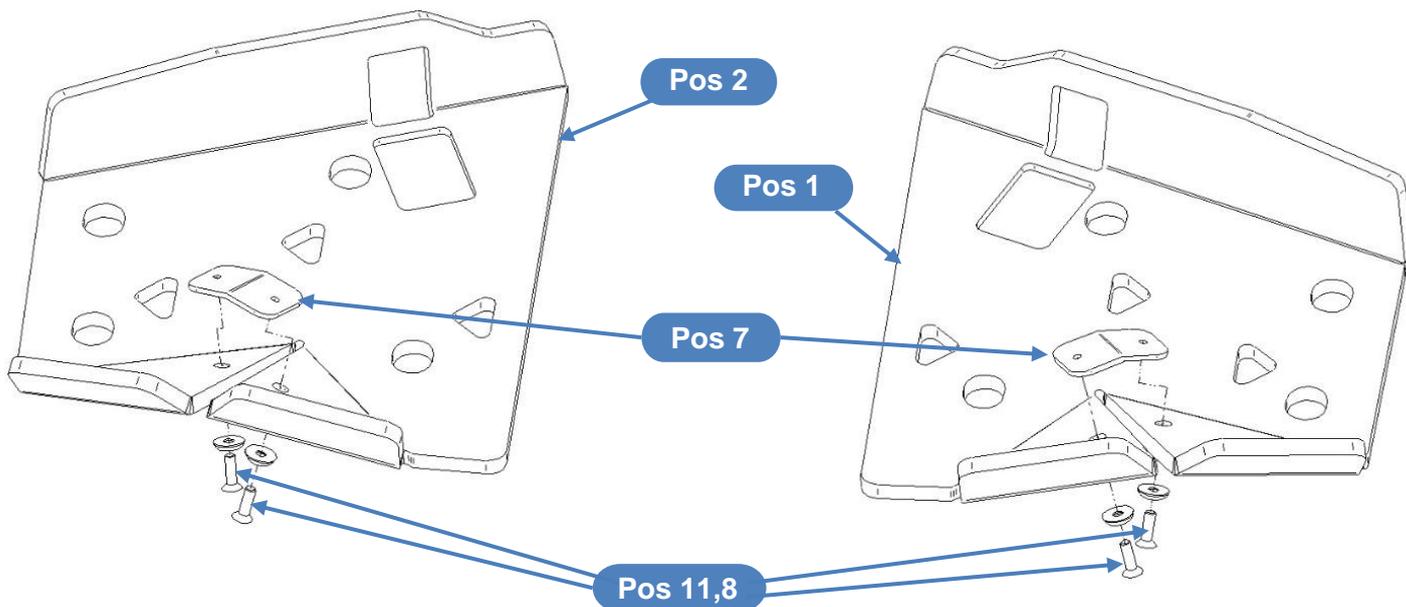

Step 2 Install protections to the rear control arms.

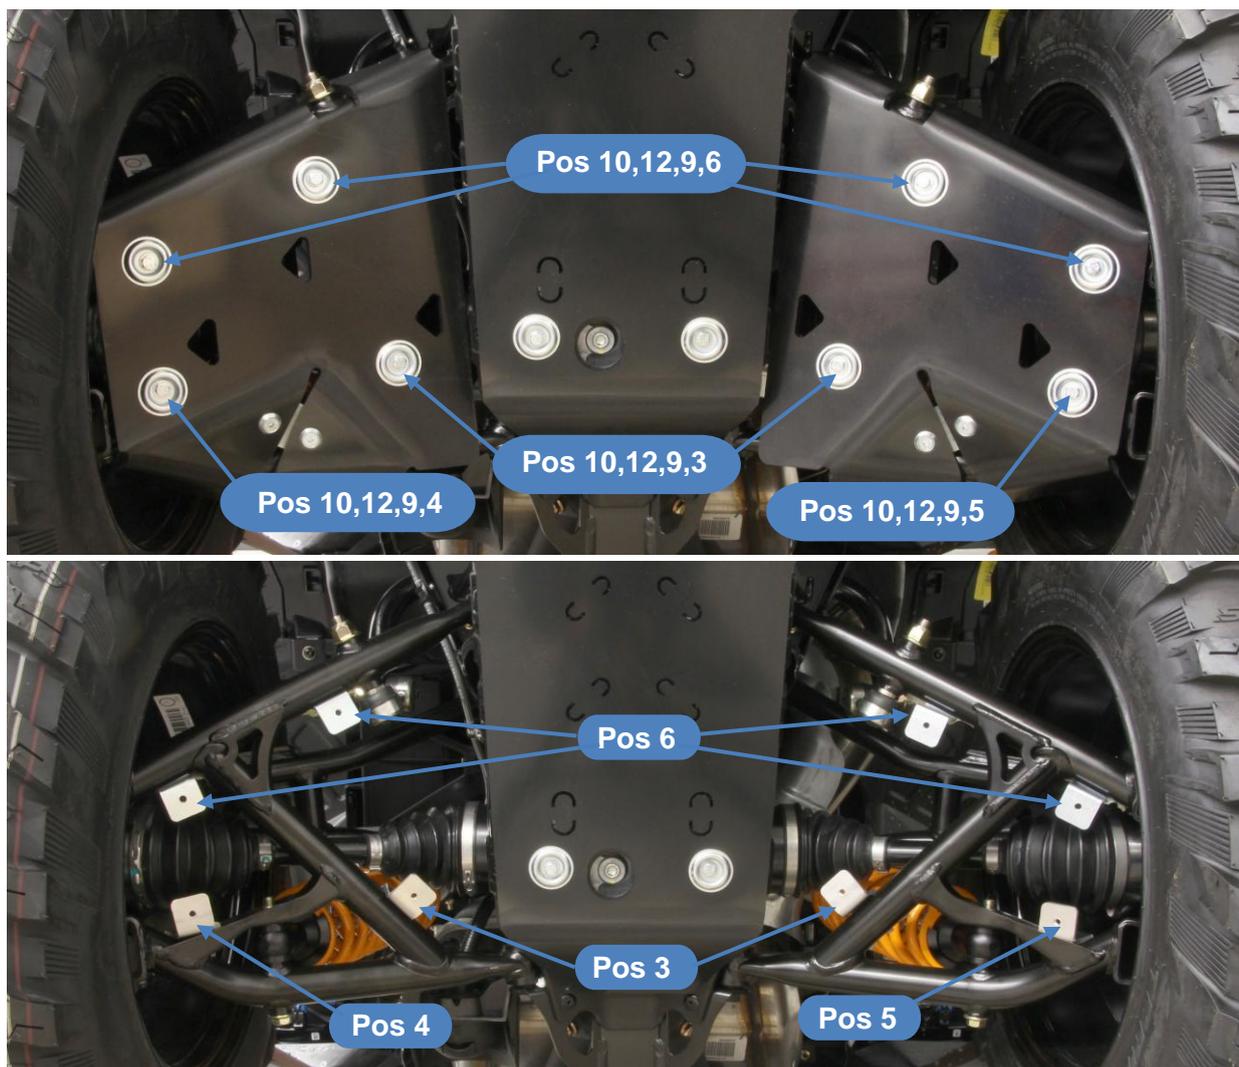

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

