



FRONT A-ARM GUARDS (ALUMINIUM)


CAN-AM

OUTLANDER 850/1000 (2025+)

OUTLANDER 850/1000 MAX (2025+)

Code 02.33506VP

Version 23052025

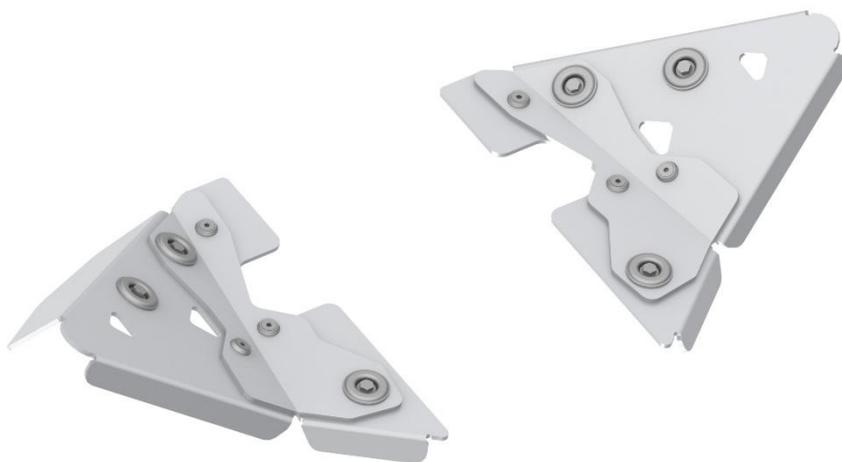


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

| Pos. | Description | Code | Amount |
|------|---|--------------|--------|
| 1 | Front right control arm protection part 1 | 02.33506 | 1 |
| 2 | Front right control arm protection part 2 | 02.33507 | 1 |
| 3 | Front right control arm protection connecting plate | 02.33508 | 1 |
| 4 | Front left control arm protection part 1 | 02.33509 | 1 |
| 5 | Front left control arm protection part 2 | 02.33510 | 1 |
| 6 | Front left control arm protection connecting plate | 02.33511 | 1 |
| 7 | Bracket 1 | 02.5710 | 2 |
| 8 | Bracket 2 | 02.8210 | 2 |
| 9 | Conical washer 6 | 14.502 | 6 |
| 10 | Dished washer | 14.503 | 6 |
| 11 | Bolt M6x20 DIN7991 | OT.02.04.030 | 6 |
| 12 | Bolt M6x16 DIN933 | OT.02.02.050 | 4 |
| 13 | Bolt M6x20 DIN933 | OT.02.02.060 | 2 |
| 14 | Washer Ø6/15 SFS3738 | OT.04.03.020 | 12 |
| 15 | Washer Ø6/18 DIN9021 | OT.04.02.020 | 2 |
| 16 | Nyloc nut M6 DIN985 | OT.03.02.030 | 8 |

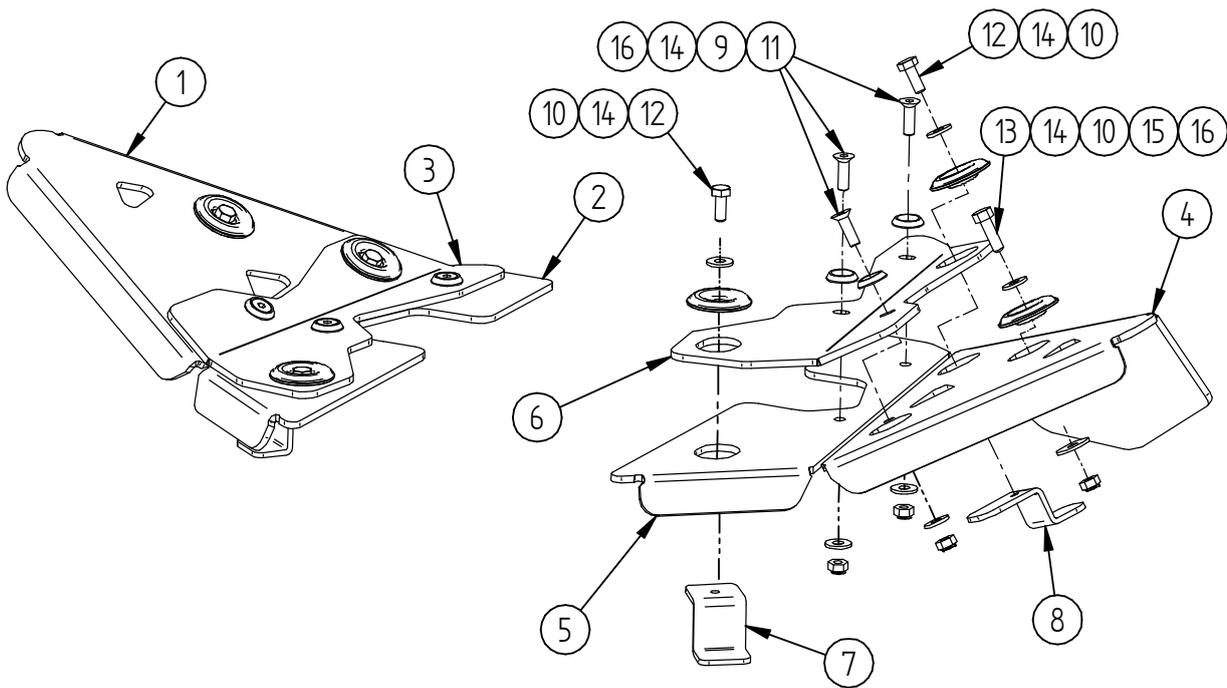

TOOLS REQUIRED FOR INSTALLATION:



- Socket wrench 10mm
- Spanner 10mm
- Allen wrench 4mm


FITTING INSTRUCTIONS





NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**


Step 1 Assemble the front control arm protections.

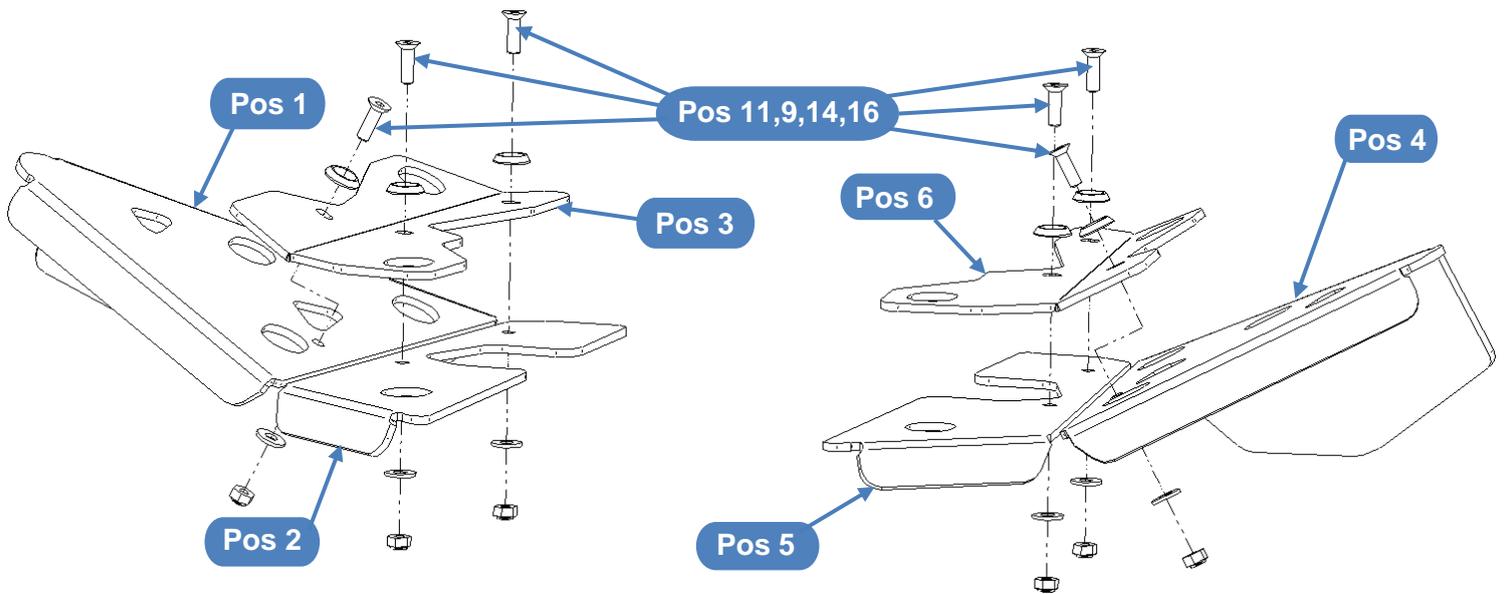

Step 2 Install protections to the front control arms.

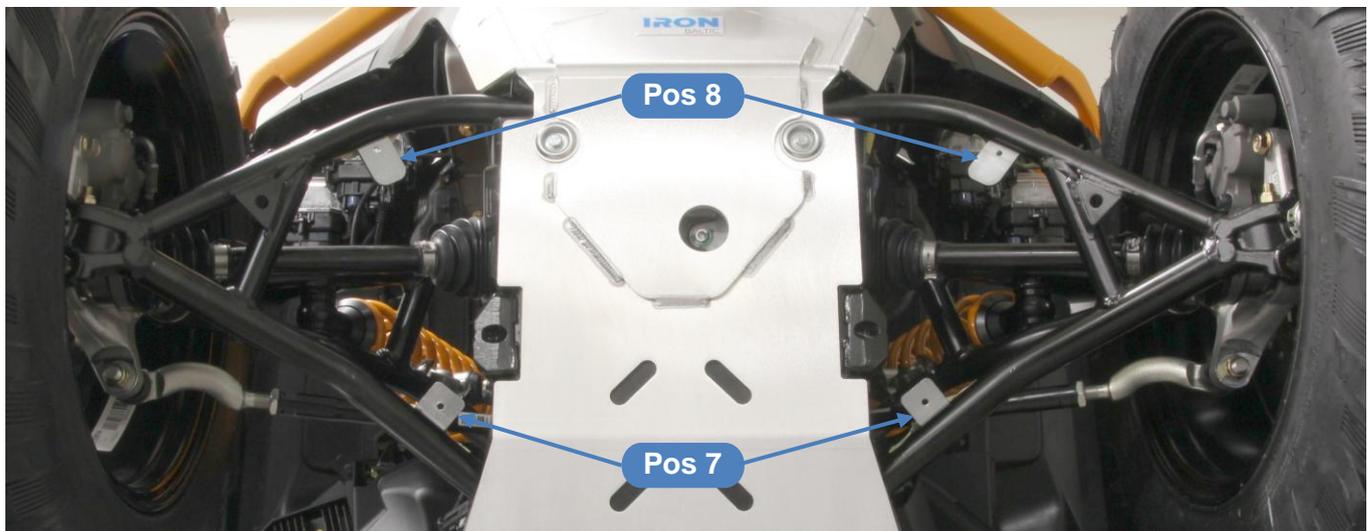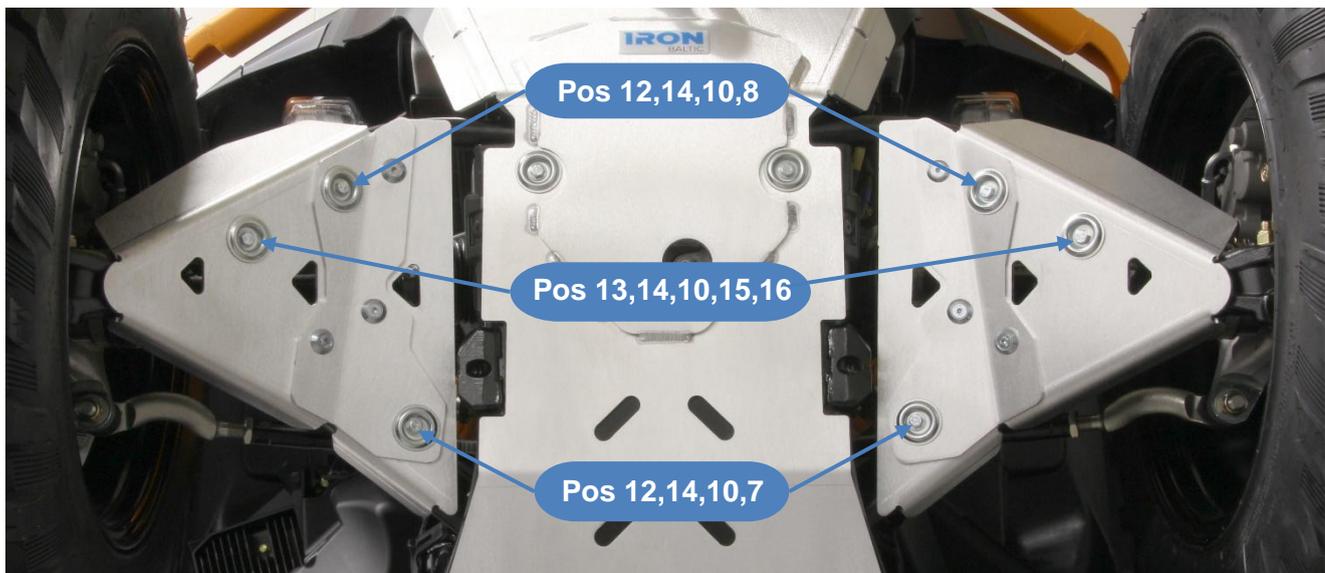

NB! If you want to use skid plate with the original Can-Am snow plow adapter, install only parts 02.33506 and 02.33509 (Pos. 1 and Pos. 4).

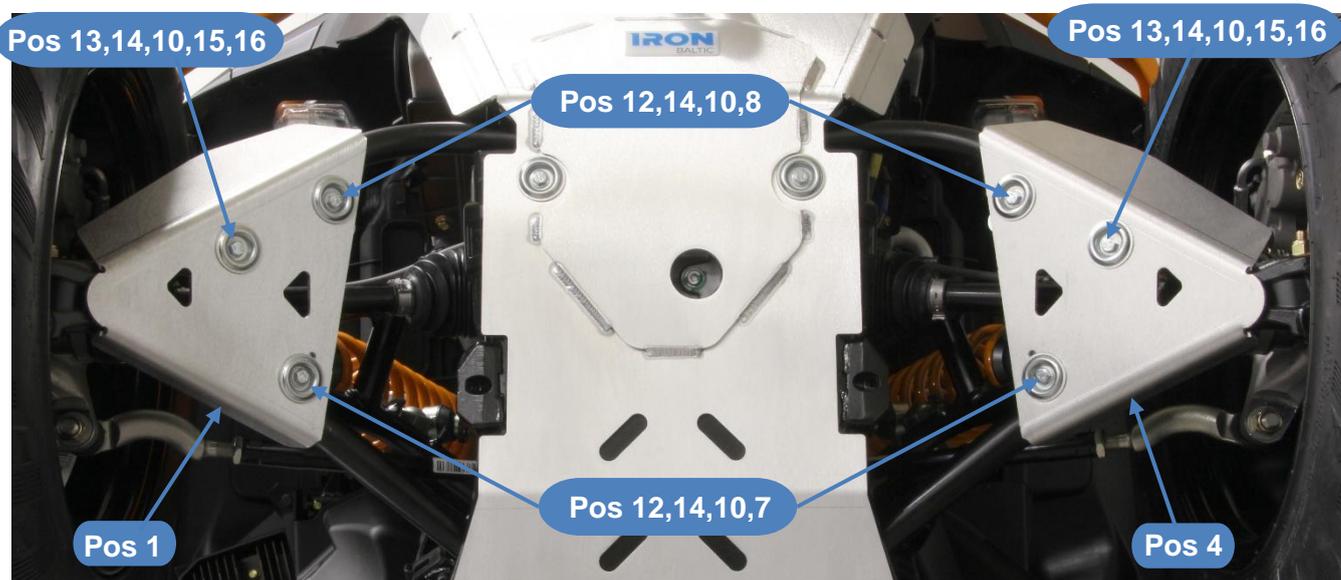

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

