



## REAR A-ARM GUARDS (ALUMINIUM)


### CAN-AM

OUTLANDER 850/1000 (2025+)

OUTLANDER 850/1000 MAX (2025+)

Code 02.33512VP

Version 17012025

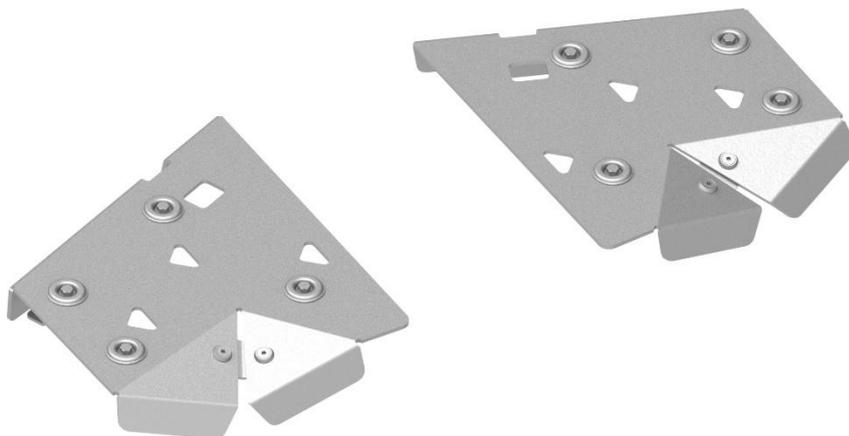


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right control arm protection	02.33512K	1
2	Rear left control arm protection	02.33513K	1
3	Rear control arm protection bracket 1	02.33514	2
4	Rear right control arm protection bracket 2	02.33515	1
5	Rear left control arm protection bracket 2	02.33516	1
6	Rear control arm protection bracket 3	02.5710	4
7	Connecting plate 20°	02.8311	2
8	Conical washer 6	14.502	4
9	Dished washer	14.503	8
10	Bolt M6x12 DIN933	OT.02.02.030	8
11	Bolt M6x20 DIN7991	OT.02.04.020	4
12	Washer Ø6/15 SFS 3738	OT.04.03.020	8

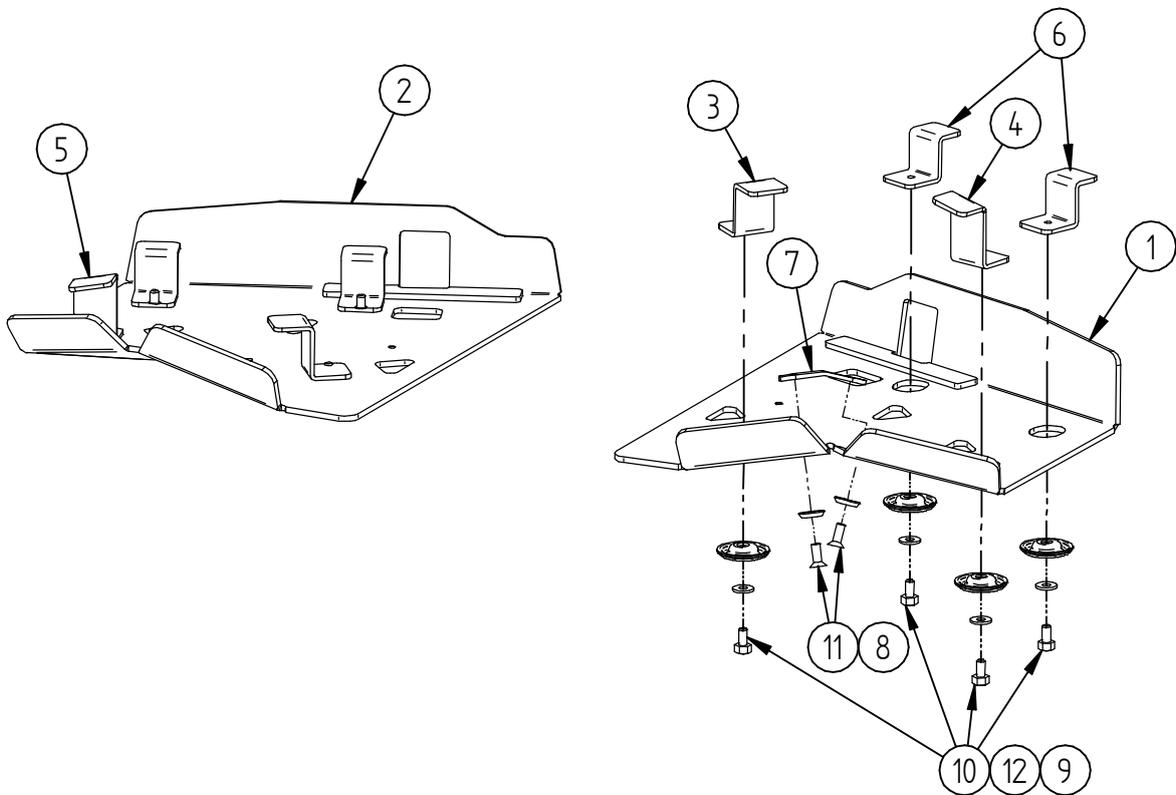

## TOOLS REQUIRED FOR INSTALLATION:



- Socket wrench 10mm
- Allen wrench 4mm




## NB!


**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

# FITTING INSTRUCTIONS

**Step 1** Install plates 02.8311 (Pos. 7) to the rear control arm protections (Pos. 1 and Pos. 2).

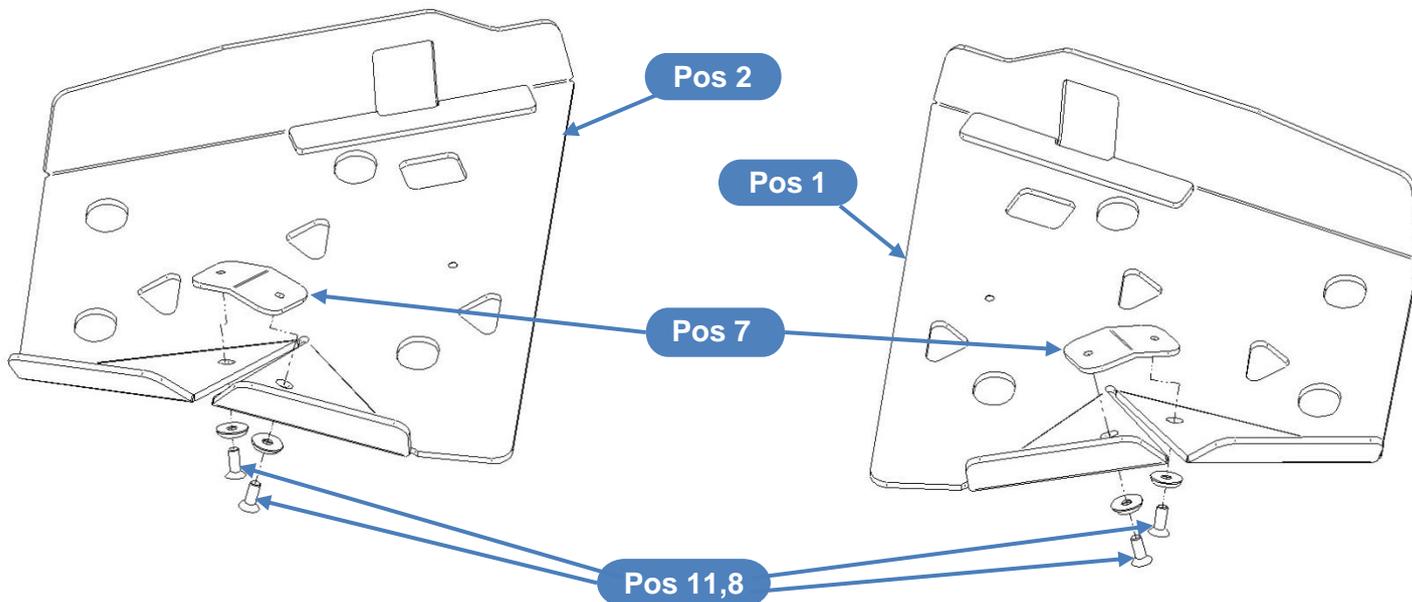

**Step 2** Install protections to the rear control arms.

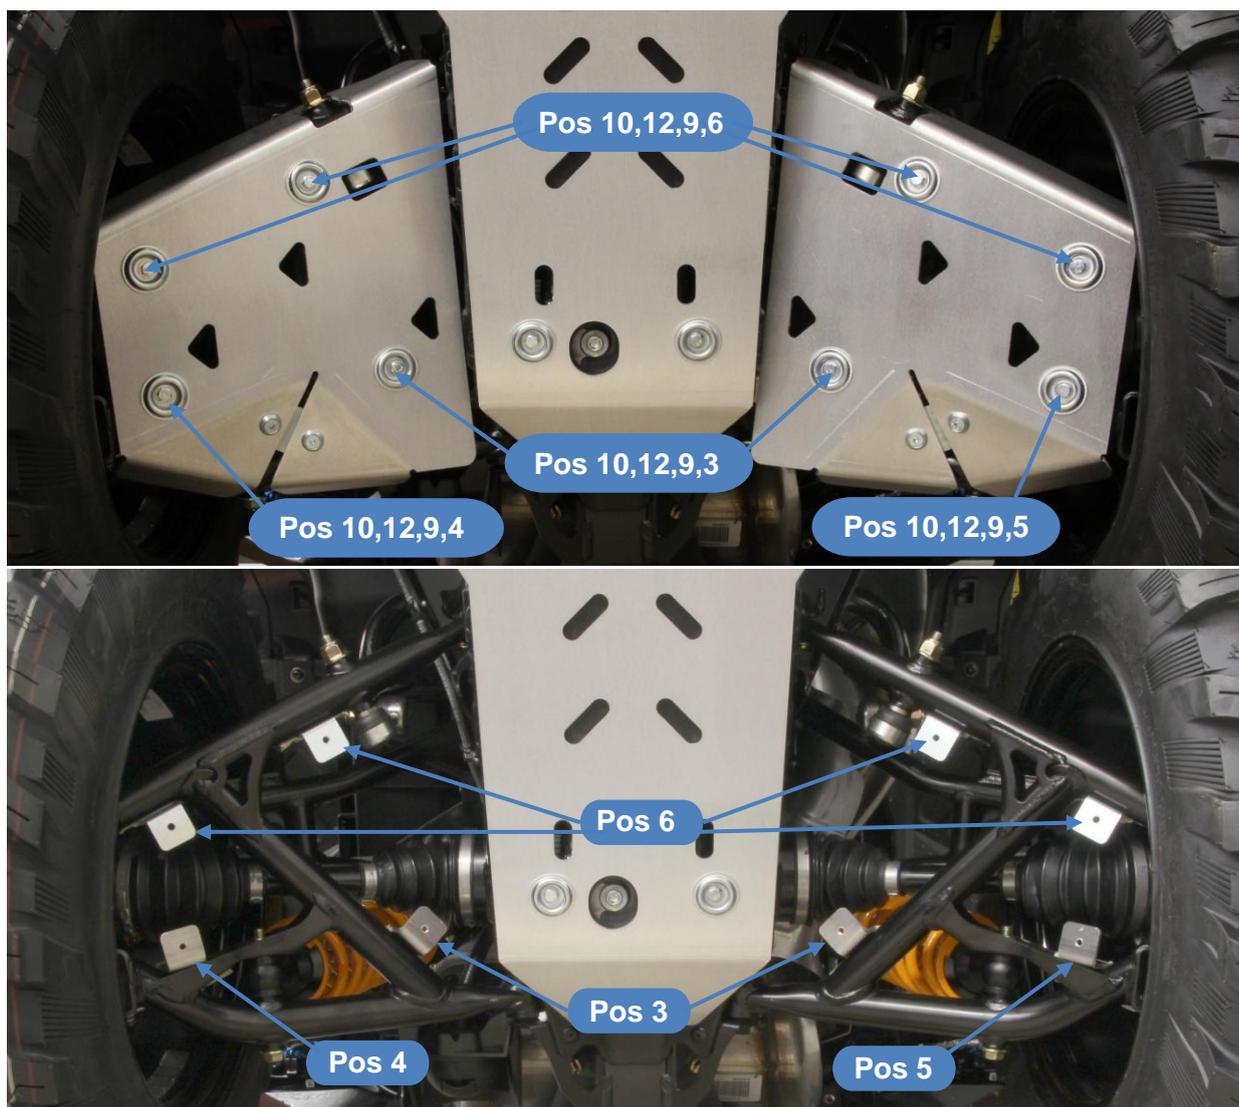

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

