


## FRONT A-ARM GUARDS (ALUMINIUM)

# LONCIN

# X-WOLF 1000

Code 02.34608VP


Version 09042025

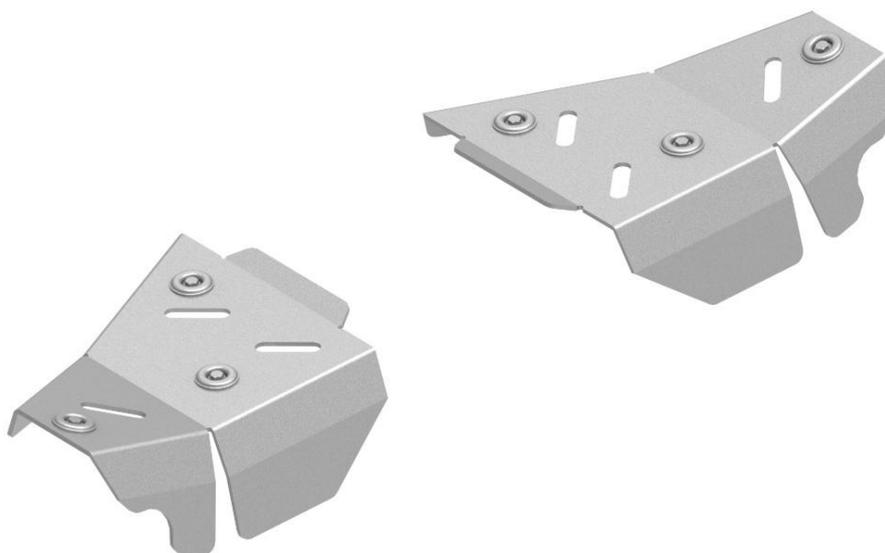

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL

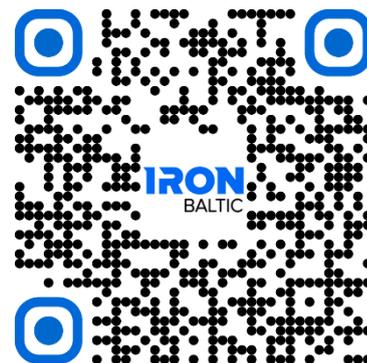

[code.ironbaltic.com/u/Z73bgbC0](https://code.ironbaltic.com/u/Z73bgbC0)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front right arm guard	02.34608	1
2	Front left arm guard	02.34609	1
3	Dished washer	14.503	6
4	Bolt M6x16 DIN933	OT.02.02.050	6
5	Washer Ø6/15 SFS3738	OT.04.03.020	6

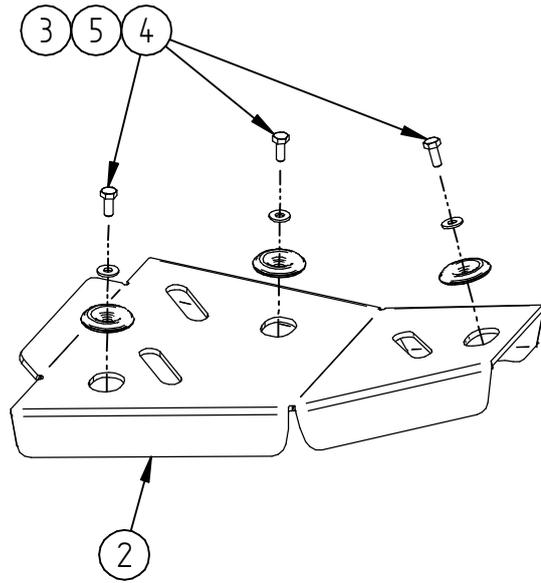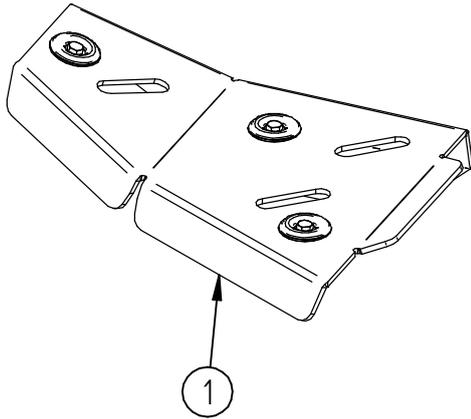

*Numbers on drawing correspond to Pos numbers on specification table*



## TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10mm



## NB!

**Designing the a-arm guards, original/factory tires were taken into consideration! Front: 27x9.00-14 and rear: 27x11.00-14.**


# FITTING INSTRUCTIONS



**NB!**

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

**Step 1** Install front arm protections 02.34608 (Pos. 1) and 02.34609 (Pos. 2).

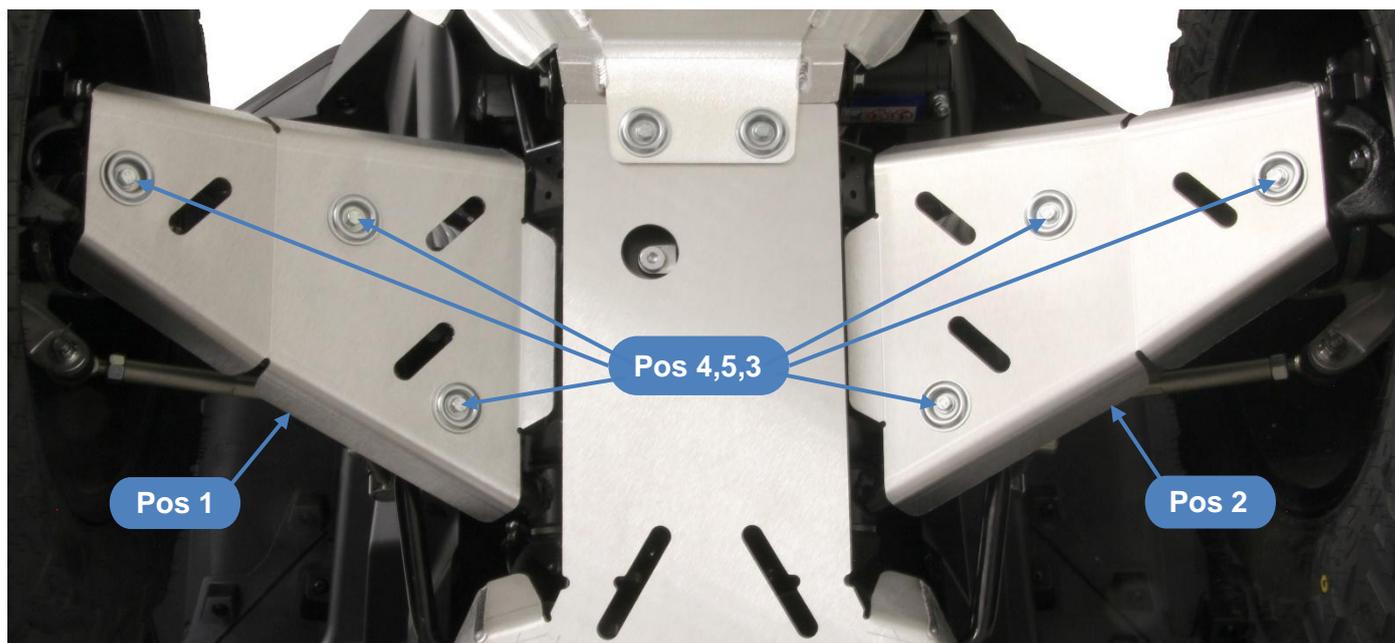

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

