

REAR A-ARM GUARDS (ALUMINIUM)

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/2wflR7pK

LONCIN

X-WOLF 1000

Code 02.34610VP

Version 09042025

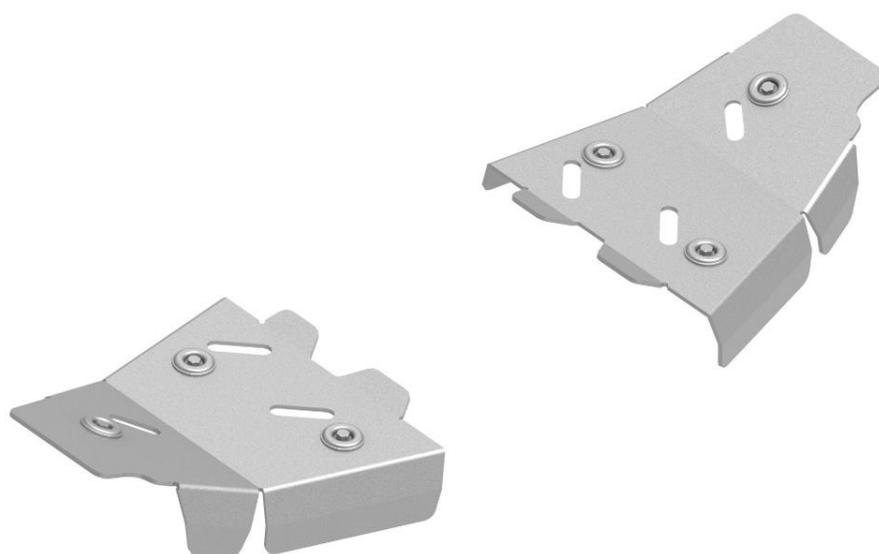


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right arm guard	02.34610	1
2	Rear left arm guard	02.34611	1
3	Dished washer	14.503	6
4	Bolt M6x16 DIN 933	OT.02.02.050	4
5	Bolt M6x20 DIN 933	OT.02.02.060	2
6	Washer Ø6/15 SFS 3738	OT.04.03.020	6

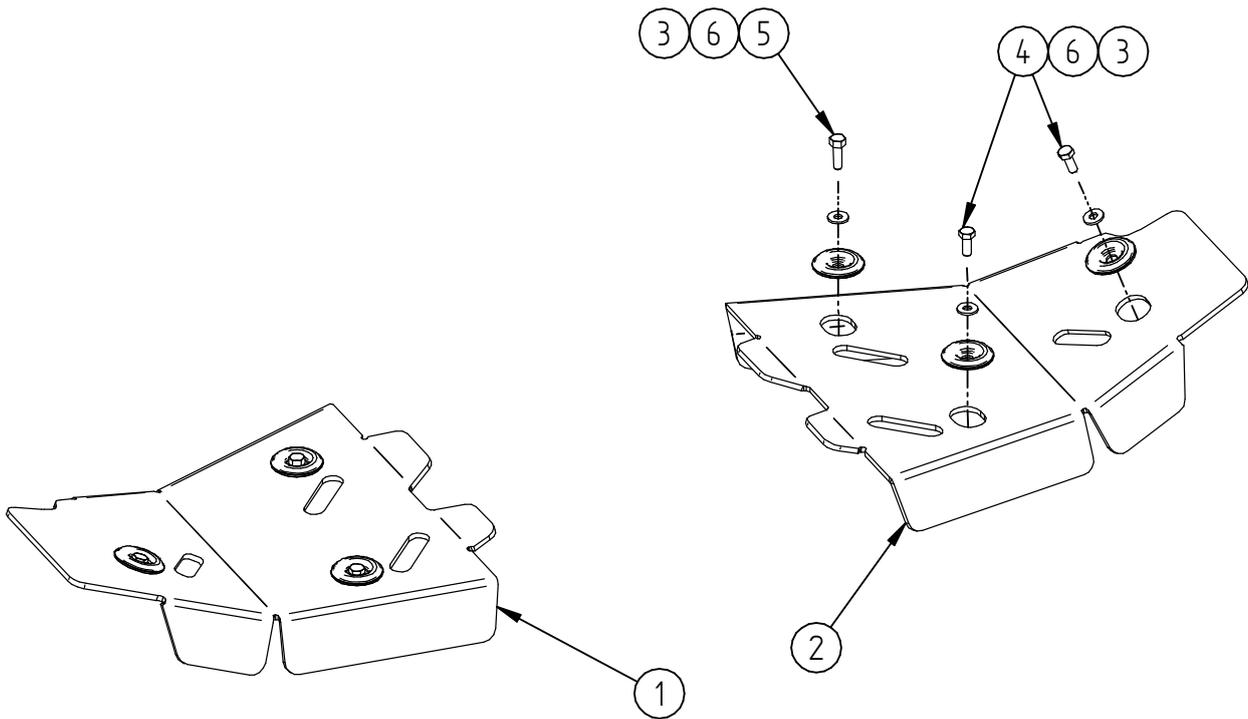

Numbers on drawing correspond to Pos numbers on specification table



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10mm



NB!

Designing the a-arm guards, original/factory tires were taken into consideration! Front: 27x9.00-14 and rear: 27x11.00-14.

FITTING INSTRUCTIONS




NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

Step 1

Install rear arm protections 02.34610 (Pos. 1) and 02.34611 (Pos. 2). **First tighten the M6x16 bolts (Pos. 4) and then M6x20 bolts (Pos. 5)!**

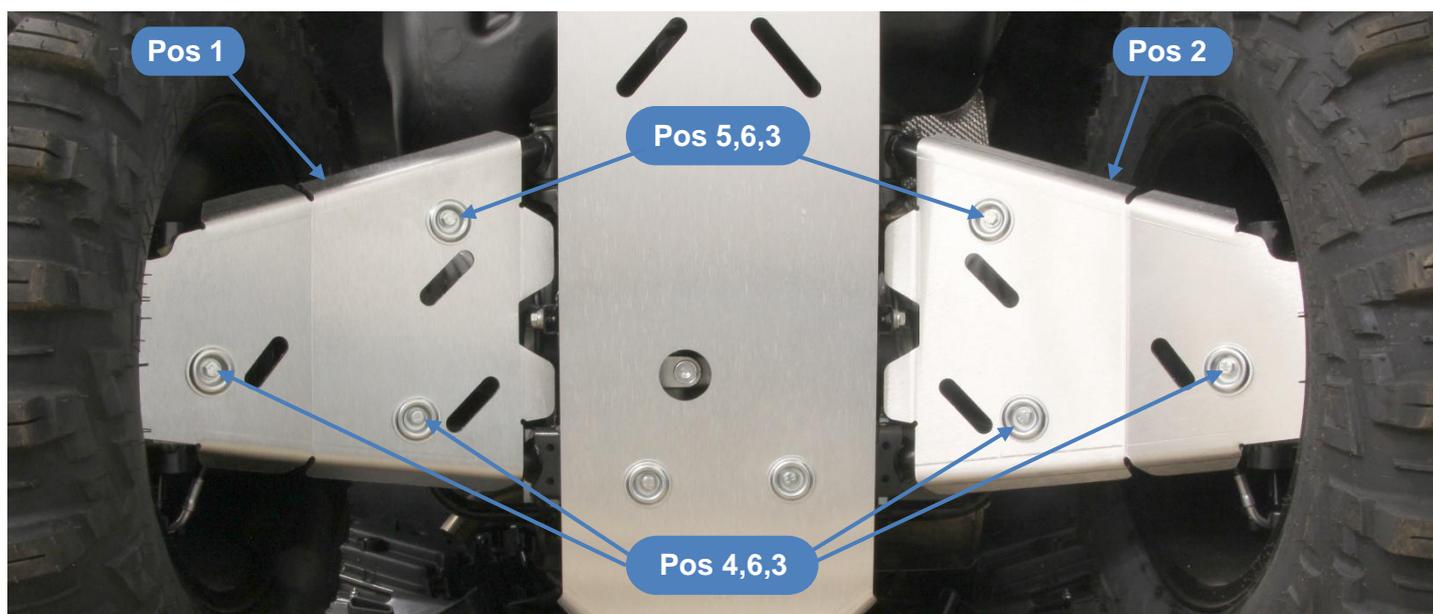

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

