

FRONT A-ARM GUARDS (PLASTIC)




code.ironbaltic.com/u/mvALbPtg

LONCIN X-WOLF 1000

Code 02.34708VP

Version 17042025

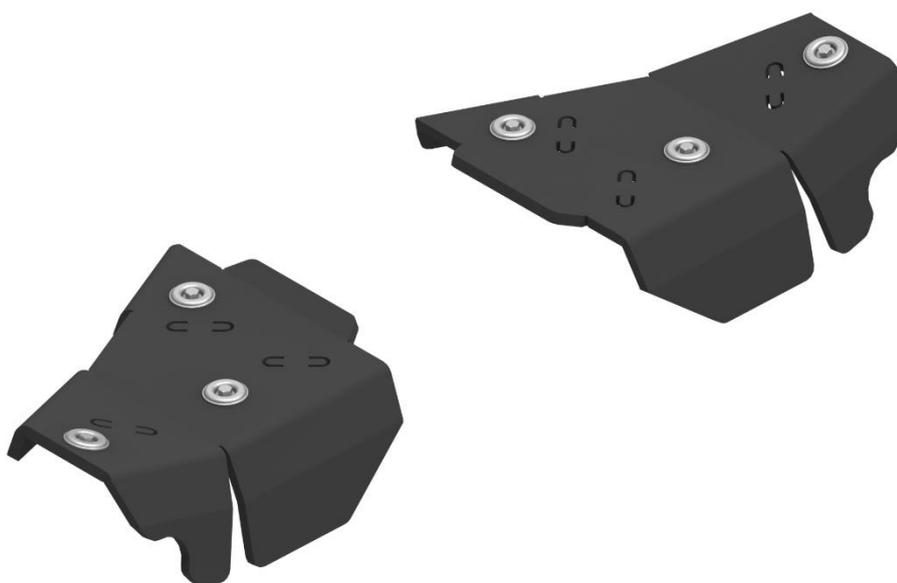


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front right arm guard	02.34708	1
2	Front left arm guard	02.34709	1
3	Dished washer	14.503	6
4	Bolt M6x20 DIN933	OT.02.02.060	6
5	Washer Ø6/15 SFS3738	OT.04.03.020	6

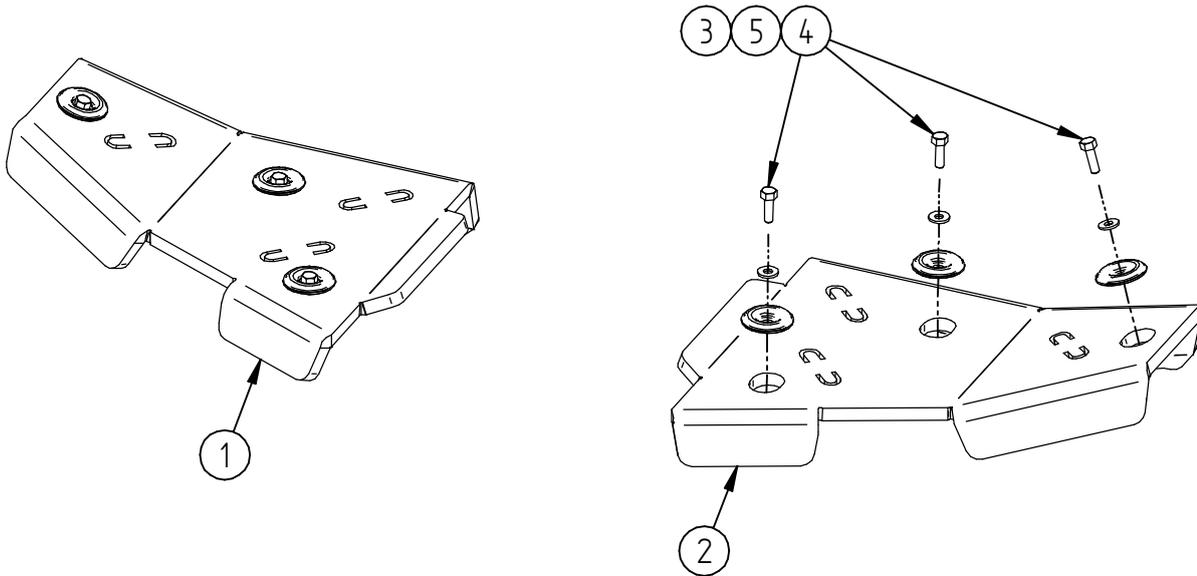

Numbers on drawing correspond to Pos numbers on specification table



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10mm



NB!

Designing the a-arm guards, original/factory tires were taken into consideration! Front: 27x9.00-14 and rear: 27x11.00-14.


FITTING INSTRUCTIONS



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

Step 1 Install front arm protections 02.34708 (Pos. 1) and 02.34709 (Pos. 2).

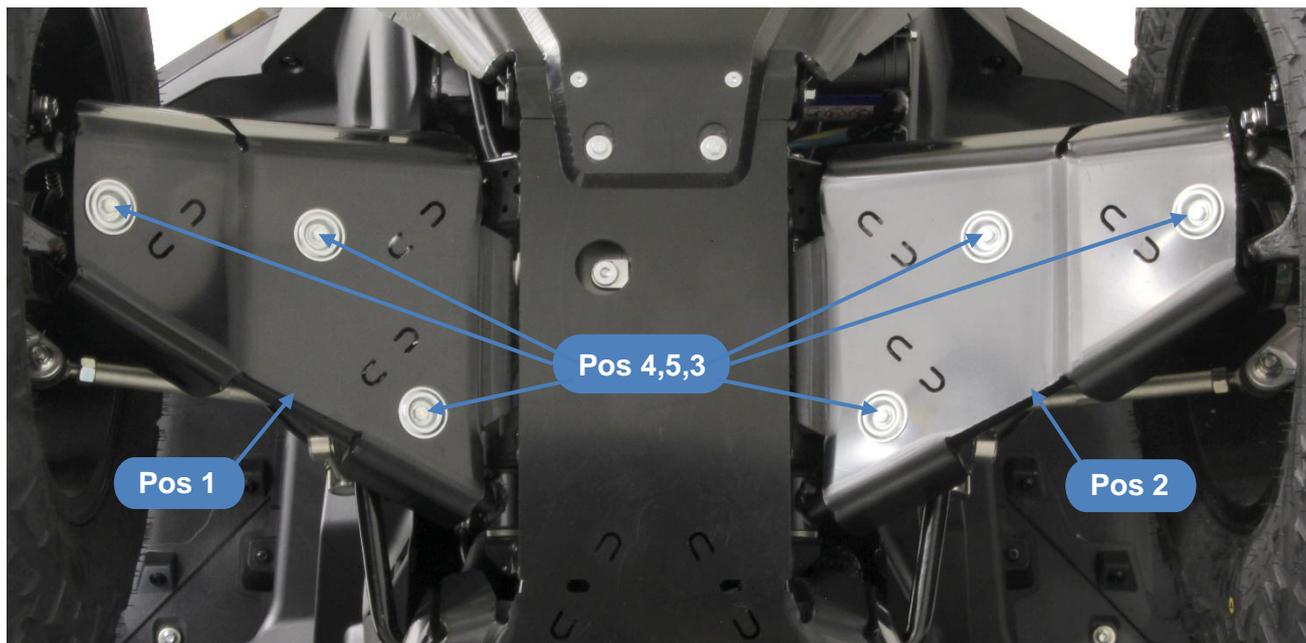

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

