

IRON BALTIC

PLASTIC SKID PLATE

QJMOTOR

SFA 600/1000

Code 02.34900

Version 25062025



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/R4clKpeS

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.34901K	1
2	Front part 2	02.34902K	1
3	Front part 1	02.34903K	1
4	Rear part	02.34905	1
5	Right side protection	02.34906	1
6	Left side protection	02.34907	1
7	Front right A-arm protection	02.34908	1
8	Front left A-arm protection	02.34909	1
9	Rear right A-arm protection	02.34910K	1
10	Rear left A-arm protection	02.34911K	1
11	Distance plate	05.3902	1
12	Mounting bracket	02.4606	2
13	Connecting plate	02.5006	5
14	Connecting plate 10	02.8312	8
15	Dished washer	14.503	54
16	Bolt M6x16 DIN933	OT.02.02.050	28
17	Bolt M6x25 DIN933	OT.02.02.070	11
18	Bolt M6x30 DIN933	OT.02.02.080	2
19	Bolt M6x35 DIN933	OT.02.02.090	2
20	Bolt M6x40 DIN933	OT.02.02.100	1
21	Bolt M6x45 DIN933	OT.02.02.110	2
22	Bolt M6x50 DIN933	OT.02.02.120	6
23	Bolt M6x55 DIN933	OT.02.02.130	1
24	Bolt M6x60 DIN933	OT.02.02.140	3
25	Bolt M8x45 DIN933	OT.02.02.230	2
26	Washer Ø6/15 SFS3738	OT.04.03.020	66
27	Washer Ø6/18 DIN9021	OT.04.02.020	2
28	Washer Ø8/20 SFS3738	OT.04.03.030	2
29	Washer M10 DIN125	OT.04.01.040	2
30	Nyloc nut M6 DIN985	OT.03.02.030	12
31	Nyloc nut M10x1.25 DIN985	OT.03.02.051	2



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10 mm
- Socket wrench 13 mm
- Socket wrench 17 mm
- Spanner 10 mm
- Spanner 17 mm



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**





NB!

Designing the skid plate, original/factory tires were taken into consideration!

QJMOTOR SFA 600 front: 25x8.00-12 and rear: 25x10.00-12.


QJMOTOR SFA 1000 front: 27x9.00-14 and rear: 27x11.00-14.

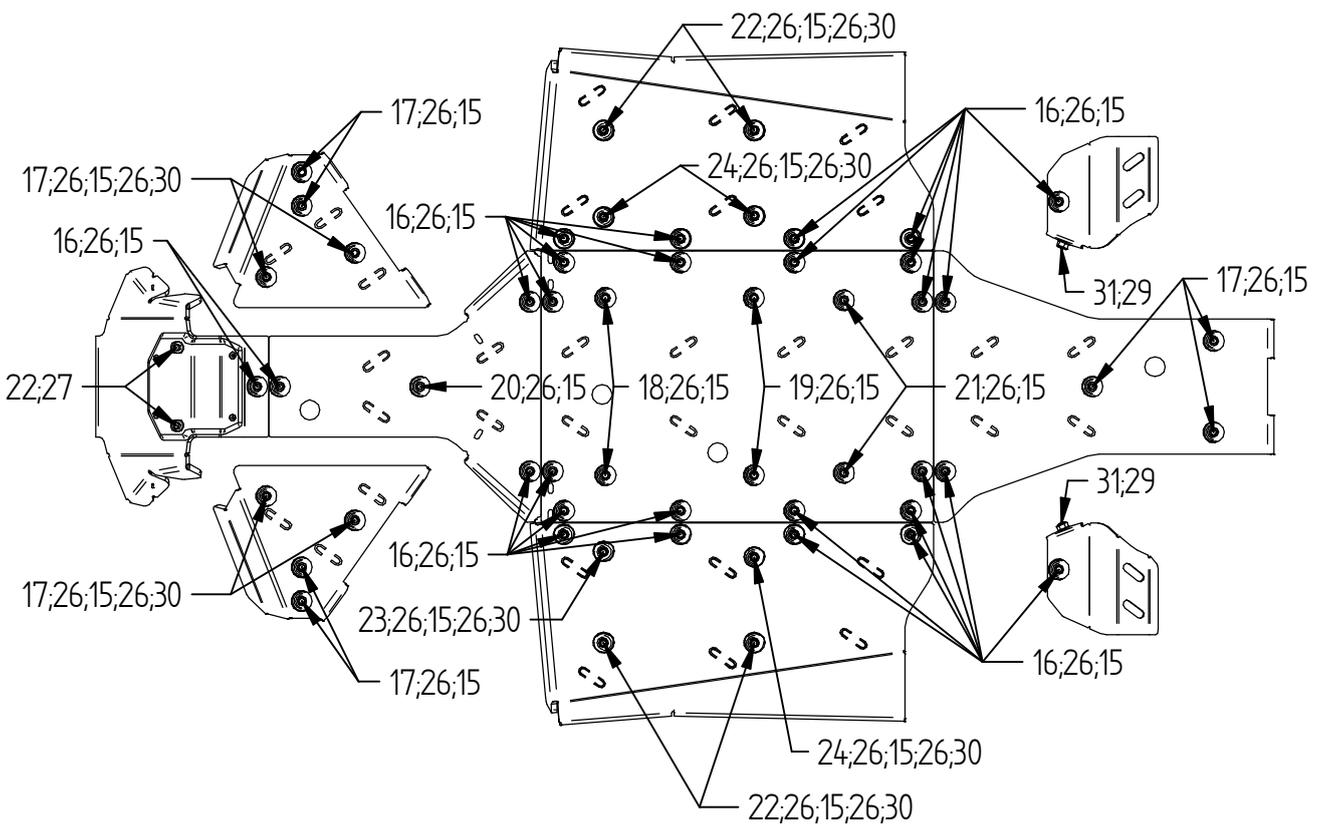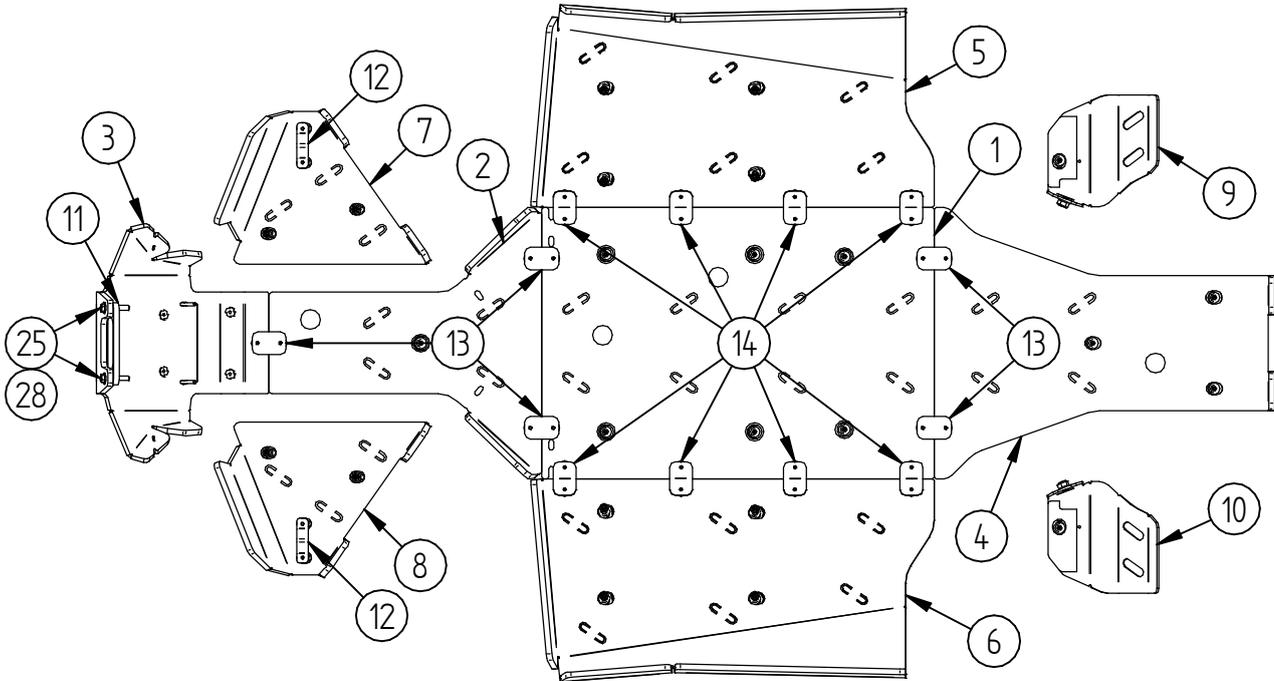

FITTING INSTRUCTIONS


Step 1

Remove original plastic skid plate and winch roller.
Remove bolts and nuts shown in the picture.

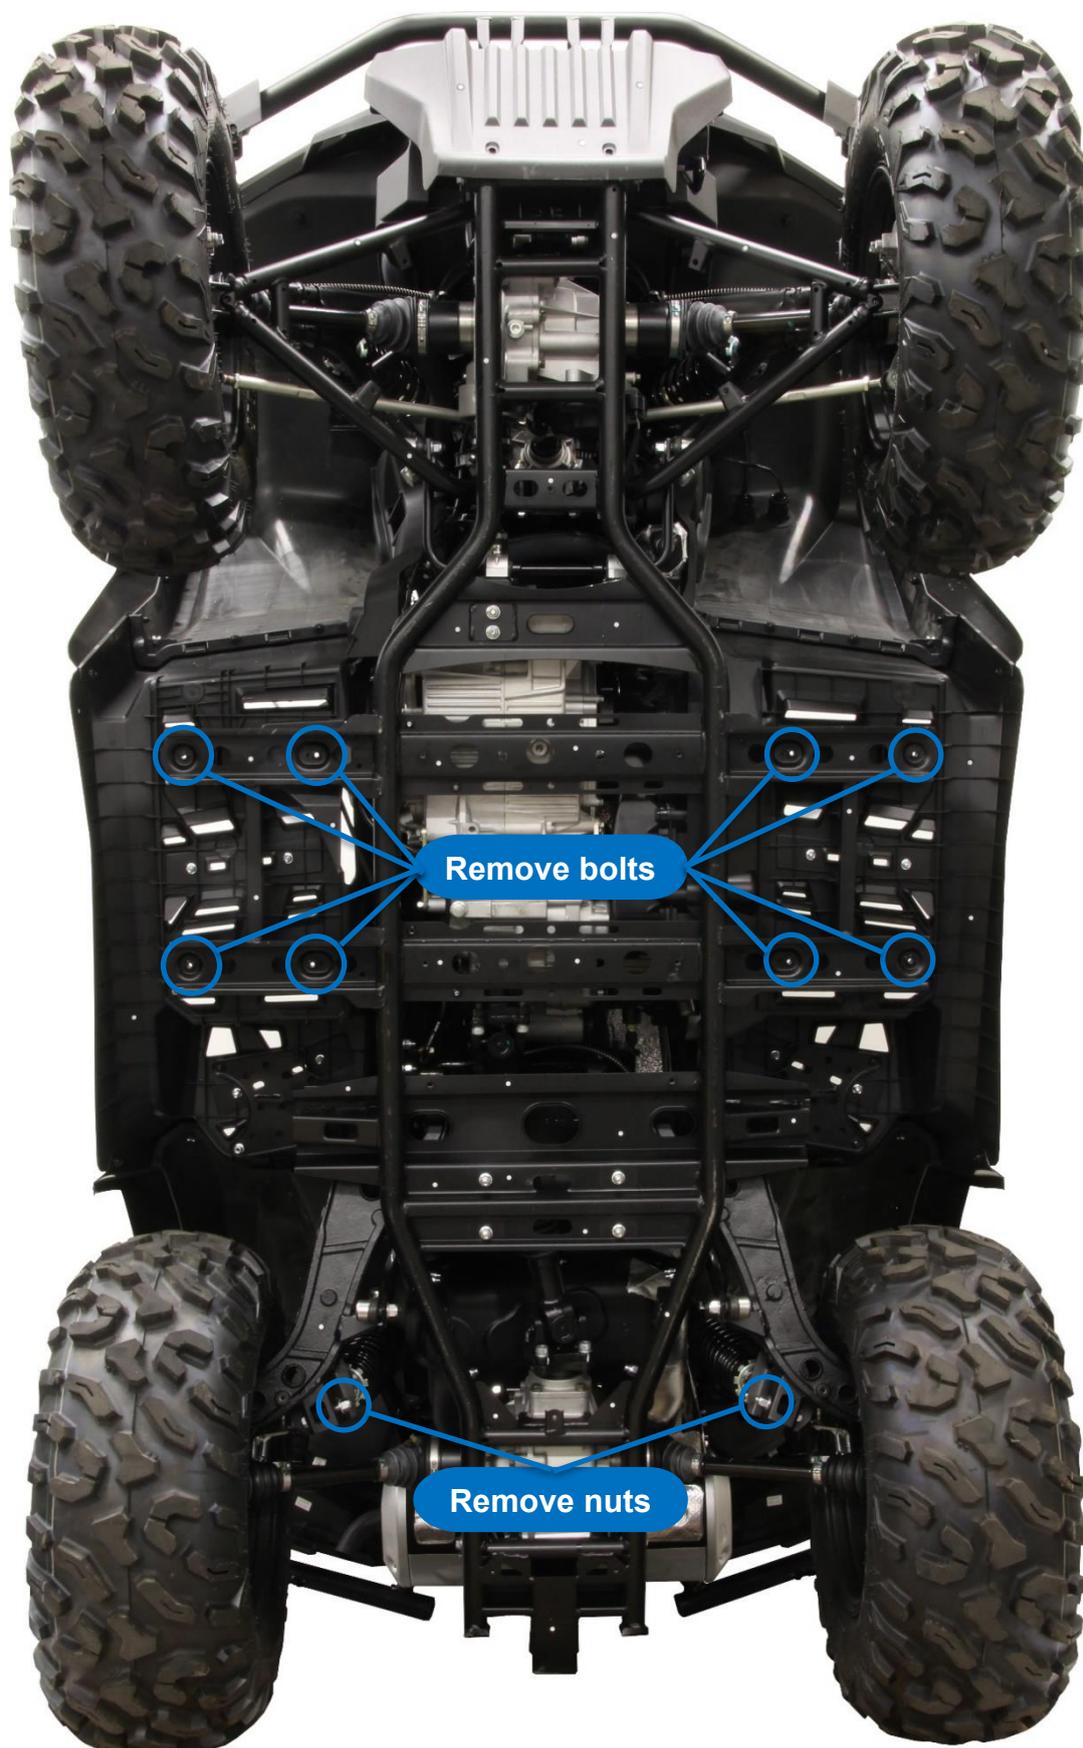


Step 2

Install middle part (Pos.1). For fastening use M6x30 bolts (Pos.18), M6x35 bolts (Pos.19), M6x45 bolts (Pos.21) Ø6/15 washers (Pos.26) and dished washers (Pos.15).

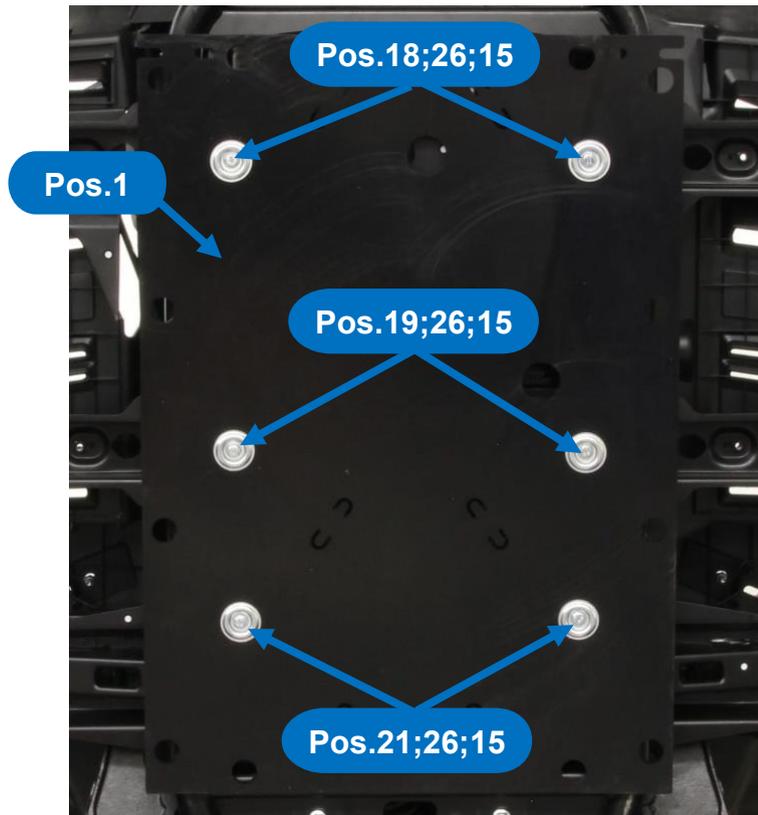


Step 3

Install connecting plates (Pos.13 and Pos.14) to middle part (Pos.1). For fastening use M6x16 bolts (Pos.16), Ø6/15 washers (Pos.26) and dished washers (Pos.15).

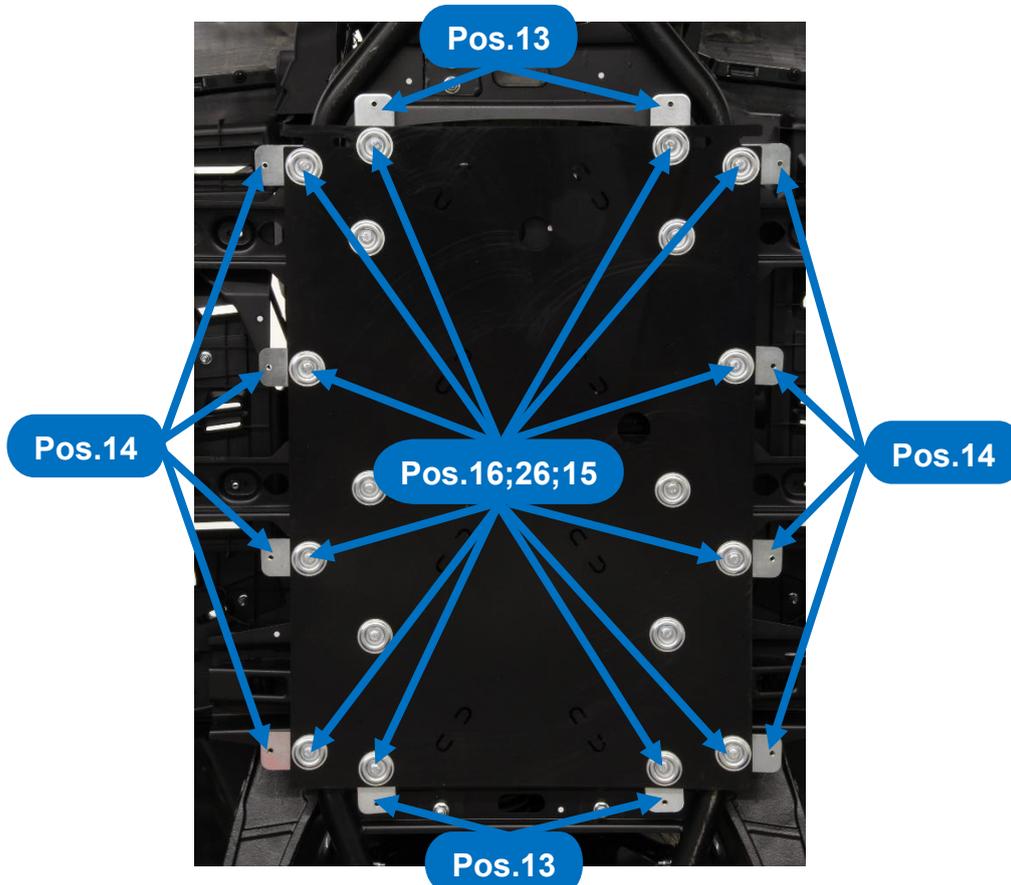


Step 4

Install front part 2 (Pos.2). For fastening use M6x16 bolts (Pos.16), M6x40 bolt (Pos.20), Ø6/15 washers (Pos.26) and dished washer (Pos.15).

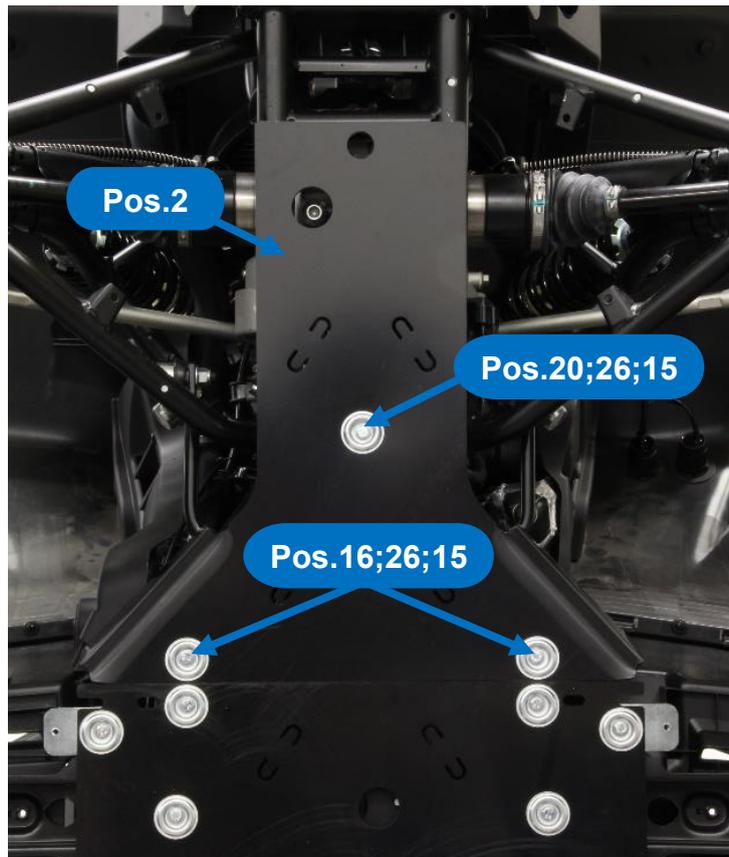

Step 5


Install connecting plate (Pos.13) to front part 2 (Pos.2). For fastening use M6x16 bolt (Pos.16), Ø6/15 washer (Pos.26) and dished washer (Pos.15).

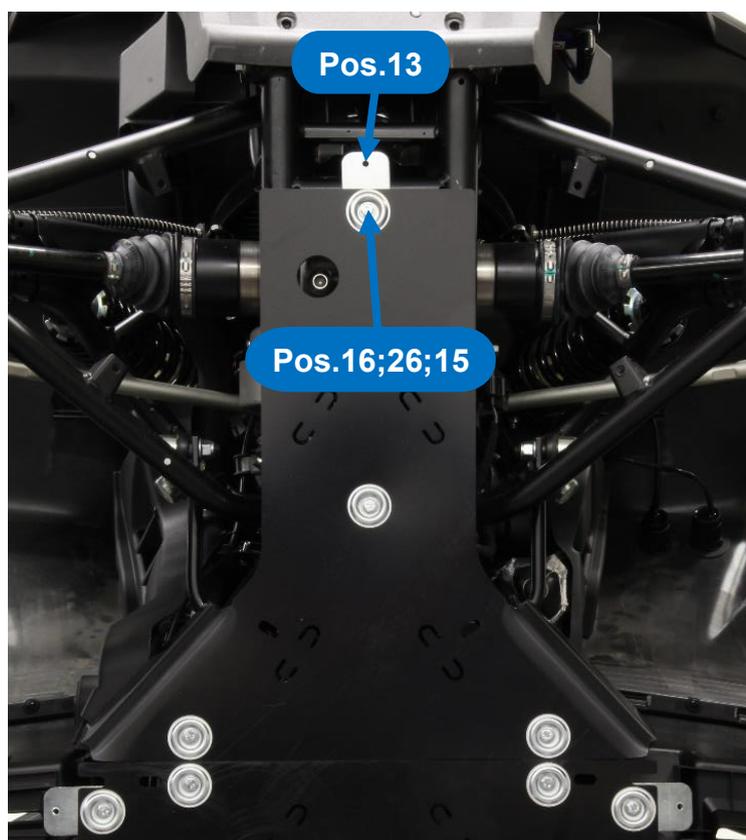

Step 6


Install front part 1 (Pos.3). For fastening use M6x16 bolt (Pos.16), M6x50 bolts (Pos.22), M8x45 bolts (Pos.25), Ø6/15 washer (Pos.26), Ø6/18 washer (Pos.27), Ø8/20 washers (Pos.28), original nuts, dished washer (Pos.15) and distance plate (Pos.11).

Easier acces to fairlead nuts is from right side of the ATV.

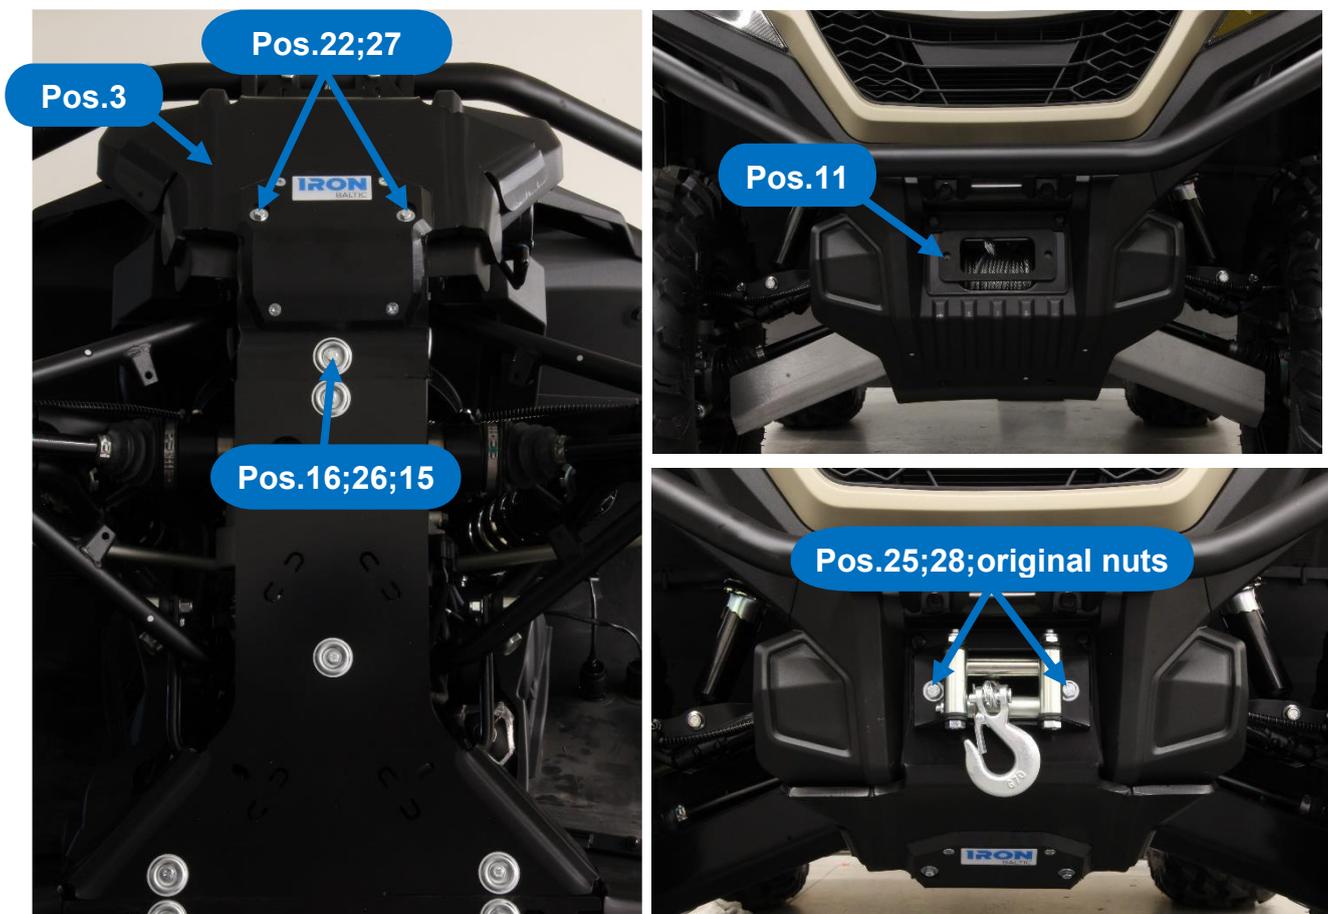


Step 7

Install rear part (Pos.4). For fastening use M6x16 bolts (Pos.16), M6x25 bolts (Pos.17), Ø6/15 washers (Pos.26) and dished washers (Pos.15).

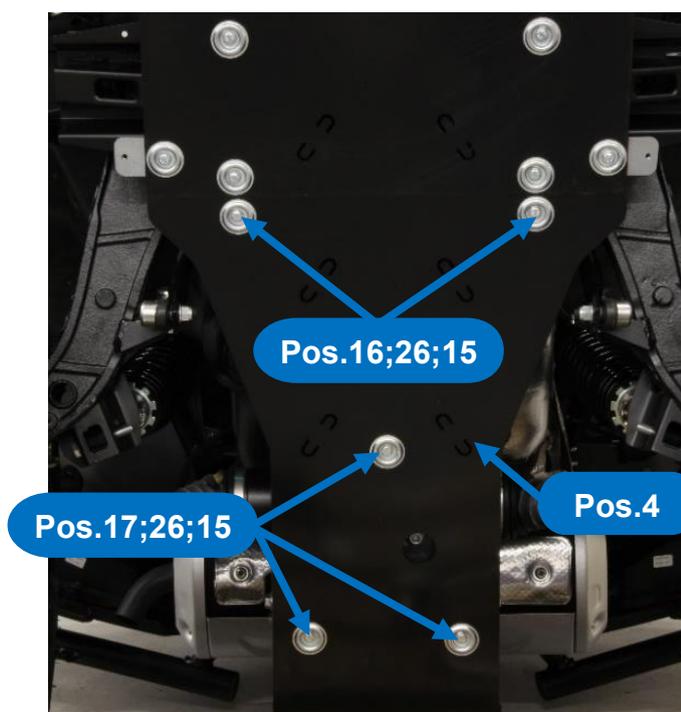


Step 8

Install right side (Pos.5) and left side protectoin (Pos.6). For fastening use M6x16 bolts (Pos.16), M6x50 bolts (Pos.22), M6x55 bolts (Pos.23), M6x60 bolts (Pos.24), Ø6/15 washers (Pos.26), dished washers (Pos.15) and M6 nyloc nuts (Pos.30).

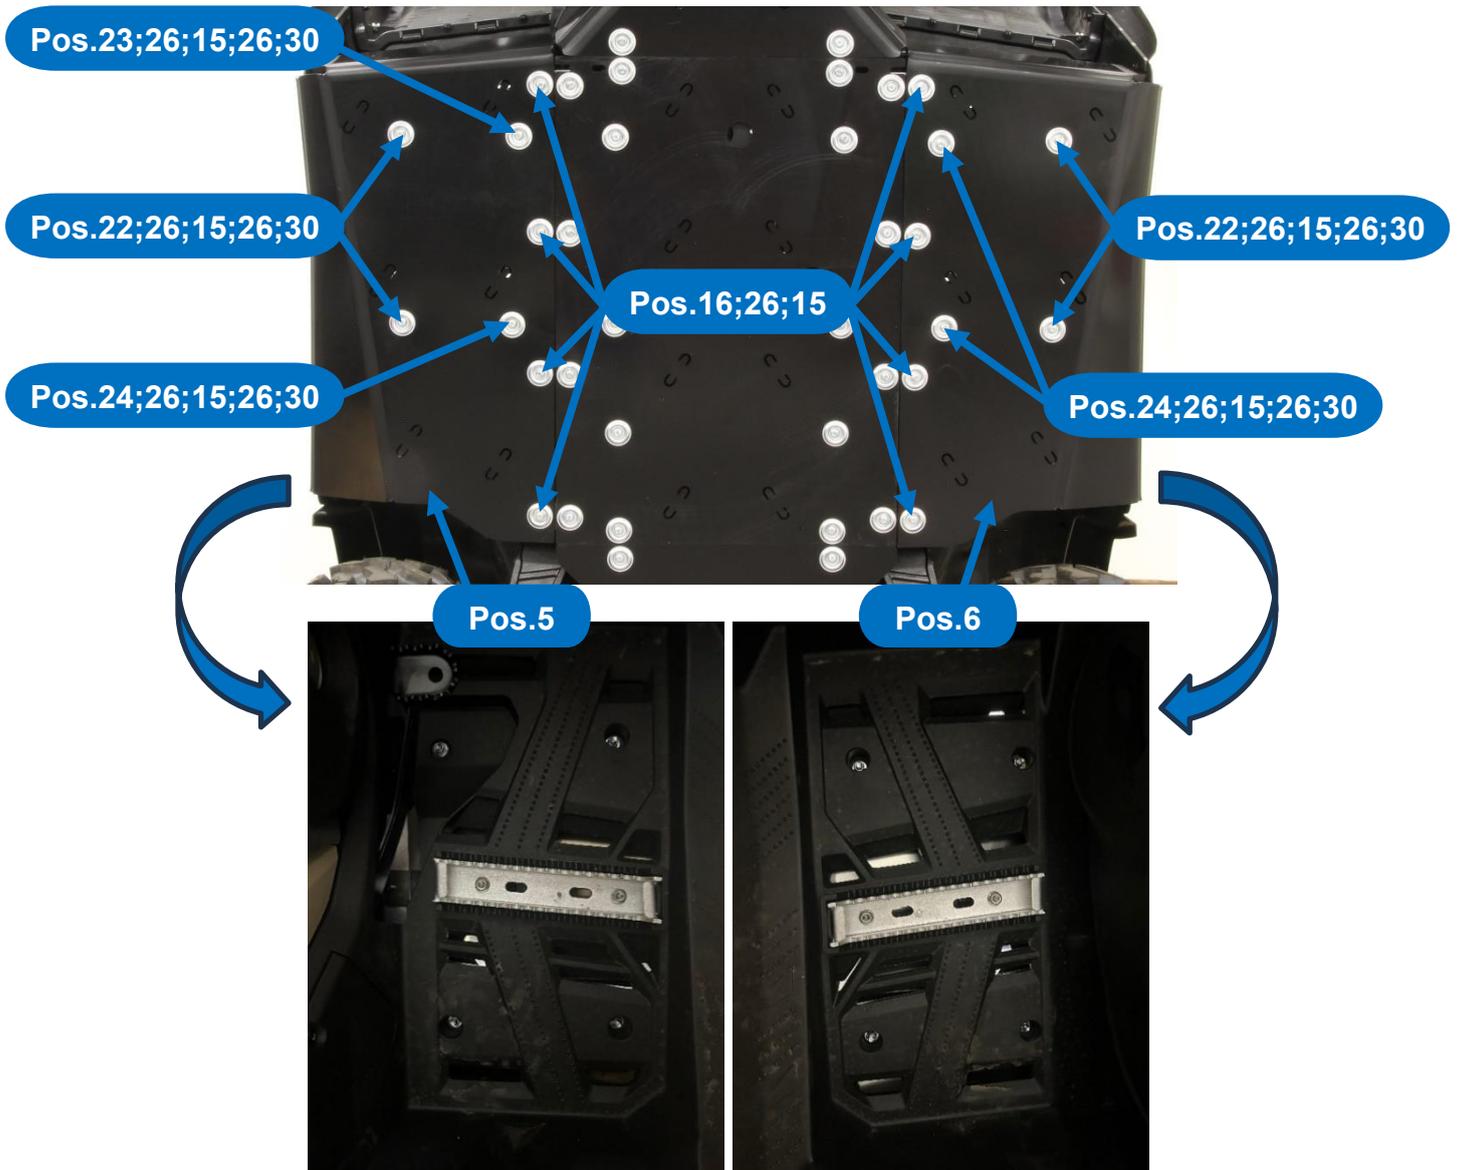



Step 9

Install rear right (Pos.9) and rear left A-arm protection (Pos.8). For fastening use M6x16 bolts (Pos.16), Ø6/15 washers (Pos.26), M10 washers (Pos.29), M10 nyloc nuts (Pos.31) and dished washers (Pos.15).

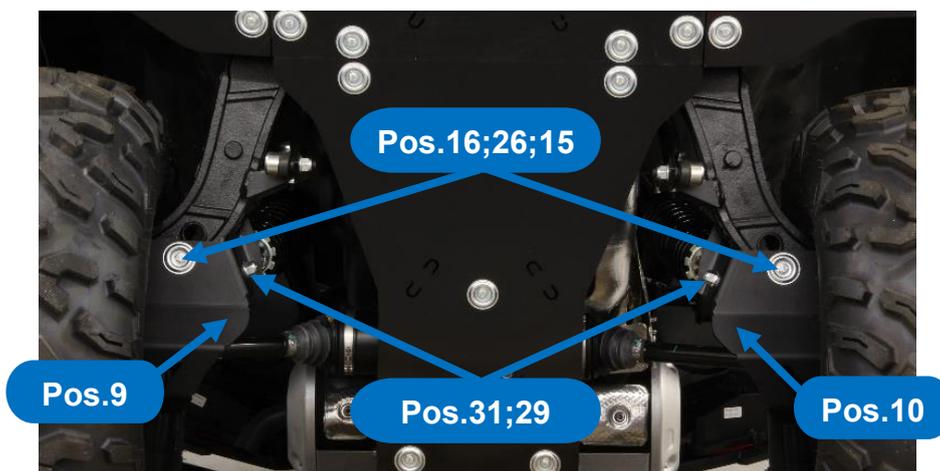

Step 10

Install front right (Pos.7) and front left A-arm protection (Pos.8). For fastening use M6x25 bolts (Pos.17), Ø6/15 washers (Pos.26), dished washers (Pos.15), M6 nyloc nuts (Pos.30) and mounting brackets (Pos.12).

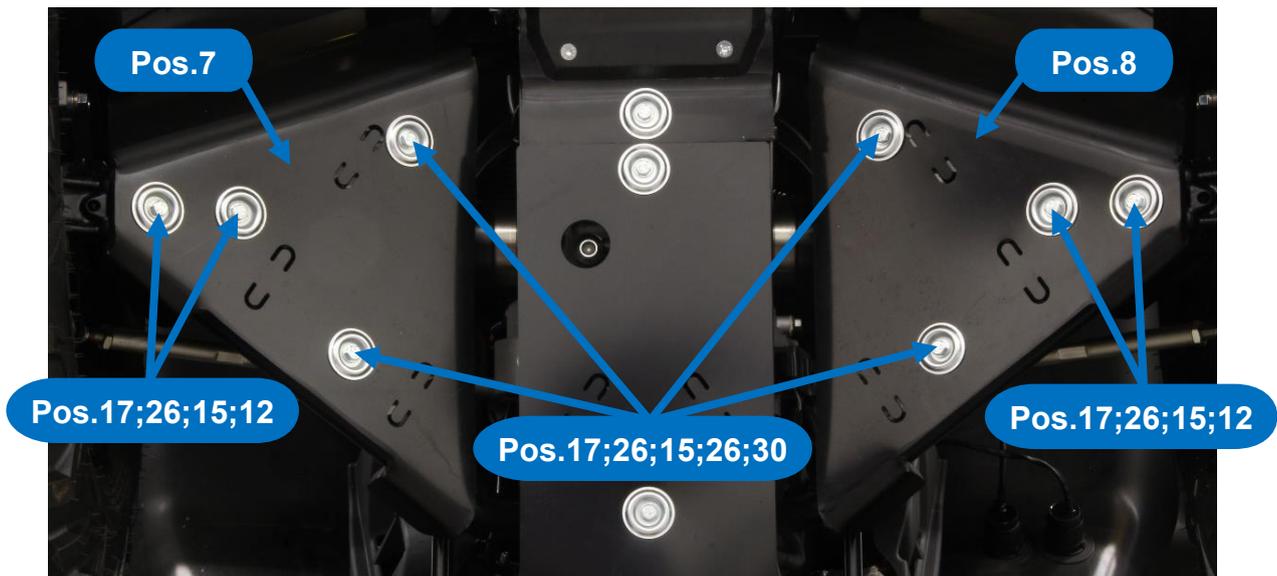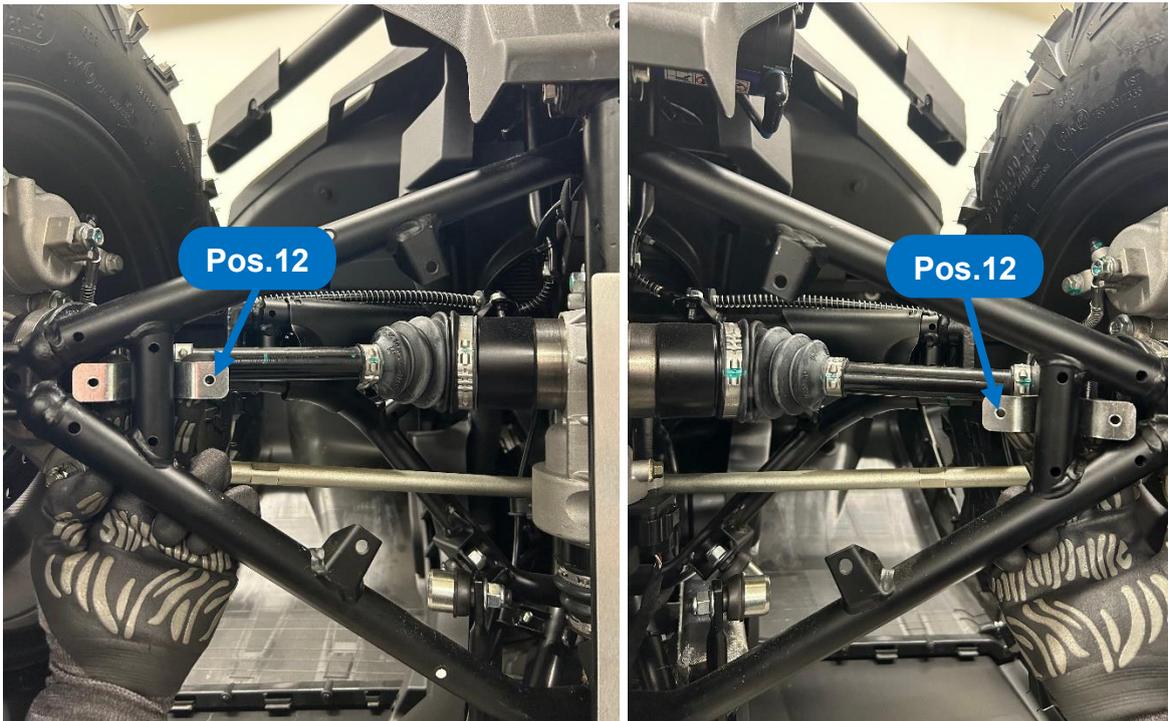



02.34900 Plastic skid plate QJMotor SFA 600/1000

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

