

# IRON BALTIC

## PLASTIC SKID PLATE

# CFMOTO

## UFORCE U10 PRO XL

Code 02.35200

Version 31012025



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/dq03Ffi](http://code.ironbaltic.com/u/dq03Ffi)

# SPECIFICATION

| Pos. | Description                  | Code         | Amount |
|------|------------------------------|--------------|--------|
| 1    | Front part                   | 02.33201K    | 1      |
| 2    | Middle part 1                | 02.35201     | 1      |
| 3    | Middle part 2                | 02.35202     | 1      |
| 4    | Rear part                    | 02.33203     | 1      |
| 5    | Left side protection 1       | 02.35203K    | 1      |
| 6    | Left side protection 2       | 02.35204K    | 1      |
| 7    | Right side protection 1      | 02.35205K    | 1      |
| 8    | Right side protection 2      | 02.35206K    | 1      |
| 9    | Right front A-arm protection | 02.33206     | 1      |
| 10   | Left front A-arm protection  | 02.33207     | 1      |
| 11   | Right rear A-arm protection  | 02.33208     | 1      |
| 12   | Left rear A-arm protection   | 02.33209     | 1      |
| 13   | Connecting plate             | 02.5006      | 33     |
| 14   | Dished washer                | 14.503       | 135    |
| 15   | Bolt M6x16 DIN933            | OT.02.02.050 | 82     |
| 16   | Bolt M6x20 DIN933            | OT.02.02.060 | 29     |
| 17   | Bolt M6x30 DIN933            | OT.02.02.080 | 8      |
| 18   | Bolt M6x40 DIN933            | OT.02.02.100 | 6      |
| 19   | Bolt M8x25 DIN933            | OT.02.02.190 | 8      |
| 20   | Bolt M8x30 DIN933            | OT.02.02.200 | 2      |
| 21   | Washer Ø6/15 SFS3738         | OT.04.03.020 | 125    |





## NB!

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**



## TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10 mm
- Socket wrench 13 mm
- Allen key 4 mm
- Allen key 6 mm

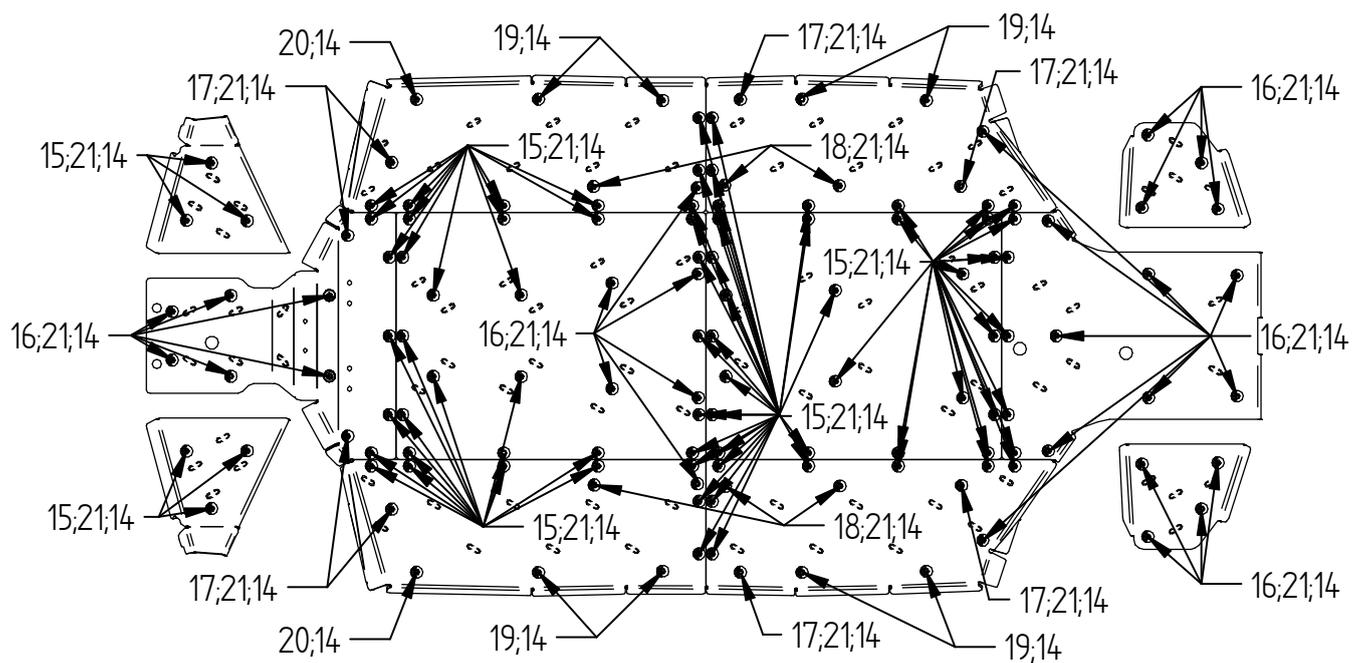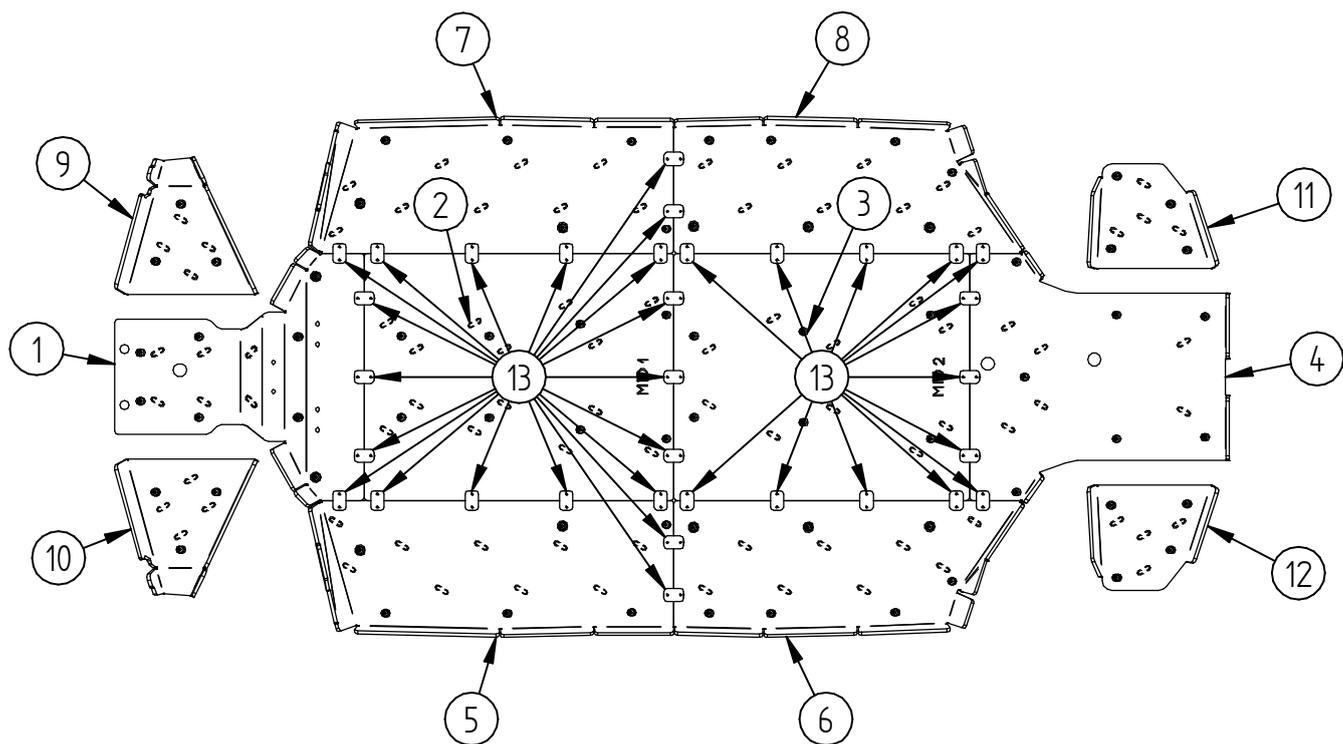


# FITTING INSTRUCTIONS

**Step 1** Remove all original skid plate parts.




**Step 2** Install front part (Pos.1). For fastening use M6x20 bolts (Pos.16), M6x30 bolts (Pos.17), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

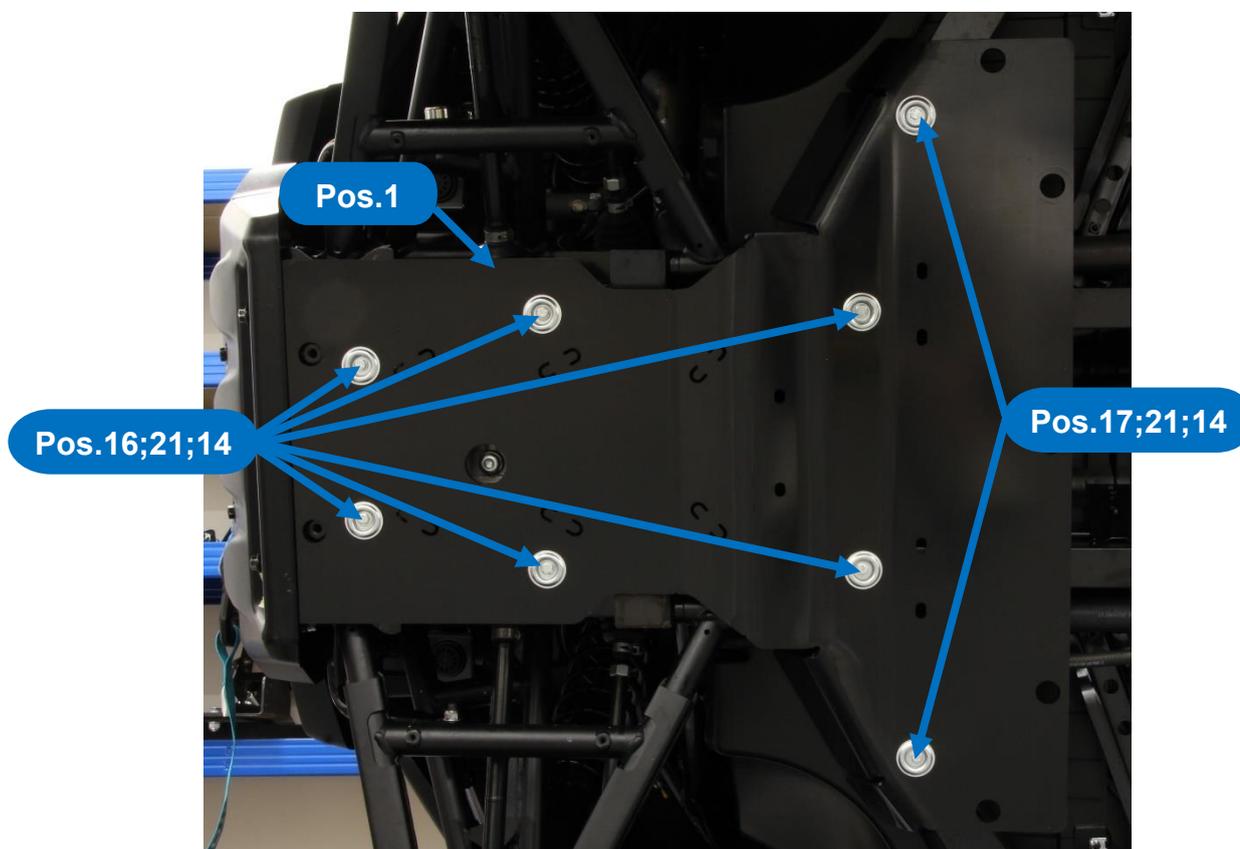


### Step 3

Install connecting plates (Pos.13) to front part (Pos.1). For fastening use M6x16 bolts (Pos.15), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

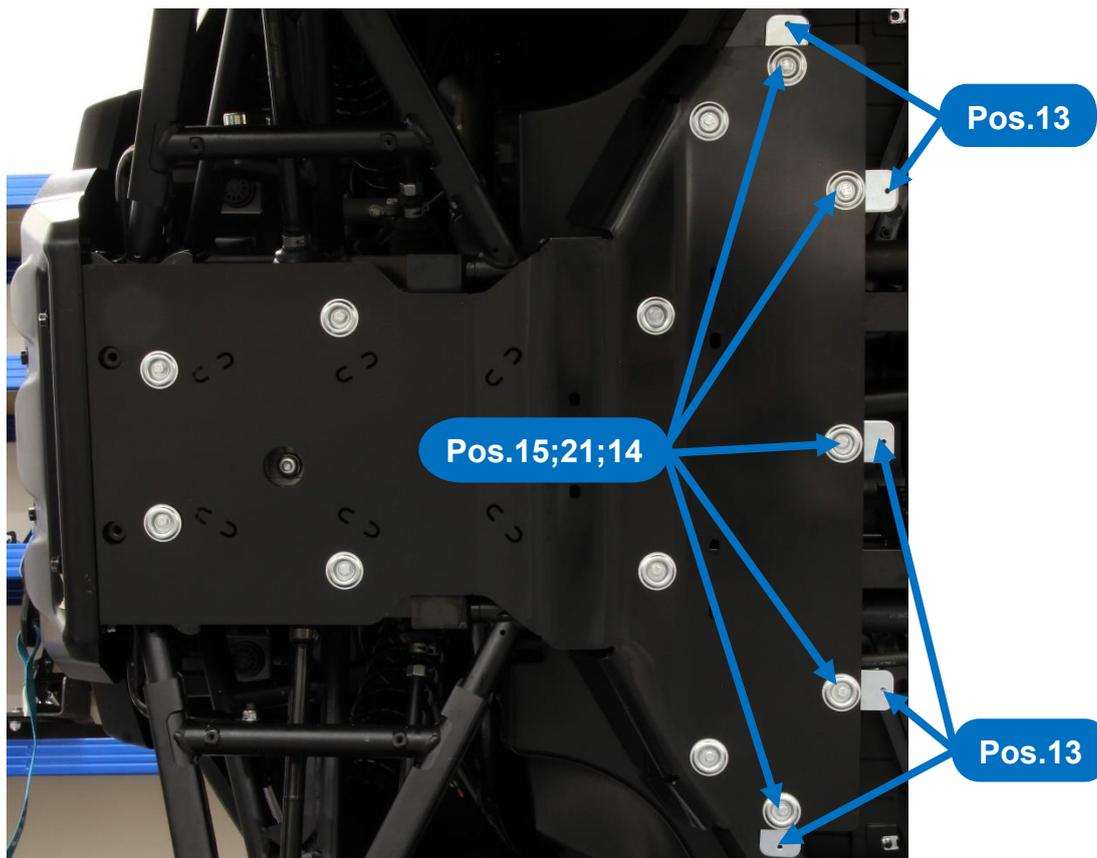


### Step 4

Install middle part 1 (Pos.2). For fastening use M6x16 bolts (Pos.15), M6x20 bolts (Pos.16), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

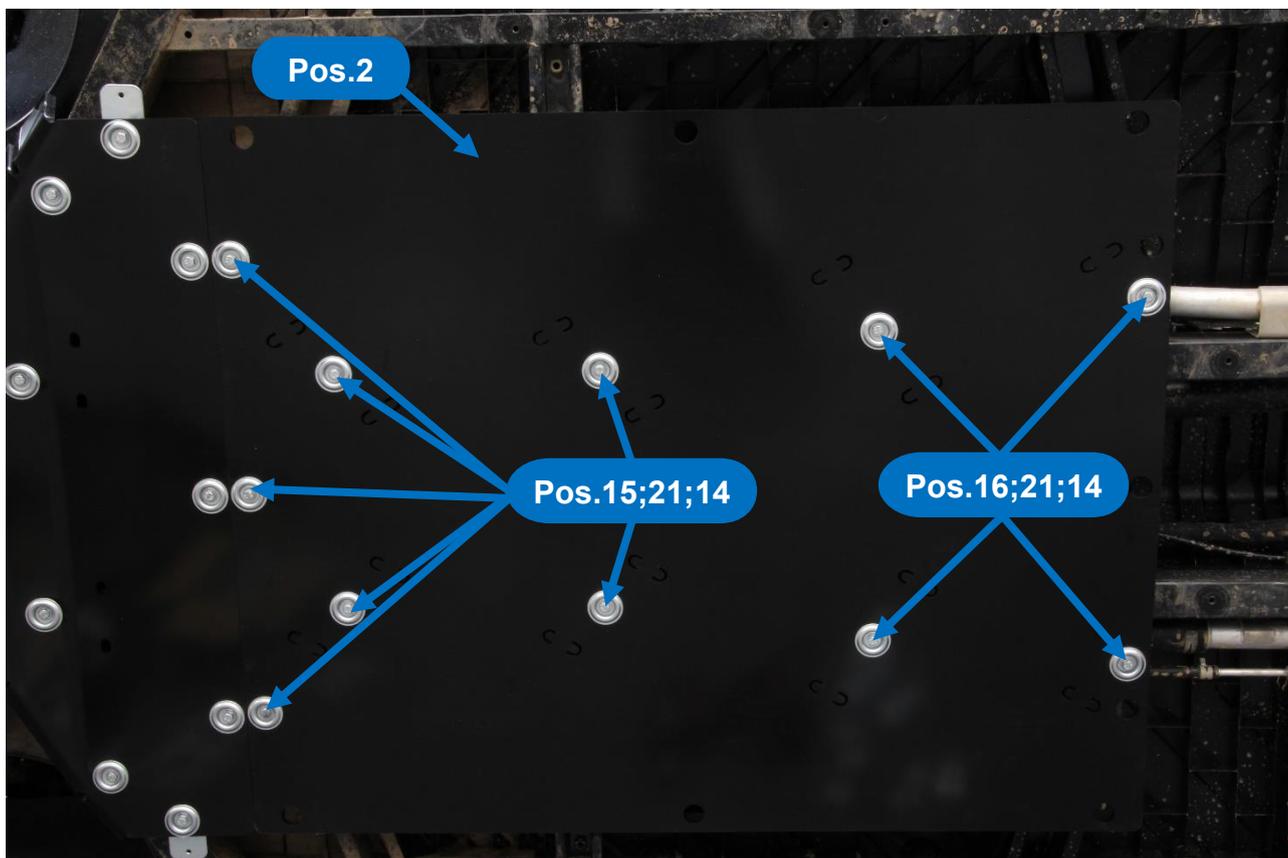


### Step 5

Install connecting plates (Pos.13) to middle part 1 (Pos.2). For fastening use M6x16 bolts (Pos.15), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

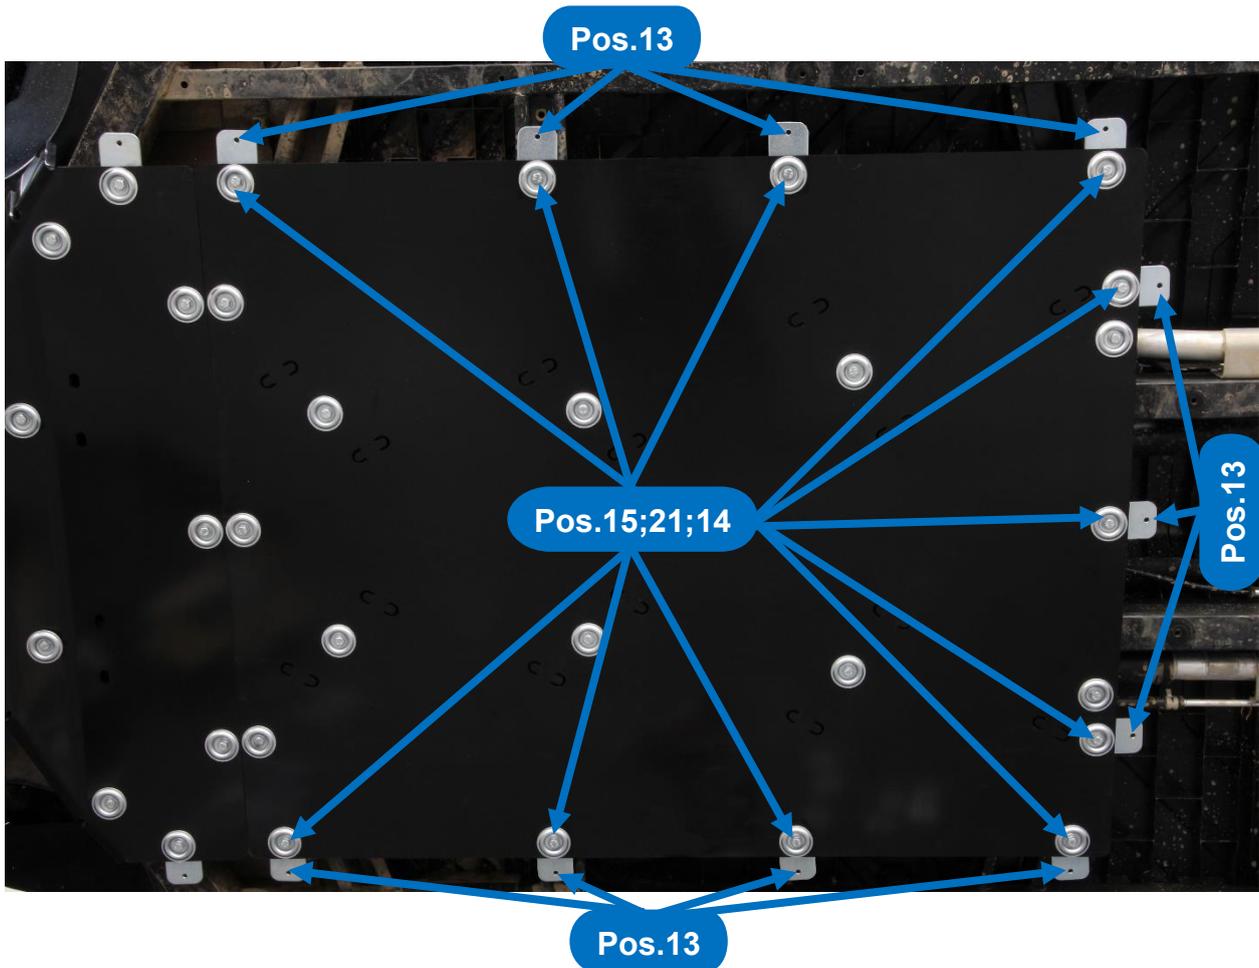


### Step 6

Install middle part 2 (Pos.3). For fastening use M6x16 bolts (Pos.15), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

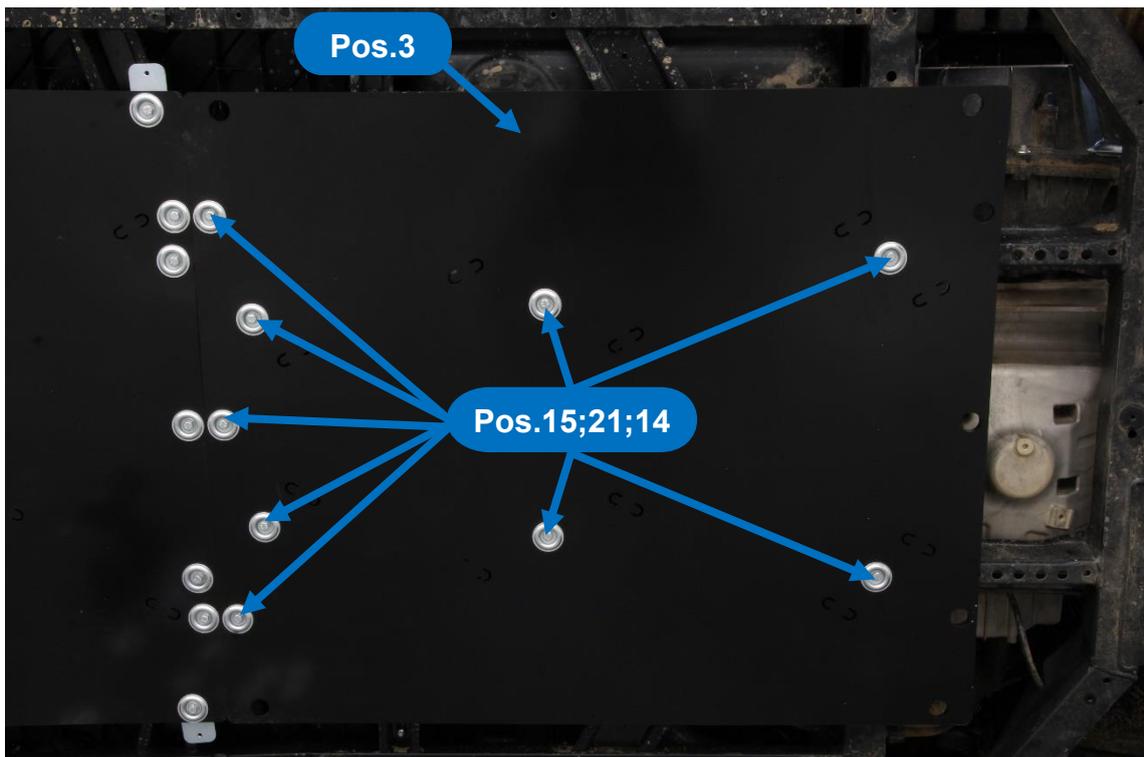


### Step 7

Install connecting plates (Pos.13) to middle part 2 (Pos.3). For fastening use M6x16 bolts (Pos.15), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

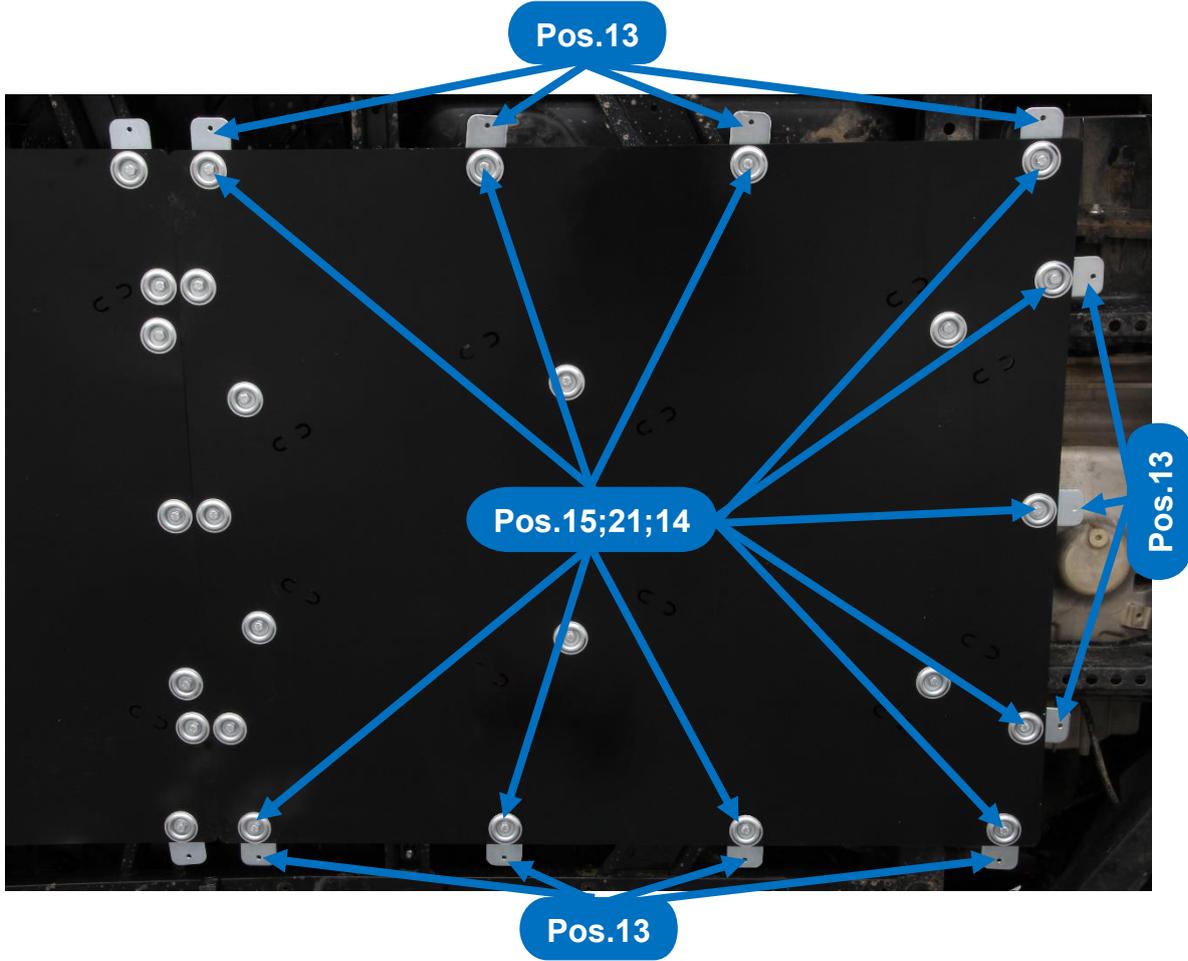


### Step 8

Install rear part (Pos.4). For fastening use M6x16 bolts (Pos.15), M6x20 bolts (Pos.16), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

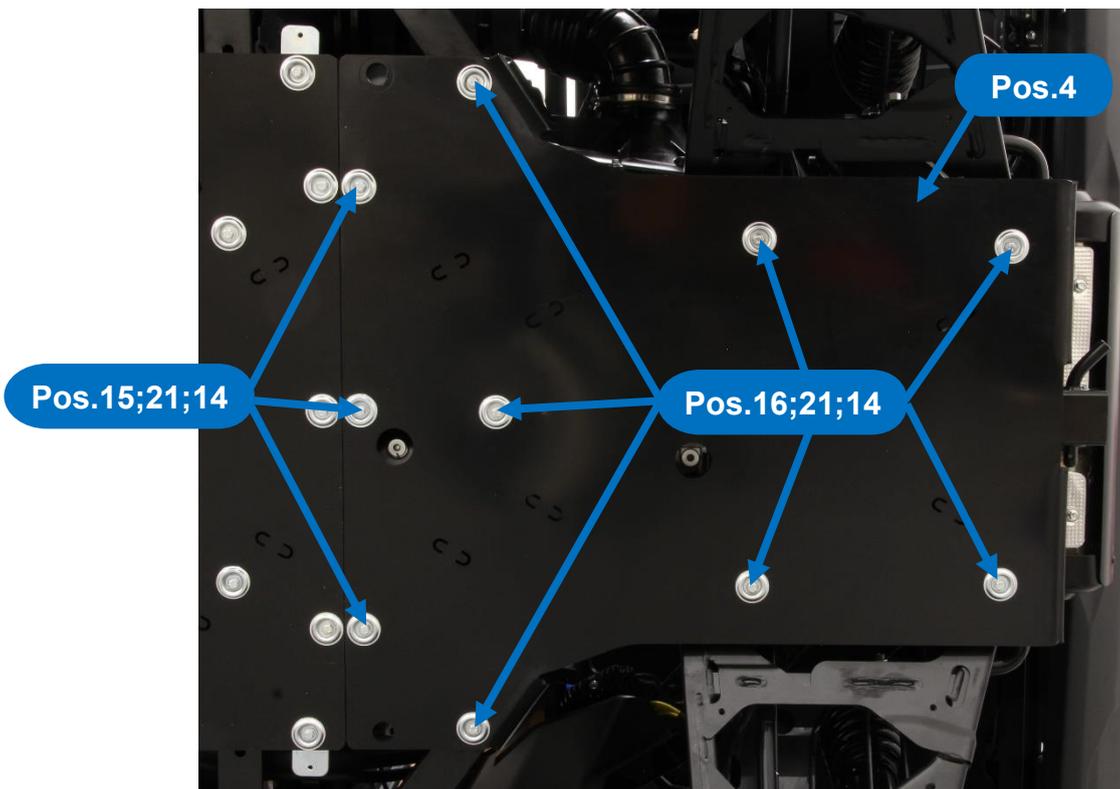


## Step 9

Install connecting plates (Pos.13) to rear part (Pos.4). For fastening use M6x16 bolts (Pos.15), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

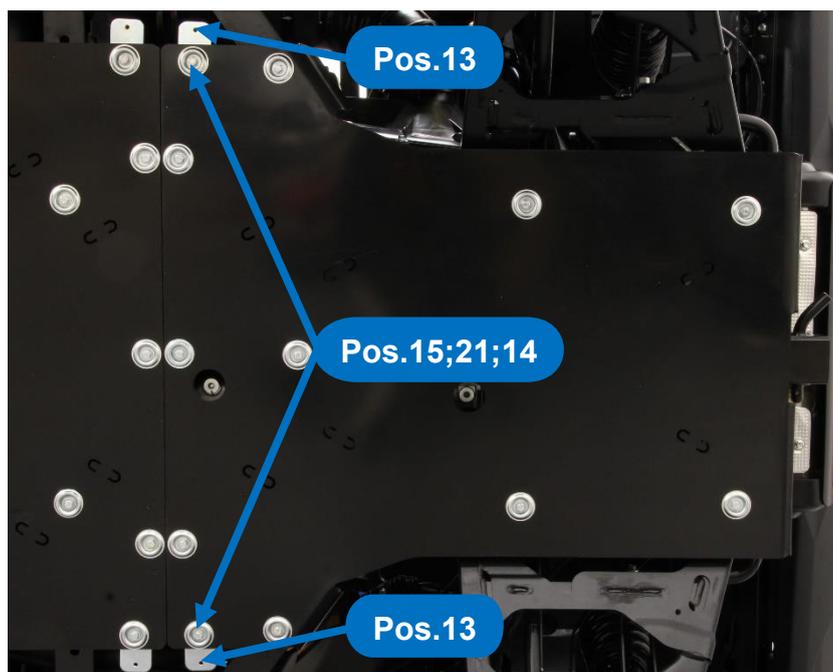


## Step 10

Install left side protection 1 (Pos.5) and right side protection 1 (Pos.7). For fastening use M6x16 bolts (Pos.15), M6x20 bolts (Pos.16), M6x30 bolts (Pos.17), M6x40 bolts (Pos.18), M8x25 bolts (Pos.19), M8x30 bolts (Pos.20), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

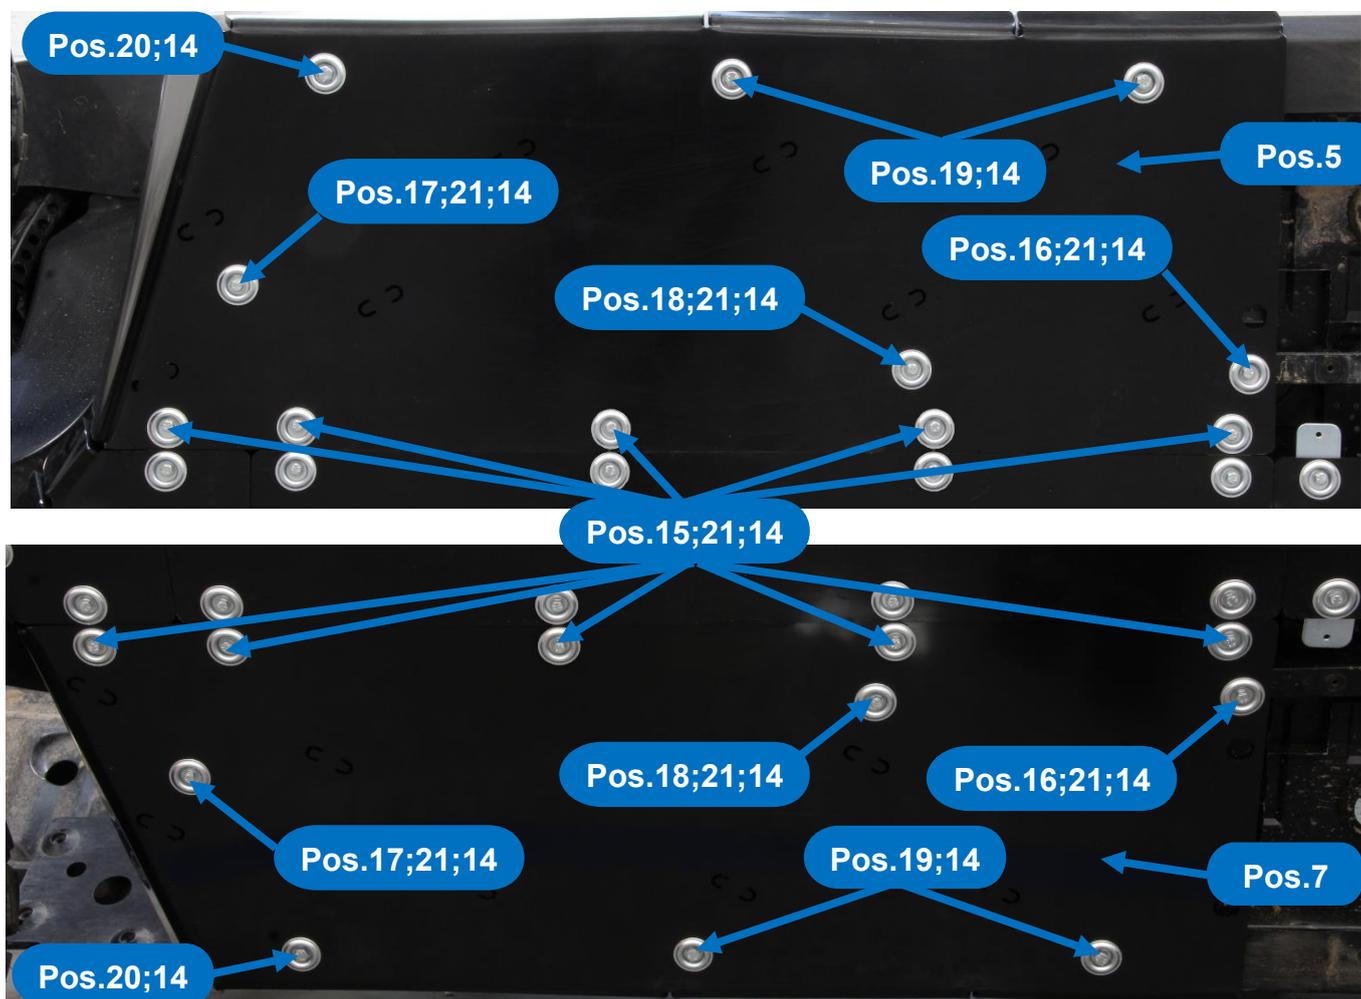


## Step 11

Install connecting plates (Pos.13) to left side protection (Pos.5) and right side protection (Pos.7). For fastening use M6x16 bolts (Pos.15), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

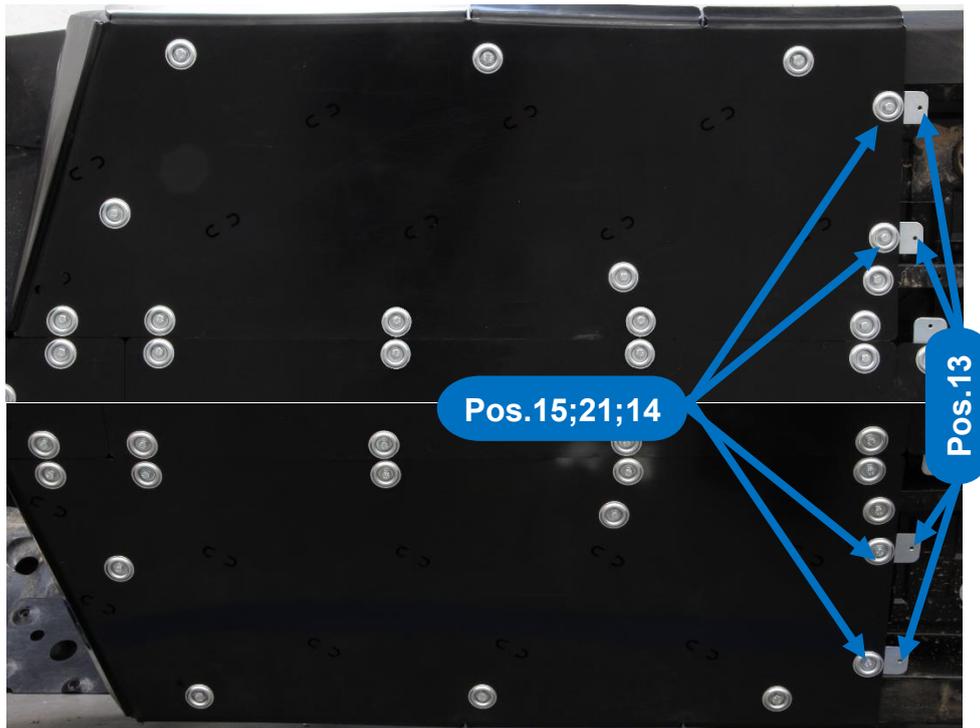


## Step 12

Install left side protection 2 (Pos.6) and right side protection 2 (Pos.8). For fastening use M6x16 bolts (Pos.15), M6x20 bolts (Pos.16), M6x30 bolts (Pos.17), M6x40 bolts (Pos.18), M8x25 bolts (Pos.19), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

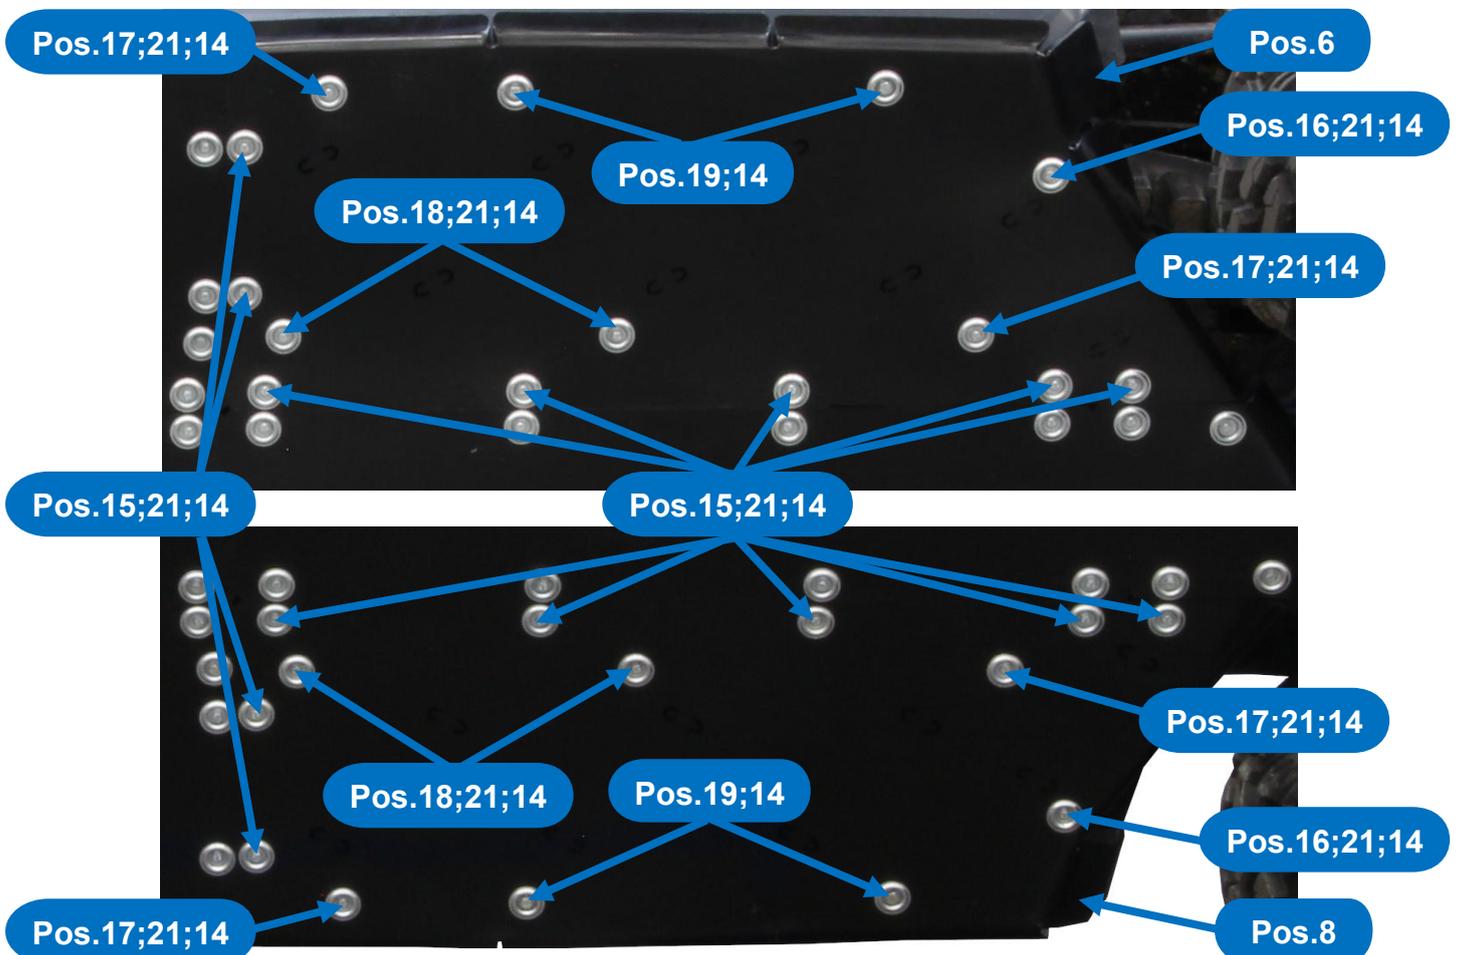


### Step 13

Install front right (Pos.9) and front left A-arm protection (Pos.10). For fastening use M6x16 bolts (Pos.15), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

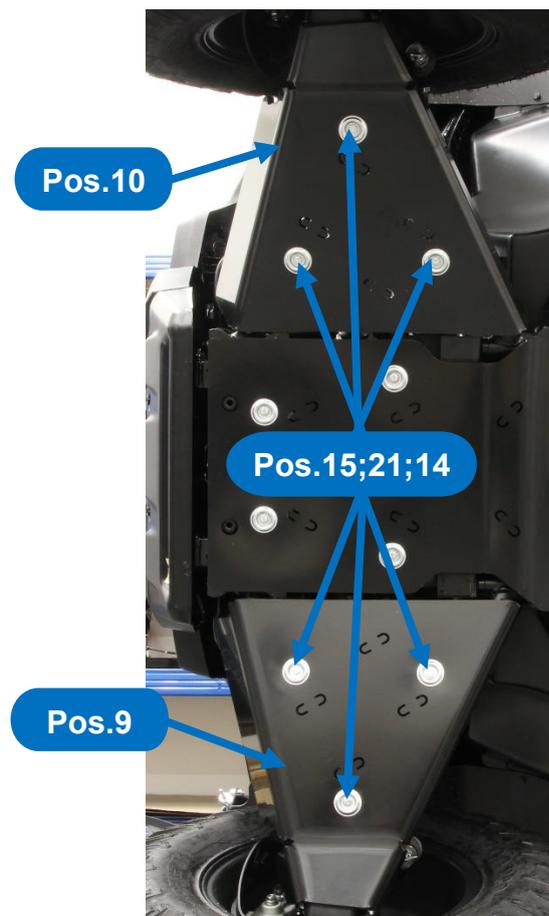

### Step 14

Install rear right (Pos.11) and rear left A-arm protection (Pos.12). For fastening use M6x20 bolts (Pos.16), Ø6/15 washers (Pos.21) and dished washers (Pos.14).

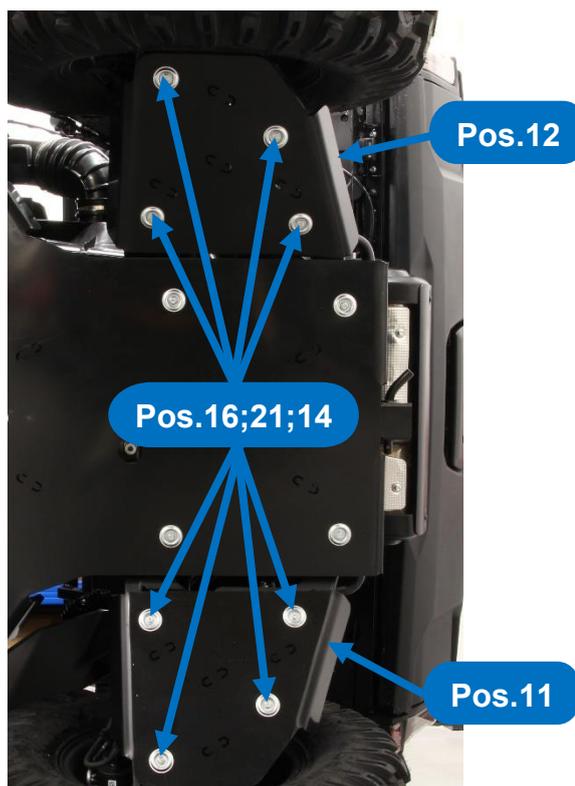



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

