

IRON BALTIC

ALUMINIUM SKID PLATE

KAWASAKI

KVF 650 / 750 BruteForce 4x4

Code 02.400

Version 16102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/TM66FYW8



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.401K	1
2	Front part	02.402K	1
3	Rear part	02.405	1
4	Front right arm protection	02.403P	1
5	Front left arm protection	02.403V	1
6	Rear right arm protection	02.404P	1
7	Rear left arm protection	02.404V	1
8	Plate	02.5006	5
9	Bolt M6x16 DIN 7991	OT.02.04.020	10
10	Bolt M6x20 DIN 7991	OT.02.04.030	6
11	Bolt M6x25 DIN 7991	OT.02.04.040	10
12	Bolt M6x30 DIN 7991	OT.02.04.050	4
13	Bolt M6x40 DIN 7991	OT.02.04.070	2
14	Bolt M6x60 DIN 7991	OT.02.04.090	2
15	Bolt M8x20 DIN 933	OT.02.02.180	1
16	Conical washer Ø6	14.502	34
17	Washer Ø6/18 DIN 9021	OT.04.02.020	4
18	Washer Ø8/20 SFS3738	OT.04.03.030	1
19	Nyloc nut M6 DIN 985	OT.03.02.030	4

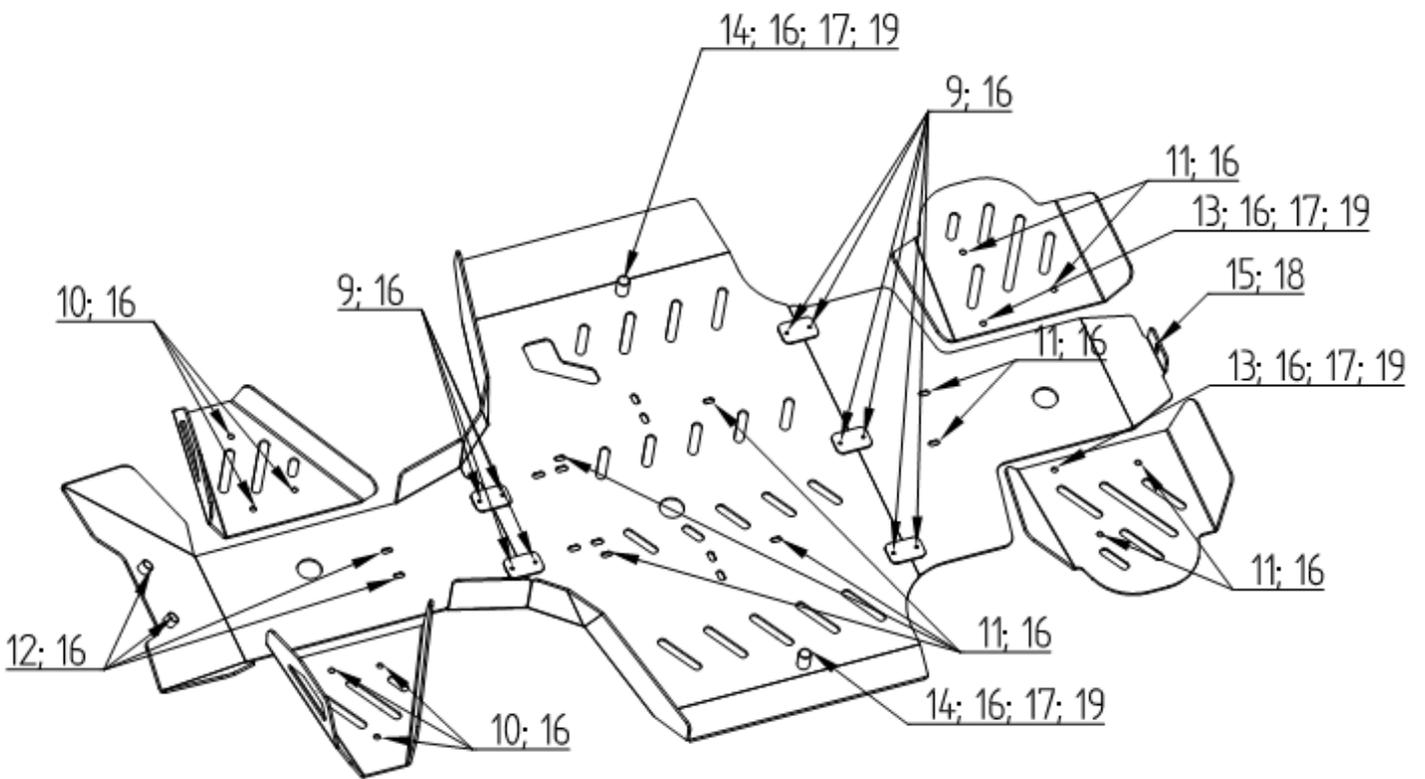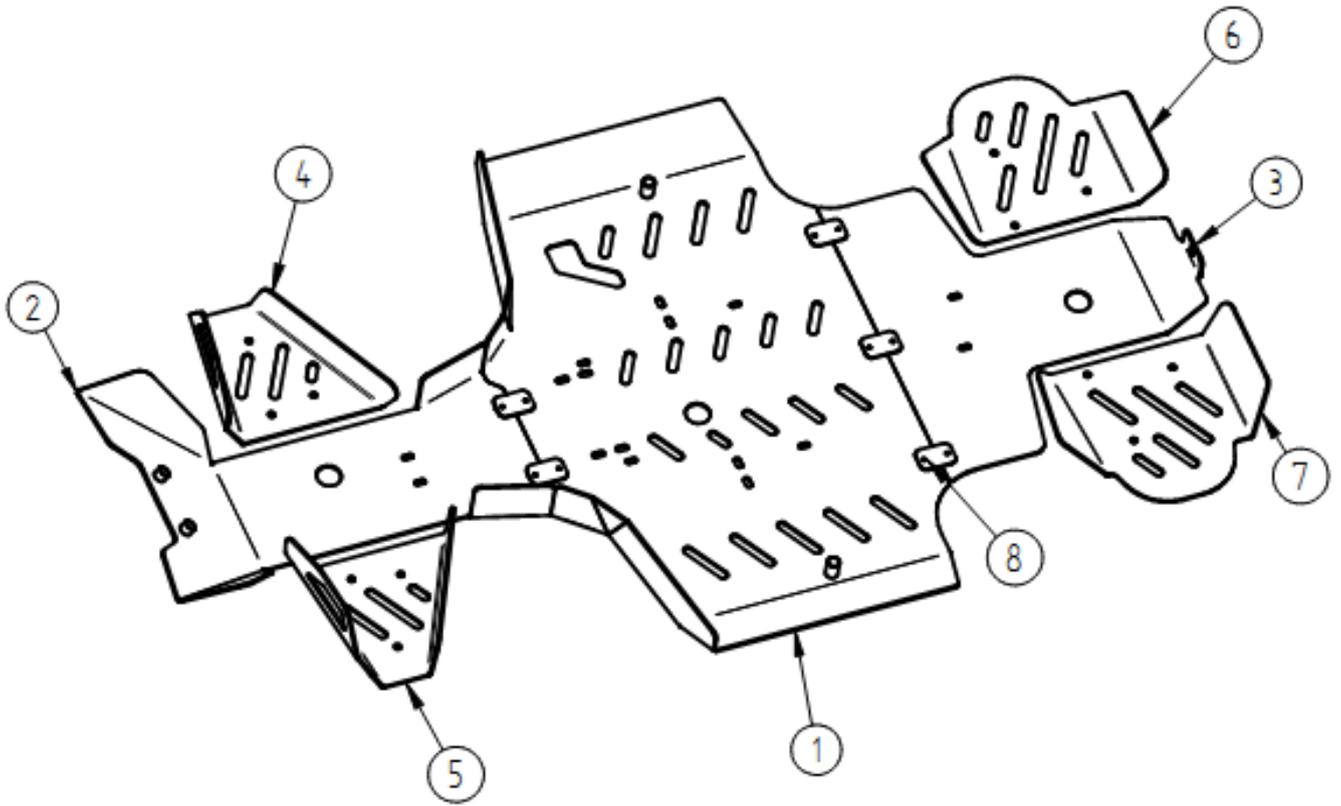


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

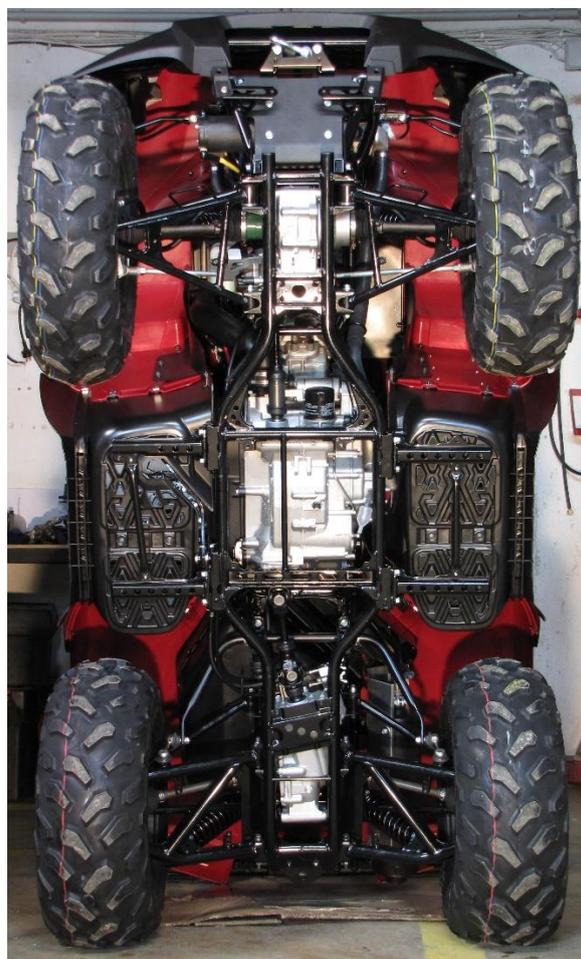


Step 2 Install middle part, use bolts M6x25 and M6x60.

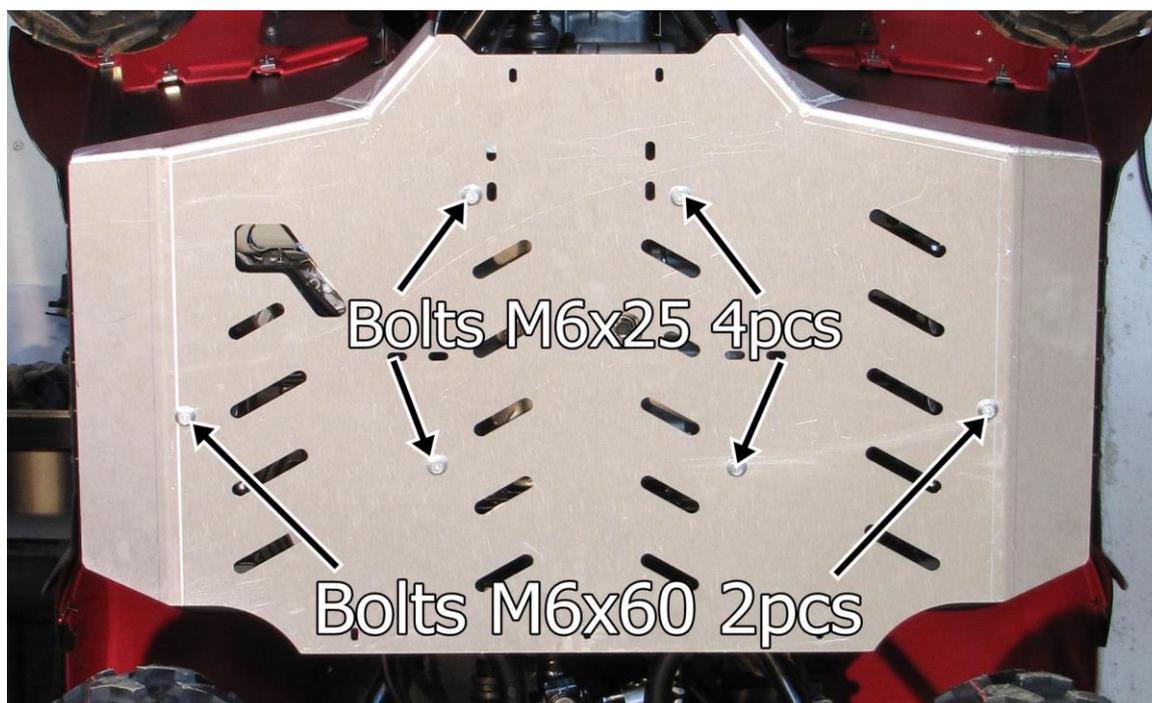


Step 3

Install plates 02.5006 to middle part, use bolts M6x16.

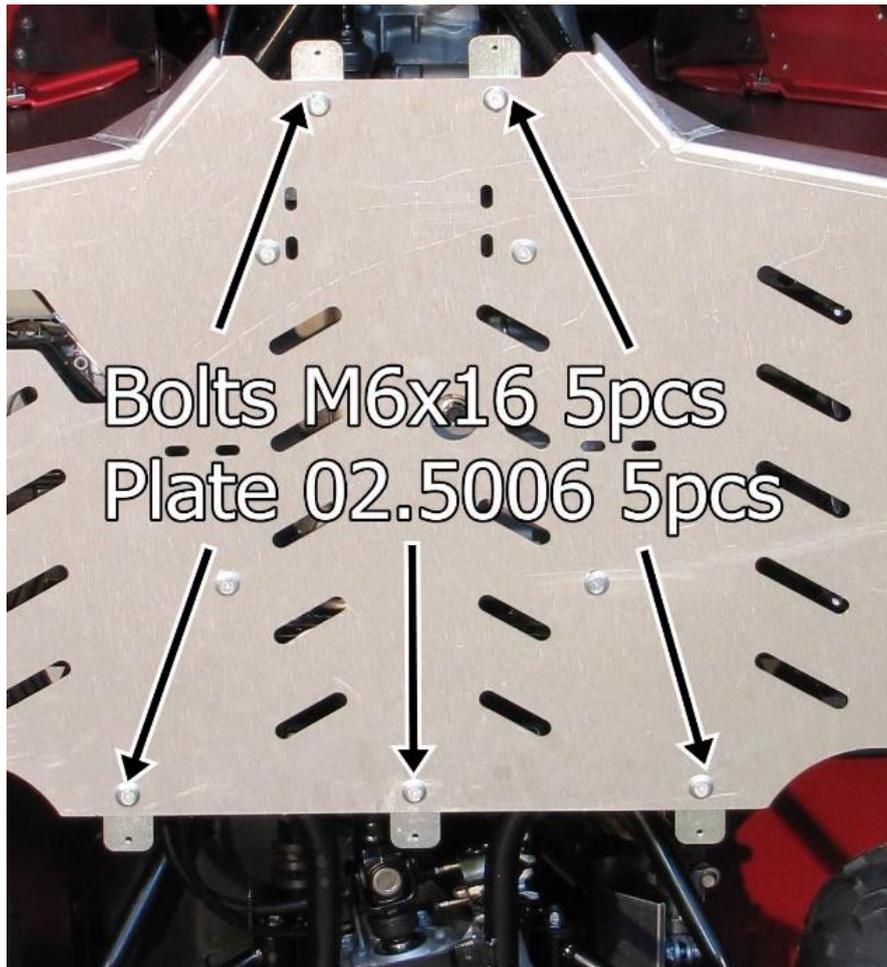


Step 4

Install rear part, use bolts M6x16, M6x25 and M8x20.

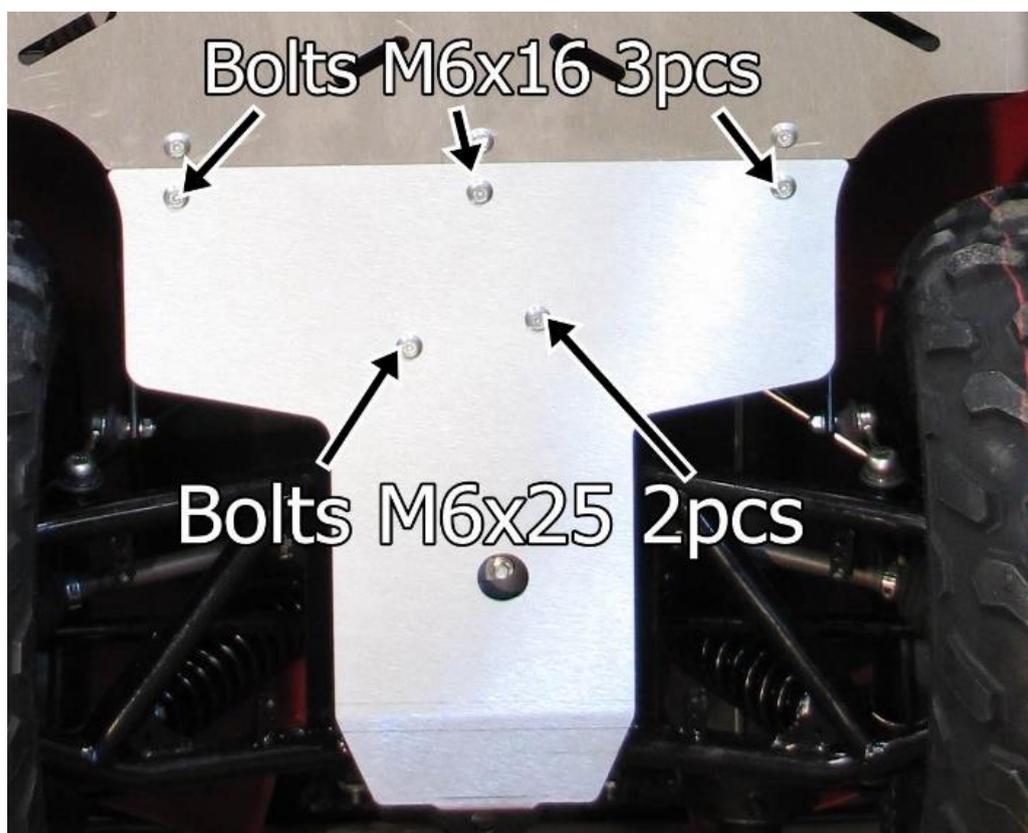

Step 5

Install front part, use bolts M6x30 and M6x16.

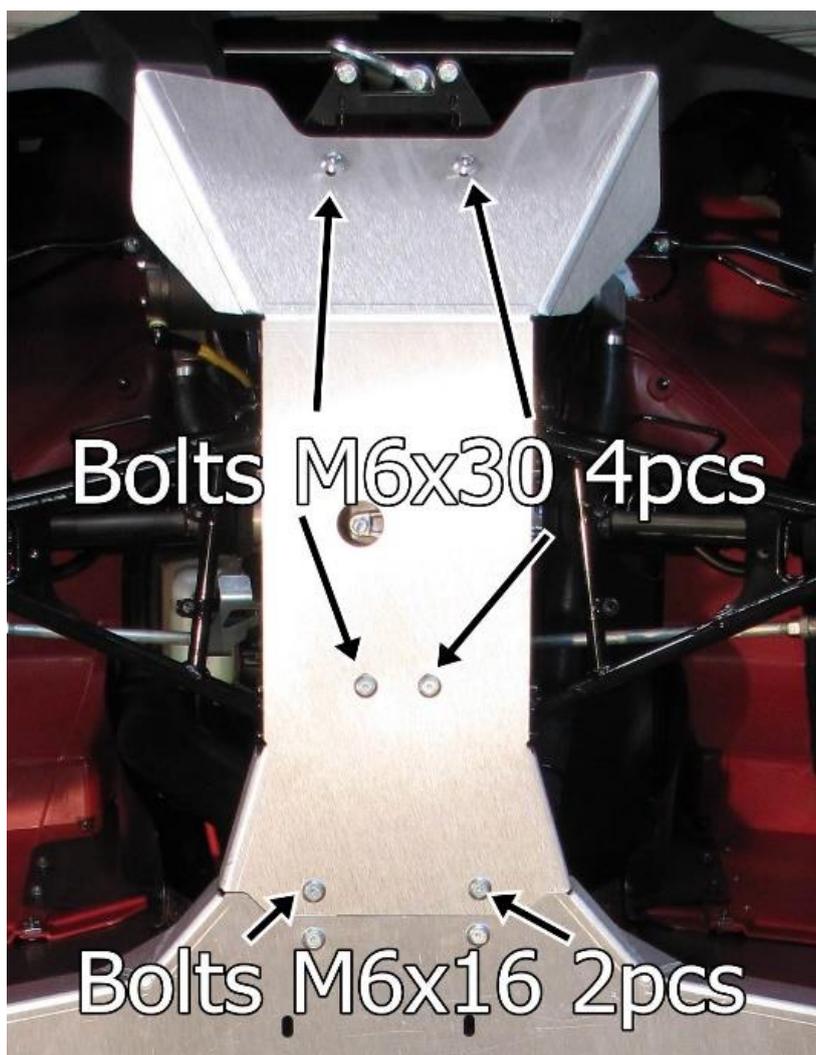


Step 6

Install rear arms protections, use bolts M6x25, bolts M6x40 and nyloc nuts M6.



Step 7

Install front arms protections, use bolts M6x20.

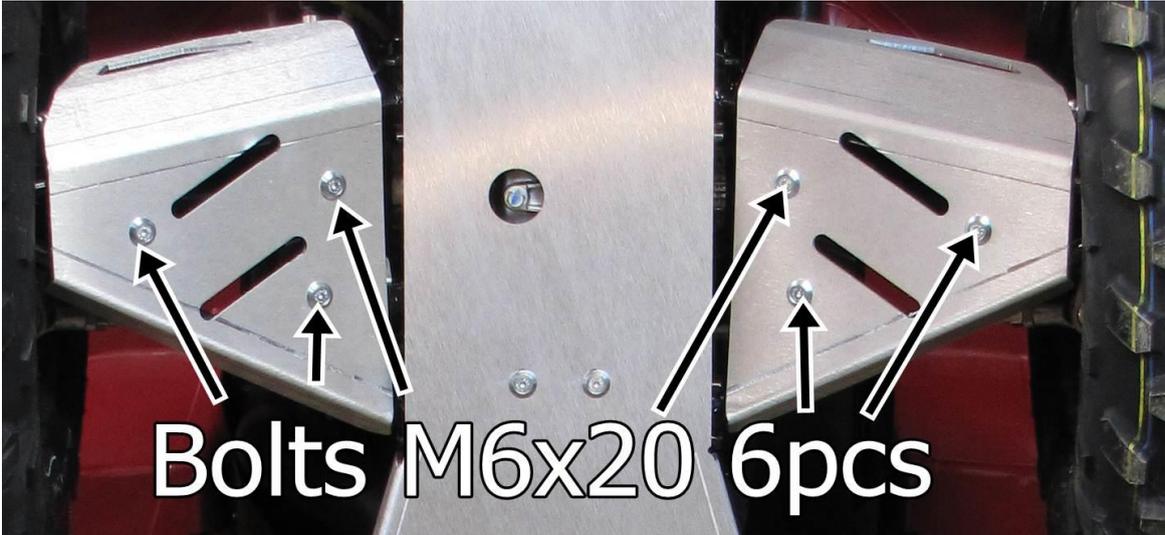

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

