

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/4hKt87bU


ALUMINIUM SKID PLATE

SUZUKI

500 / 750 AXi KingQuad (2019-...)

Code 02.4800

Version 23102023


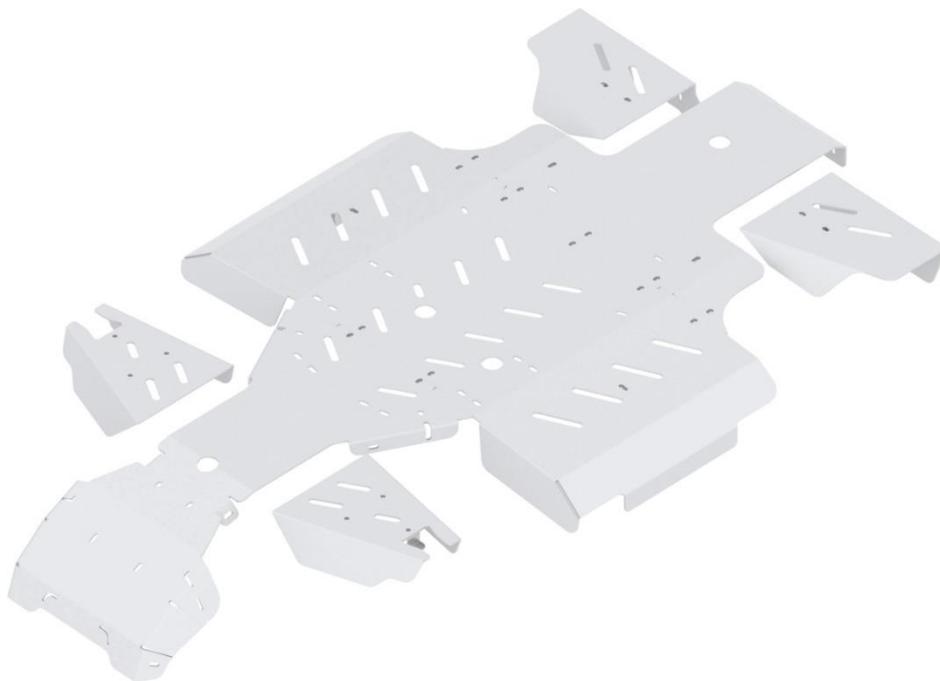


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.4801	1
2	Front protection	02.4802	1
3	Rear protection	02.4810	1
4	Bumper protection	02.802	1
5	Front right arm protection	02.4803	1
6	Front left arm protection	02.4804	1
7	Rear right arm protection	02.4807	1
8	Rear left arm protection	02.4808	1
9	Plate	02.5006	7
10	Front right arm clamp	02.4805	1
11	Front left arm clamp	02.4806	1
12	Rear arm bracket	02.4606	2
13	Bracket	02.4811	2
14	Clamp (longer)	02.4809	2
14-1	Clamp 2 (shorter)	02.4812	2
15	Angle	02.811	2
16	Bolt M6x16 DIN 7991	OT.02.04.020	18
17	Bolt M6x20 DIN 7991	OT.02.04.030	24
18	Bolt M6x30 DIN 7991	OT.02.04.050	4
19	Bolt M6x40 DIN 7991	OT.02.04.070	2
20	Bolt M6x12 DIN 933	OT.02.02.030	4
21	Conical washer Ø6	14.502	46
22	Washer Ø6/18 DIN 9021	OT.04.02.020	8
23	Nyloc nut M6 DIN 985	OT.03.02.030	4

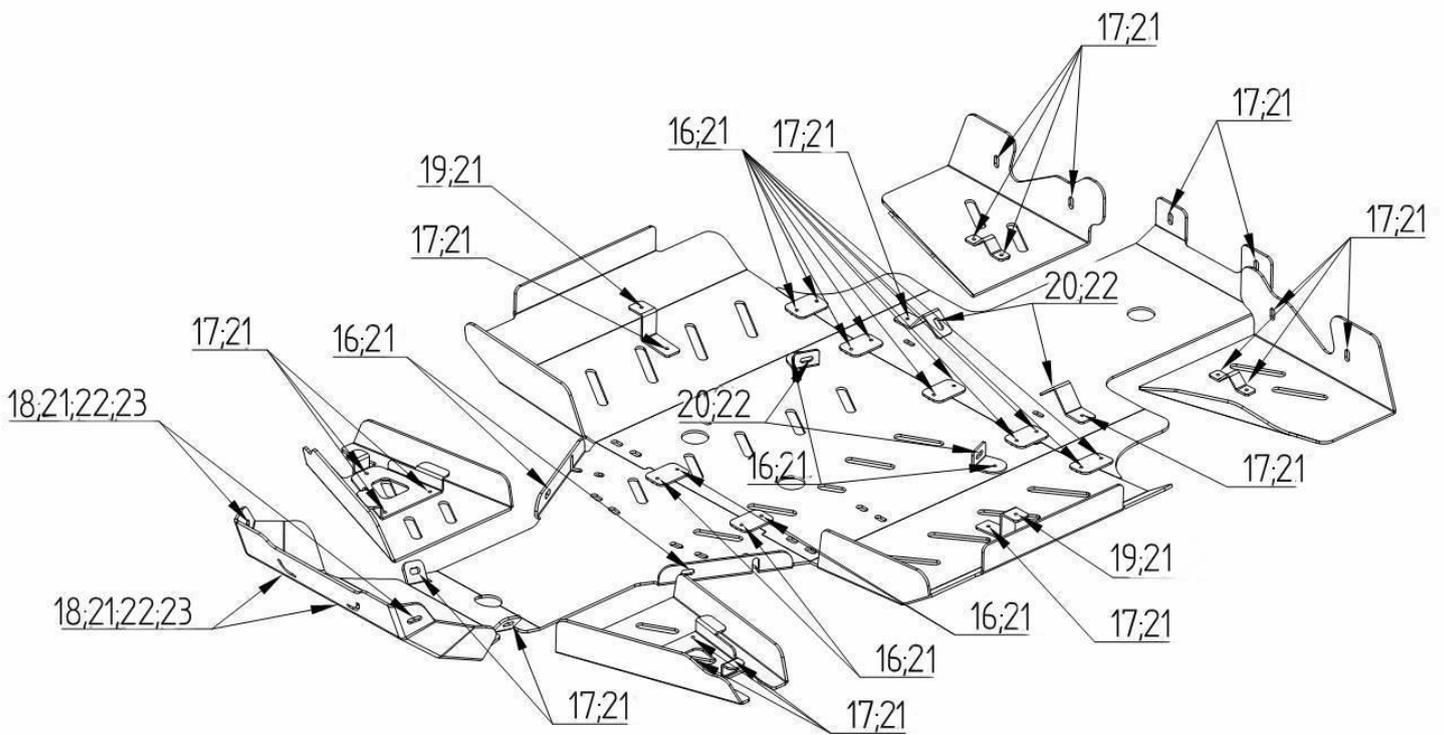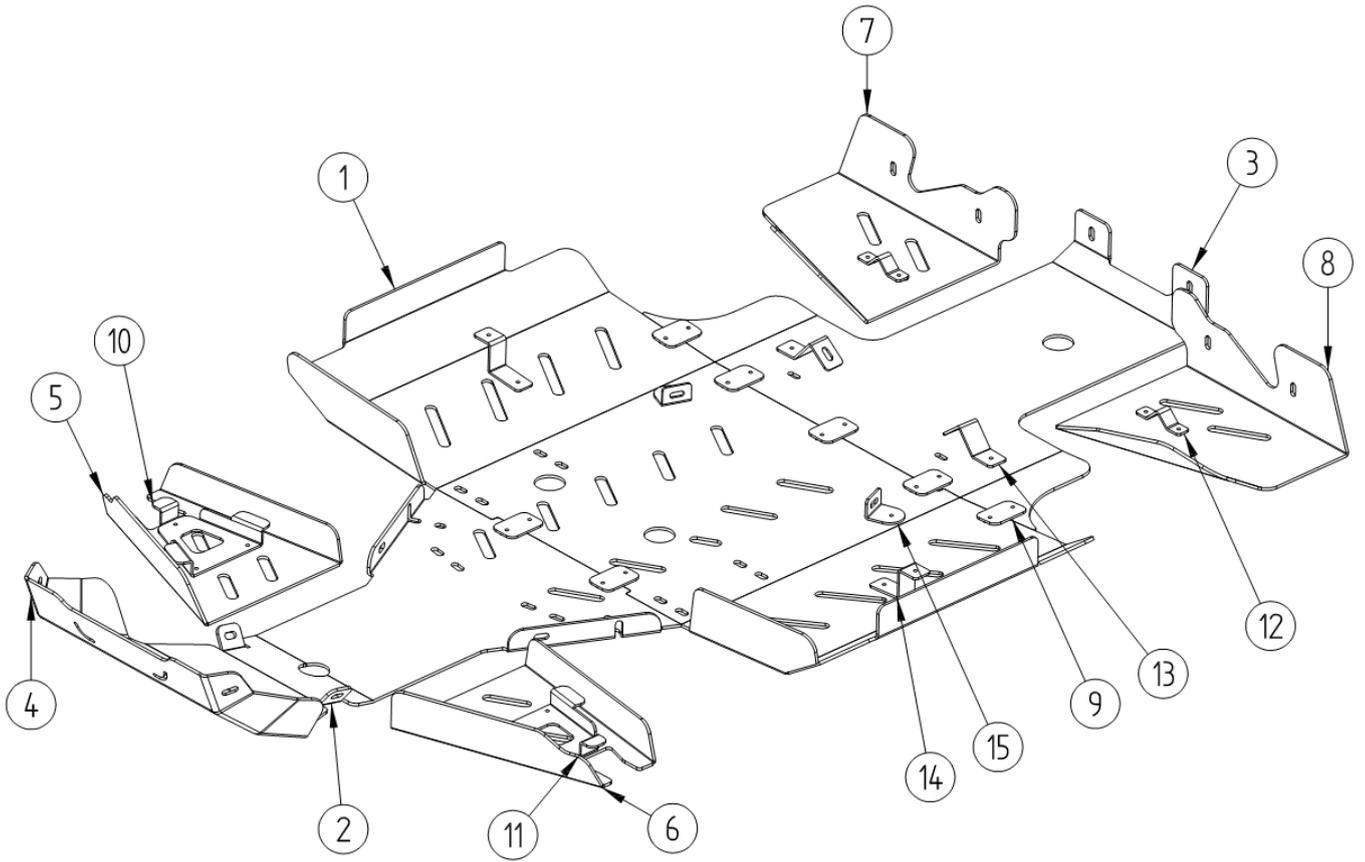

FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers.

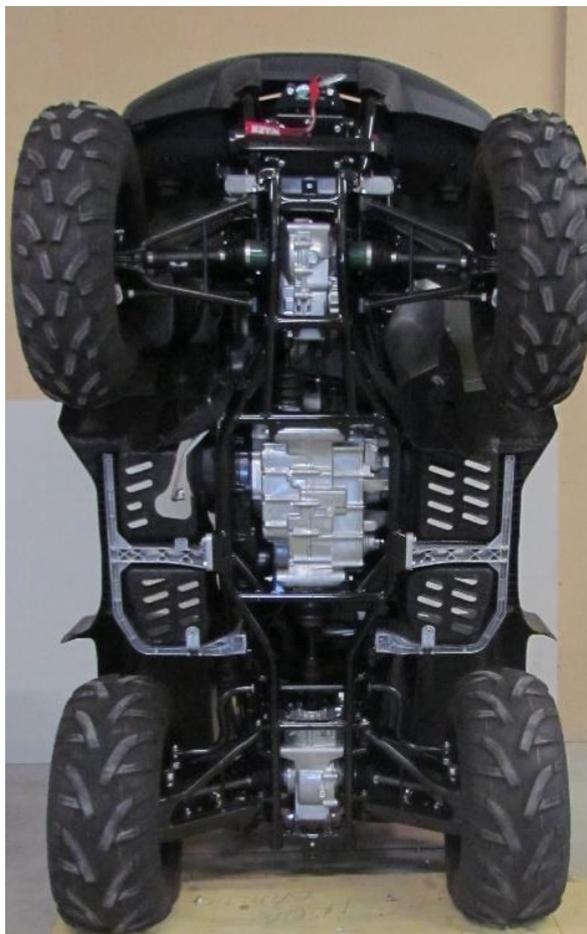

Step 2 Install brackets 02.4811, clamps 02.4809, angles 02.811, use bolts M6x12 and M6x40. From MY 2018 onward use brackets 02.4812 instead of 02.4809.




Up to MY 2018

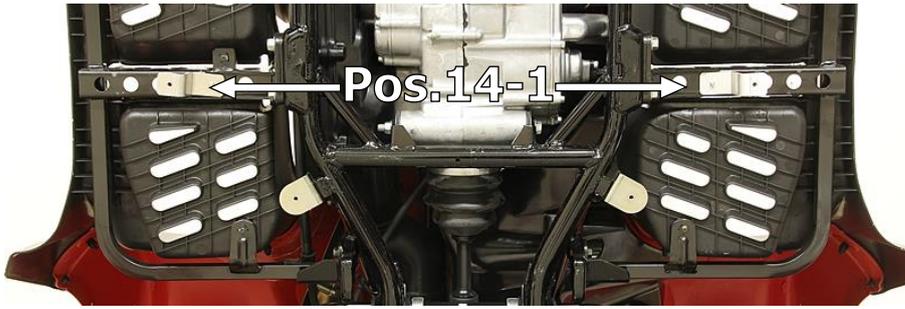

From MY 2018 shorter brackets (Pos.14-1) and bolts M6x20


Step 3

Install plates 02.5006 to skid plate middle protection, use bolts M6x16.

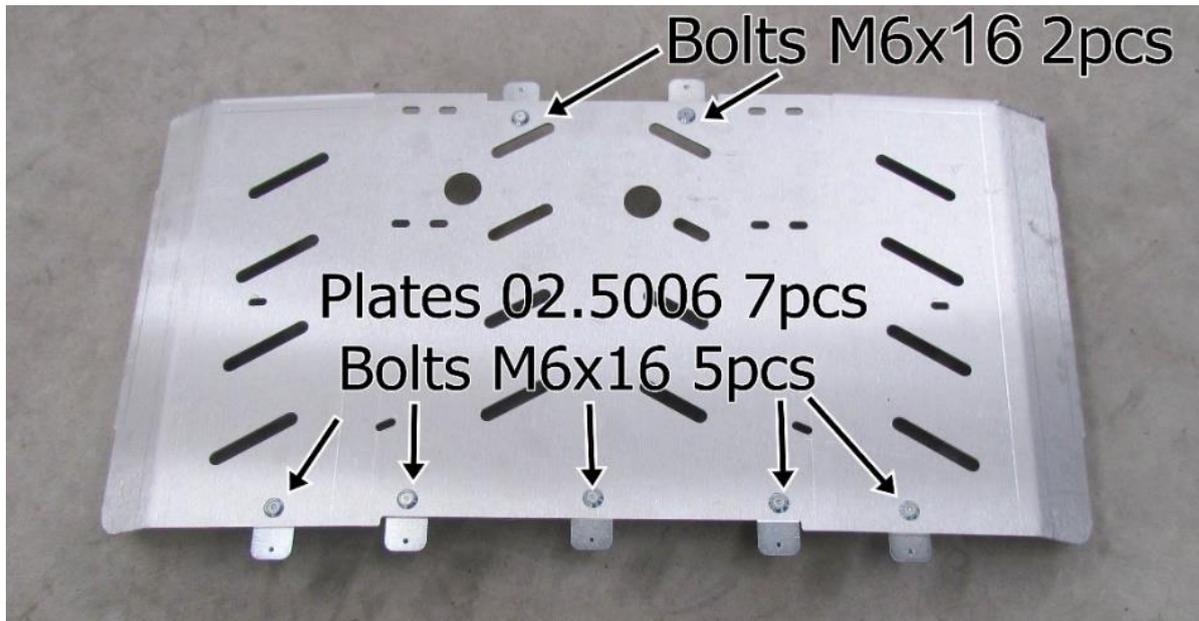


Step 4

Install skid plate middle protection, use bolts M6x16 and M6x20. The edges of skid plate edge go outwards. If necessary, press the edges of the ATV plastic inwards.

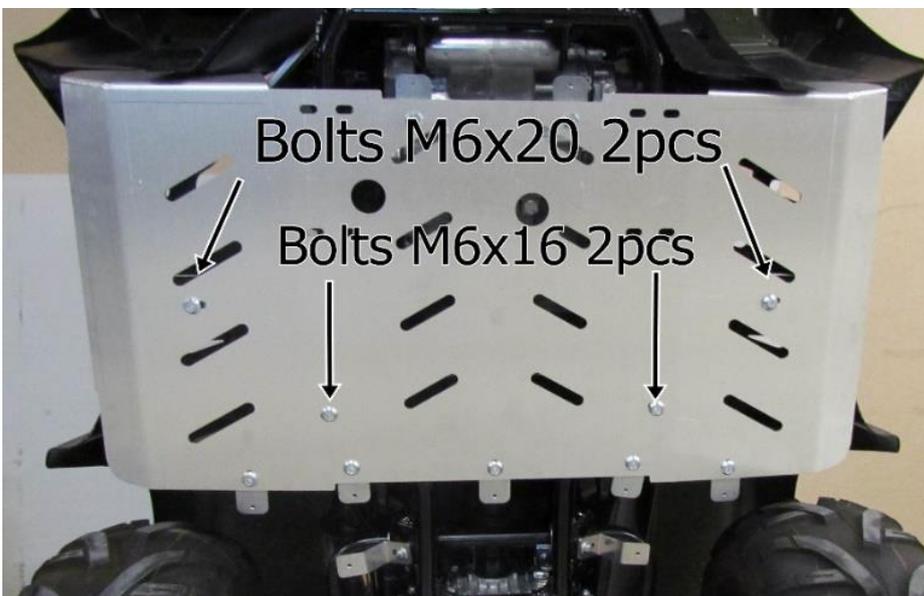


Step 5

Install rear arm protections, use rear arm bracket 02.4606 and bolts M6x20.

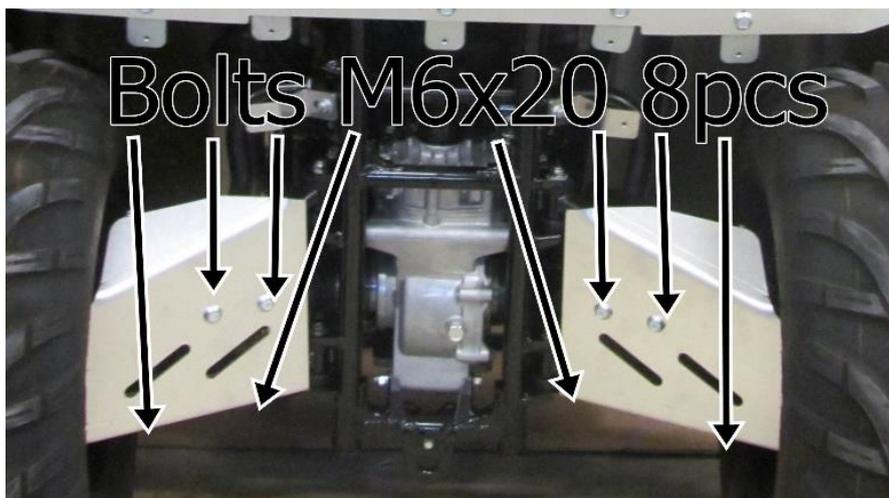


Step 6

Install rear protection, use bolts M6x16 and M6x20.

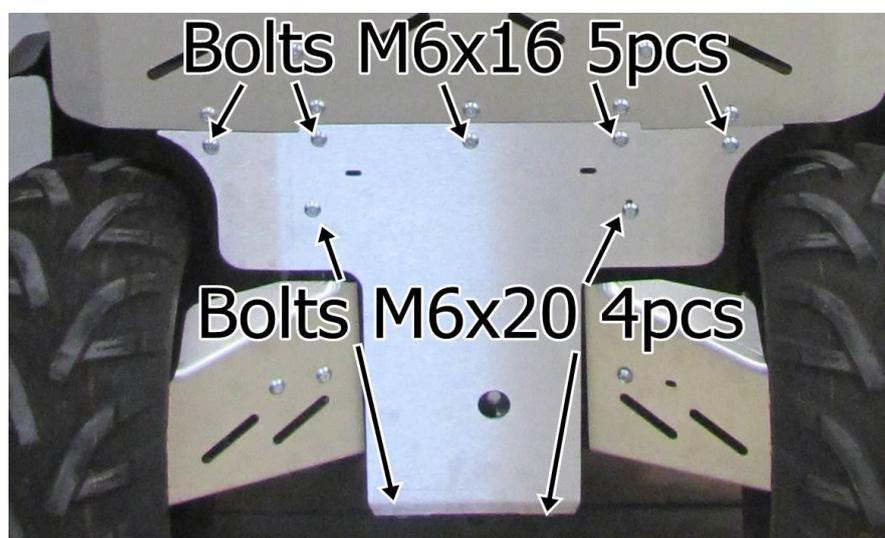



Step 7

Install front part, use bolts M6x16 and M6x20.

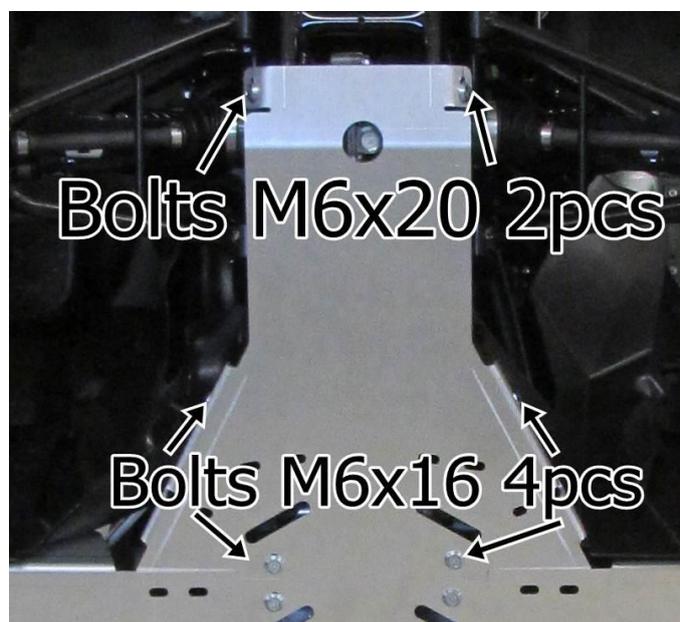


Step 8

Install bumper protection, use bolts M6x30 and nyloc nuts M6.
If you are using Iron Baltic front mount plow adapter, then cut out sections that are pre-marked with option holes. (on picture marked CUT).

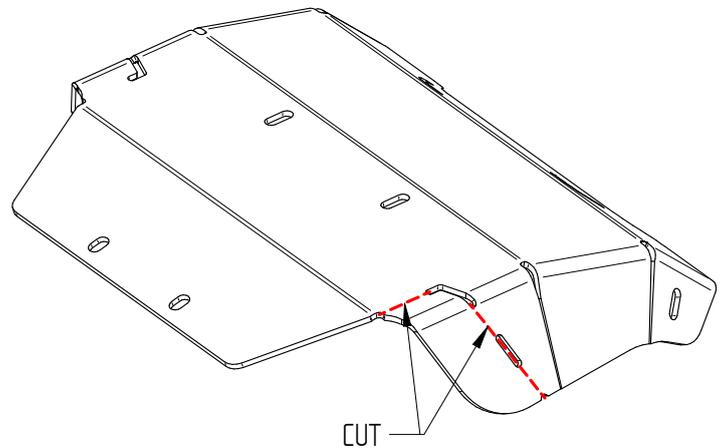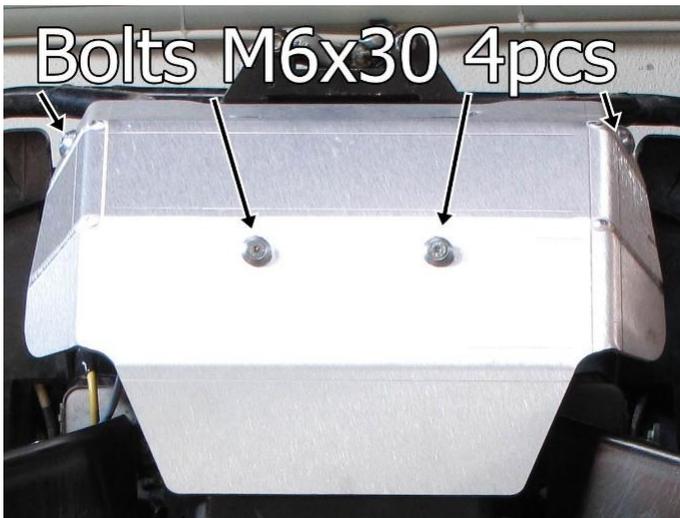

Step 9

Install front arm protections, use clamps 02.4805, 02.4806 and bolts M6x20.

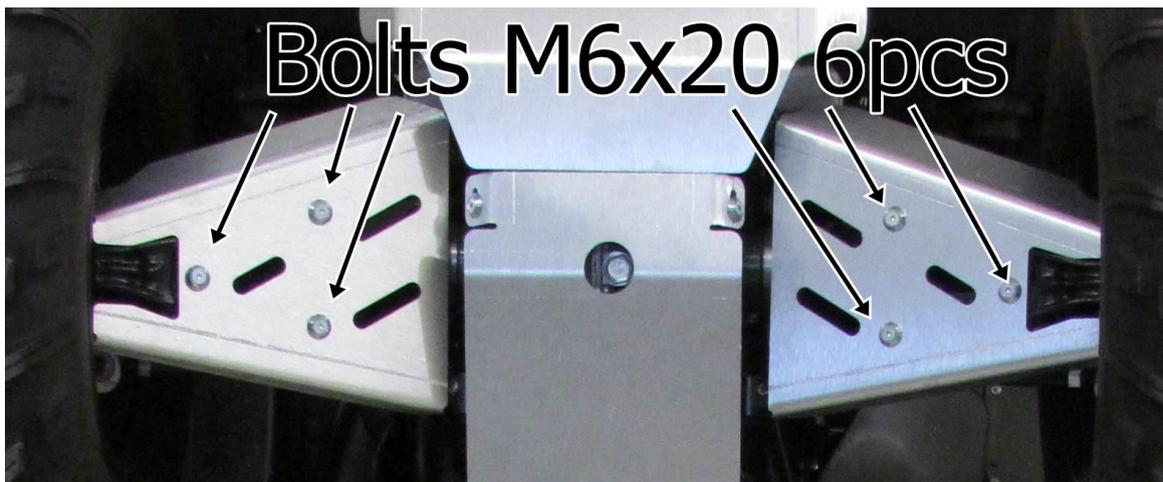

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

