

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/MVO7aP0w


PLASTIC SKID PLATE

SUZUKI

500 / 750 AXi KingQuad (2019-...)

Code 02.4900

Version 23102023


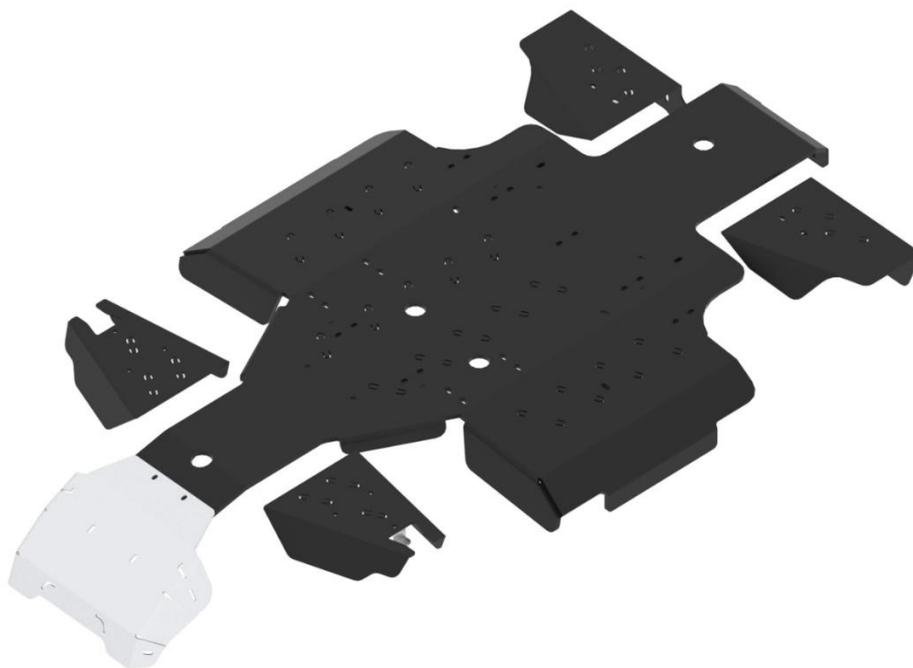


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

| Pos. | Description | Code | Amount |
|------|----------------------------|--------------|--------|
| 1 | Middle protection | 02.4901 | 1 |
| 2 | Front protection | 02.4902K | 1 |
| 3 | Rear protection | 02.4910 | 1 |
| 4 | Bumper protection | 02.802 | 1 |
| 5 | Front right arm protection | 02.4903 | 1 |
| 6 | Front left arm protection | 02.4904 | 1 |
| 7 | Rear right arm protection | 02.4907 | 1 |
| 8 | Rear left arm protection | 02.4908 | 1 |
| 9 | Clamp 1 | 02.811 | 2 |
| 10 | Clamp 2 | 02.4606 | 2 |
| 11 | Clamp 3 | 02.4805 | 1 |
| 12 | Clamp 4 | 02.4806 | 1 |
| 13 | Bracket 1 | 02.4811 | 2 |
| 14-1 | Clamp 5 (longer) | 02.4809 | 2 |
| 14-2 | Clamp 5-1 (shorter) | 02.4812 | 2 |
| 15 | Plate | 02.5006 | 7 |
| 16 | Clamp 5 | 02.5709 | 2 |
| 17 | Bolt M6x12 DIN 933 | OT.02.02.030 | 4 |
| 18 | Bolt M6x20 DIN 7991 | OT.02.04.030 | 18 |
| 19 | Bolt M6x25 DIN 7991 | OT.02.04.040 | 22 |
| 20 | Bolt M6x30 DIN 7991 | OT.02.04.050 | 4 |
| 21 | Bolt M6x40 DIN 7991 | OT.02.04.070 | 4 |
| 22 | Conical washer Ø6 | 14.502 | 46 |
| 23 | Washer Ø6/18 DIN 9021 | OT.04.02.020 | 8 |
| 24 | Nyloc nut M6 DIN 985 | OT.03.02.030 | 4 |

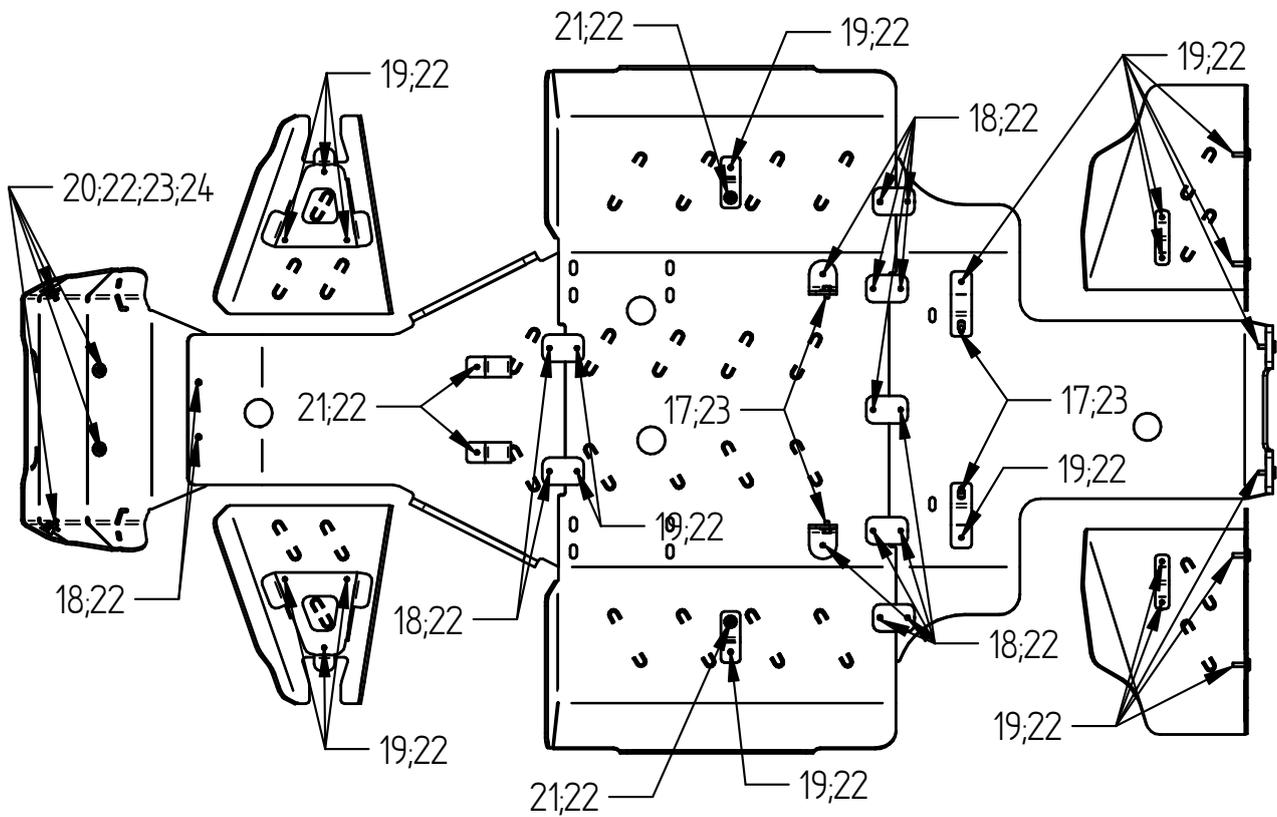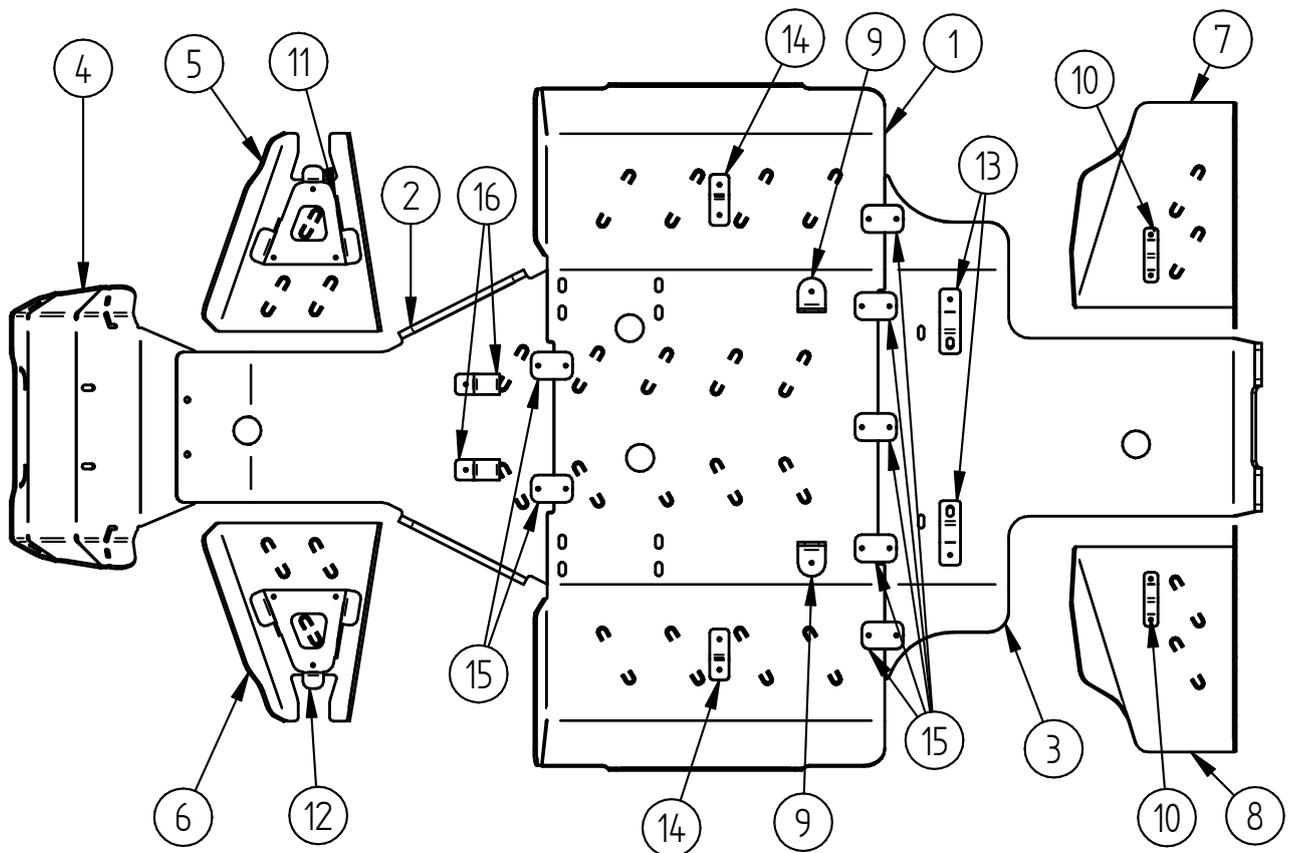


FITTING INSTRUCTIONS



Step 1 Remove all standard plastic covers.



Step 2 Install clamps 02.811 and 02.4809. From production year 2018 use the clamps 02.4812, instead of the clamps 02.4809.

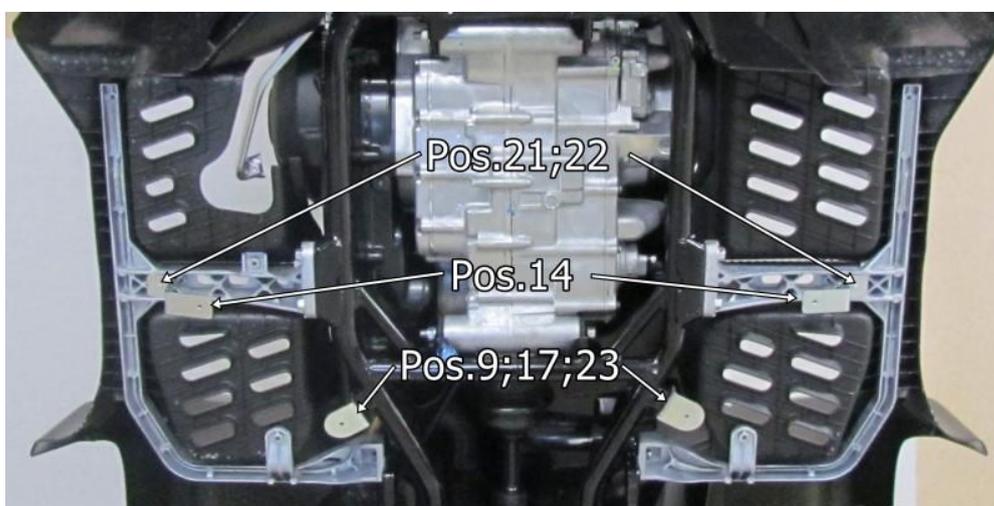


Up to MY 2018

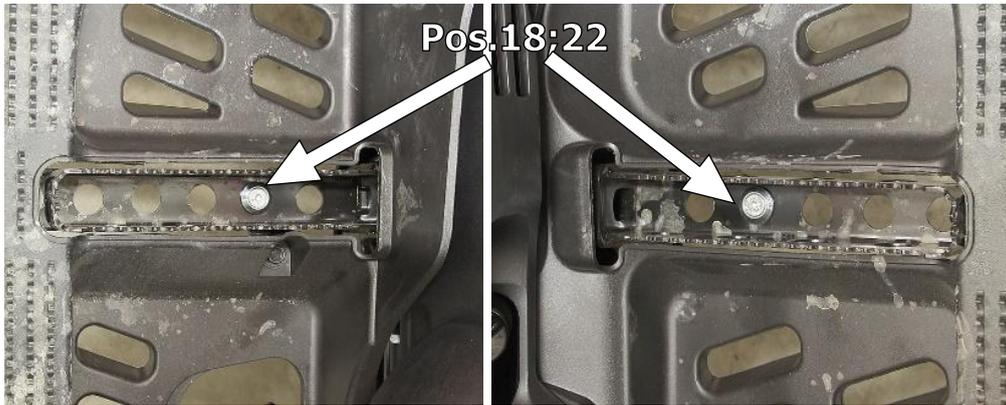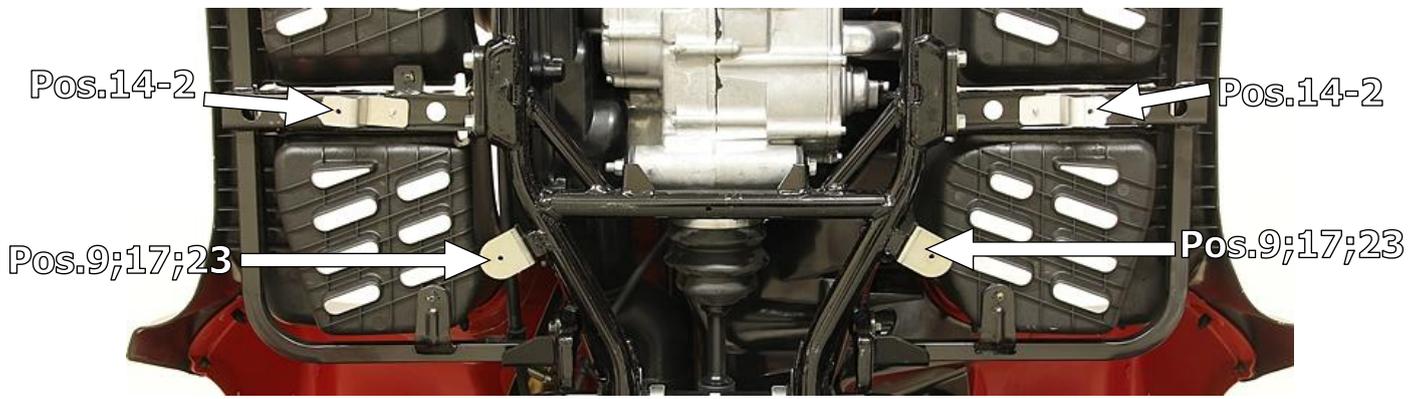

From MY 2018 shorter brackets (Pos.14-2) and bolts M6x20


Step 3

Install brackets 02.4811.

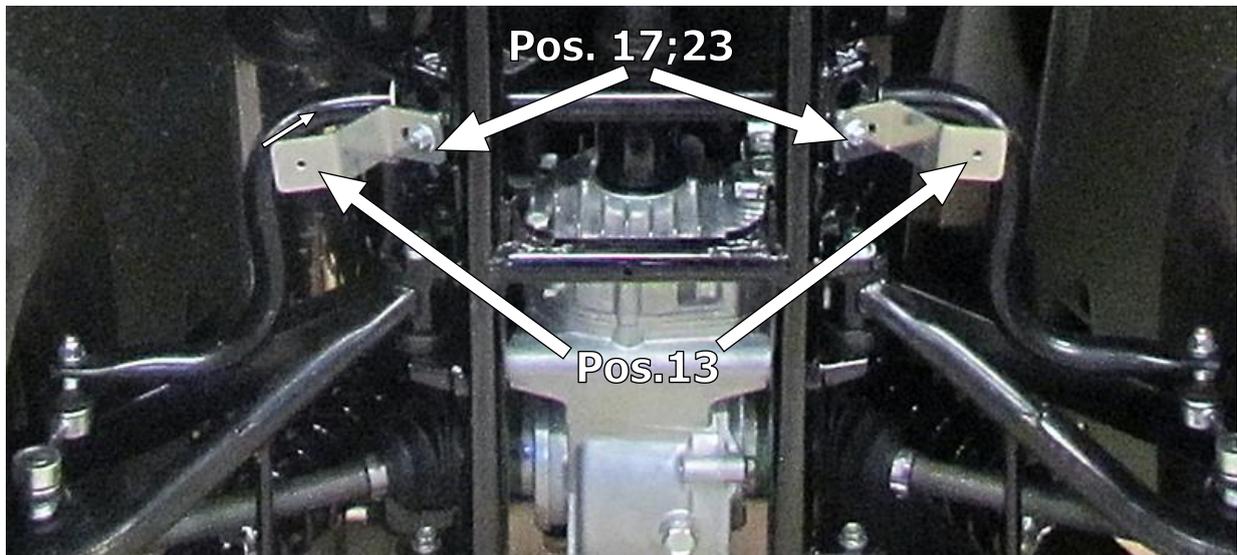


Step 4

Install skid plate middle part 02.4901 and plates 02.5006.
The edges of skid plate edge go outwards. If necessary, press the edges of the ATV plastic inwards.

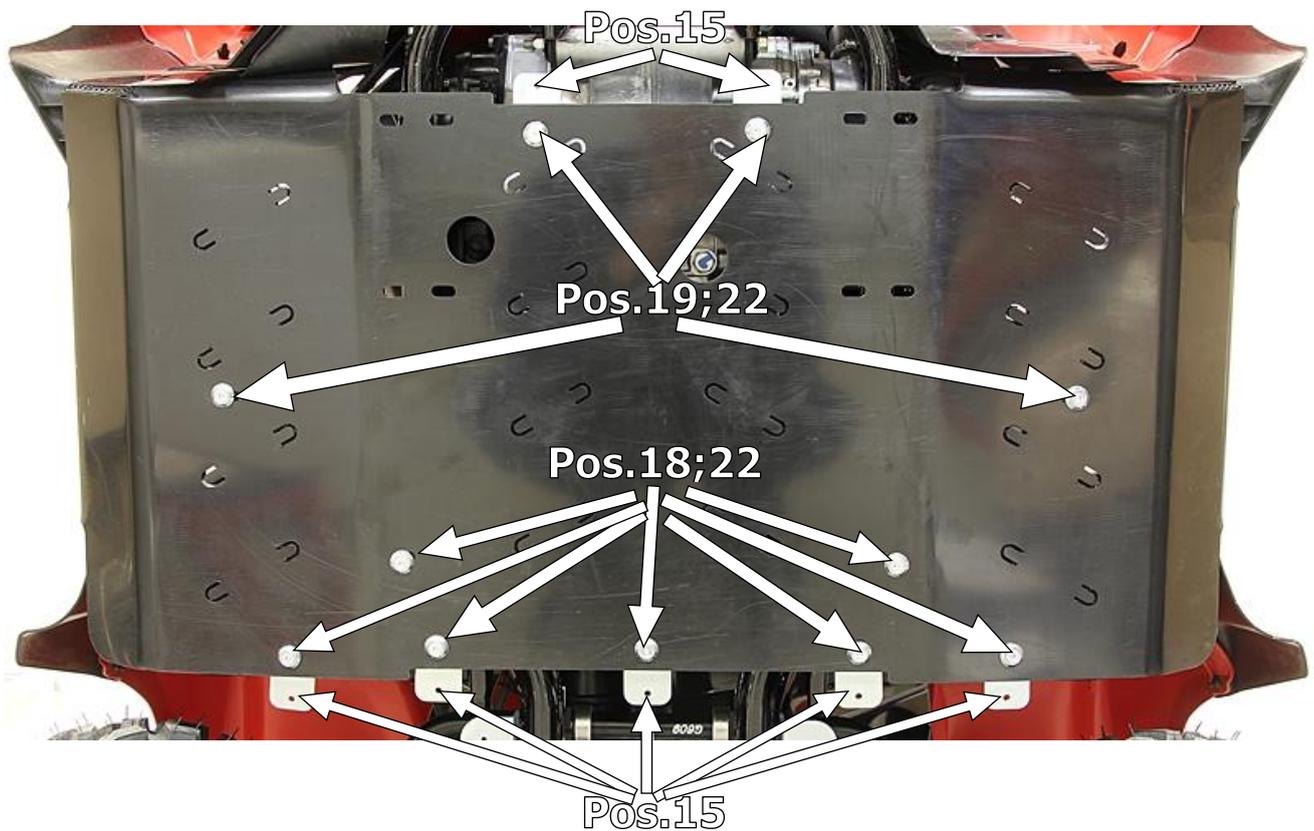



Step 5

Install front arm protections 02.4903,02.4904 and use clamps 02.4805/02.4806.

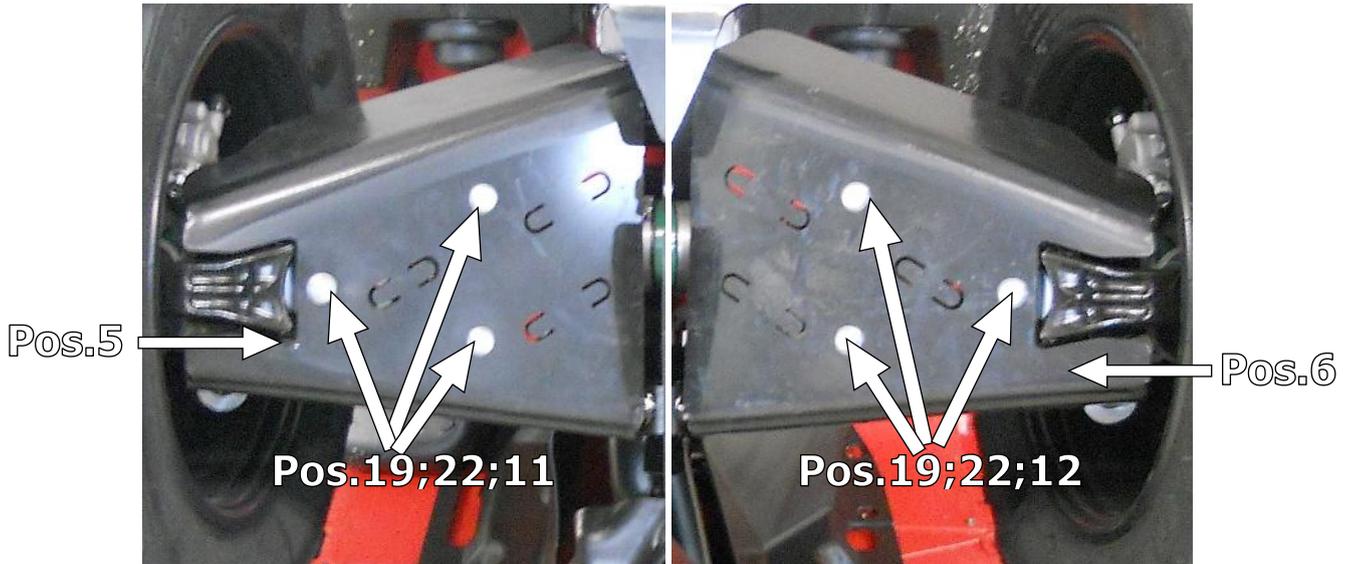



Step 6

Install rear arm protectors 02.4907 and 02.4908 with clamps 02.4606.

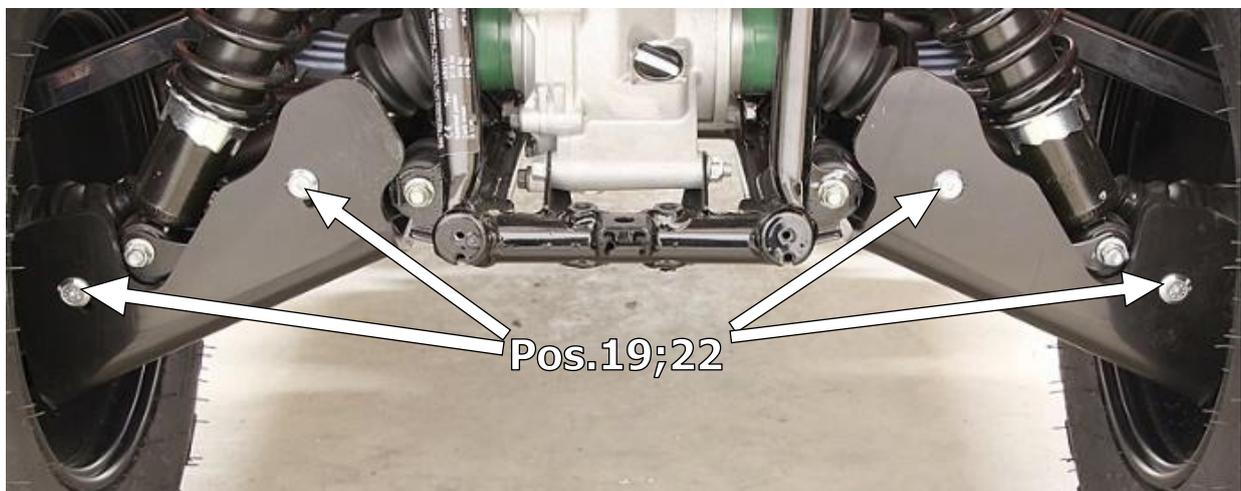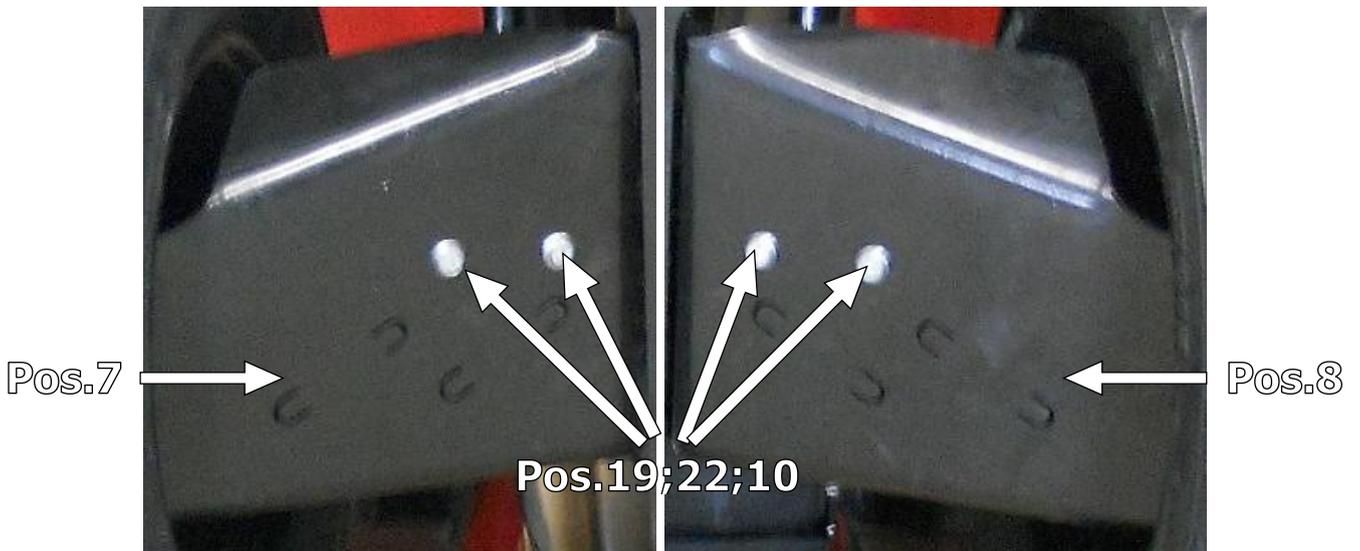


Step 7


Install rear part 02.4910.

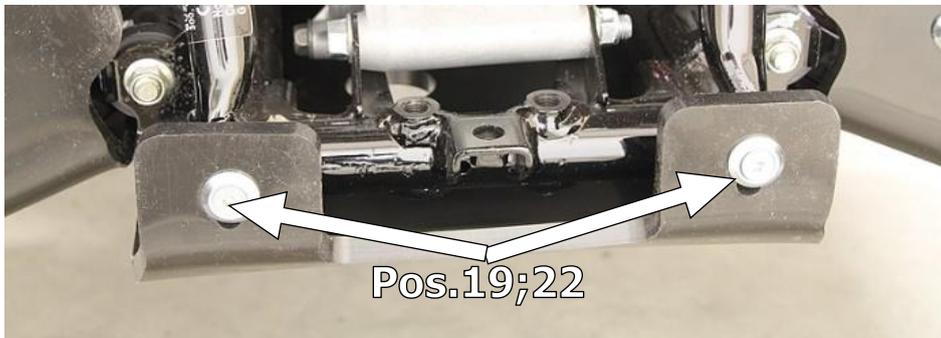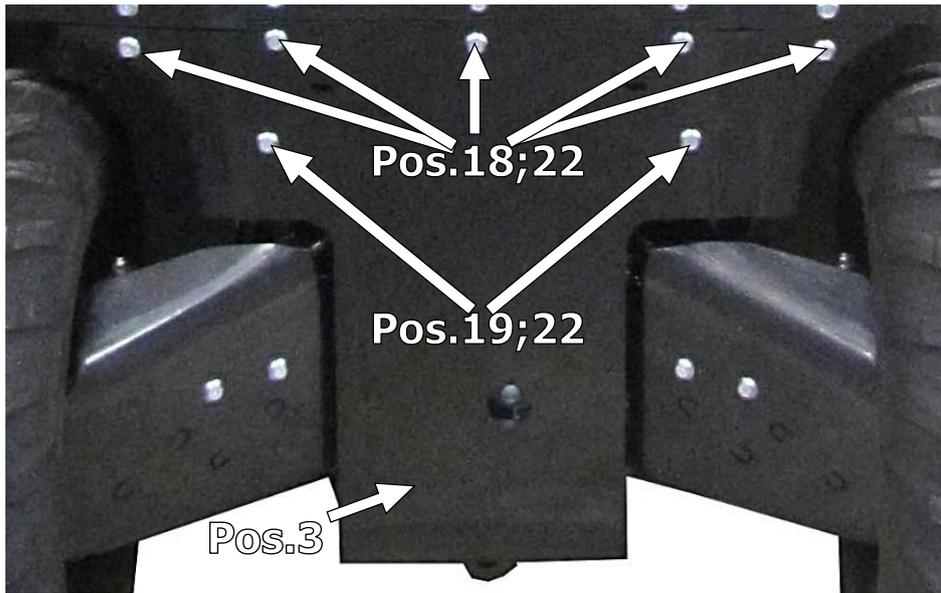

Step 8

Install front protection 02.4902 and use clamps 02.5709.


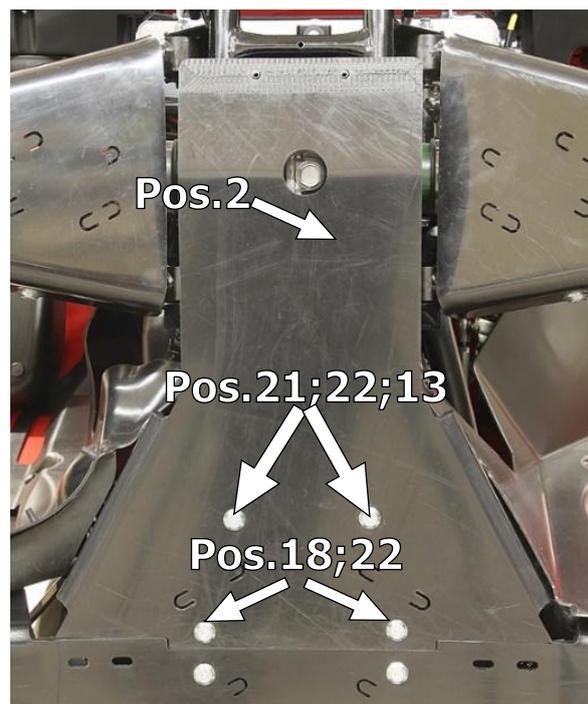


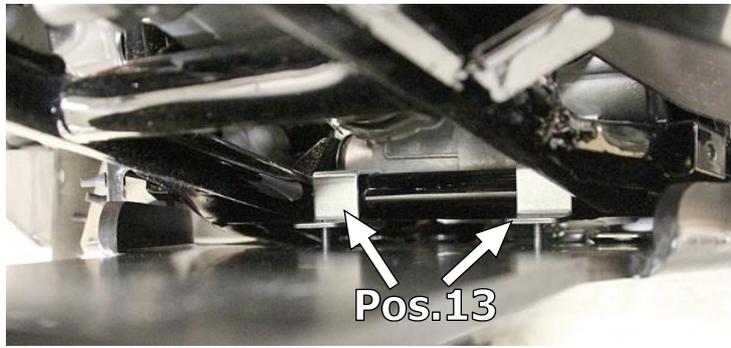

Step 9

Install bumper protection 02.802.

If you are using Iron Baltic front mount plow adapter, then cut out sections that are pre-marked with option holes (on picture marked CUT).

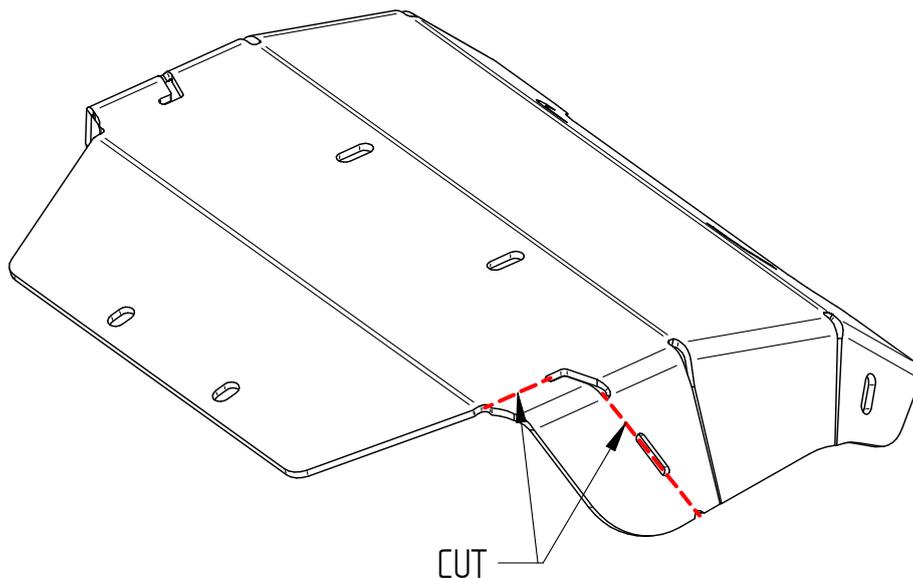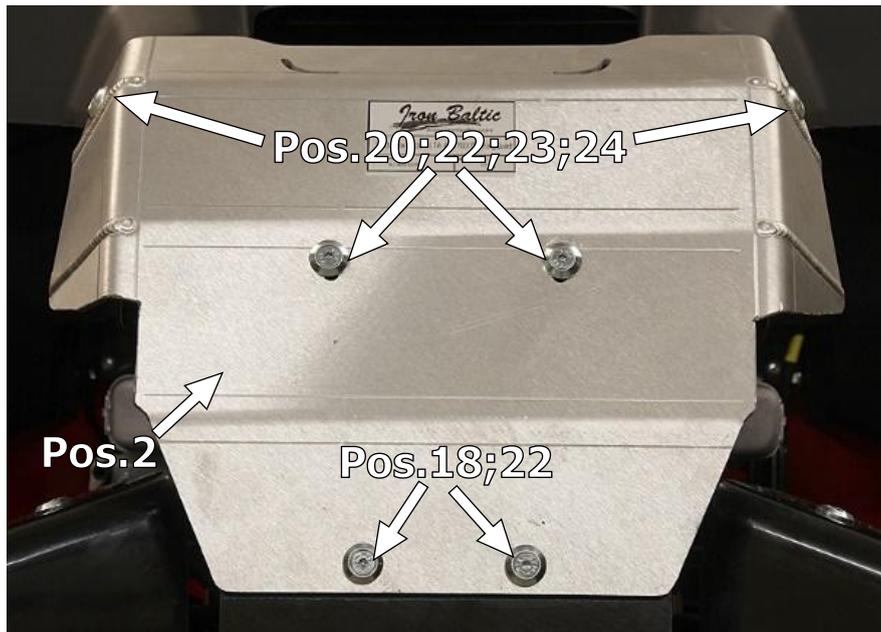

Step 10

Check the tension of the bolts after the first ride or day after the installation of the skid plate.

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

