

IRON BALTIC


PLASTIC SKID PLATE

POLARIS

550 / 850 X2

Code 02.5400

Version 26102023

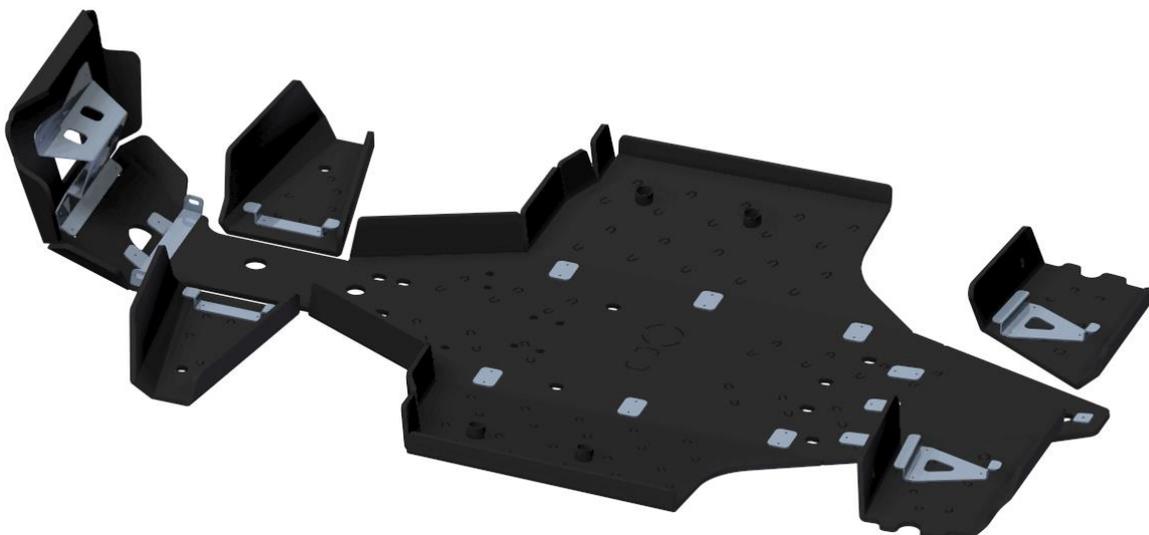

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

DOWNLOAD MULTILINGUAL
USER MANUAL





code.ironbaltic.com/u/aAeMLEmD

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.5401	1
2	Rear protection	02.5402	1
3	Right side protection	02.5403K	1
4	Left side protection	02.5404K	1
5	Front protection	02.1548	1
6	Front right arm protection	02.1542	1
7	Front left arm protection	02.1543	1
8	Rear right arm protection	02.1544	1
9	Rear left arm protection	02.1545	1
10	Front upper protection	02.1553	1
11	Clamp for front arm protection	02.1528	2
12	Clamp for rear arm protection	02.1529	2
13	Bracket	02.1549	1
14	Installation plate	02.2305	1
15	Front upper protection bracket	02.1550	1
16	Installation plate	02.5006	9
17	Ancle	03.1502	2
18	Bolt M6x20 DIN 933	OT.02.02.060	24
19	Bolt M6x20 DIN 7991	OT.02.04.030	18
20	Bolt M6x40 DIN 933	OT.02.02.100	6
21	Bolt M6x70 DIN 933	OT.02.02.150	8
22	Bolt M8x20 DIN 993	OT.02.02.180	1
23	Bolt M8x25 DIN 993	OT.02.02.190	2
24	Conical washer Ø6	14.502	18
25	Dished washer	14.503	35
26	Washer Ø6/15 SFS 3738	OT.04.03.020	42
27	Washer Ø8/20 SFS 3738	OT.04.03.030	2
28	Nyloc nut M6 DIN 985	OT.03.02.030	12

Polaris 550 / 850 X2 model 2009 - ...

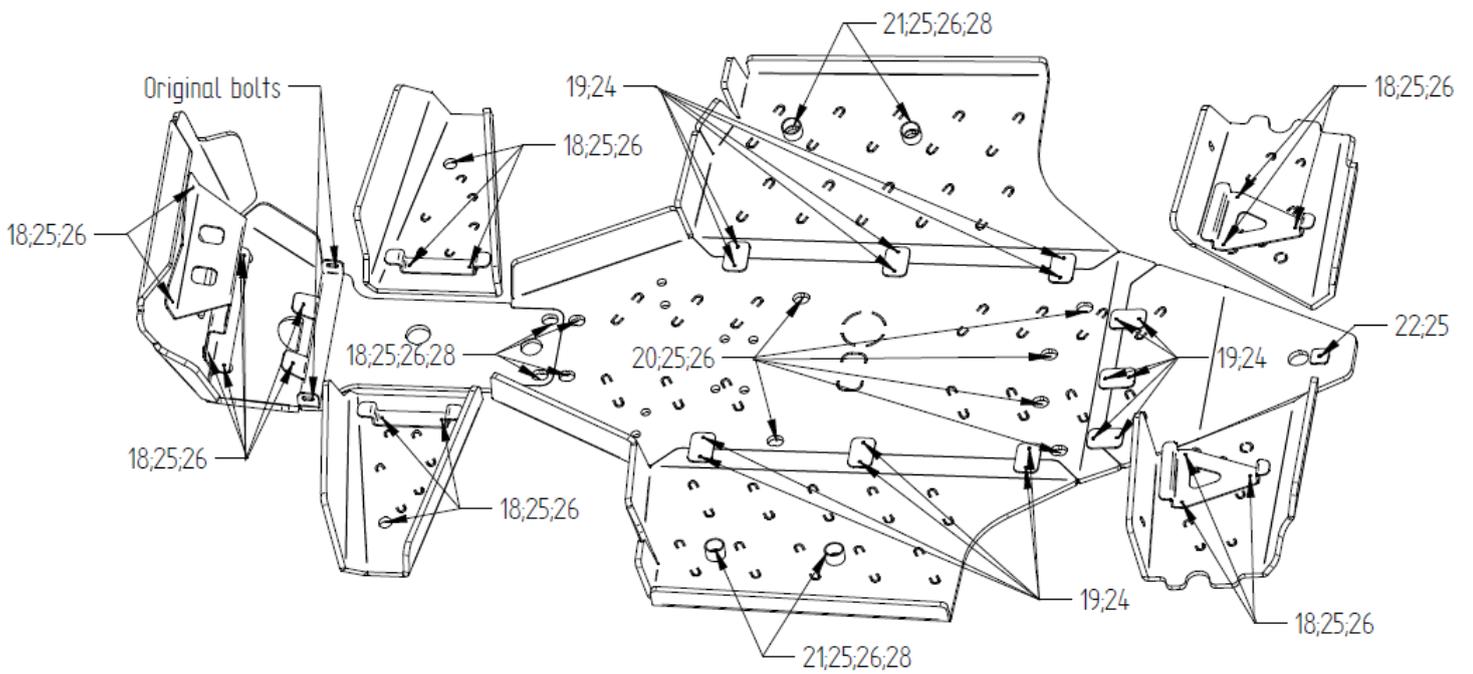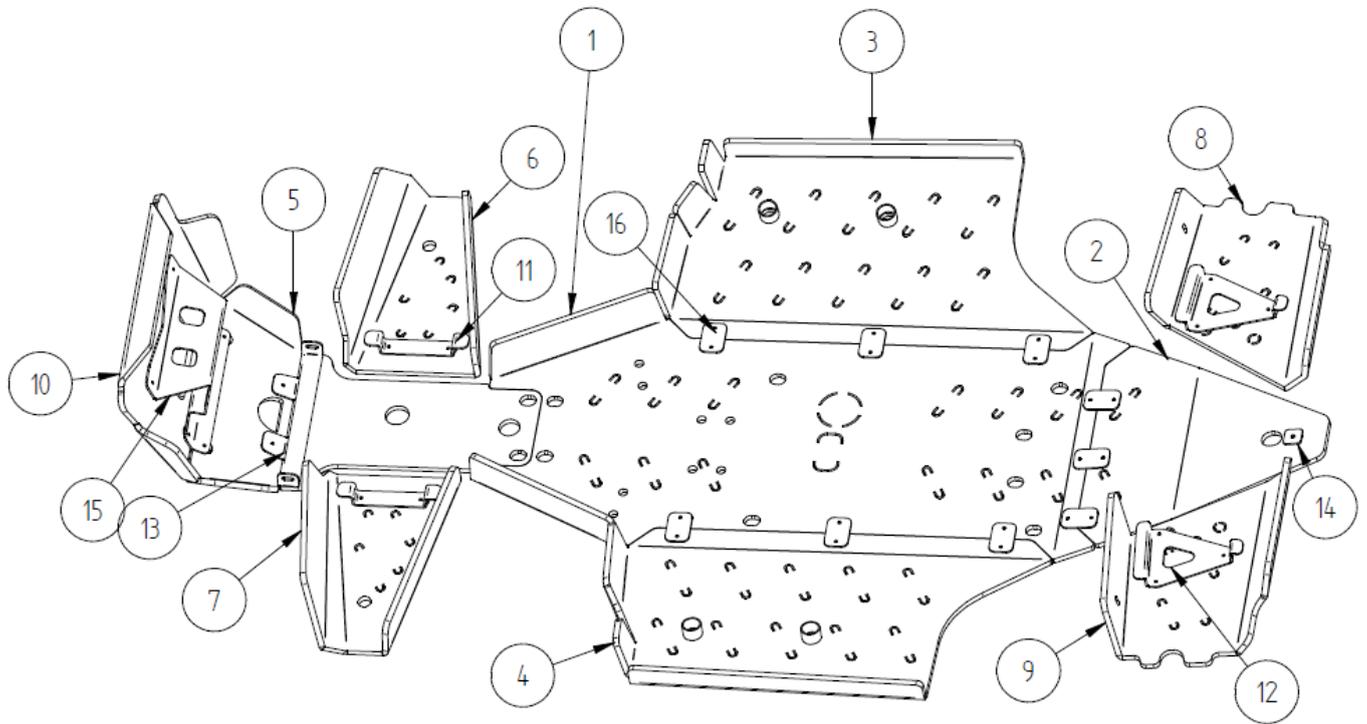


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install bracket 02.1549.

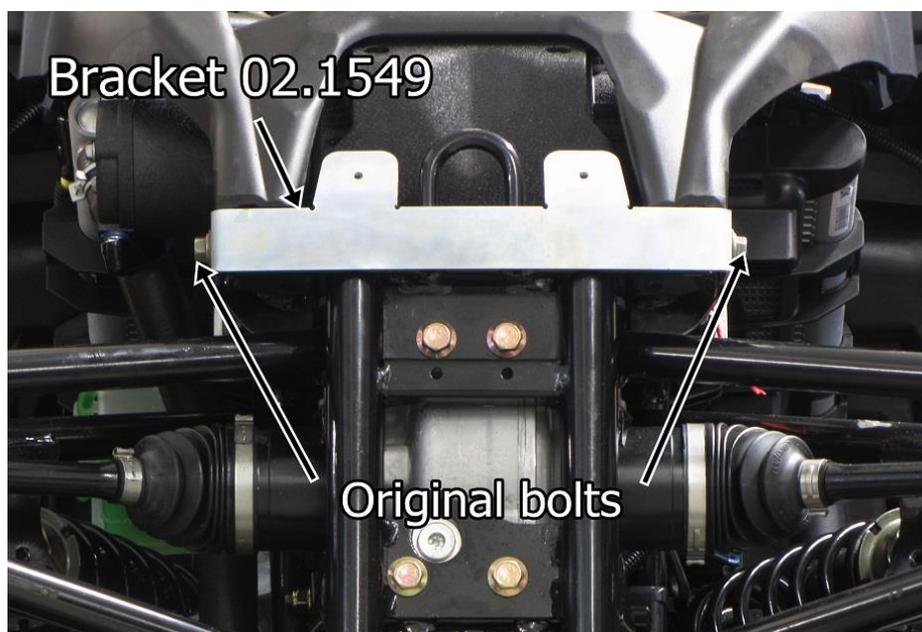


Step 3

Install bracket 02.1550.

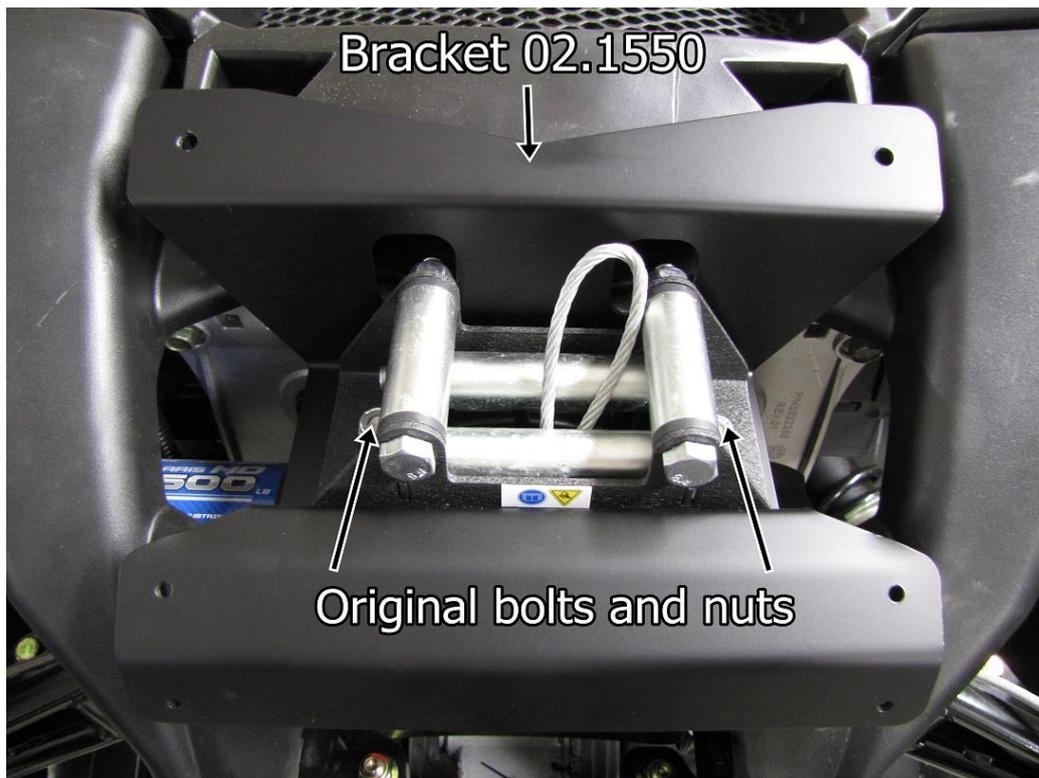


Step 4

Install middle protection 02.5401.

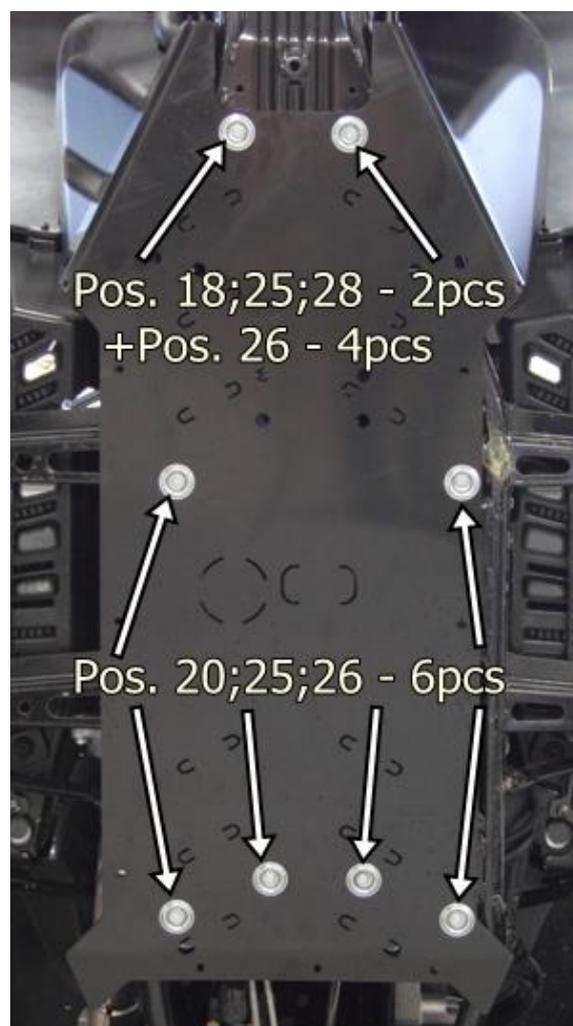


Step 5

Install plates 02.5006 to middle protection.

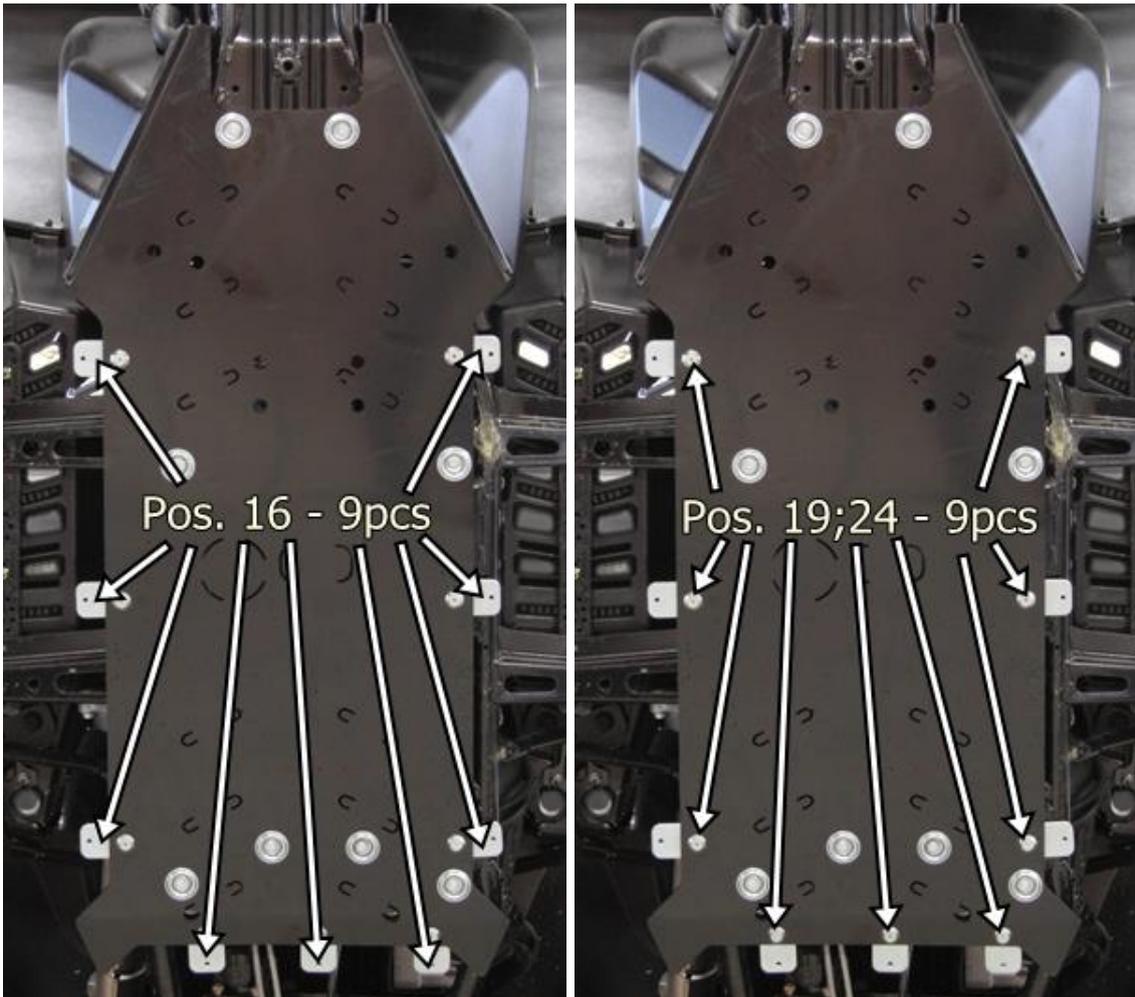


Step 6

Install middle protection 02.5402.

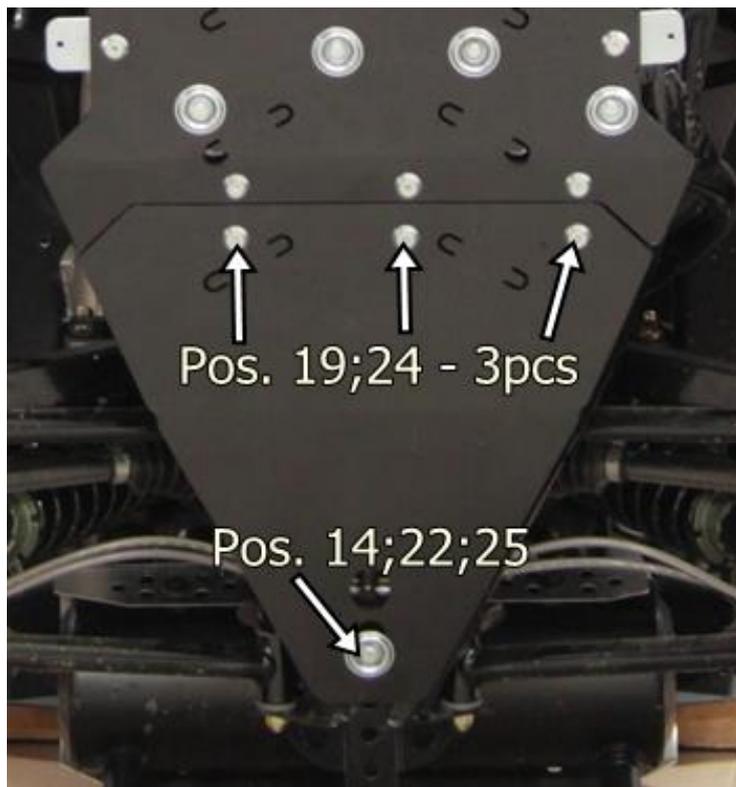


Step 7

Install side protections 02.5403K and 02.5404K.

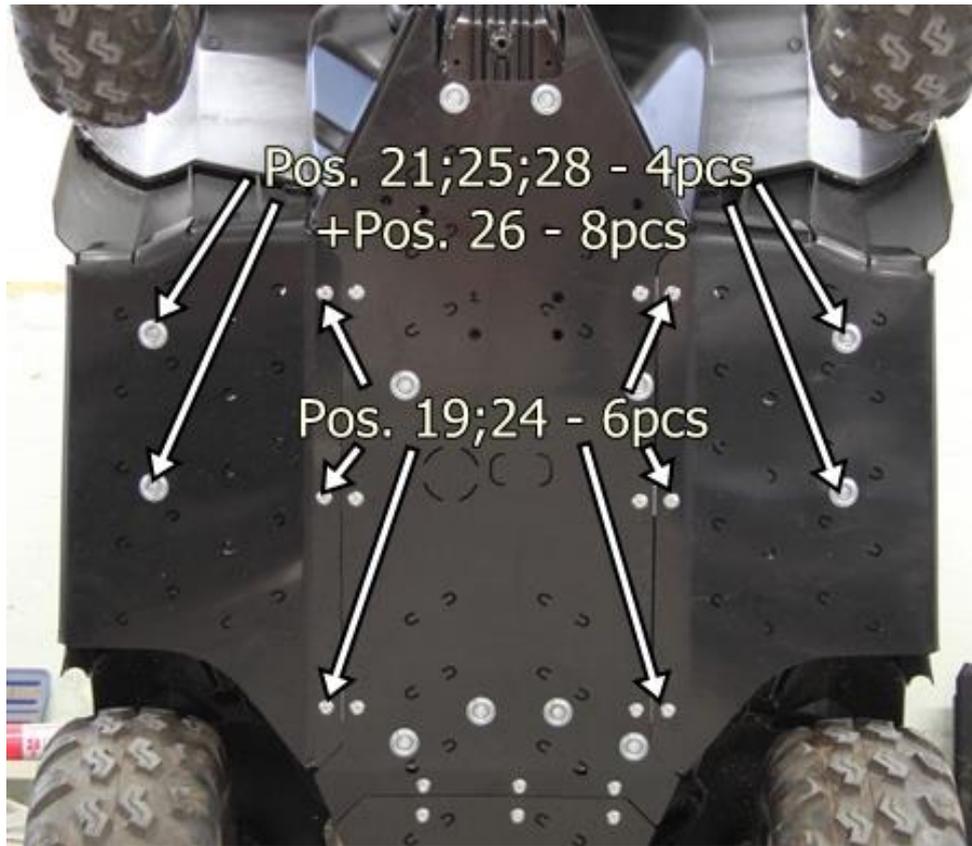


Step 8

Install front protection 02.1548.

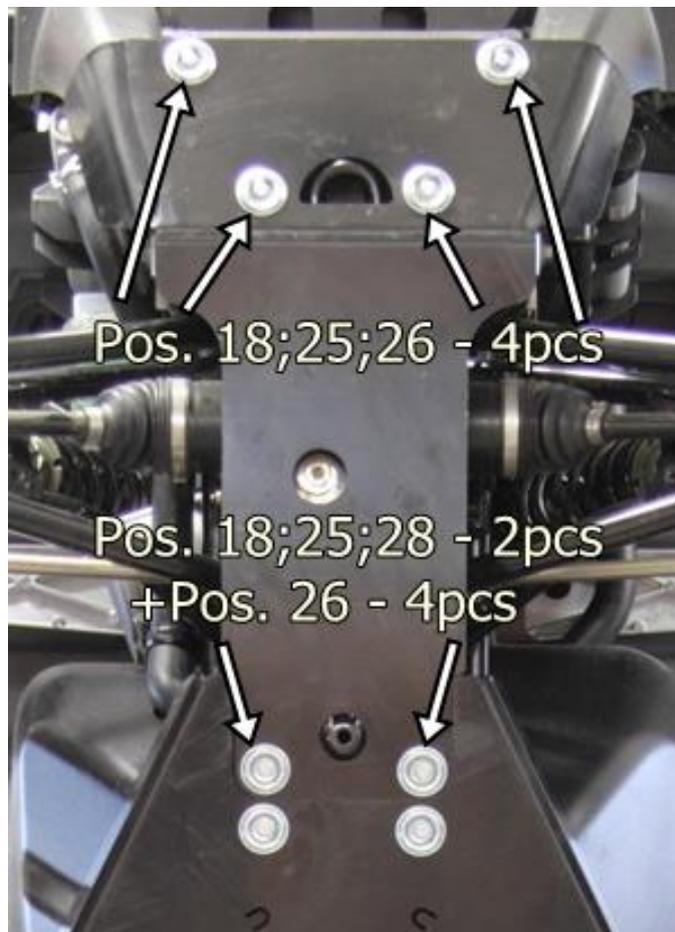



Step 9

Install front upper protection 02.1553.

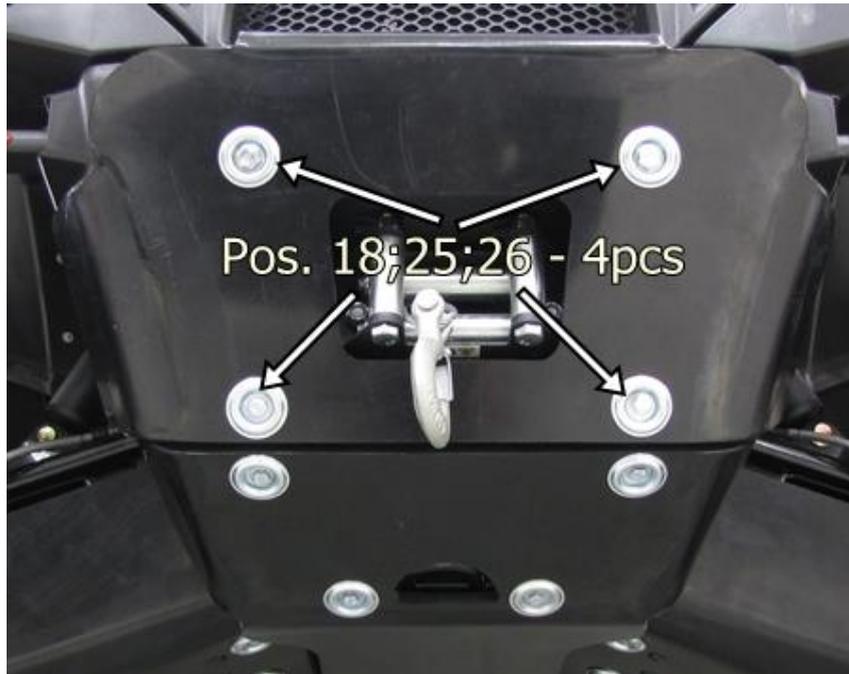


Step 10

Install front arm protections 02.1542, 02.1543, use clamp 02.1528.

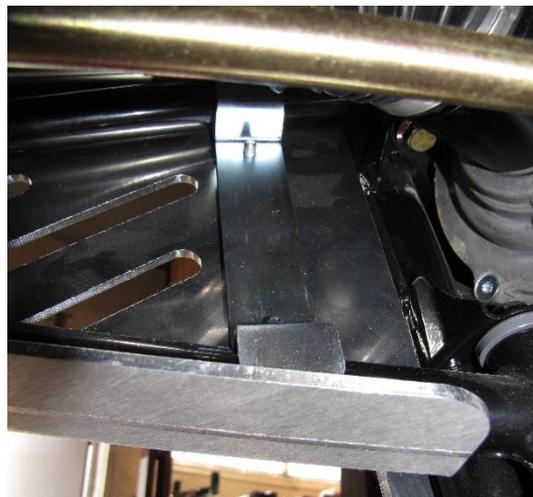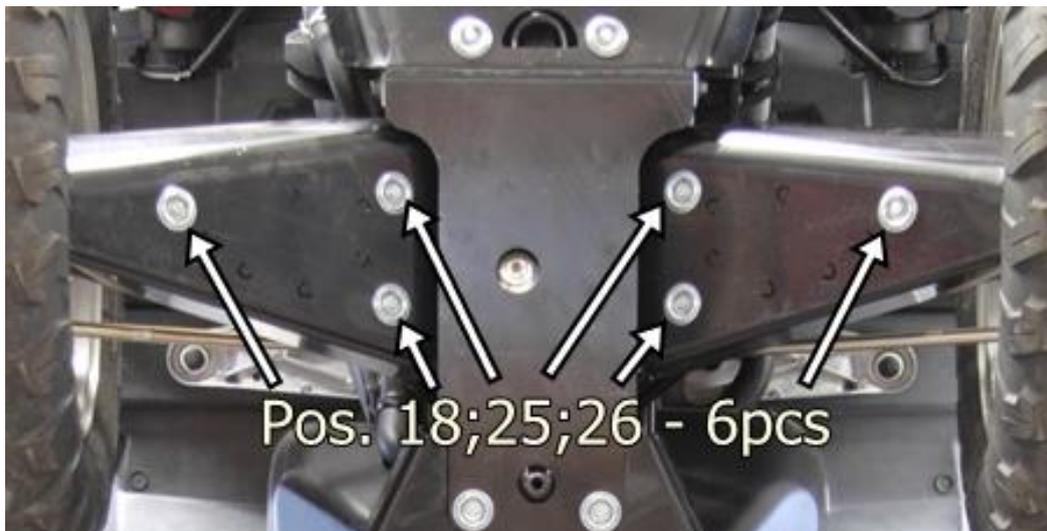

Step 11

Install rear arm protections 02.1544, 02.1545, use clamp 02.1529.

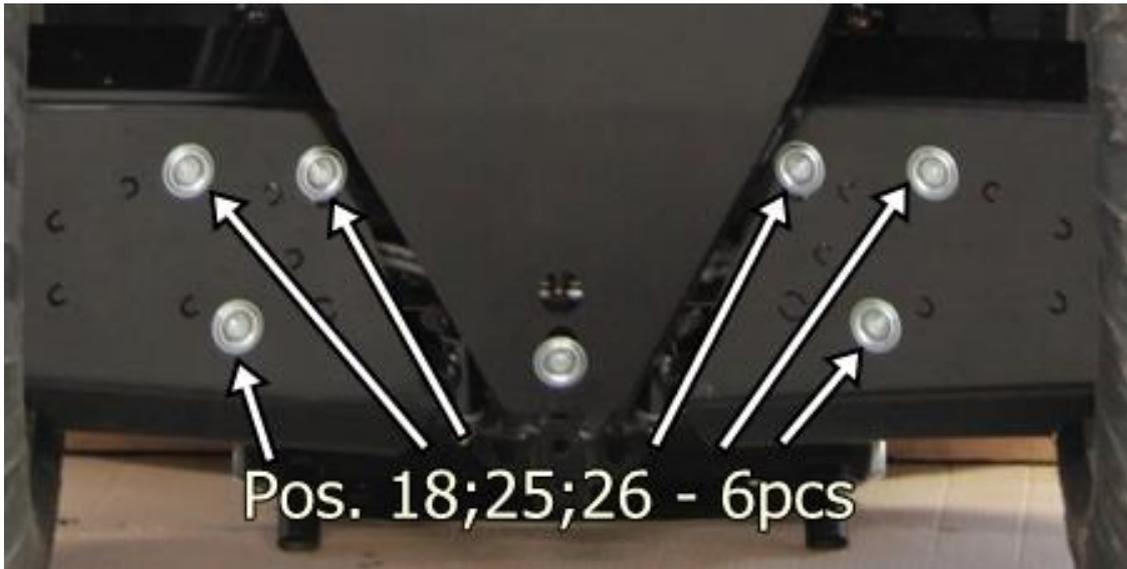

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

