

# IRON BALTIC

## ALUMINIUM SKID PLATE

# POLARIS

## 500 / 800 Sportsman

Code 02.5600

Version 26102023

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/M1J7SUc5](https://code.ironbaltic.com/u/M1J7SUc5)



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


# SPETCIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.5601	1
2	Front part	02.5603	1
3	Rear part	02.5604	1
4	Front right arm protection	02.1402	1
5	Front left arm protection	02.1403	1
6	Rear right arm protection	02.1404	1
7	Rear left arm protection	02.1405	1
8	Front part bracket	02.5602	1
9	Installation plate (150mm x 250mm)	02.1605K	1
10	Installation plate (250mm x 250mm)	02.2302K	1
11	Clamp for front arm protection	02.1416	1
12	Clamp for front arm protection	02.1417	1
13	Clamp for rear arm protection	02.1418	2
14	Installation plate	02.4011	2
15	Installation plate	02.5006	5
16	Installation plate	02.2305	3
17	Bolt M6x16 DIN 7991	OT.02.04.020	12
18	Bolt M6x20 DIN 7991	OT.02.04.030	12
19	Bolt M6x25 DIN 7991	OT.02.04.040	6
20	Bolt M8x25 DIN 7991	OT.02.04.160	15
21	Screw 3/16 UNC X 1" x 16	DIN 912	4
22	Washer Ø5/15 DIN 9021	OT.04.02.010	4
23	Conical washer Ø6	14.502	22
24	Conical washer Ø8	14.501	15
25	Nyloc nut M6 DIN 985	OT.03.02.030	8

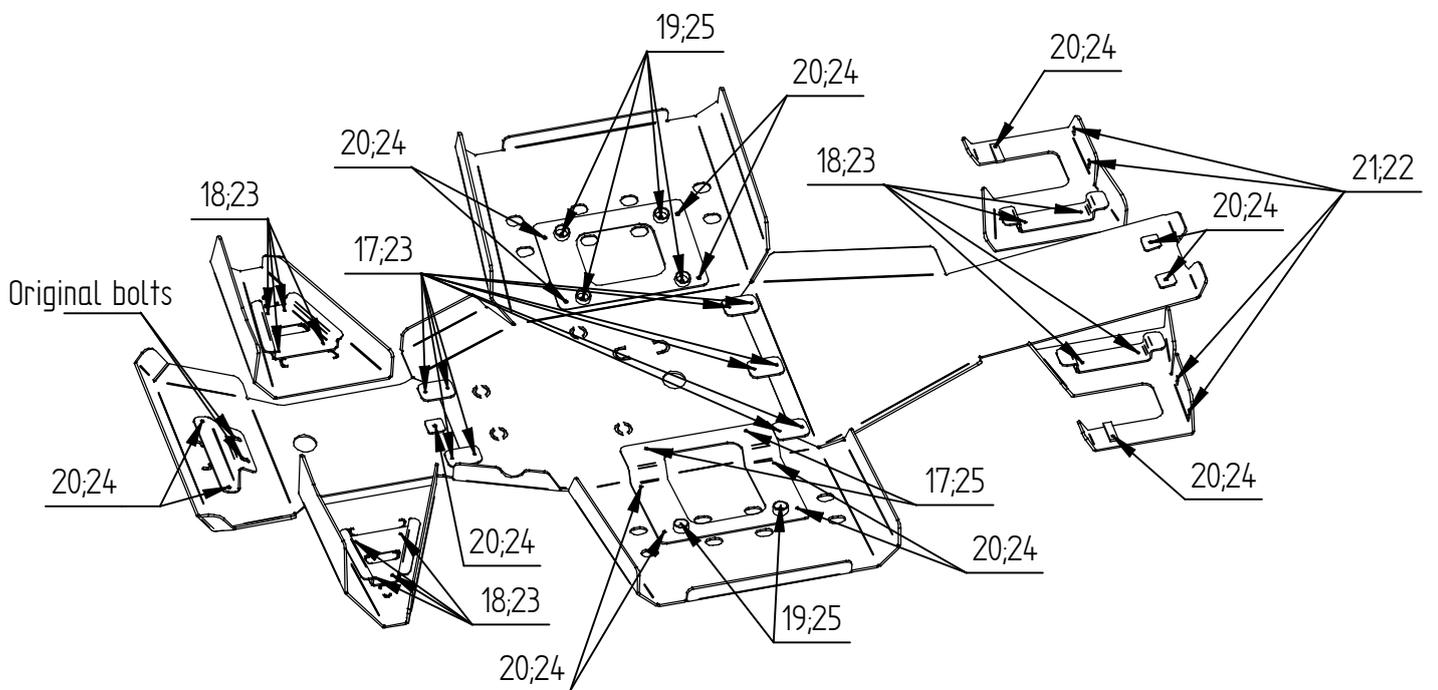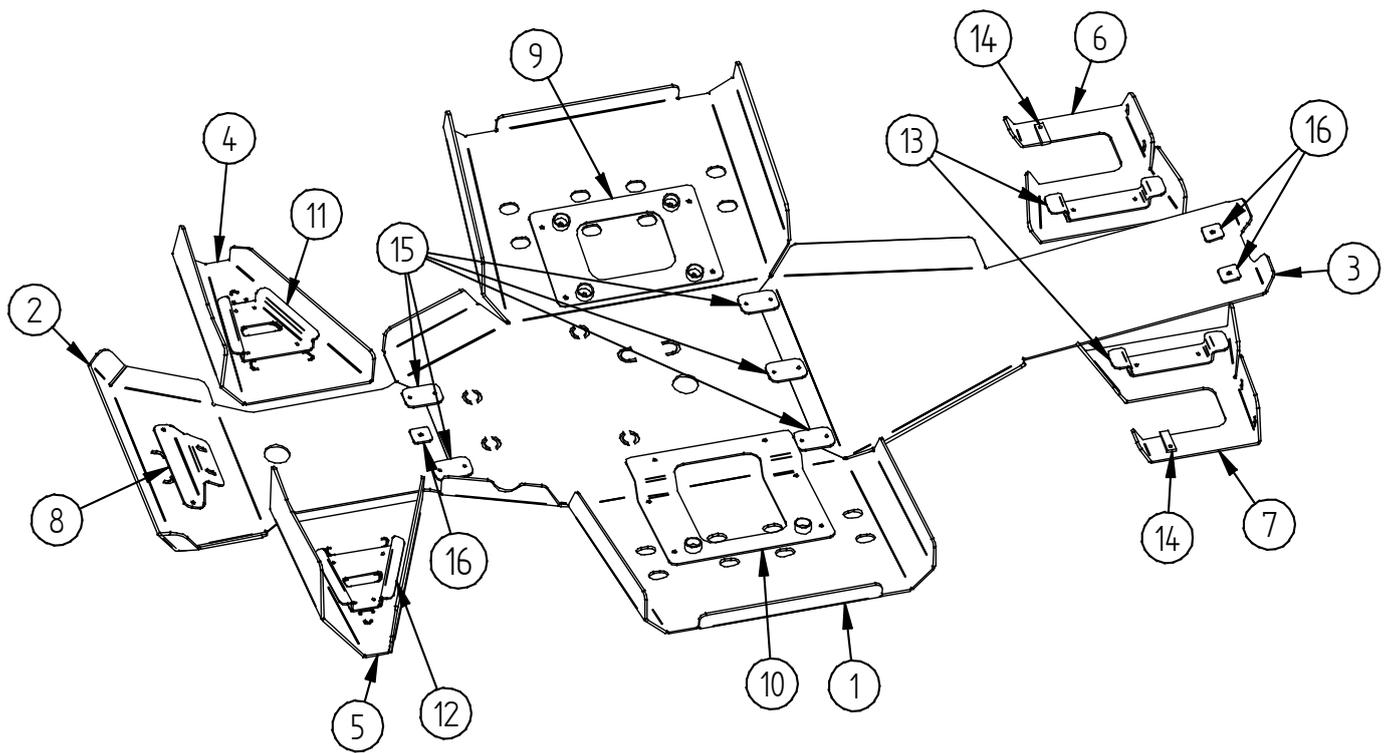



# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.

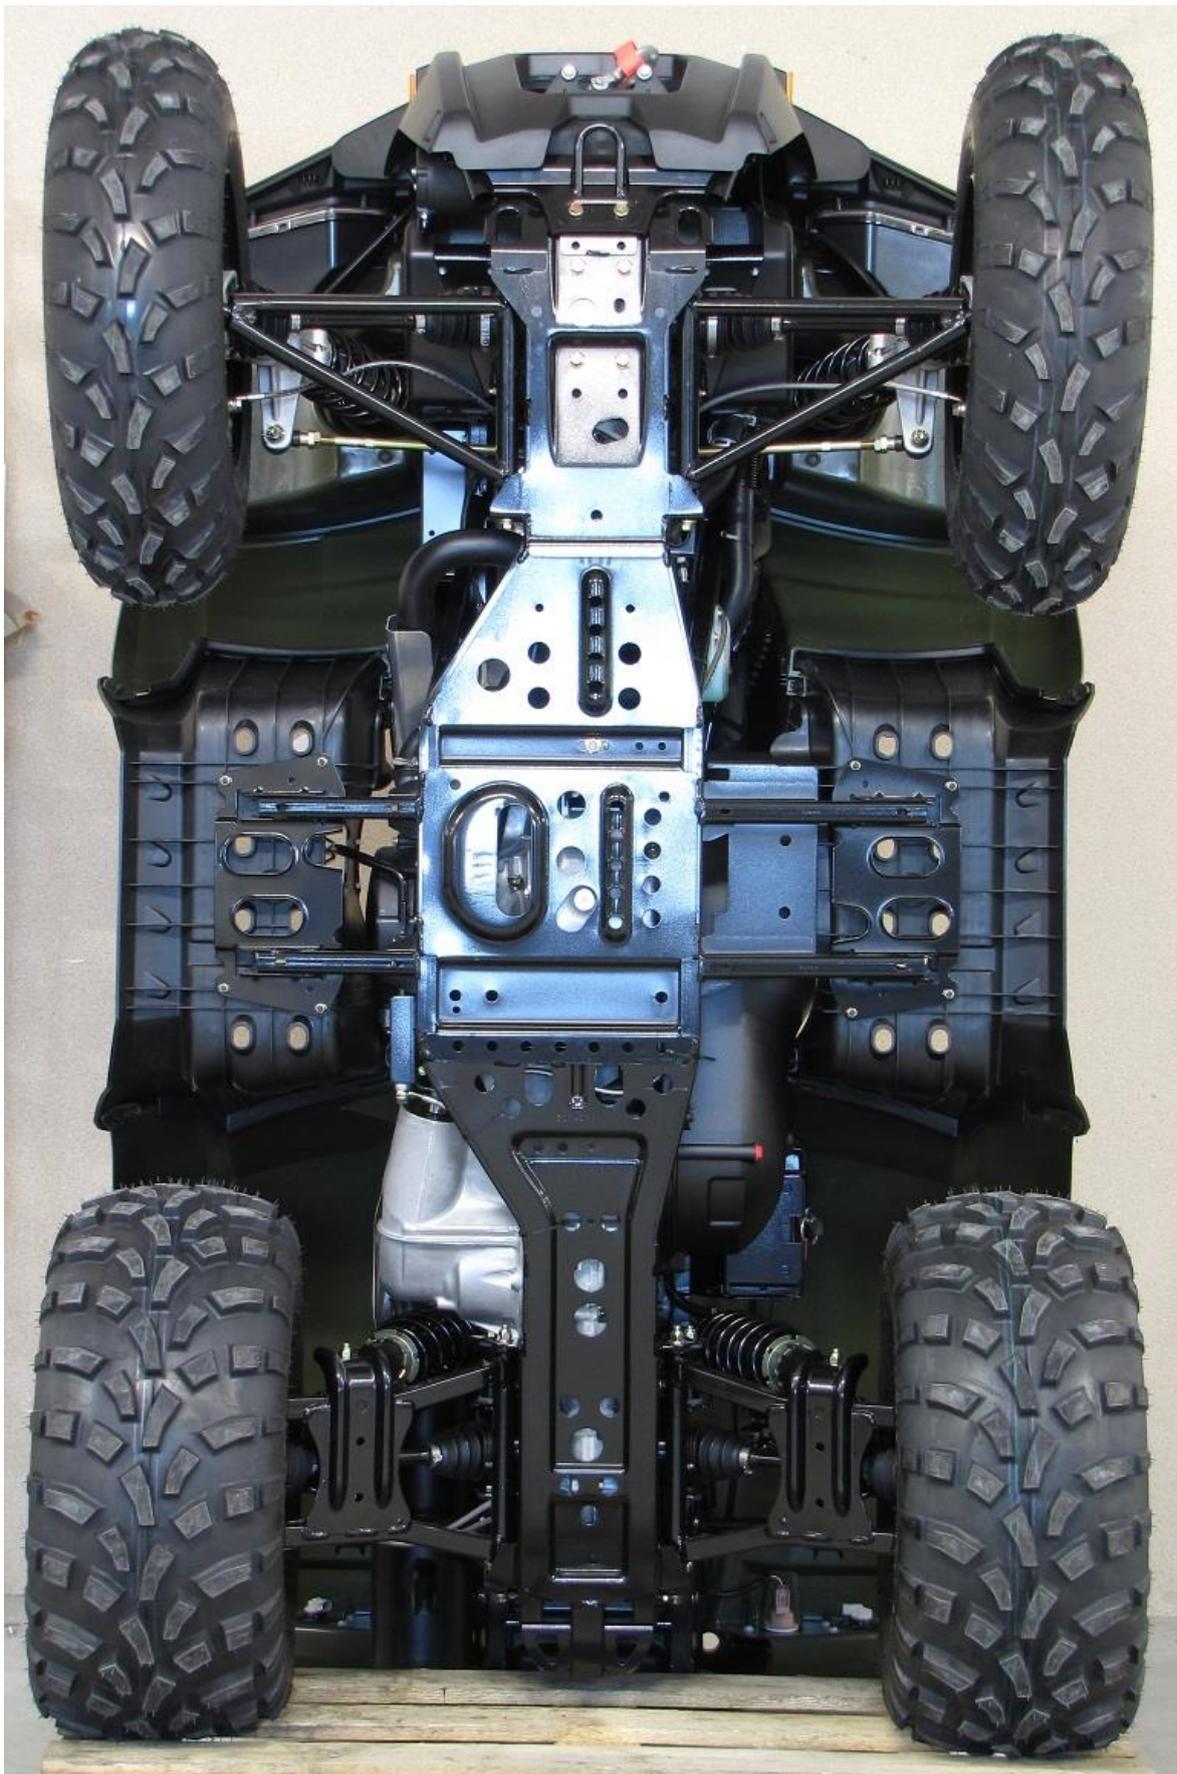


## Step 2

Install bracket 02.5602, use original bolt.  
Install plates 02.1605K and 02.2302K, use bolts  
M6x25, M6x16 and M6 nylock nuts.

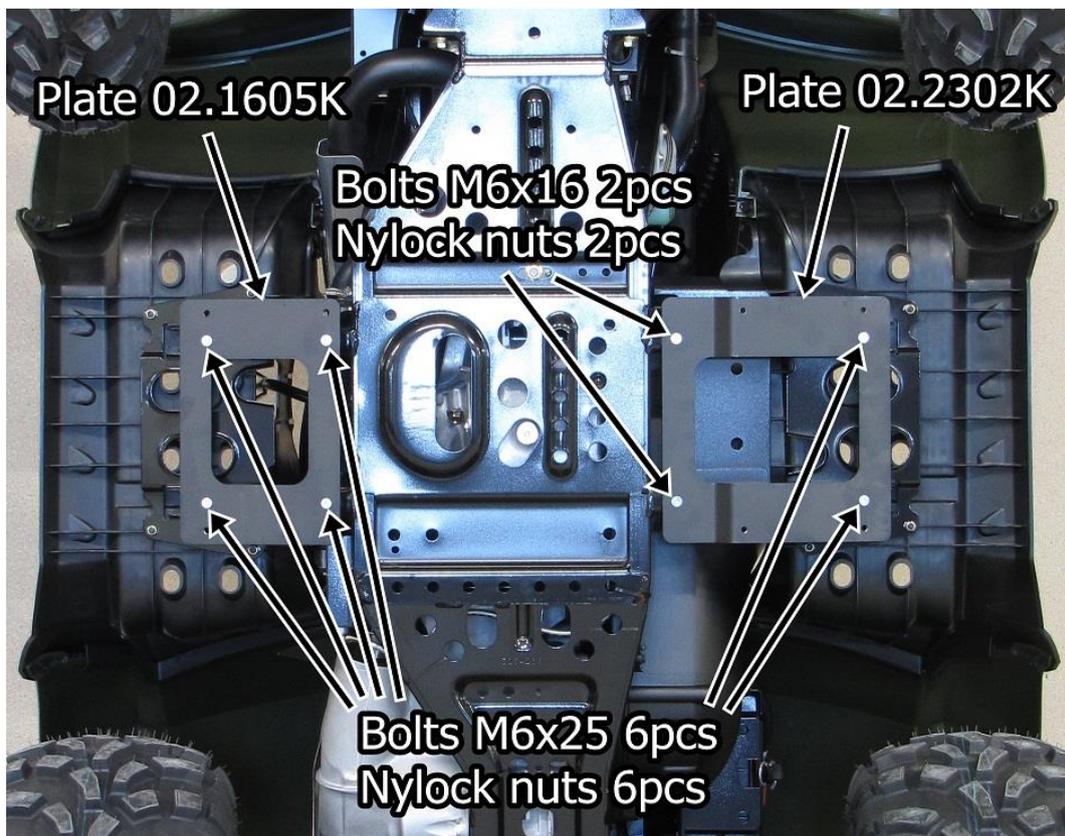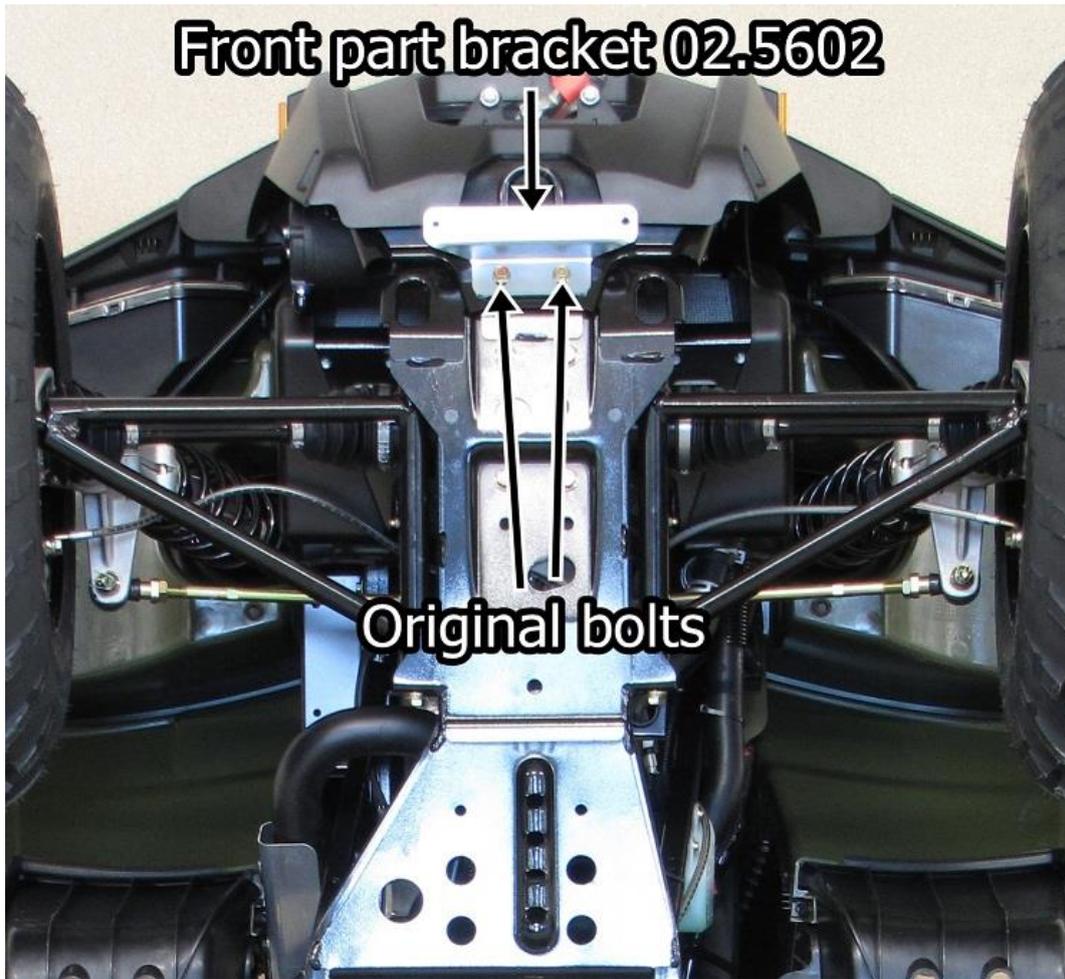


**Step 3**

Install middle part 02.5601K, use bolts M8x25.

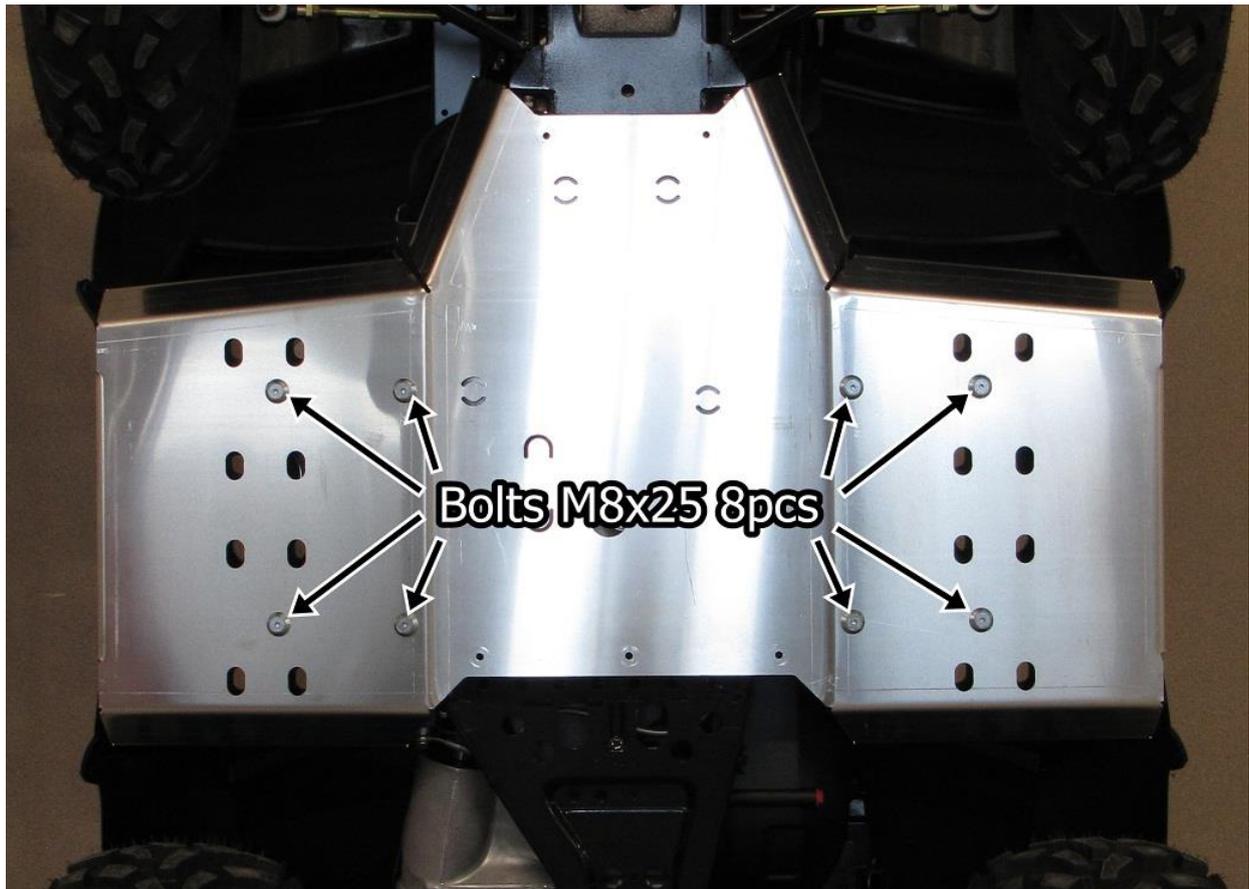


**Step 4**

Install plates 02.5006 to middle part, use bolts M6x16.

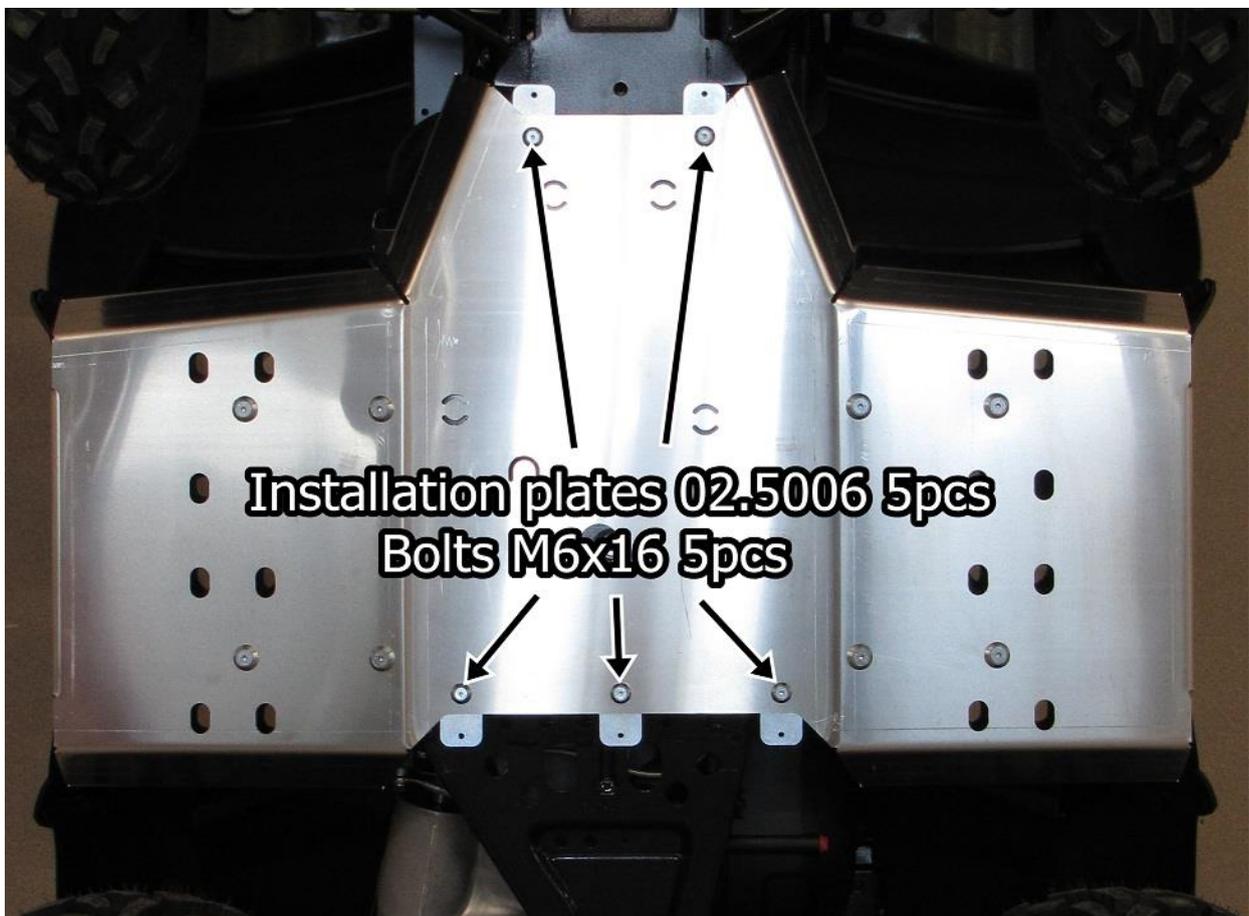


### Step 5

Install front part 02.5603, use bolts M6x16, M8x25 and plate 02.2305.

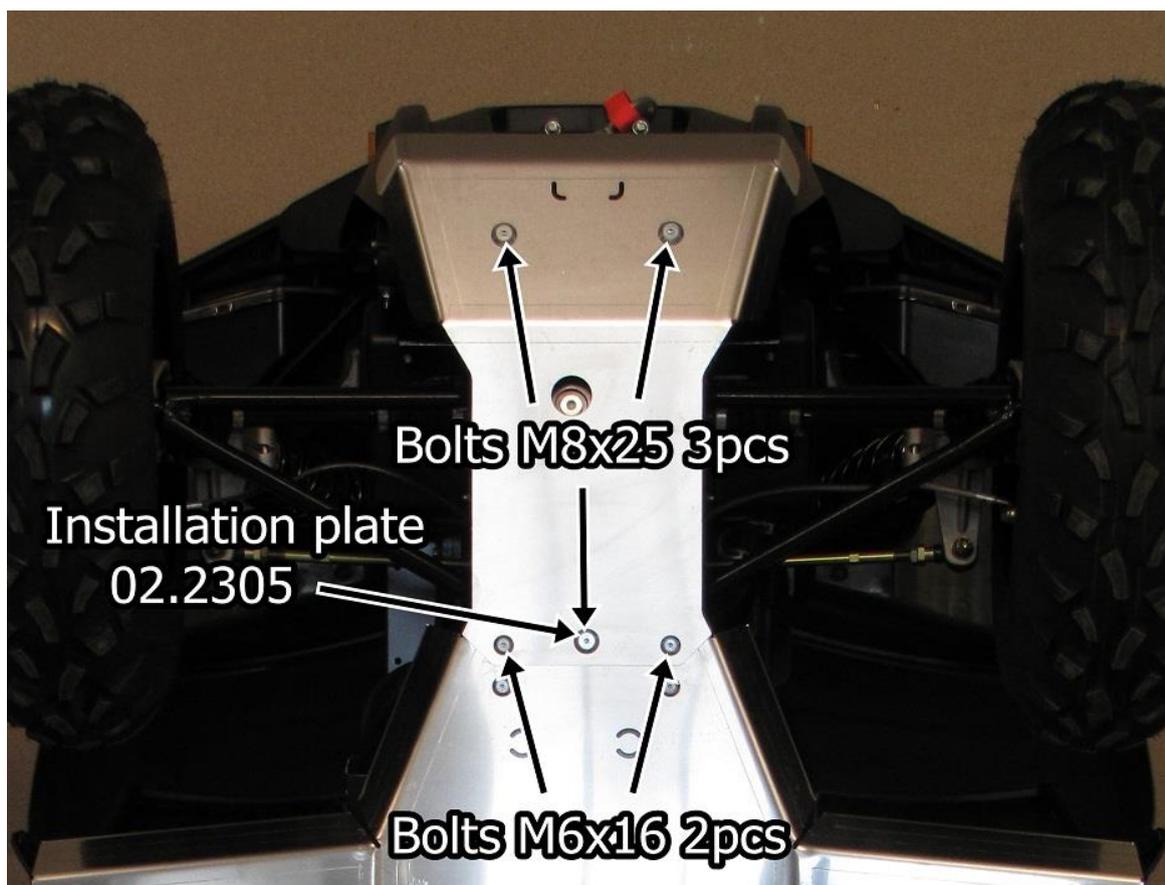


### Step 6

Install rear part 02.5604, use bolts M6x16, M8x25 and installation plates 02.2305.

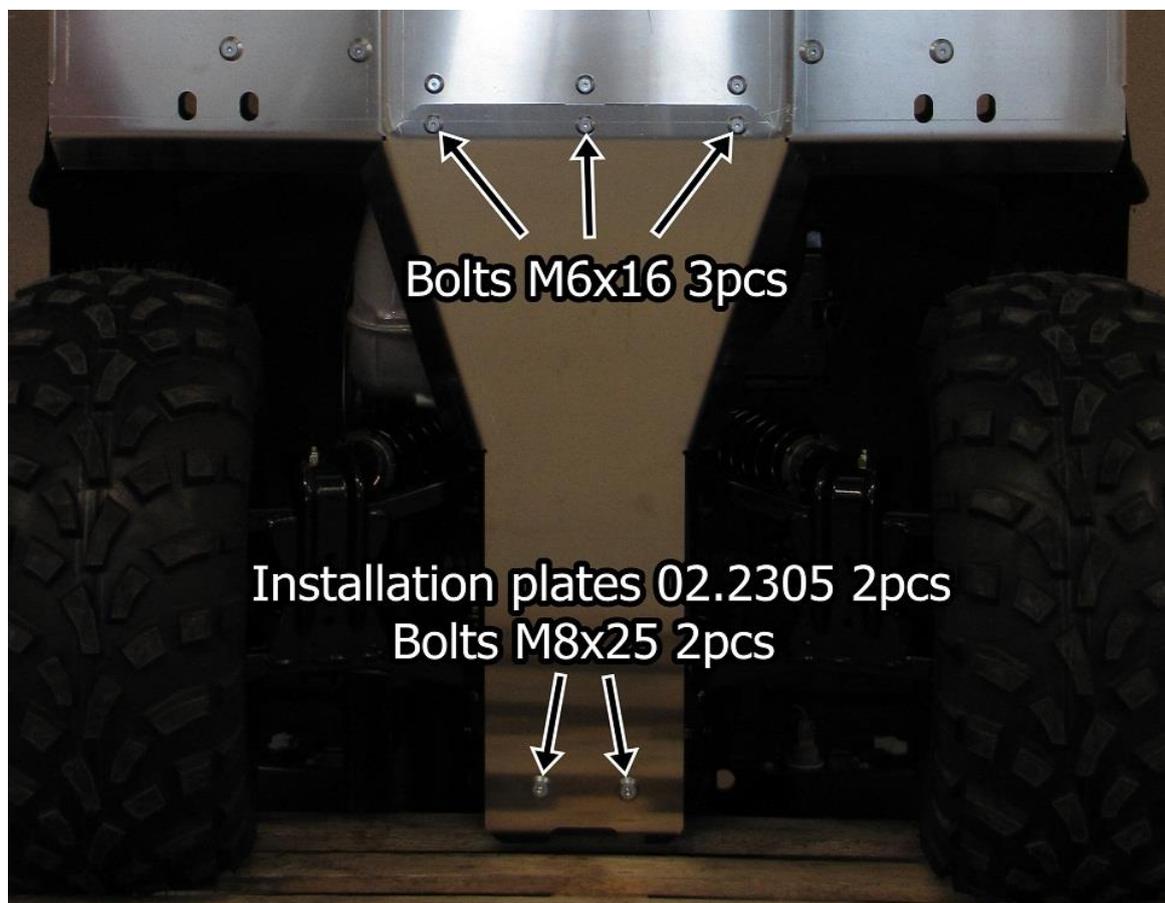


## Step 7

Install front arm protections 02.1402, 02.1403, use brackets 02.1416, 02.1417 and bolts M6x20.

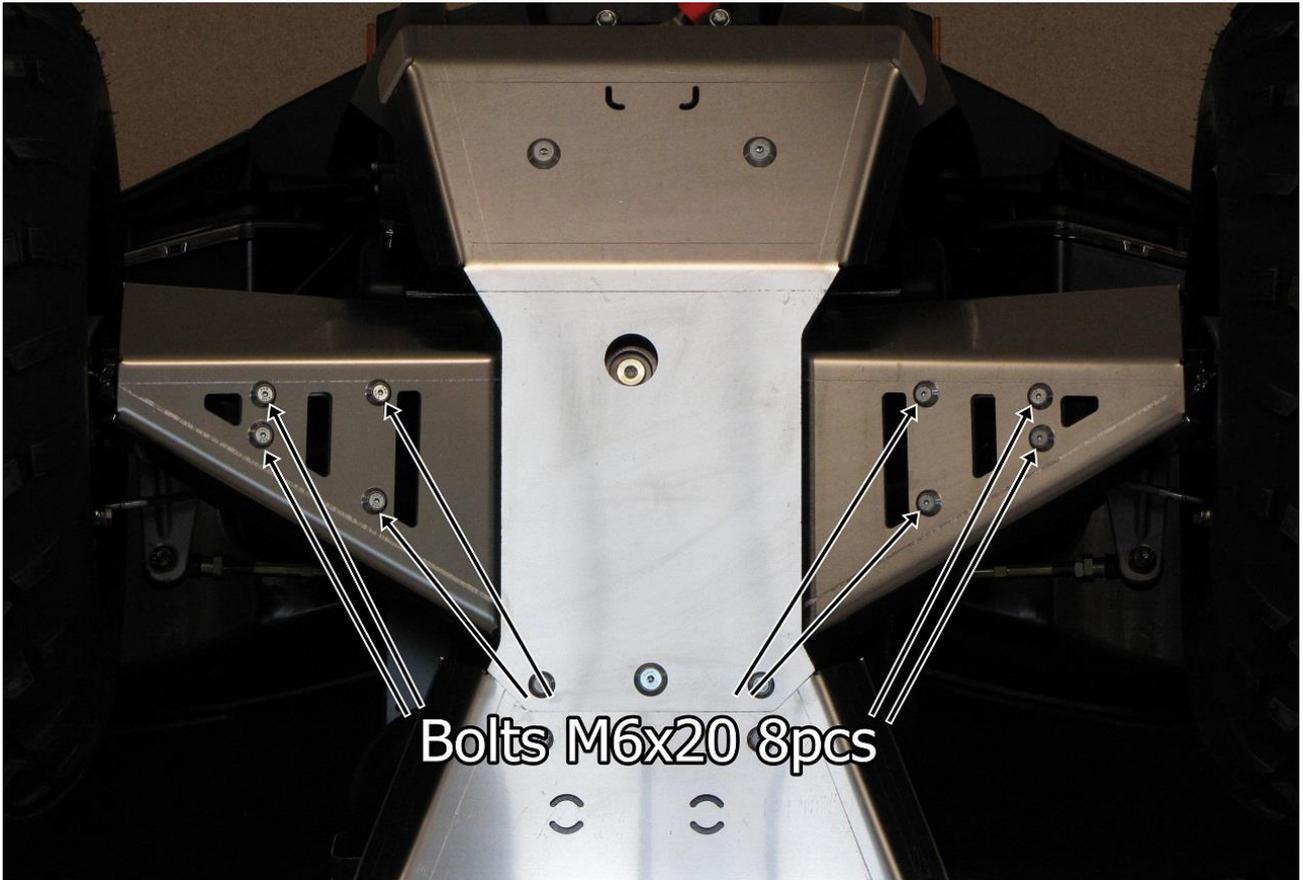

**Step 8**

Install rear arm protections 02.1404, 02.1405, use bolts M6x20, M8x25, rear arm clamps 02.1418 and installation plate 02.4011.

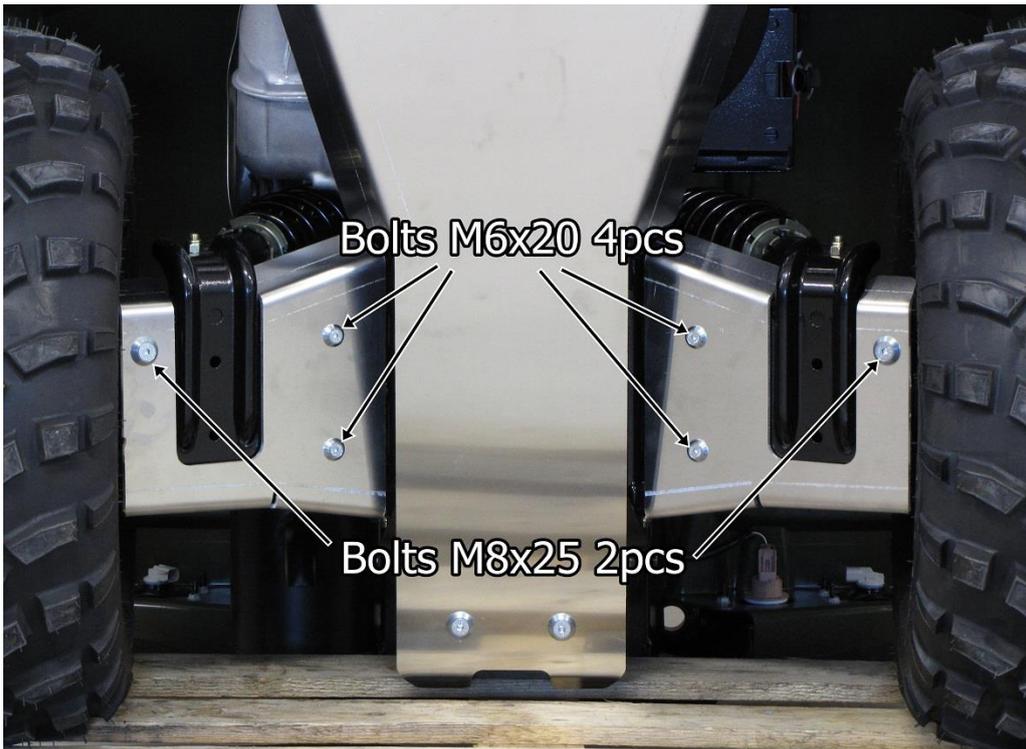





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

