

# IRON BALTIC

## PLASTIC SKID PLATE

# POLARIS

## 500 / 800 Sportsman

Code 02.5800

Version 26102023

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/FUAtpia](https://code.ironbaltic.com/u/FUAtpia)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.5801	1
2	Front part	02.5803	1
3	Rear part	02.5804	1
4	Front right arm protection	02.1412	1
5	Front left arm protection	02.1413	1
6	Rear right arm protection	02.1414	1
7	Rear left arm protection	02.1415	1
8	Front part bracket	02.5602	1
9	Installation plate (150mm x 250mm)	02.1605K	1
10	Installation plate (250mm x 250mm)	02.2302K	1
11	Clamp for front arm protection	02.1416	1
12	Clamp for front arm protection	02.1417	1
13	Clamp for rear arm protection	02.1418	2
14	Installation plate	02.4011	2
15	Installation plate	02.5006	5
16	Installation plate	02.2305	3
17	Bolt M6x16 DIN 7991	OT.02.04.020	2
18	Bolt M6x20 DIN 7991	OT.02.04.030	10
19	Bolt M6x25 DIN 7991	OT.02.04.040	18
20	Bolt M8x30 DIN 7991	OT.02.04.170	15
21	Screw 3/16 UNC X 1" x 16	DIN 912	4
22	Washer Ø5/15 DIN 9021	OT.04.02.010	4
23	Conical washer Ø6	14.502	22
24	Conical washer Ø8	14.501	15
25	Nyloc nut M6 DIN 985	OT.03.02.030	8





# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.

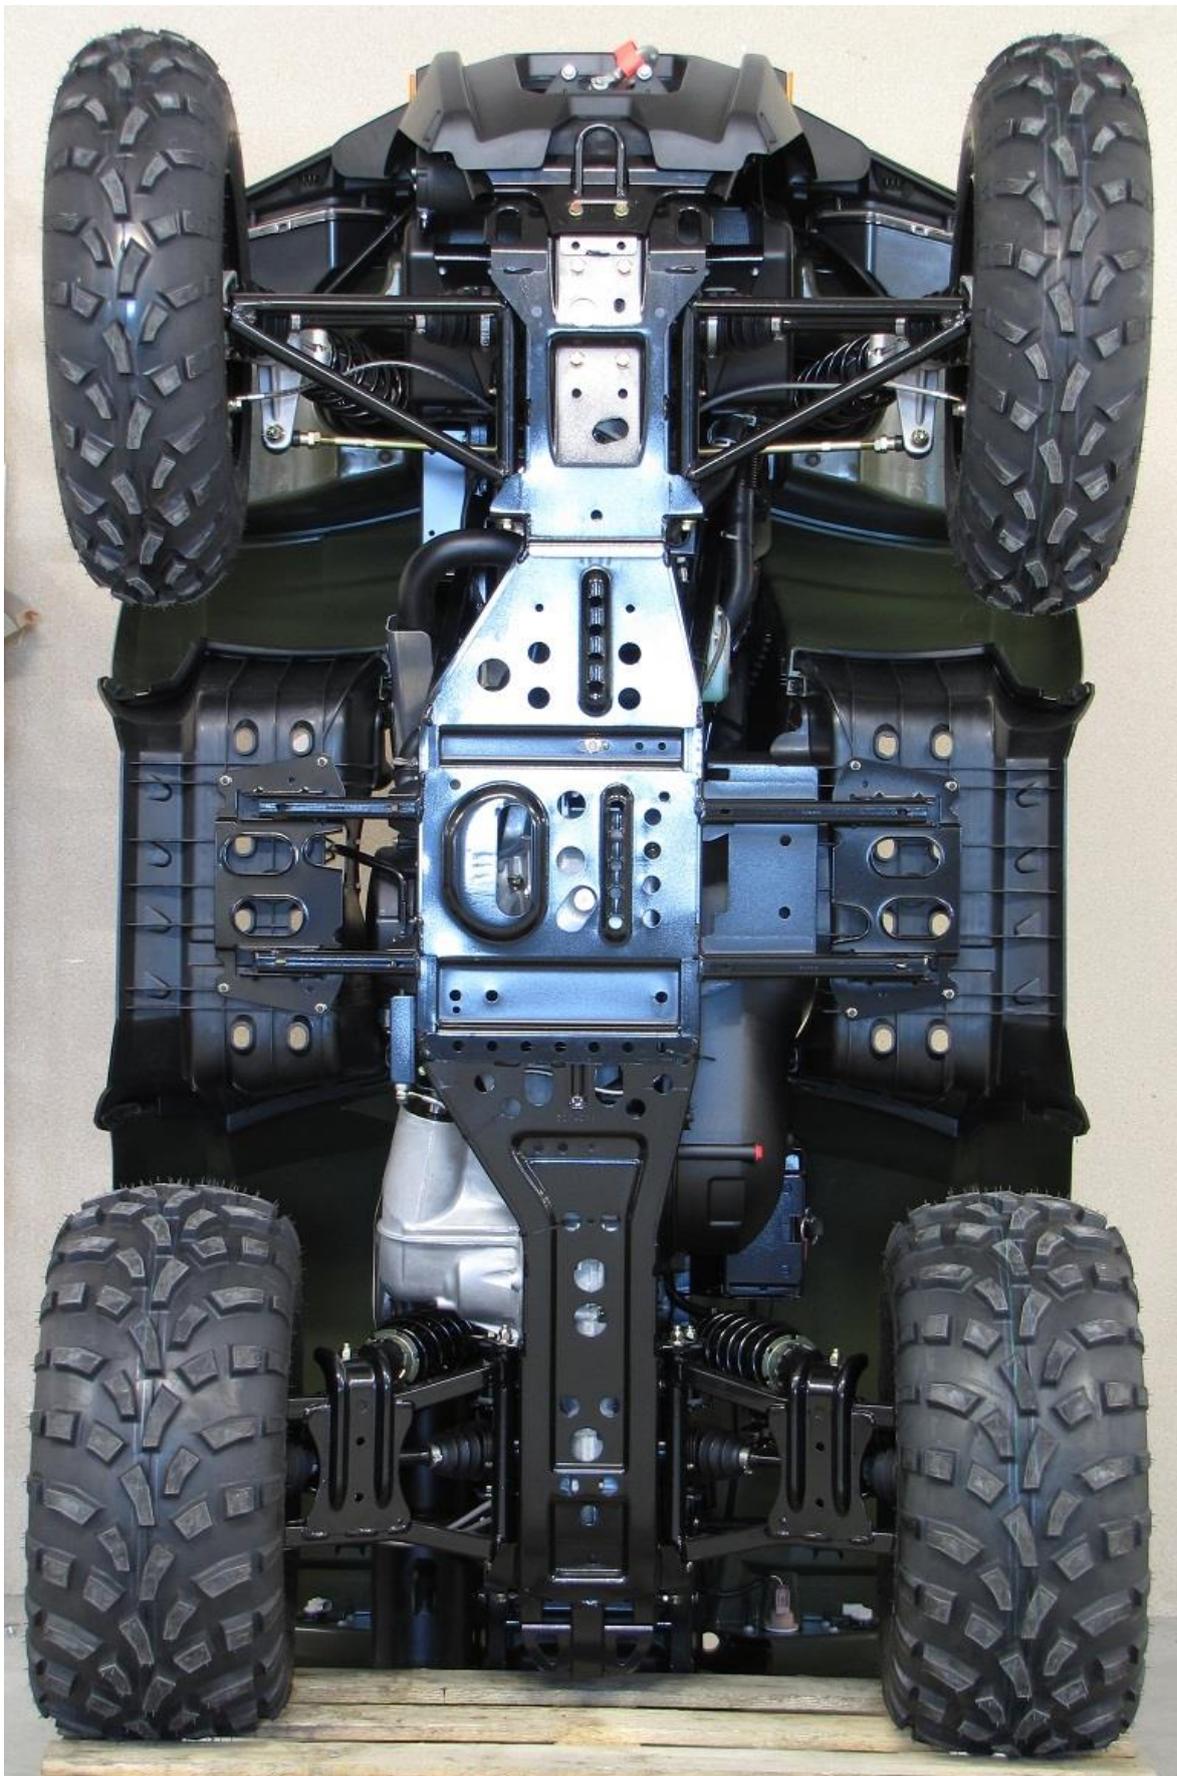


## Step 2

Install bracket 02.5602, use original bolts.  
Install plates 02.1605K and 02.2302K, use bolts M6x25,  
M6x16 and M6 nylock nuts.

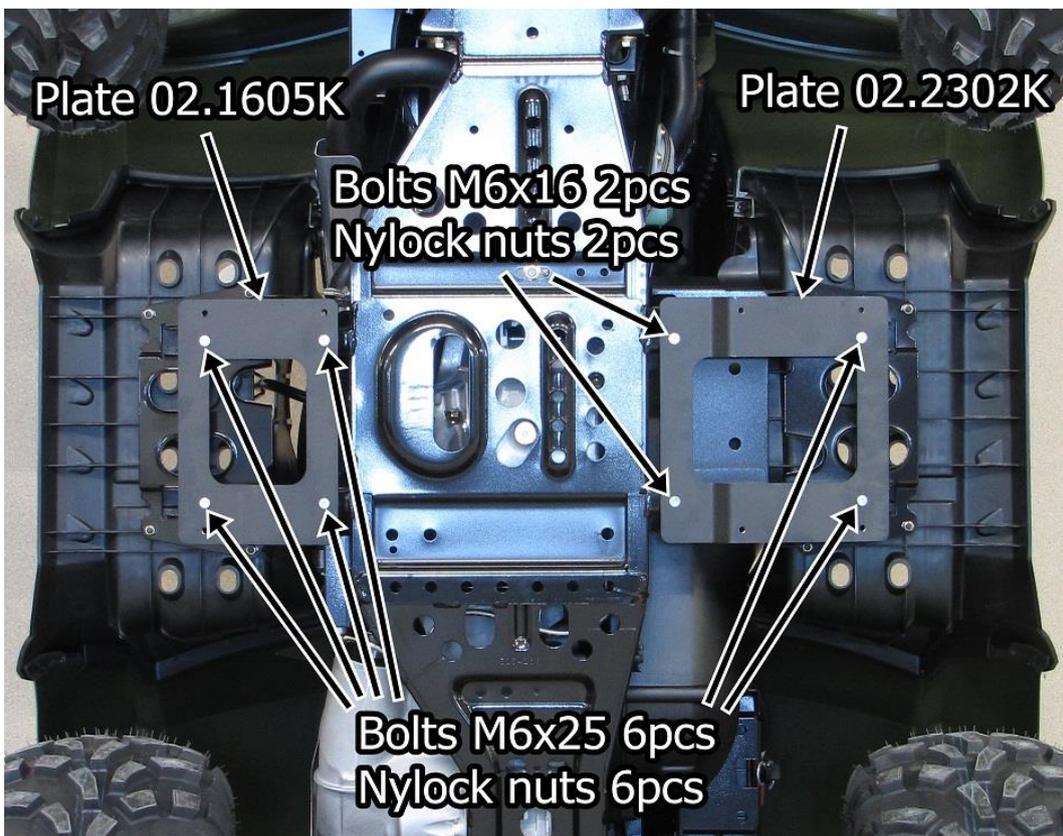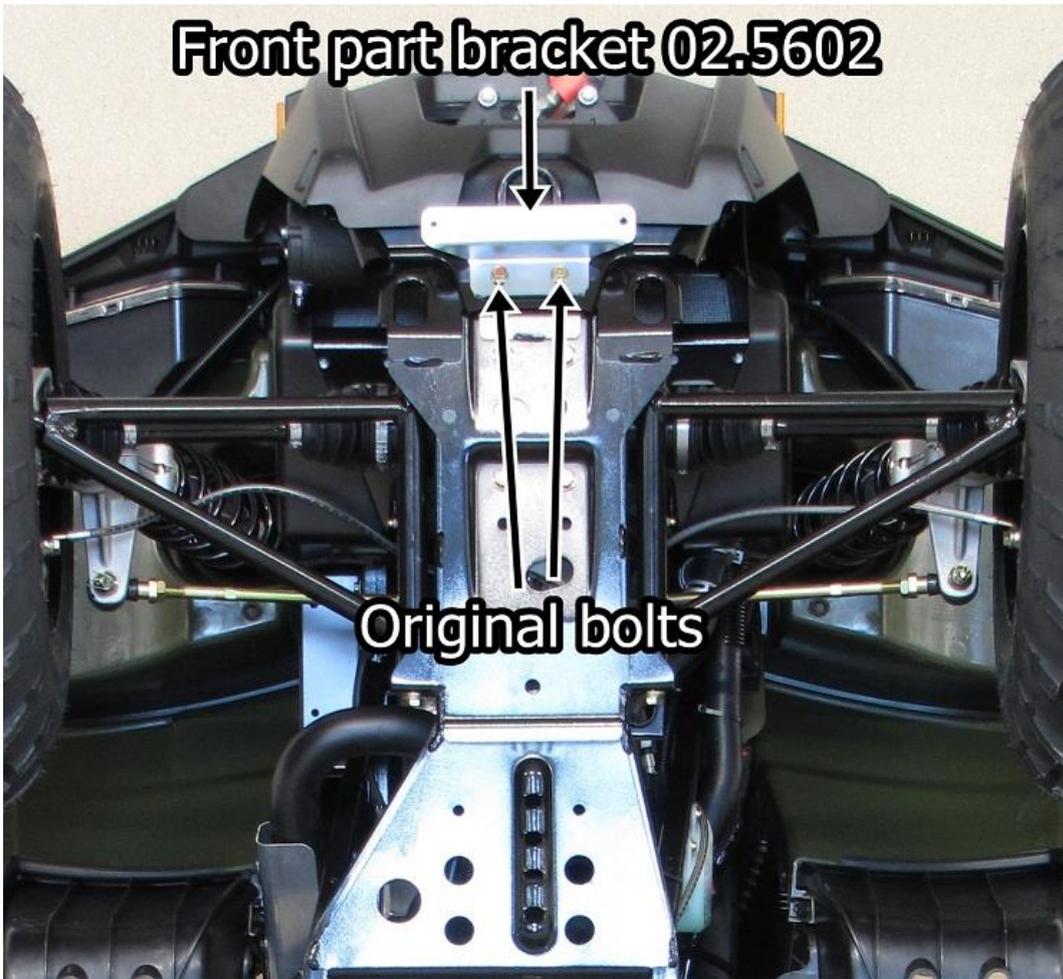


**Step 3**

Install middle part 02.5801, use bolts M8x30.

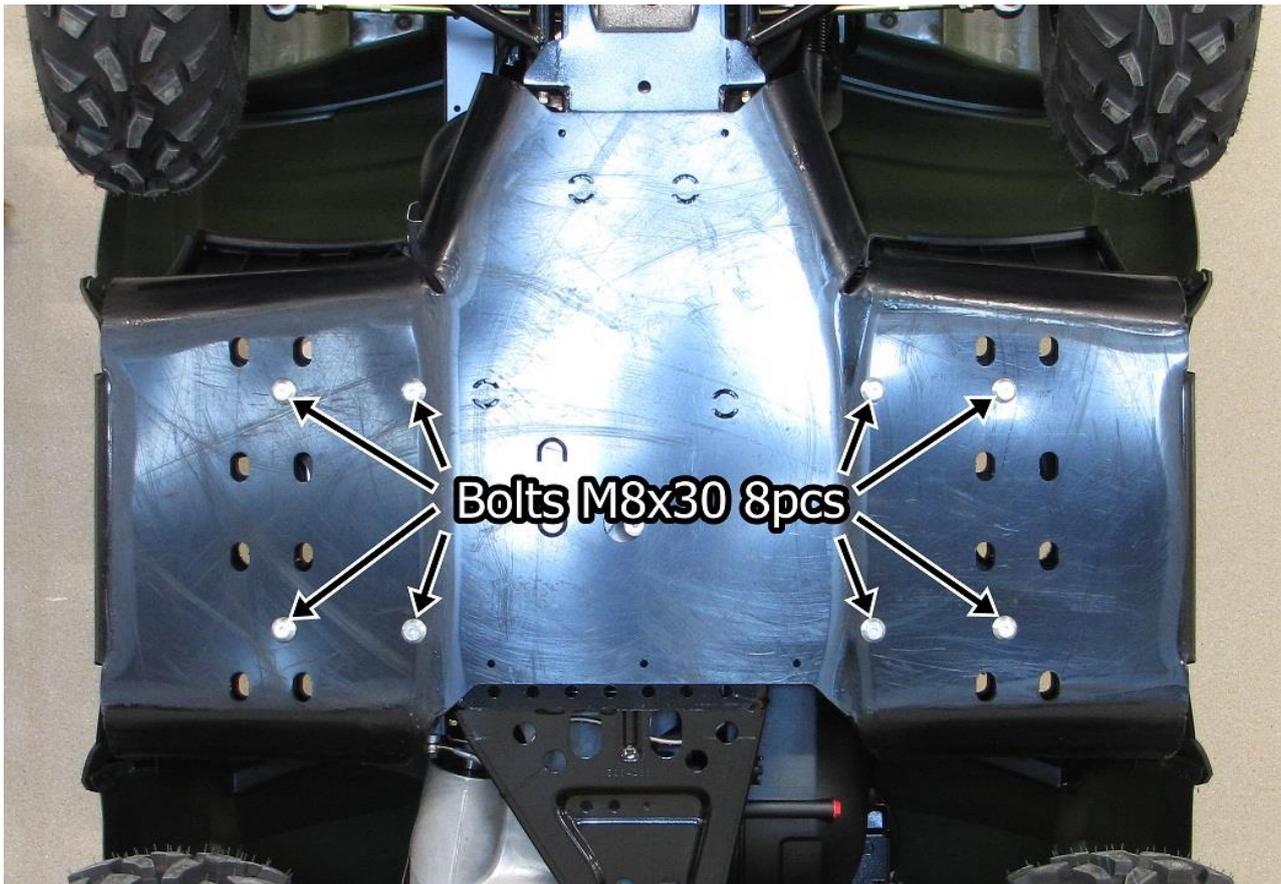


**Step 4**

Install plates 02.5006 to middle part, use bolts M6x20.

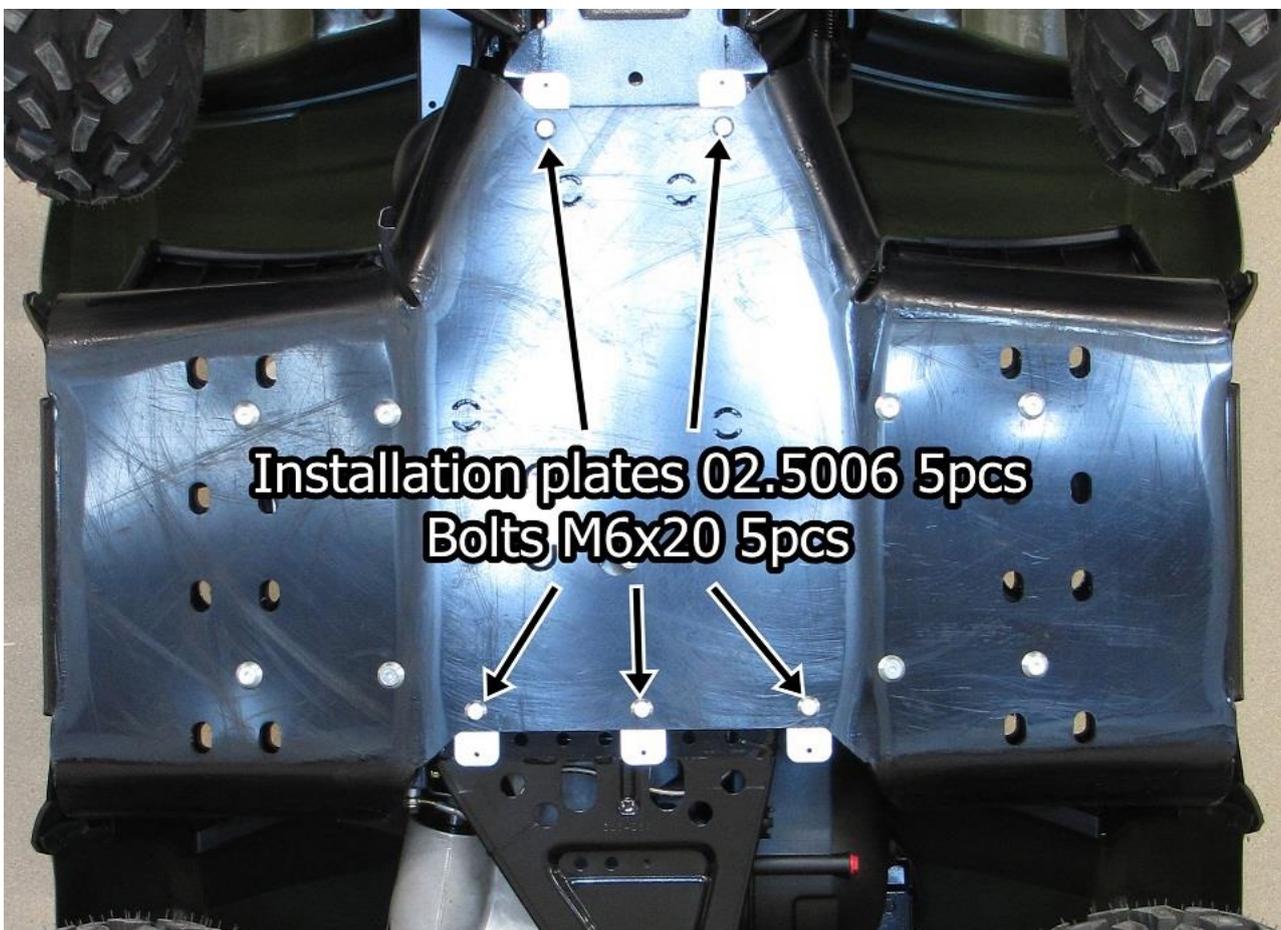


**Step 5**

Install front part 02.5803, use bolts M6x20, M8x30 and plate 02.2305.

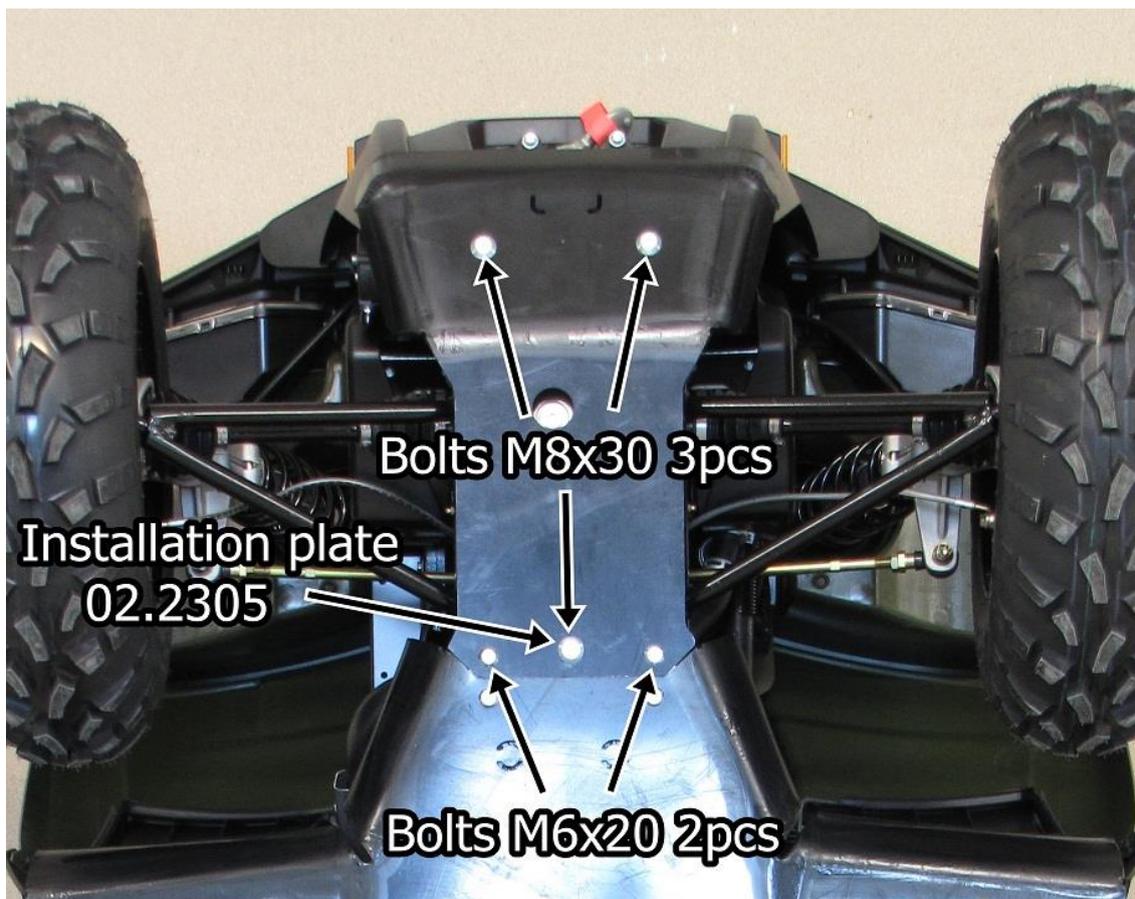


**Step 6**

Install rear part 02.5804, use bolts M6x20, M8x30 and installation plates 02.2305.

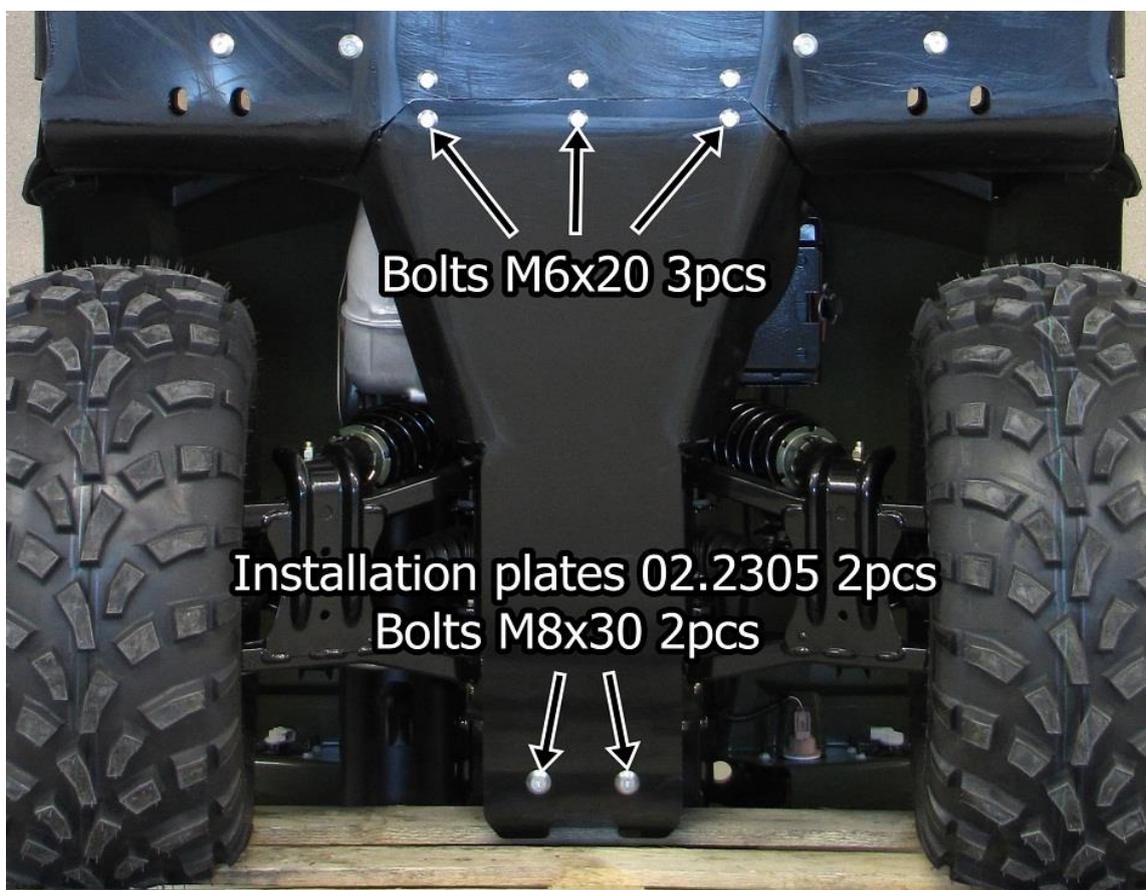


**Step 7**

Install front arm protections 02.1412, 02.1413, use brackets 02.1416, 02.1417 and bolts M6x25.

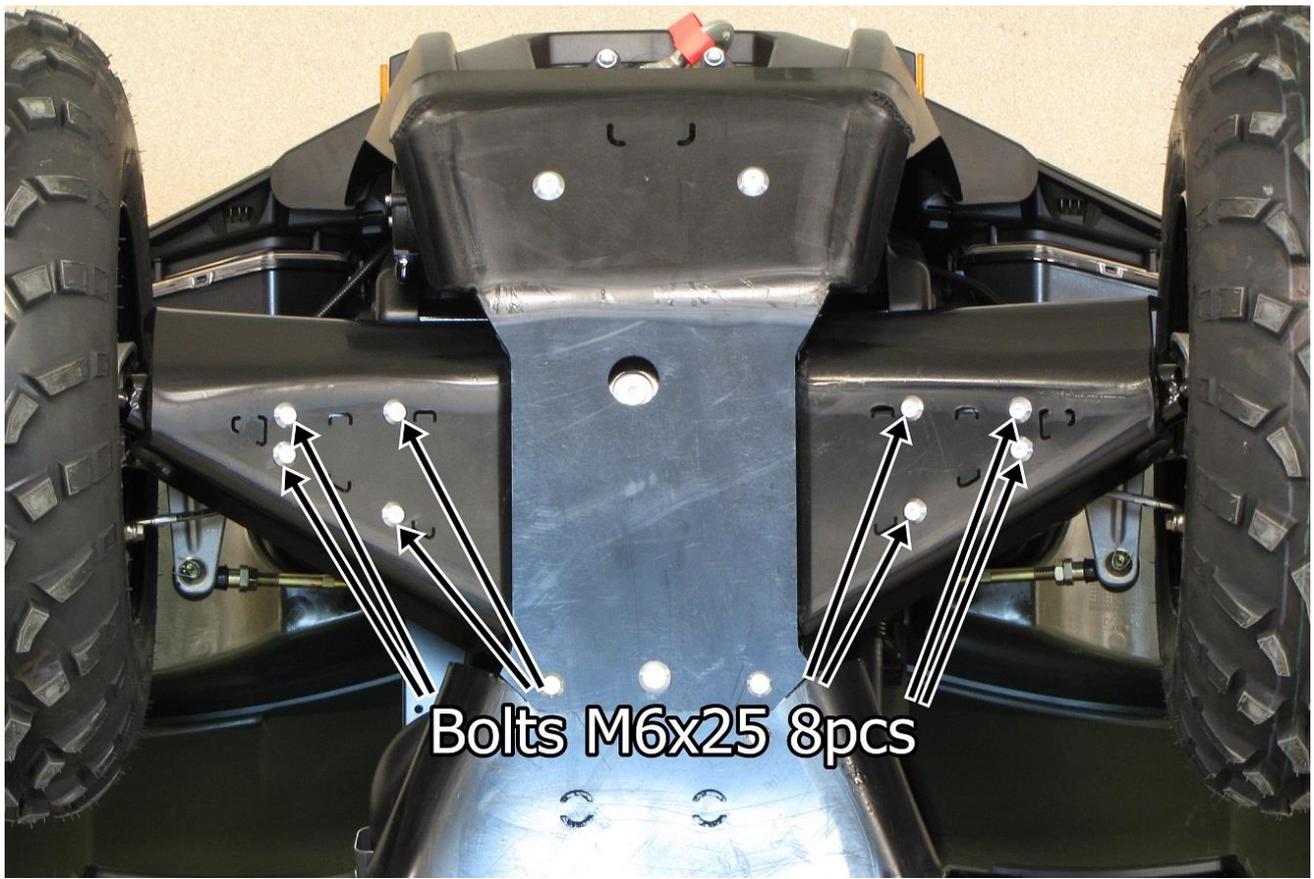

## Step 8

Install rear arm protections 02.1414, 02.1415, use bolts M6x25, M8x30, rear arm clamps 02.1418 and installation plate 02.4011.

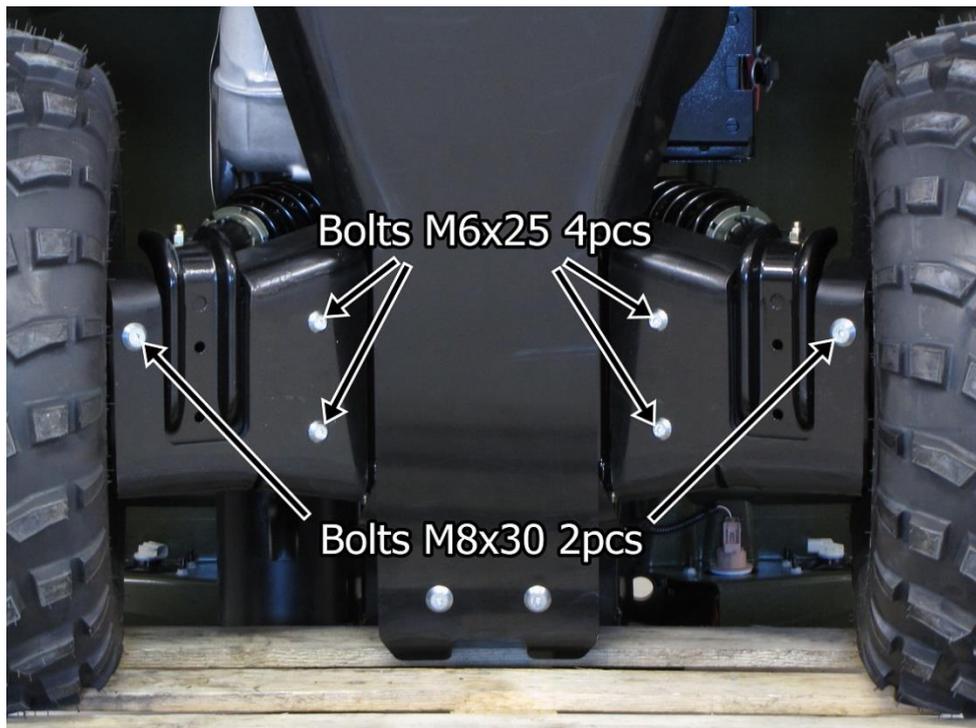





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

