




ALUMINIUM SKID PLATE

CAN AM

G1 Outlander 650 / 800 MAX

Code 02.6000

Version 26102023


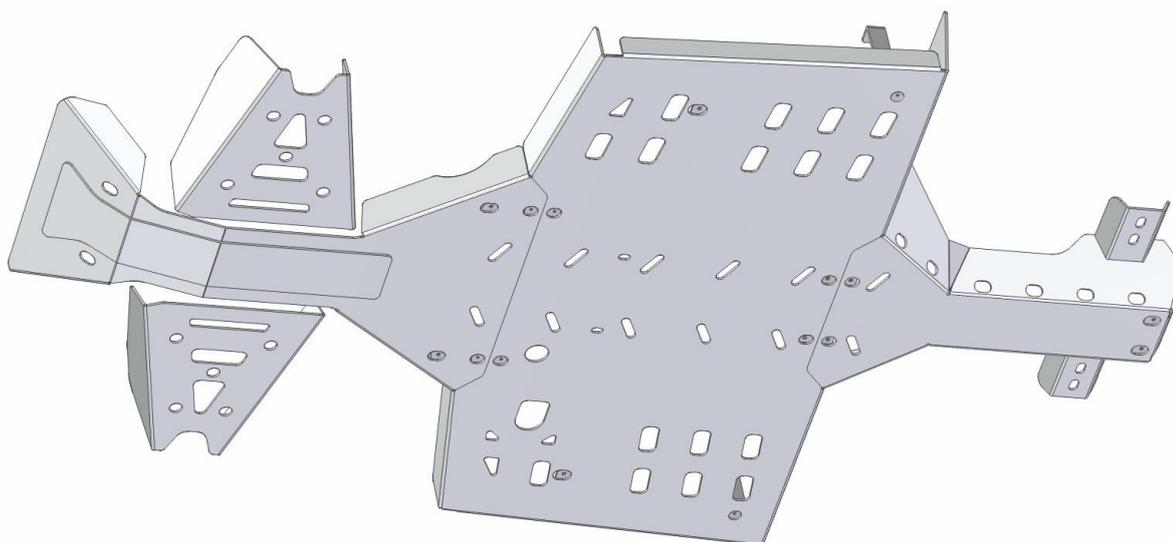


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.6001	1
2	Front protection	02.6002K	1
3	Rear protection	02.6004K	1
4	Front right arm protection	02.1502P	1
5	Front left arm protection	02.1502V	1
6	Bracket	03.1502	6
7	Bracket	02.1709	2
8	Bracket	02.6007	1
9	Plate	02.5006	2
10	Dished washer	14.503	26
11	Bolt M6x16 DIN 933	OT.02.02.050	4
12	Bolt M6x20 DIN 933	OT.02.02.060	12
13	Bolt M6x35 DIN 933	OT.02.02.090	2
14	Bolt M8x16 DIN 933	OT.02.02.170	10
15	Bolt M8x20 DIN 933	OT.02.02.180	2
16	Washer Ø6/15 SFS 3738	OT.04.03.020	28
17	Washer Ø8/20 SFS 3738	OT.04.03.030	4
18	Nut M6 Nyloc DIN 985	OT.03.02.030	10
19	Nut M8 Nyloc DIN 985	OT.03.02.040	2

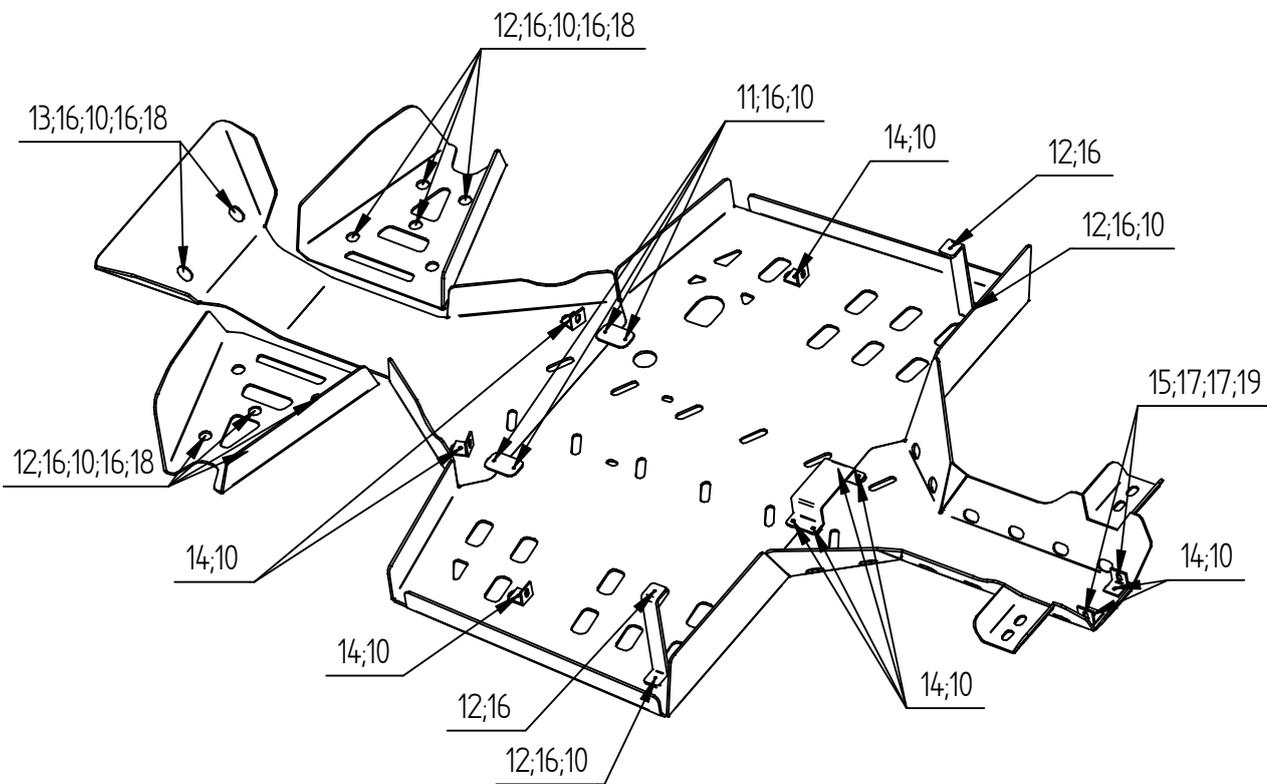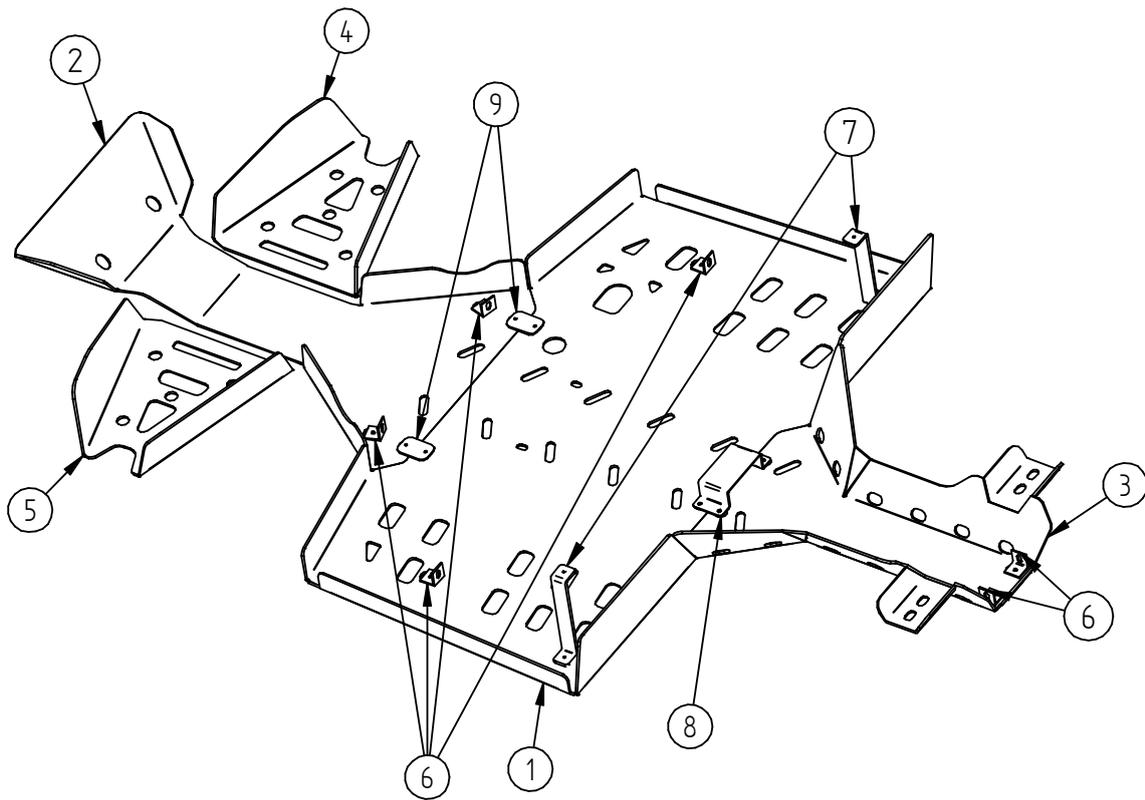


FITTING INSTRUCTIONS

Step 1 Remove all standard protections.




Step 2 Install brackets 03.1502, use original frame bolts, M6x20 and M8x20 bolts.

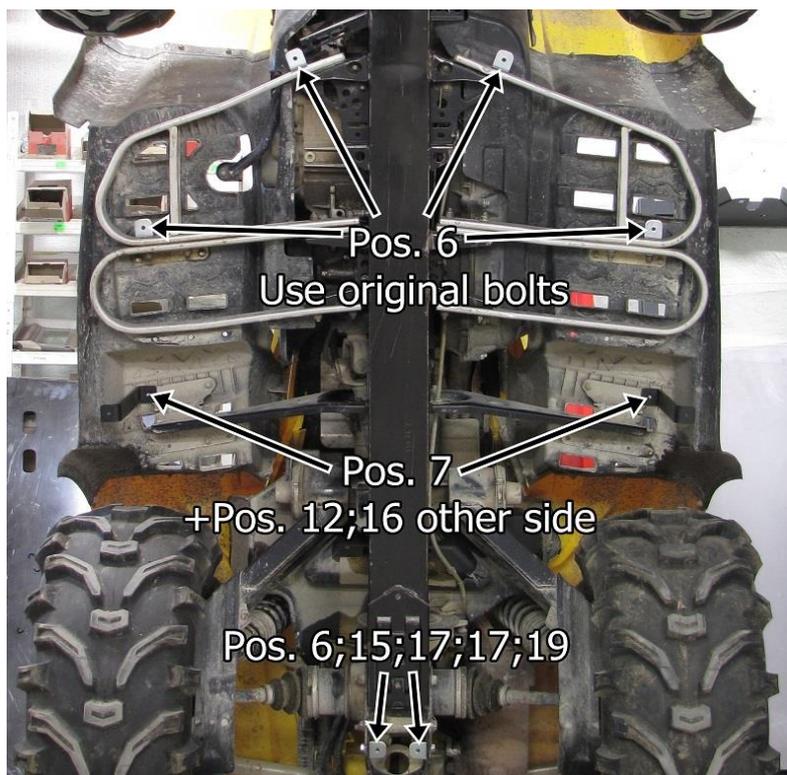


Step 3

Install middle protection 02.6001, use M6x20, M8x16 bolts.

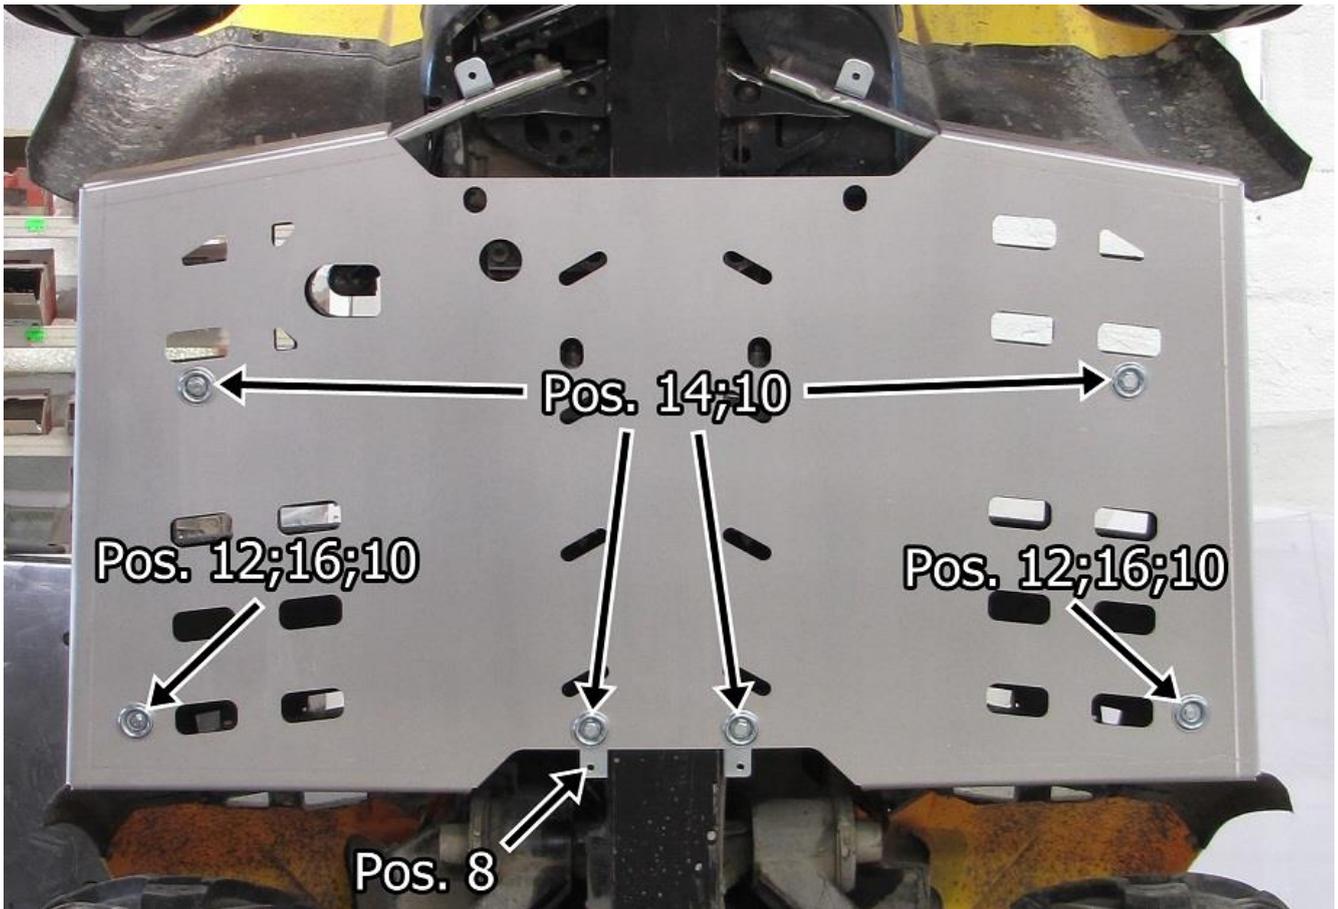


Step 4

Install plates 02.5006, use bolts M6x16.

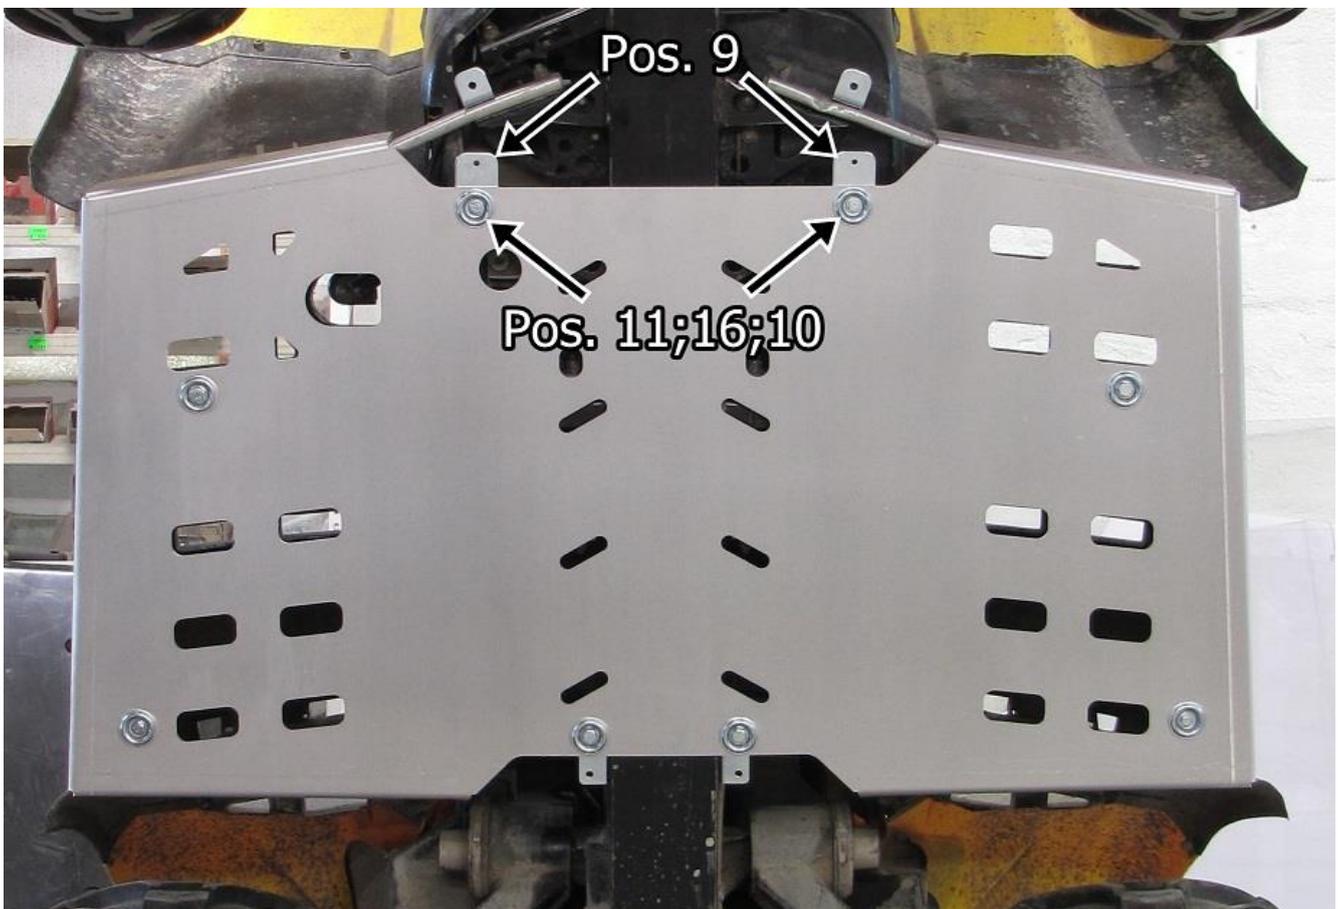


Step 5

Install front protection 02.6002K, use bolts M6x16, M6x35, M8x16.

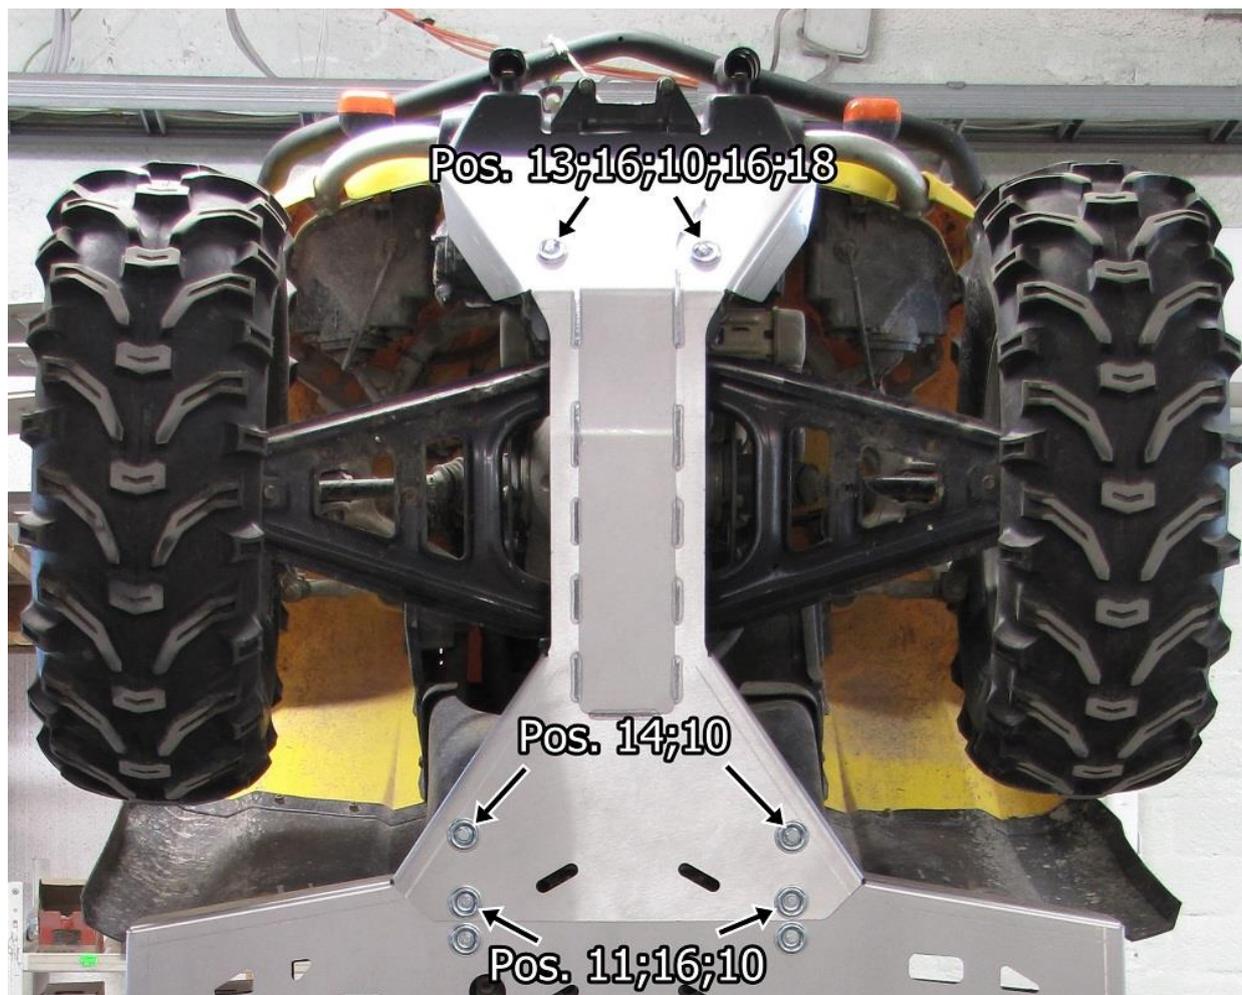

Step 6

Install rear protection 02.6004K, use bolts M8x16

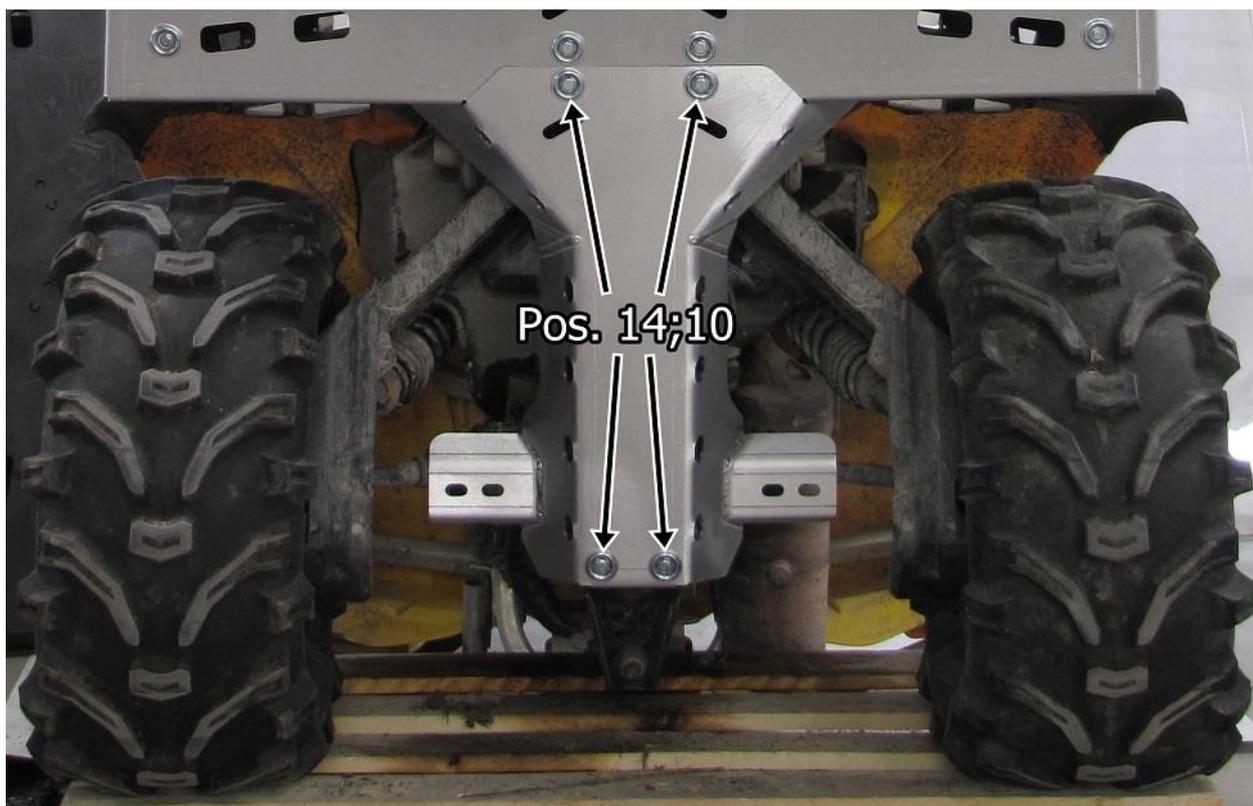

Step 7

Install front A-arms protections 02.1502P, 02.1502V, use bolts M6x20.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

