

IRON BALTIC

ALUMINIUM SKID PLATE

ARCTIC CAT

TRV 400/500/550/700 / TRV 700 Diesel

Code 02.6600

Version 27102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/SeN73qUb



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate middle part	02.6601	1
2	Skid plate front part	02.6602	1
3	Skid plate rear part	02.6603	1
4	Front right arm protection	02.6605	1
5	Front left arm protection	02.6606	1
6	Rear right arm protection	02.6607	1
7	Rear left arm protection	02.6608	1
8	Installation plate	02.5006	5
9	Bracket (shorter)	02.6609	2
10	Bracket (longer)	02.6610	2
11	Dished washer	14.503	30
12	Bolt M6x12 DIN 933	OT.02.02.030	10
13	Bolt M6x16 DIN 7500D	OT.02.06.009	4
14	Bolt M6x25 DIN 7500D	OT.02.06.010	8
15	Bolt M8x20 DIN 933	OT.02.02.180	4
16	Bolt M8x30 DIN 933	OT.02.02.200	4
17	Bolt M8x40 DIN 933	OT.02.02.220	4
18	Washer Ø6/15 SFS 3738	OT.04.03.020	22
19	Washer Ø8/20 SFS 3738	OT.04.03.030	8
20	Nut M8 Nyloc DIN 985	OT.03.02.040	4

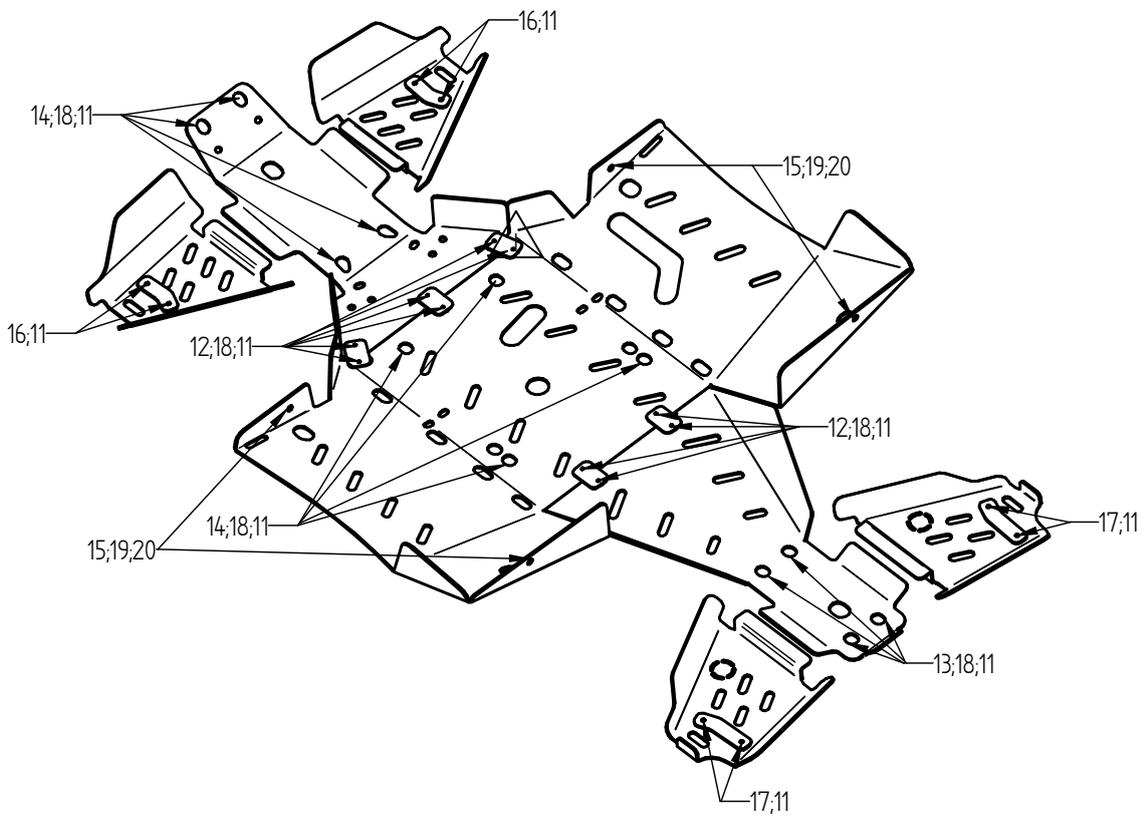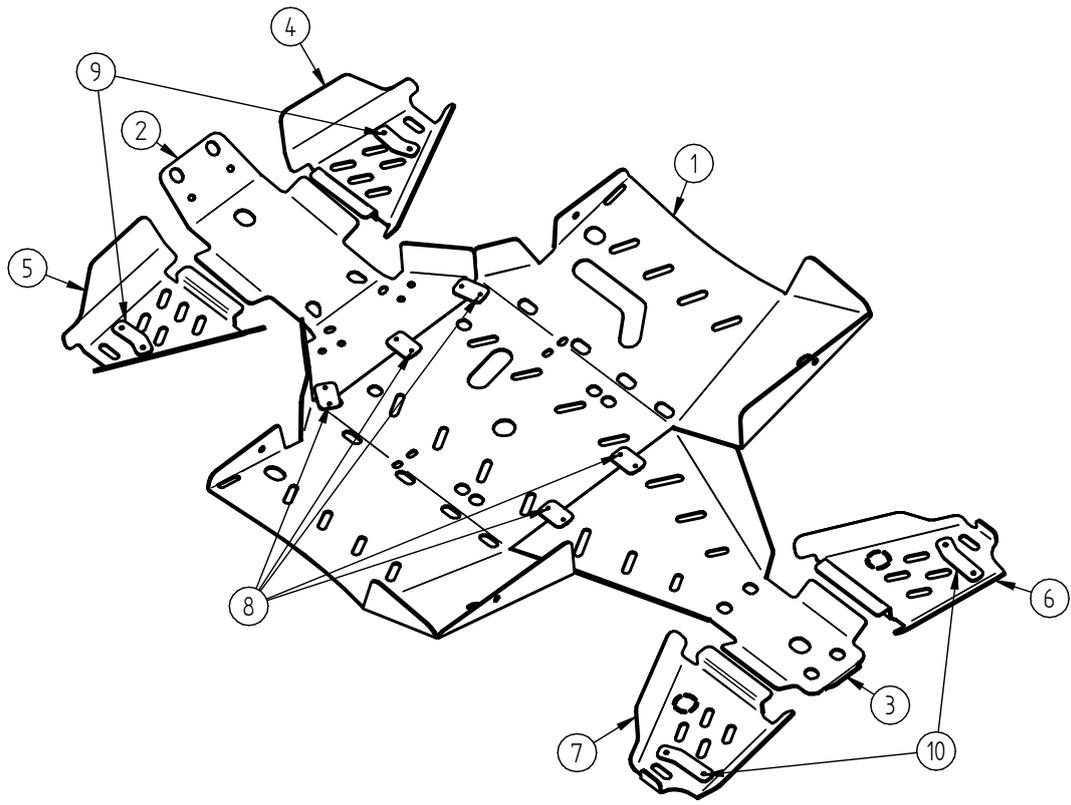

FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install front swingarm protections 02.6605 and 02.6606.




Step 3

Install rear swingarm protections 02.6607 and 02.6608.

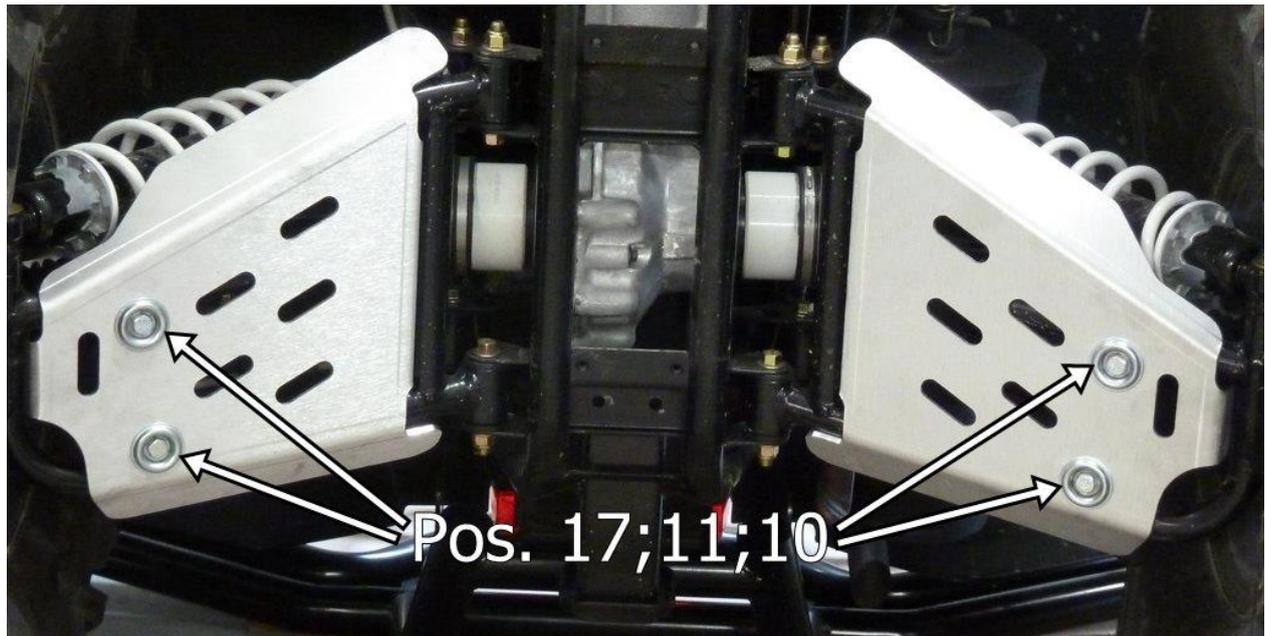


Step 4

Install middle protection 02.6601K.

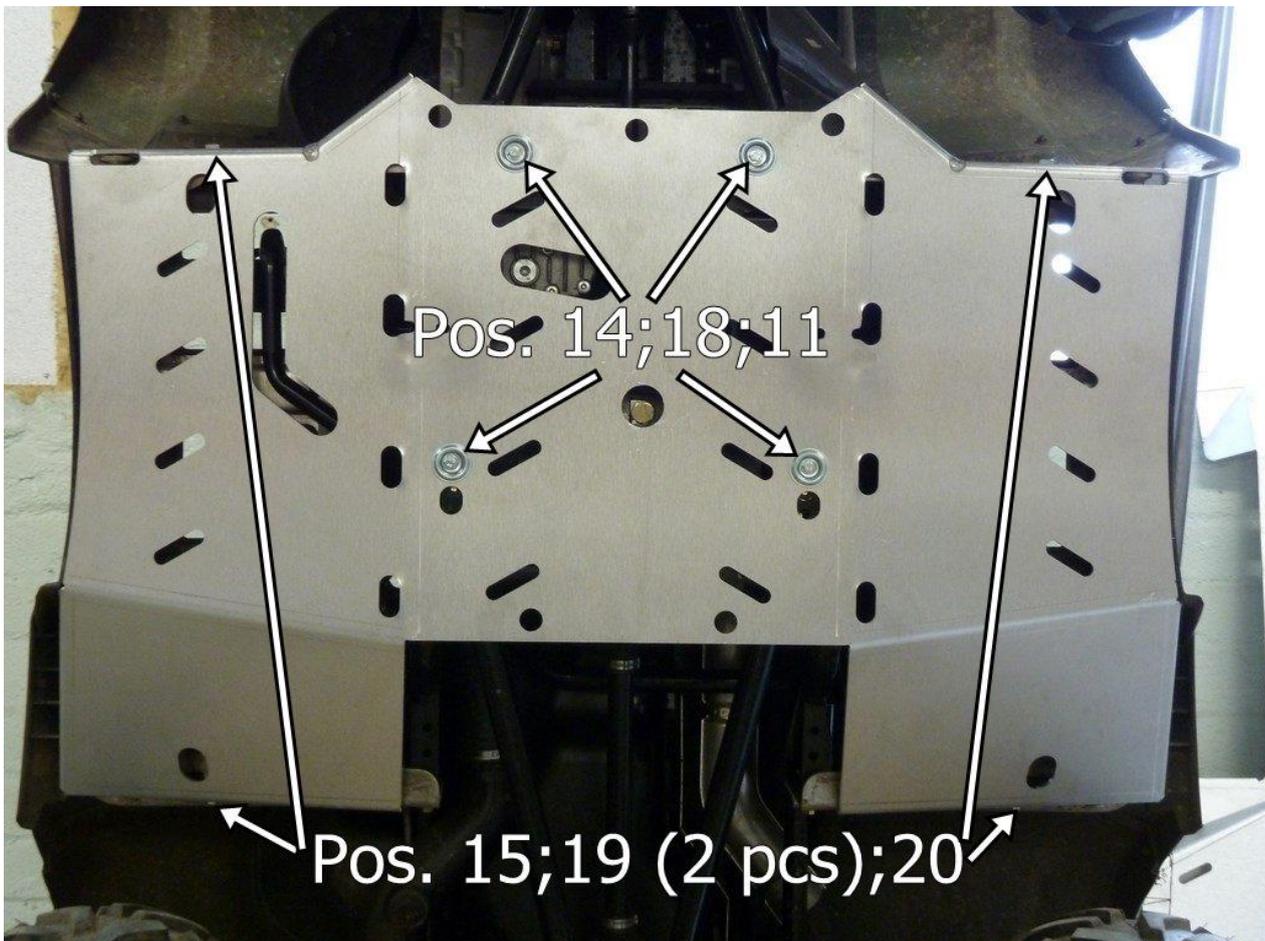


Step 5

Install plates 02.5006 to middle protection.

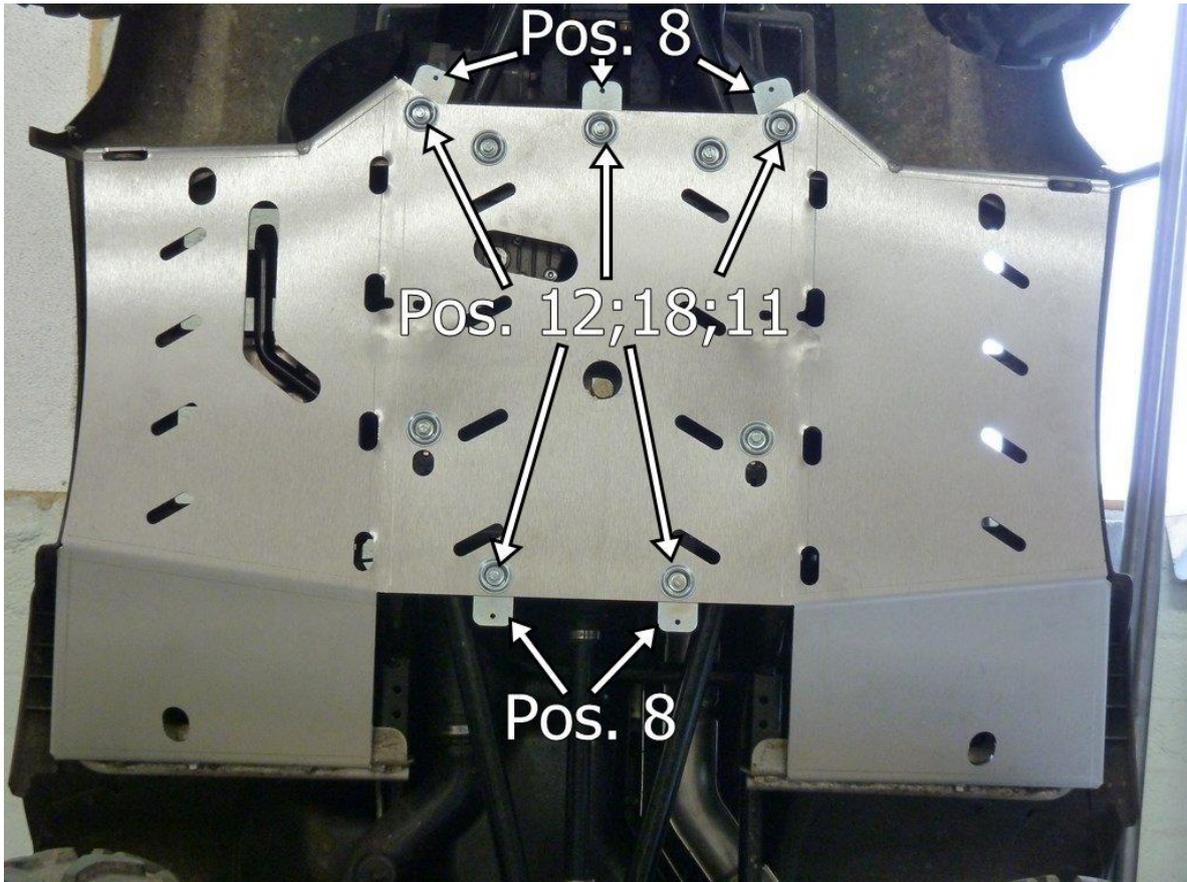


Step 6

Install front protection 02.6602.

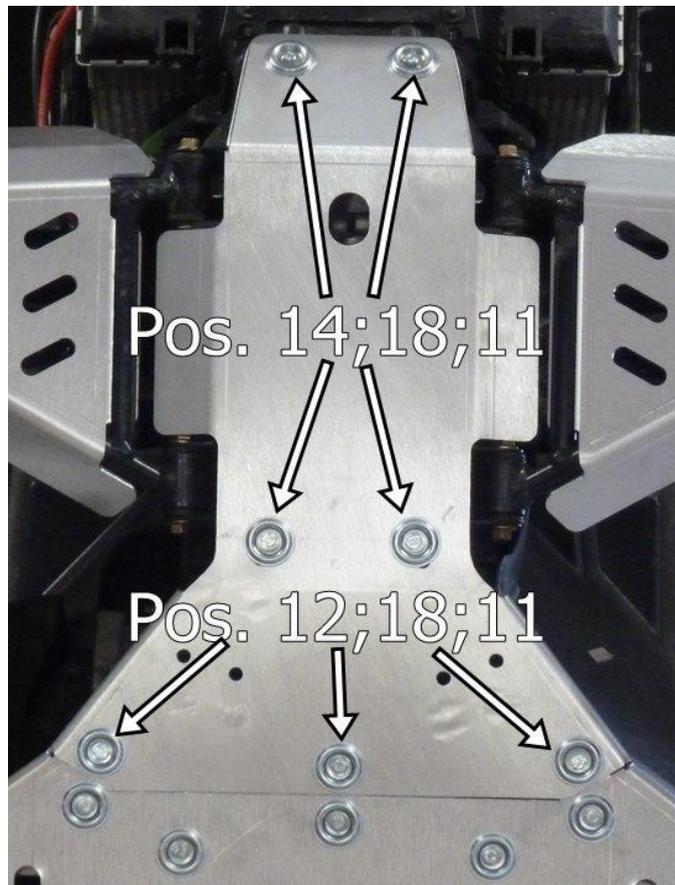

Step 7

Install rear protection 02.6603.

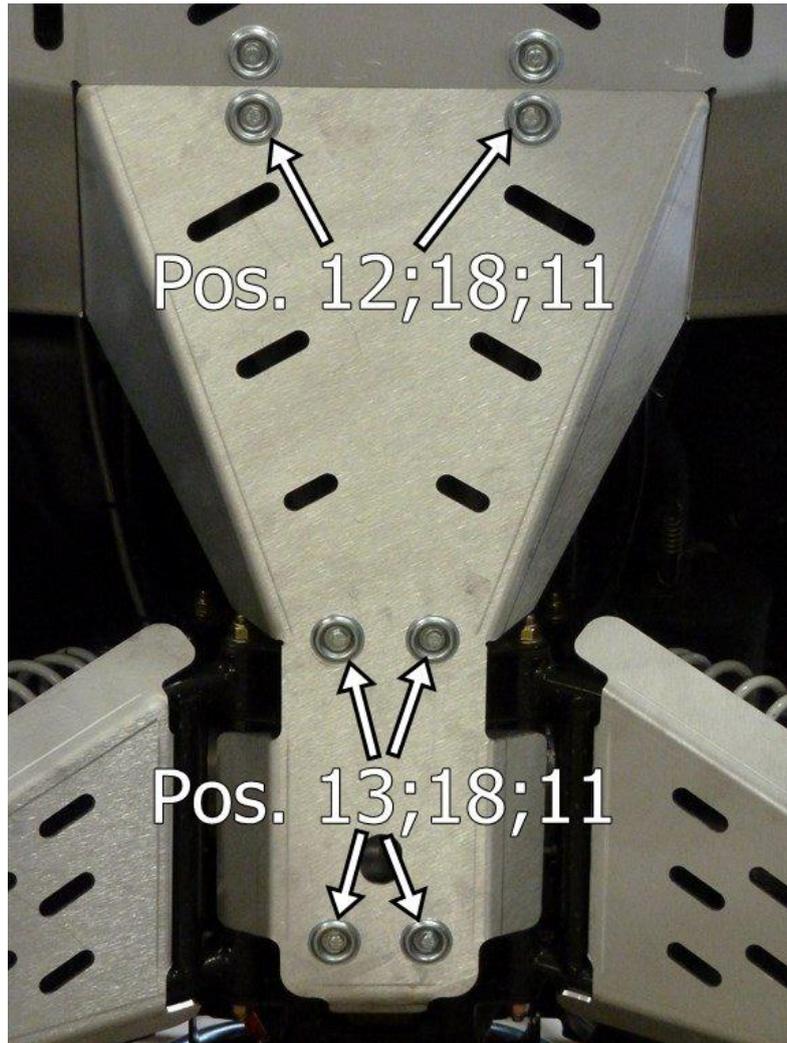

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

