

IRON BALTIC

PLASTIC SKID PLATE

DINLI

Centhor 800 Evolution

Code 02.7300

Version 27102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/Z0nCi2Sh



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate	02.7301K	1
2	Front protection	02.7302	1
3	Front left arm protection	02.3153V	1
4	Front right arm protection	02.3153P	1
5	Rear left arm protection	02.4501K	1
6	Rear right arm protection	02.4502K	1
7	Plate	02.5006	2
8	Bracket	02.6507	4
9	Bracket 28mm	OT.05.04.010	4
10	Bracket 32mm	OT.05.04.020	2
11	U-clamp 28mm	OT.05.01.010	4
12	Bolt M6x20 DIN 7991	OT.02.04.030	18
13	Bolt M6x25 DIN 7991	OT.02.04.040	4
14	Bolt M6x30 DIN 7991	OT.02.04.050	4
15	Bolt M6x70 DIN 933	OT.02.02.150	4
16	Conical washer Ø6	14.502	26
17	Washer Ø6/18 DIN 9021	OT.04.02.020	8
18	Washer Ø8/20 SFS 3738	OT.04.03.030	8
19	Nut M6 Nyloc DIN 985	OT.03.02.030	4
20	Nut M8 Nyloc DIN 985	OT.03.02.040	8

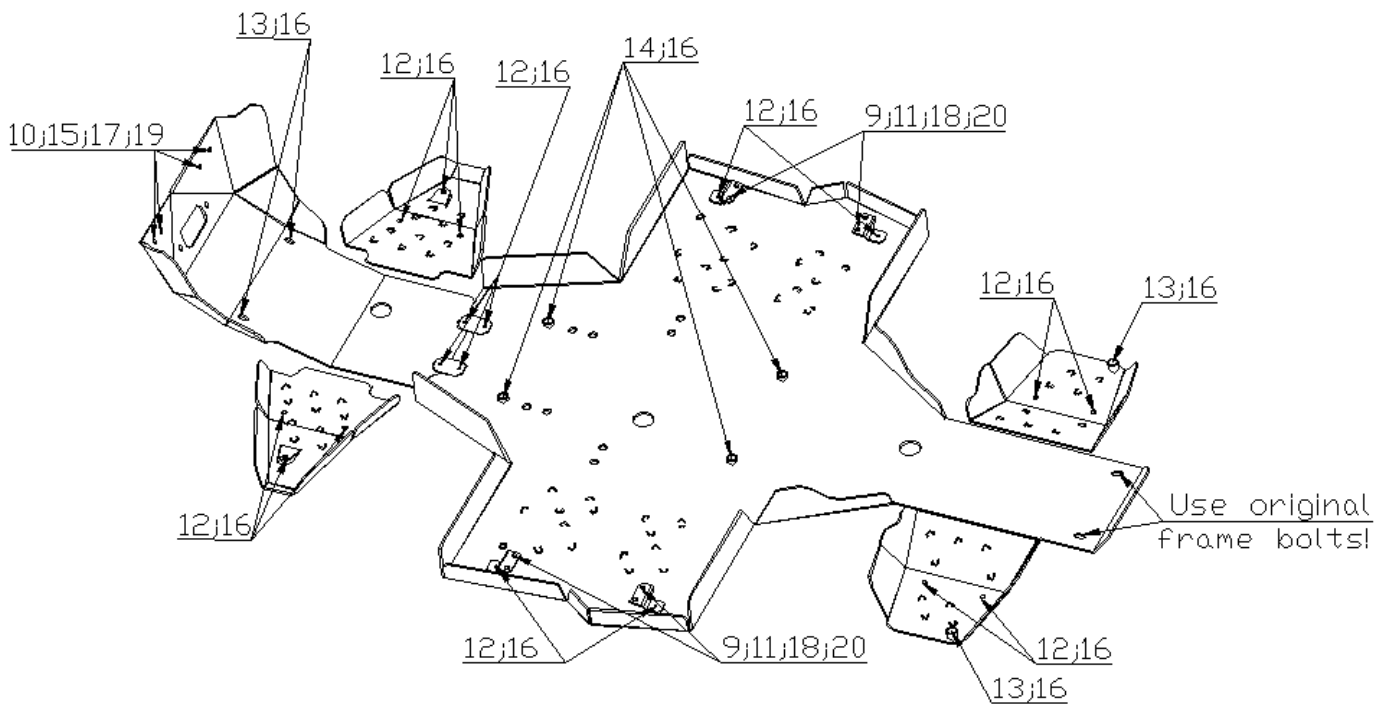
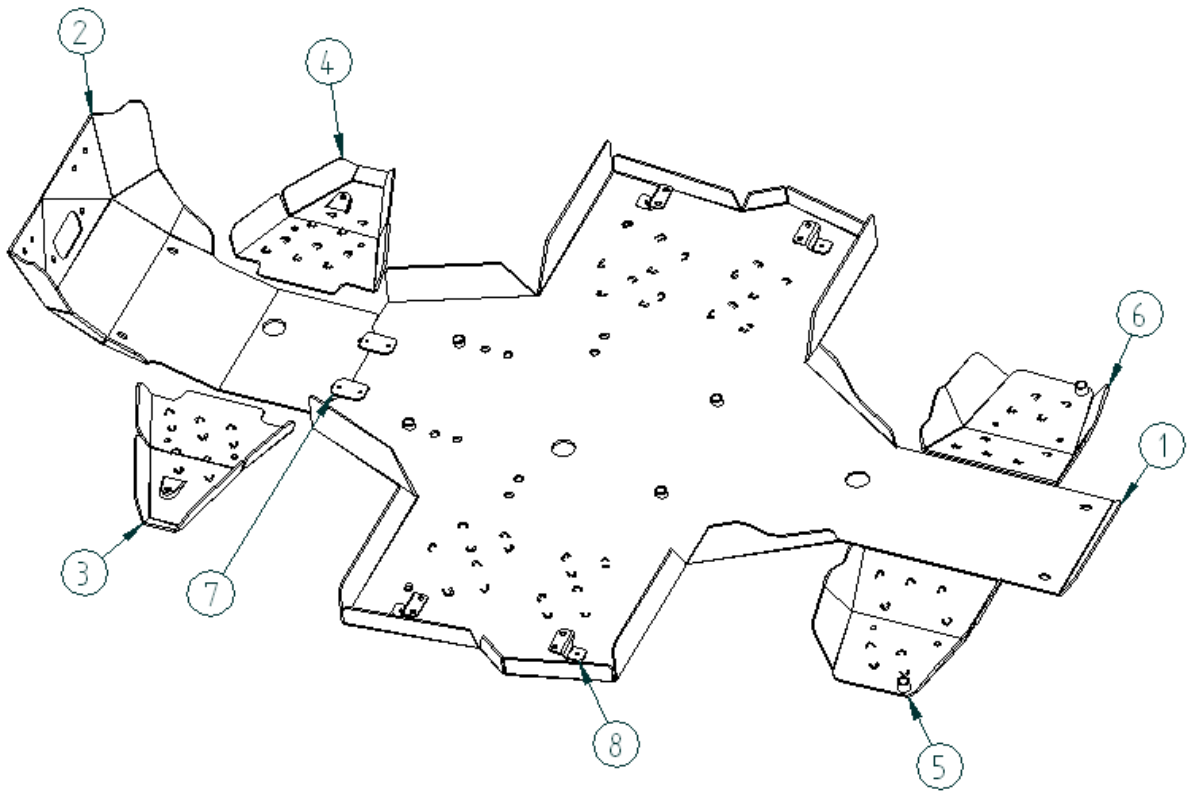


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Instal brackets 02.6507, use clamps 28mm, U-clamps 28mm, washers $\varnothing 8$ and nuts M8 nyloc.

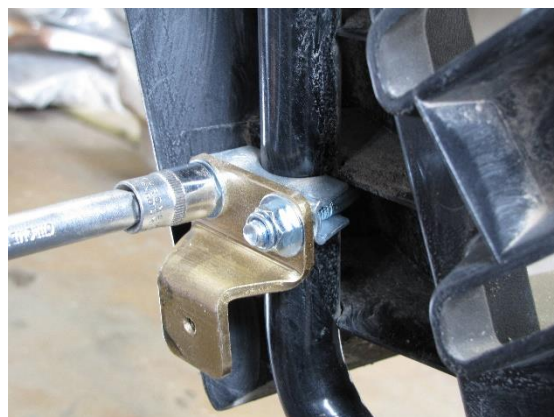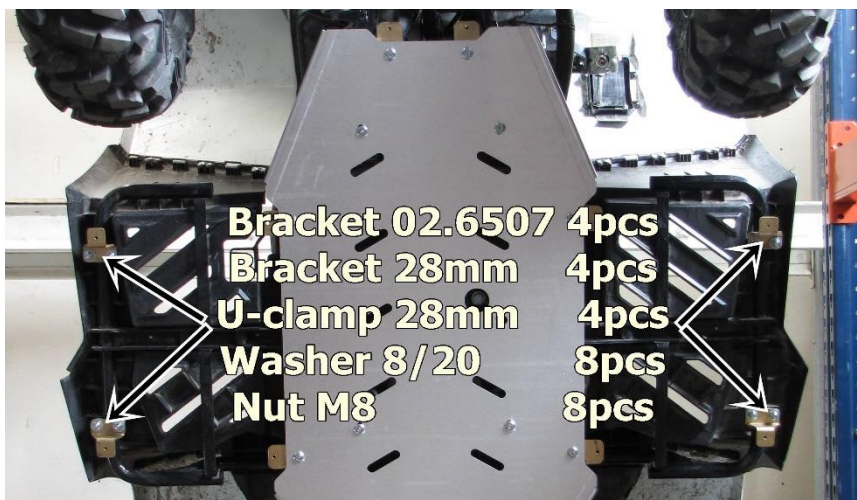


Step 3

Instal skid plate, use bolts M6x20, M6x30 and original frame bolts.

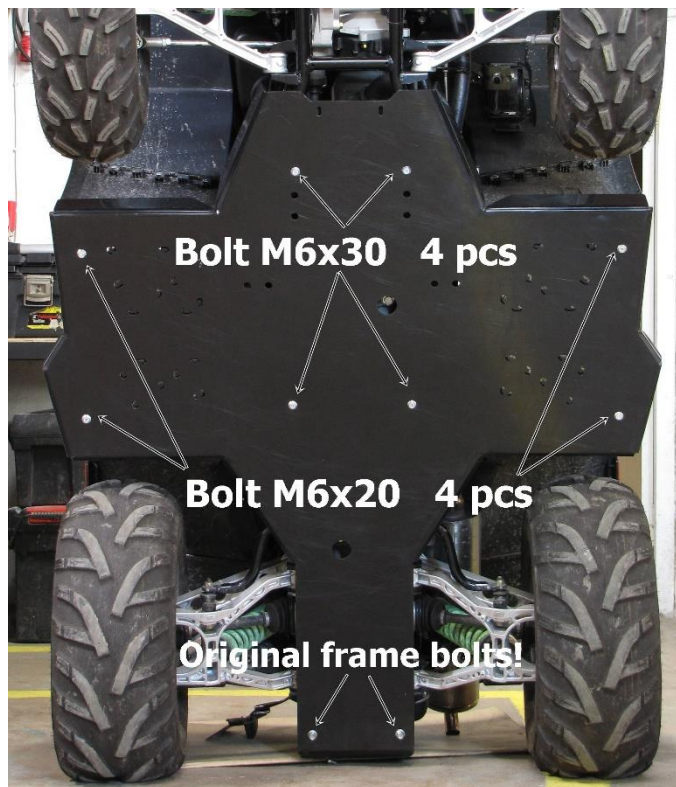


Step 4

Instal front part, use brackets 32mm, bolts M6x20, bolts M6x25, bolts M6x70, washers $\varnothing 6$ and nuts M6 Nyloc.

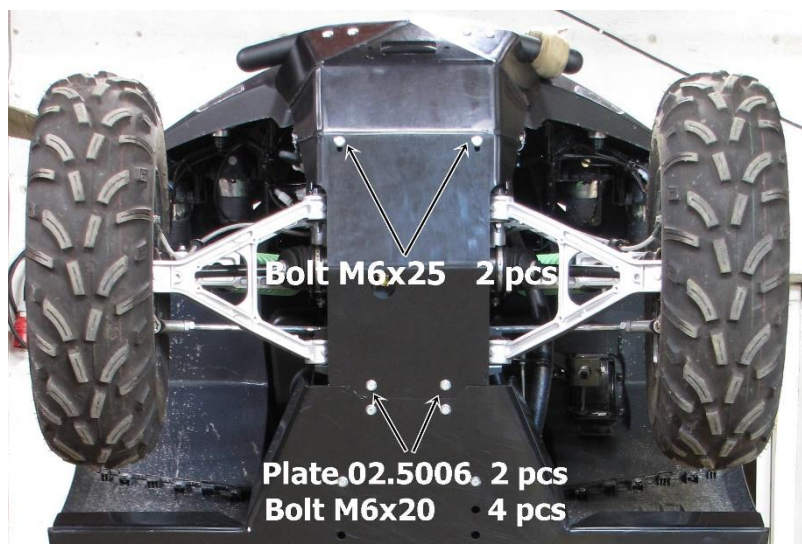


Step 5

Instal front A-arms protections, use bolts M6x20.

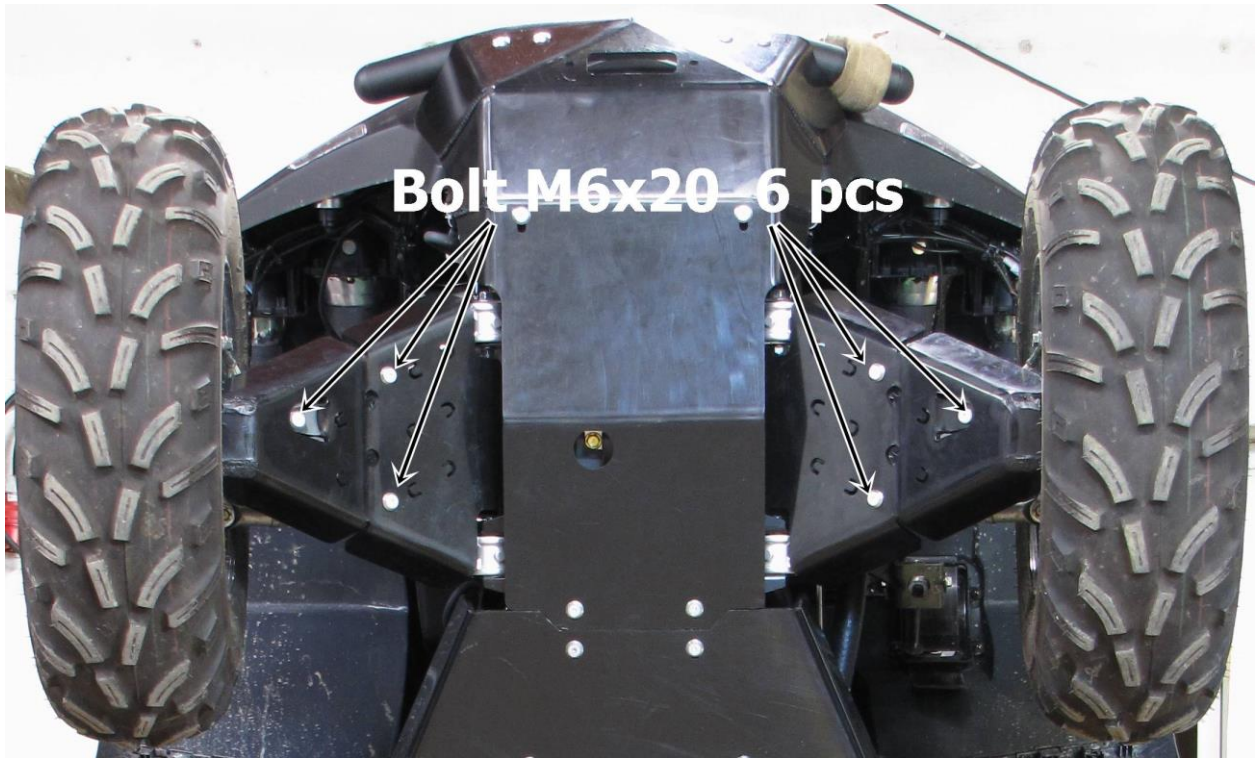

Step 6

Instal rear A-arms protections, use bolts M6x20 and bolts M6x25.

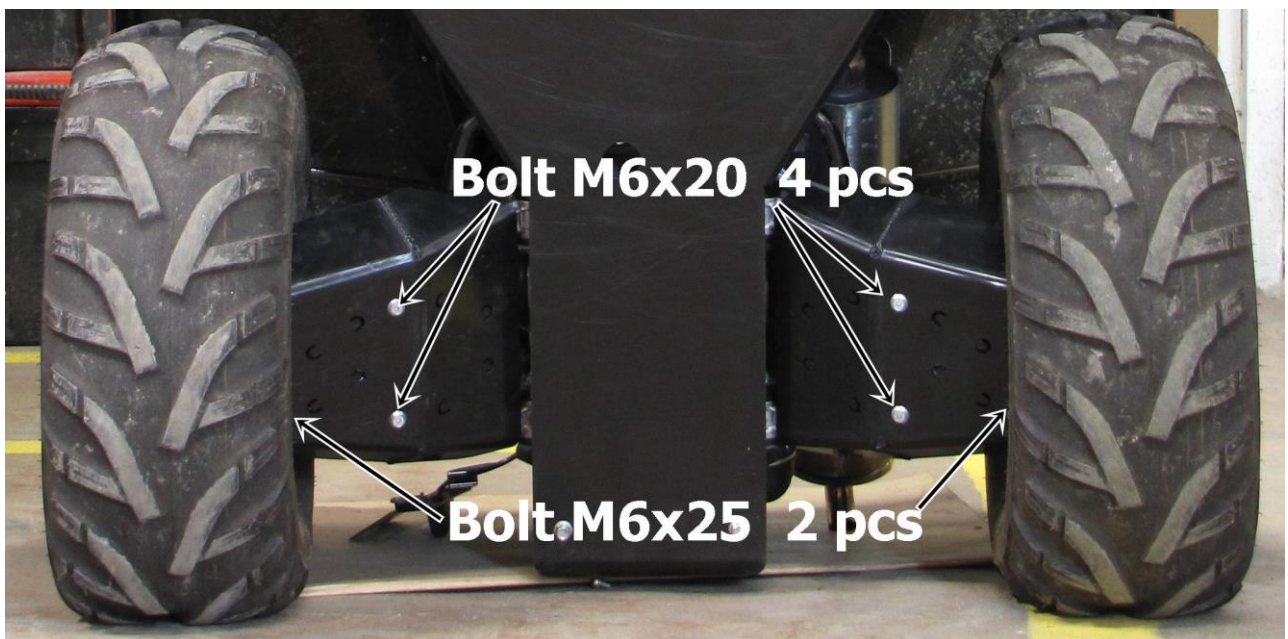

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

