

IRON BALTIC

PLASTIC SKID PLATE

HONDA

TRX 500 FE (2012)

Code 02.7700

Version 28102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/wu4ul852



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate	02.7701	1
2	Front protection	02.7702K	1
3	Rear protection	02.7403K	1
4	Front left arm protection	02.7704	1
5	Front right arm protection	02.7703	1
6	Bracket	02.7408	1
7	Bracket	02.7409	1
8	Bracket	02.907	2
9	Bracket	02.4606	2
10	Bolt M6x16 DIN 933	OT.02.02.050	4
11	Bolt M6x20 DIN 7991	OT.02.04.030	8
12	Bolt M6x30 DIN 7991	OT.02.04.050	6
13	Bolt M6x40 DIN 7991	OT.02.04.070	2
14	Bolt M8x20 DIN 7991	OT.02.04.150	4
15	Bolt M8x25 DIN 7991	OT.02.04.160	4
16	Conical washer Ø6	14.502	16
17	Washerr Ø6/18 DIN 9021	OT.04.02.020	6
18	Conical washer Ø8	14.502	8
19	Washer Ø8/20 SFS 3738	OT.04.03.030	2
20	Nut M6 Nyloc DIN 985	OT.03.02.030	2
21	Nut M8 Nyloc DIN 985	OT.03.02.040	2

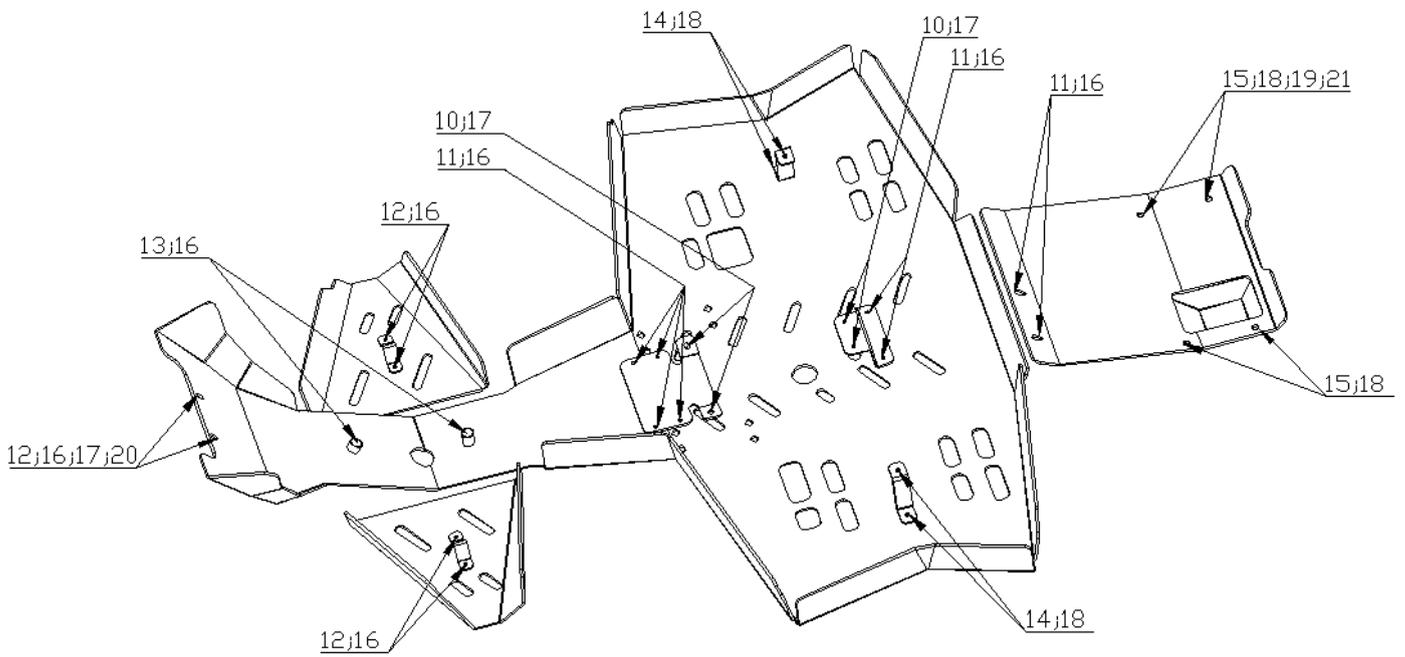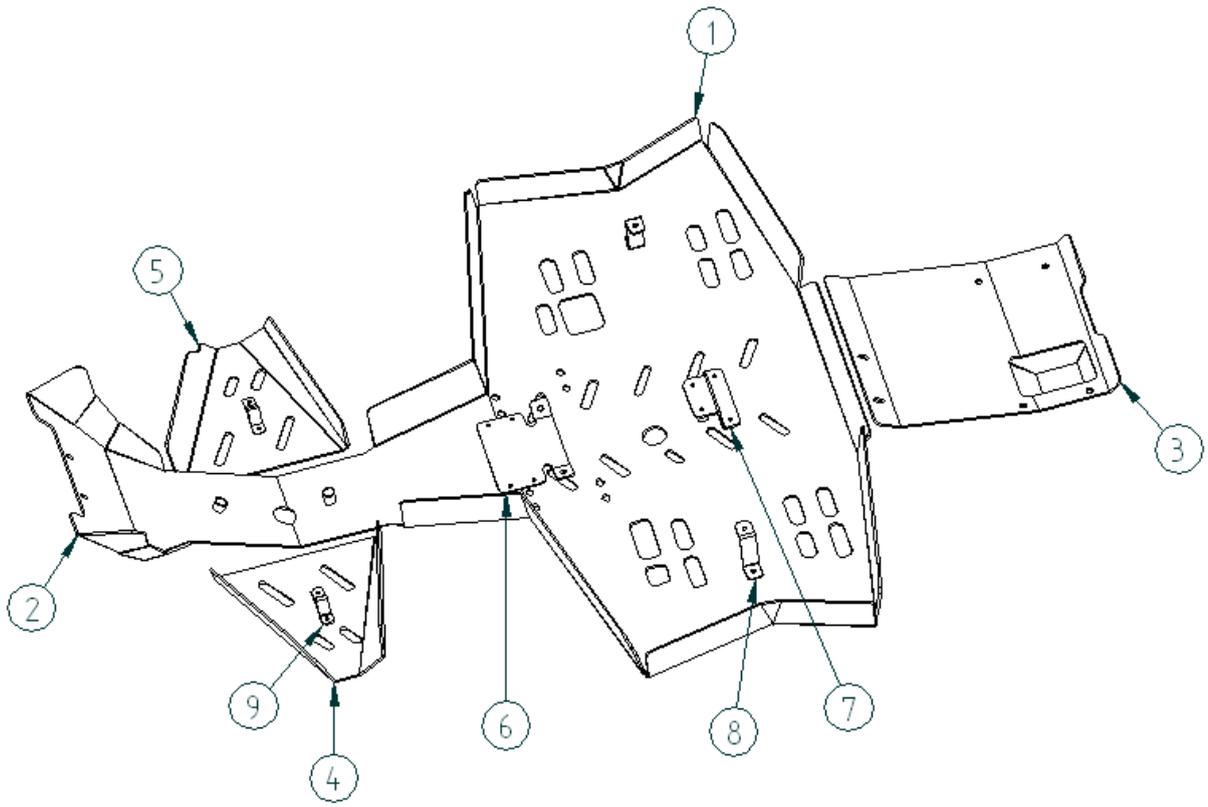



FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Instal brackets 02.7408, 02.7409 and 02.907.
Use bolts M6x16, M8x20 and washers Ø6/18.

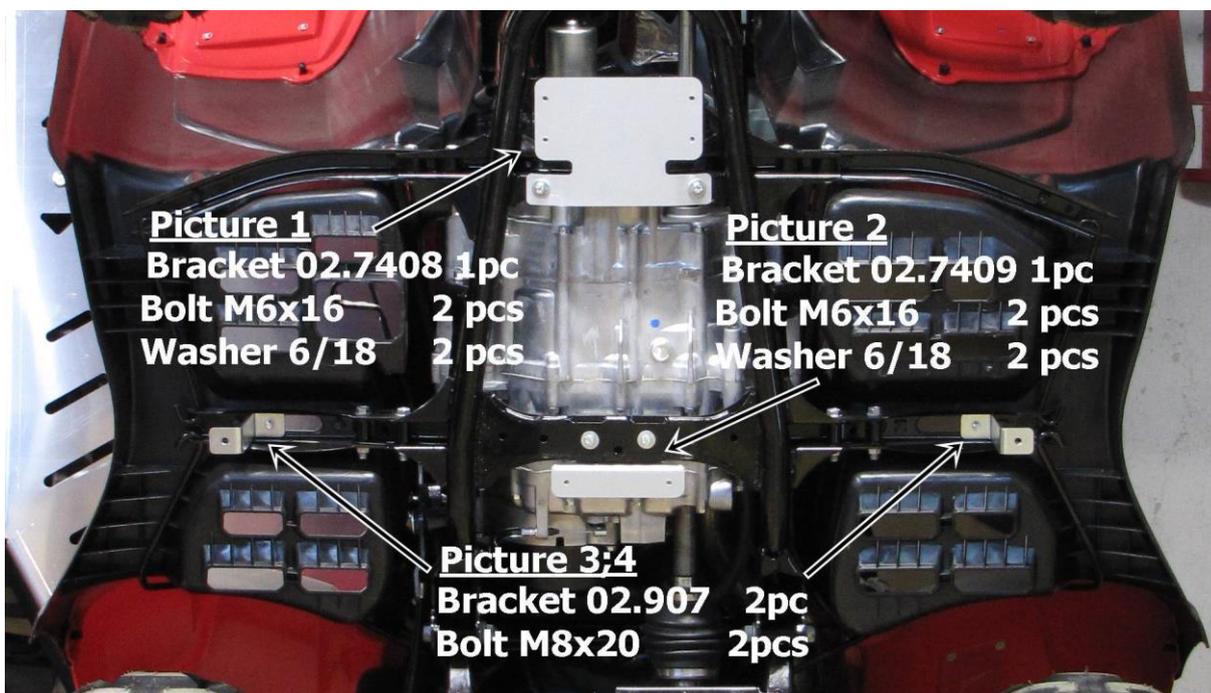

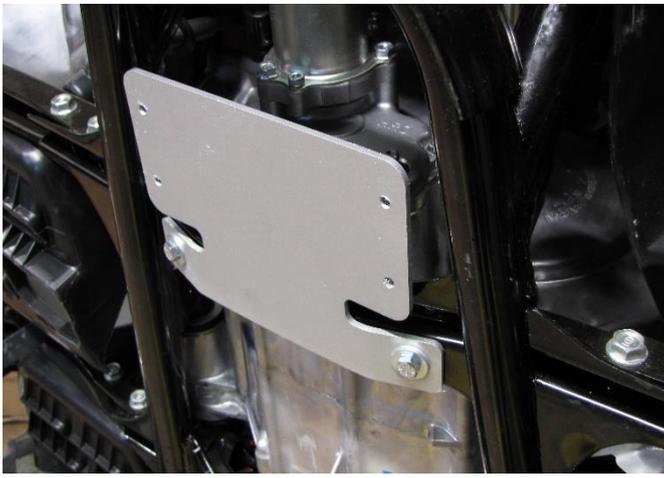


Step 3

Instal skid plate, use bolts M6x20 and M8x20.

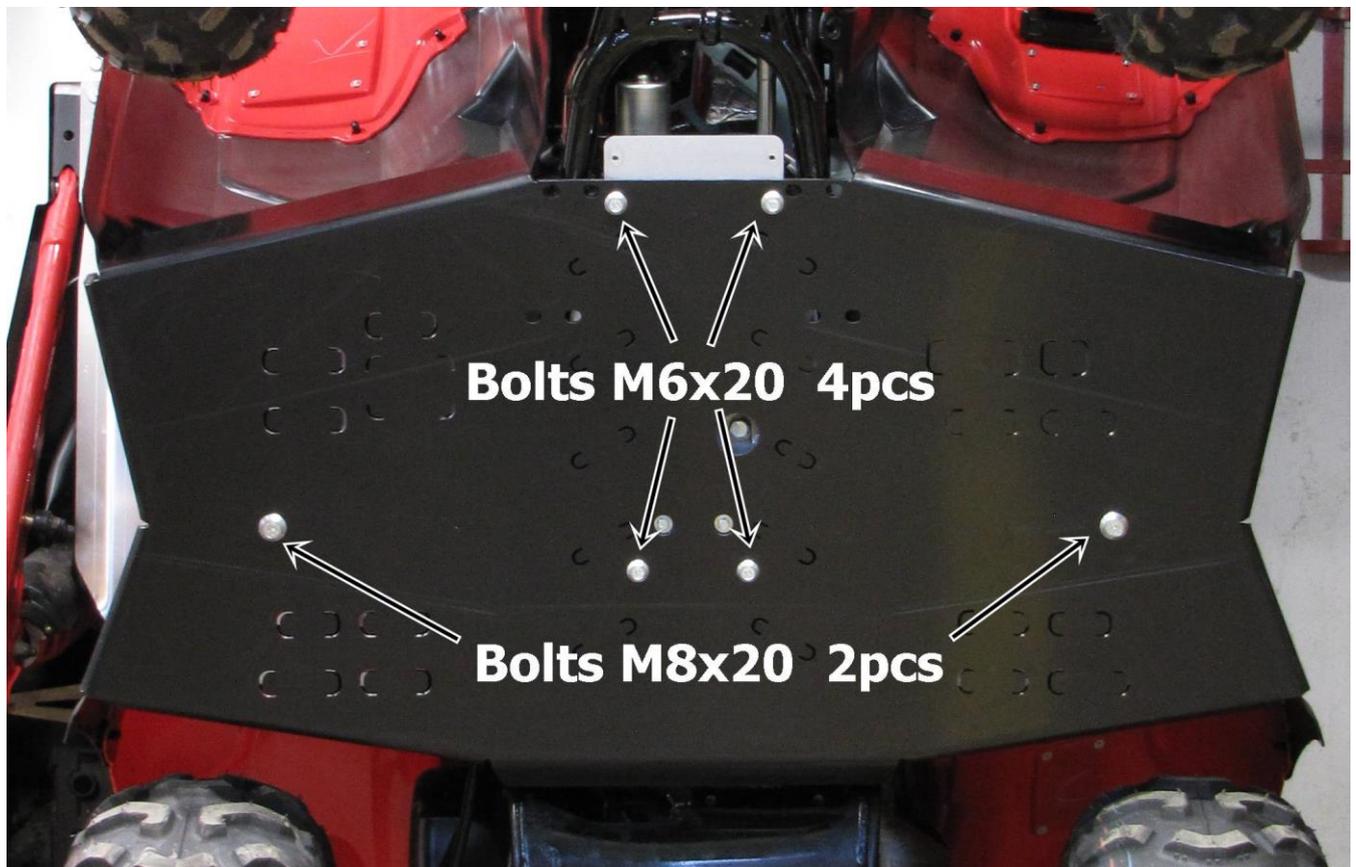


Step 4

Instal front part, use bolts M6x20, M6x30, M6x40, washers 6/18 and nuts M6.

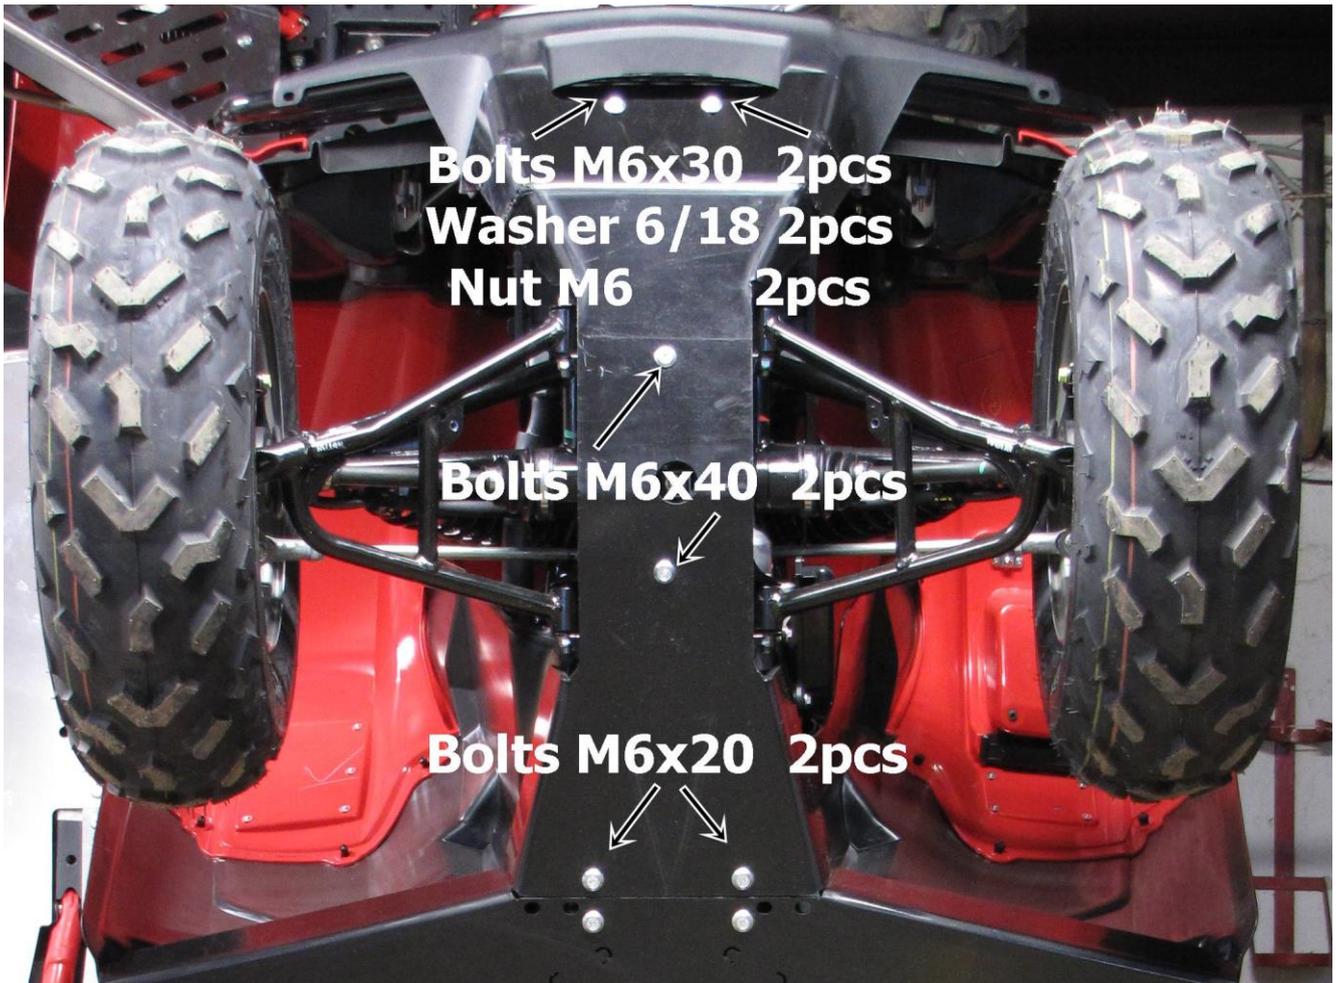



Step 5

Instal rear part, use bolts M6x20, M8x25, washers 8/20 and nuts M8.

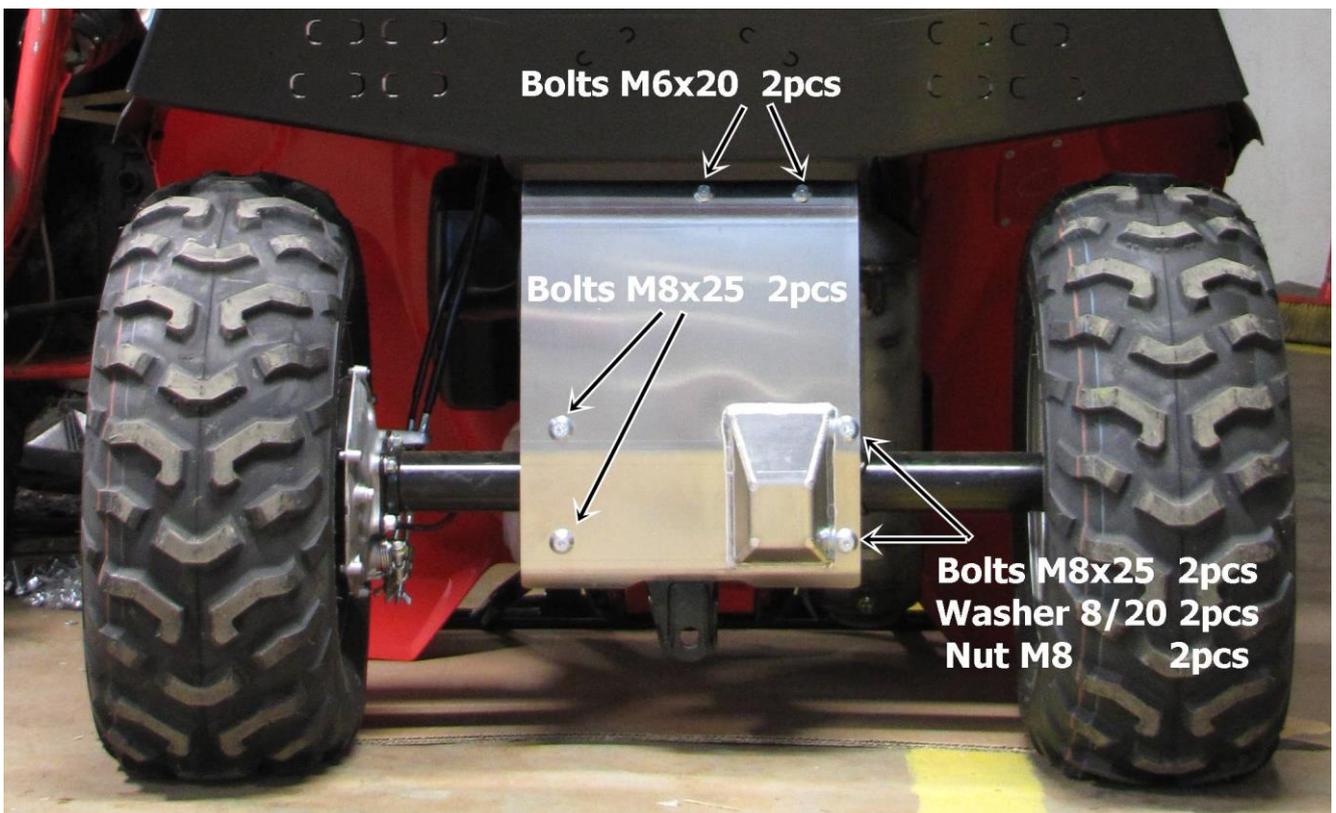

Step 6

Instal front A-arms protections, use clamps 02.4606 and bolts M6x30.

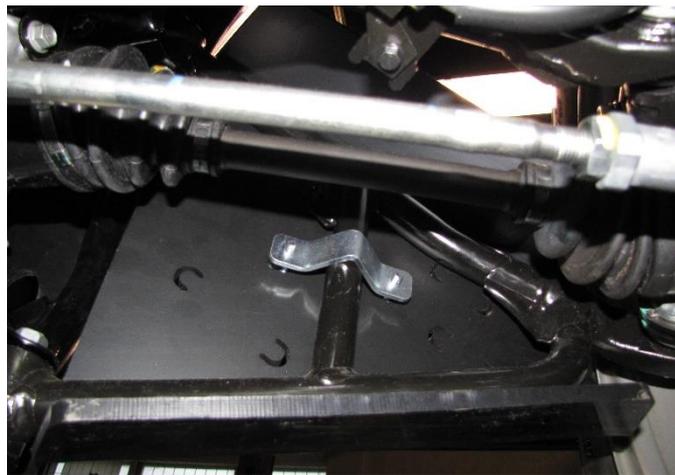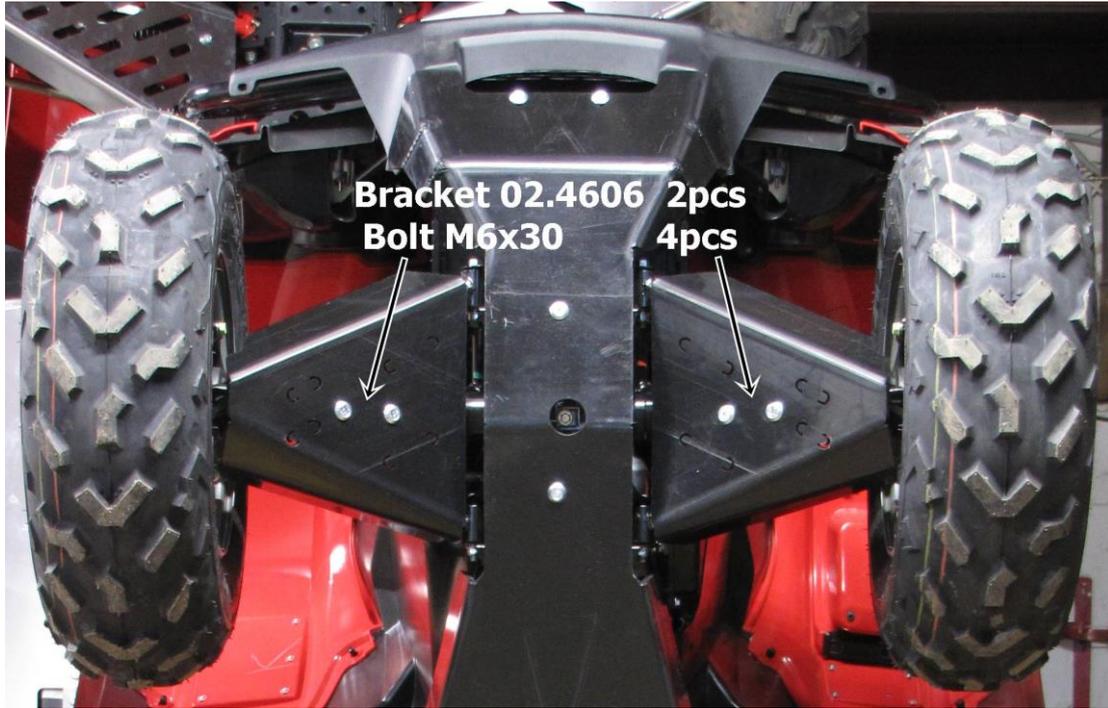

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

