

IRON BALTIC

ALUMINIUM SKID PLATE

SUZUKI

KingQuad 700

Code 02.800

Version 22102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/Gexh64AO



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate	02.4801	1
2	Middle part	02.4802	1
3	Rear part	02.4810	1
4	Front part	02.802	1
5	Front right arm protection	02.803P	1
6	Front left arm protection	02.803V	1
7	Rear right arm protection	02.804P	1
8	Rear left arm protection	02.804V	1
9	Plate	02.5006	7
10	Bracket	02.4809	2
10-1	Bracket 2	02.4812	2
11	Clamp	03.1502	4
12	Angle	02.811	2
13	Angle 2	02.812	2
14	Bolt M6x16 DIN 7991	OT.02.04.020	20
15	Bolt M6x20 DIN 7991	OT.02.04.030	14
16	Bolt M6x30 DIN 7991	OT.02.04.050	4
17	Bolt M6x40 DIN 7991	OT.02.04.070	2
18	Bolt M6x12 DIN 933	OT.02.02.030	4
19	Bolt M8x20 DIN 7991	OT.02.04.150	4
20	Conical washer Ø6	14.502	40
21	Conical washer Ø8	14.501	4
22	Washer Ø6/18 DIN 9021	OT.04.02.020	8
23	Nyloc nut M6 DIN 985	OT.03.02.030	4

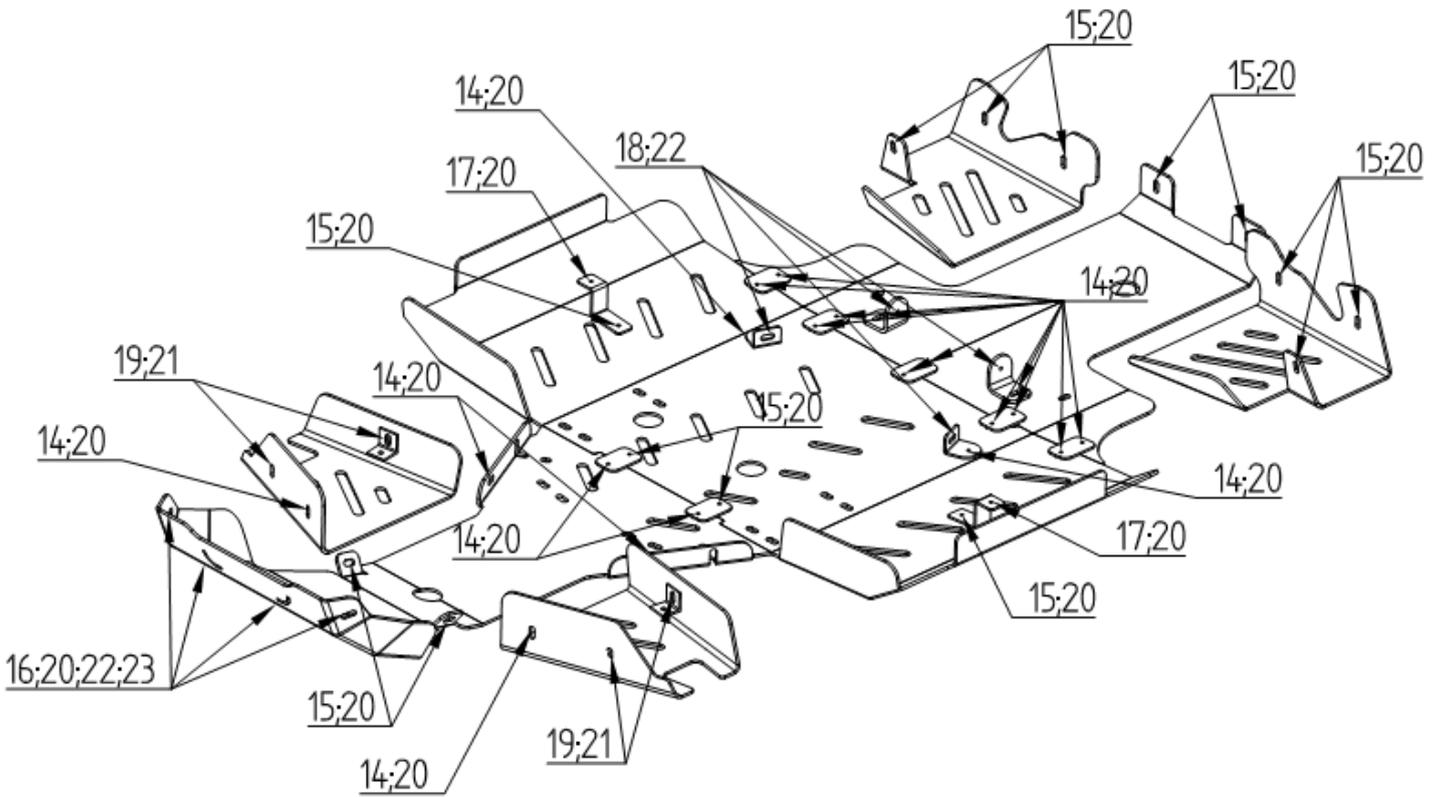
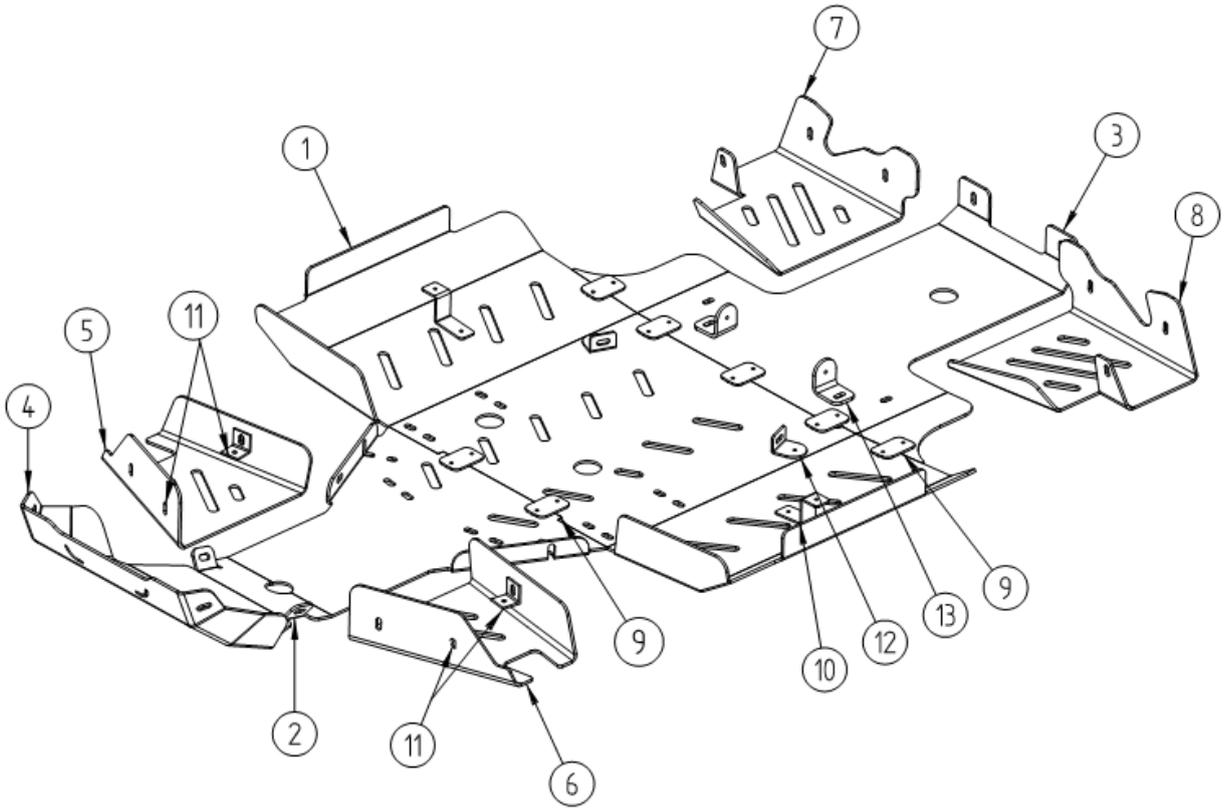


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

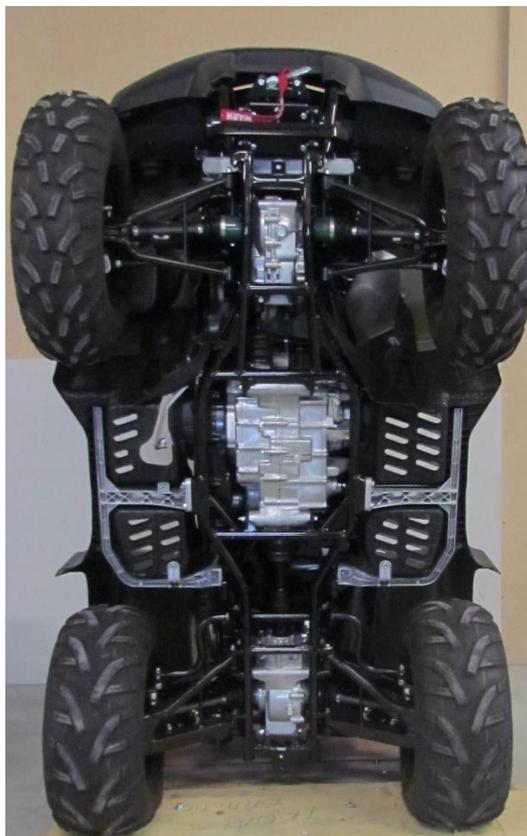


Step 2 Install clamps 02.4809, angles 02.811 and 02.812, use bolts M6x12 and M6x40. From MY 2018 onward use brackets 02.4812 instead of 02.4809.

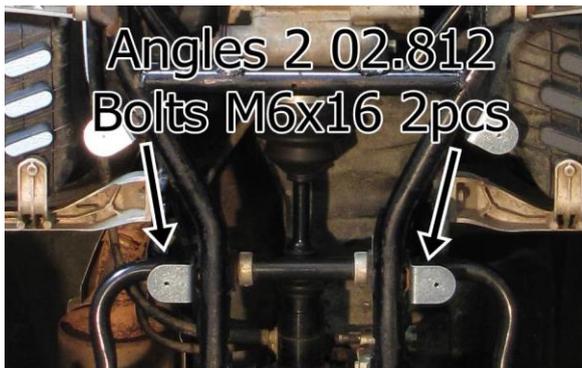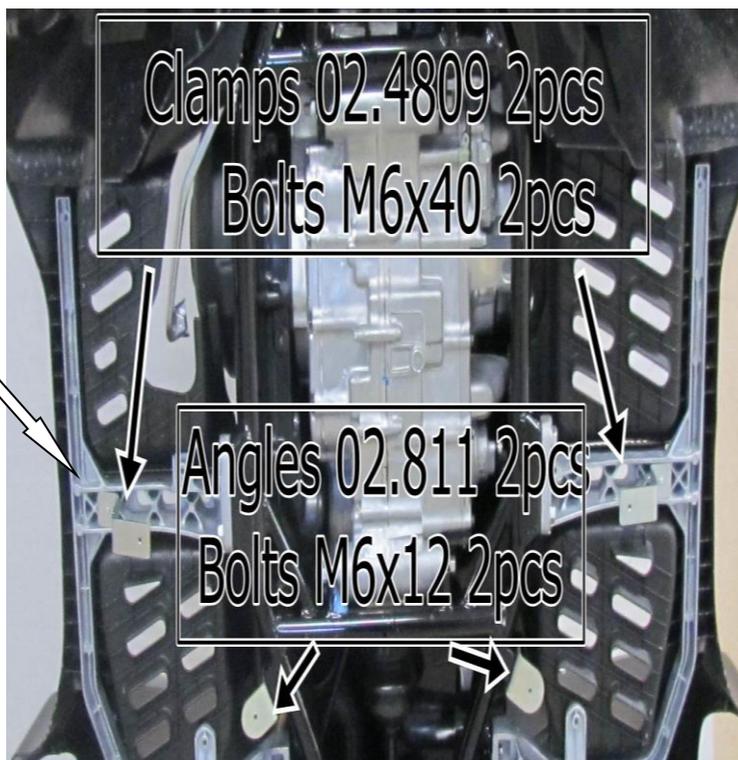


Step 3

Install plates 02.5006 to skid plate, use bolts M6x16 and M6x20.

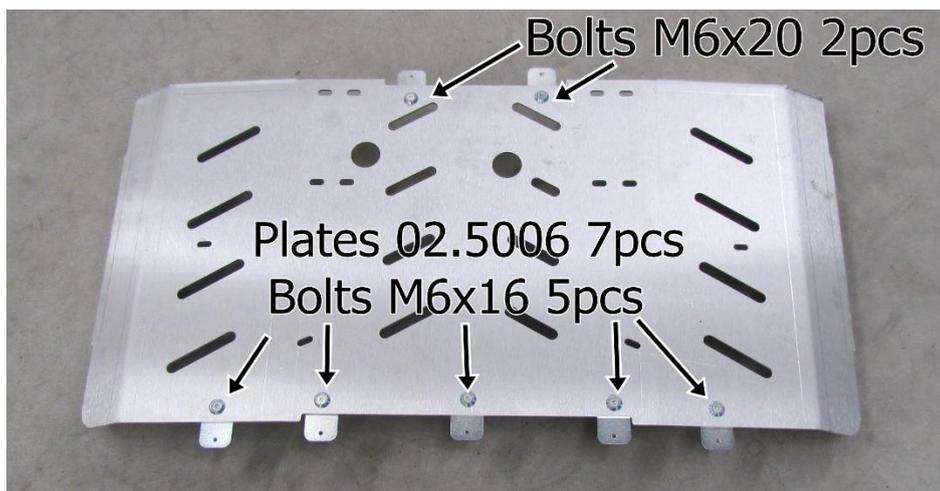


Step 4

Install skid plate, use bolts M6x16 and M6x20.

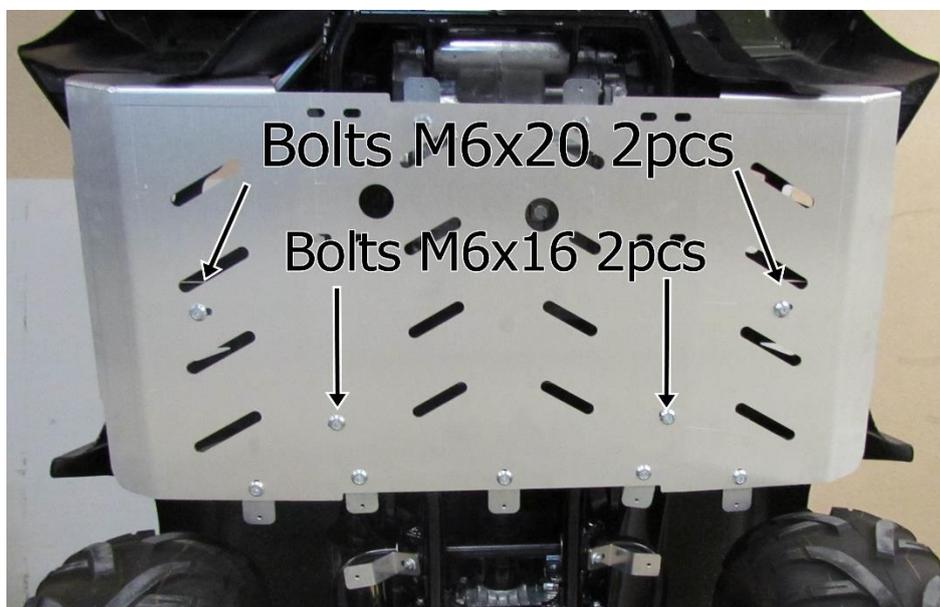


Step 5

Install rear part, use bolts M6x16 and M6x20.

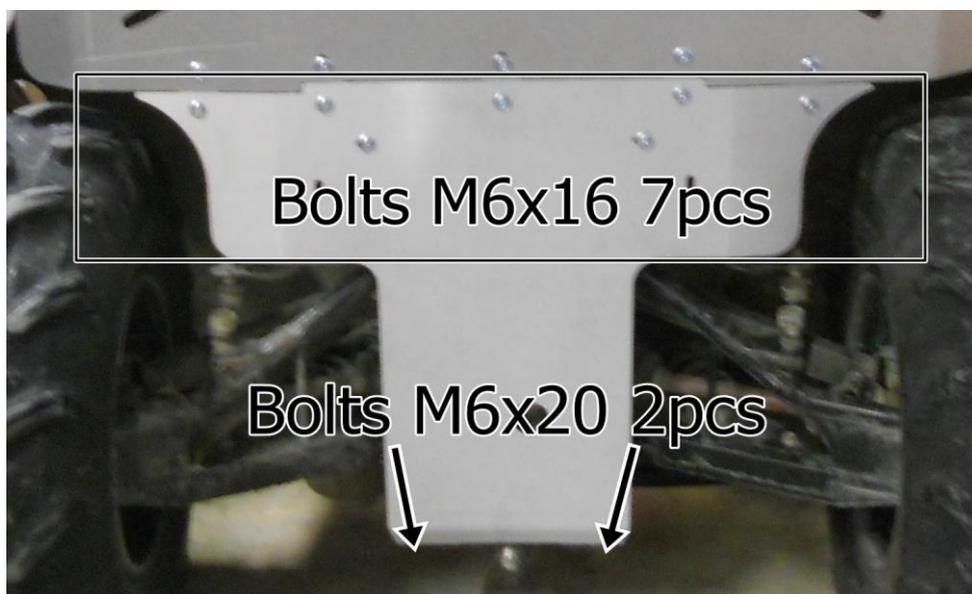



Step 6

Install middle part, use bolts M6x16 and M6x20.

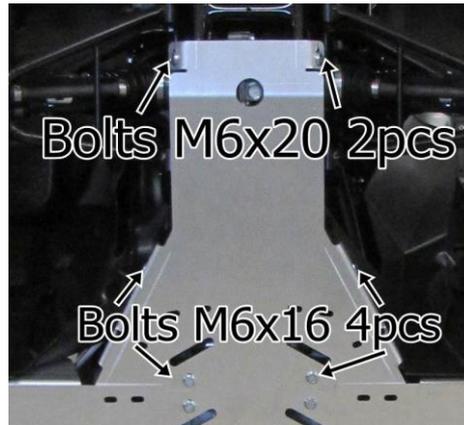


Step 7

Install front part, use bolts M6x30 and nyloc nuts M6.
If you are using Iron Baltic front mount plow adapter, then cut out sections that are pre-marked with option holes. (on picture marked CUT).

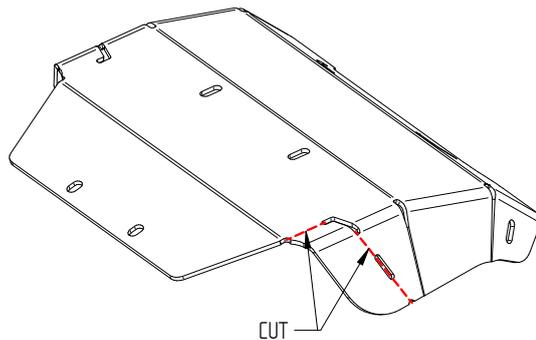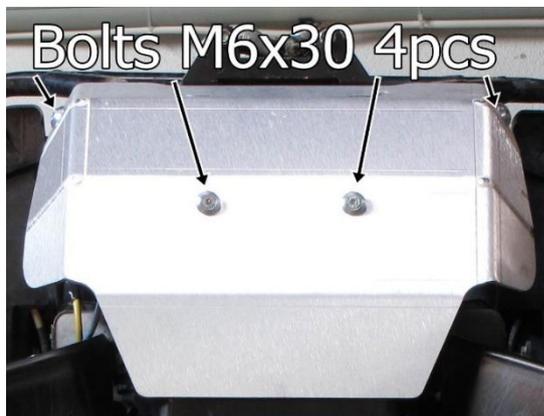


Step 8

Install front arm protections, use clamps 03.1502 and bolts M6x16, M8x20.

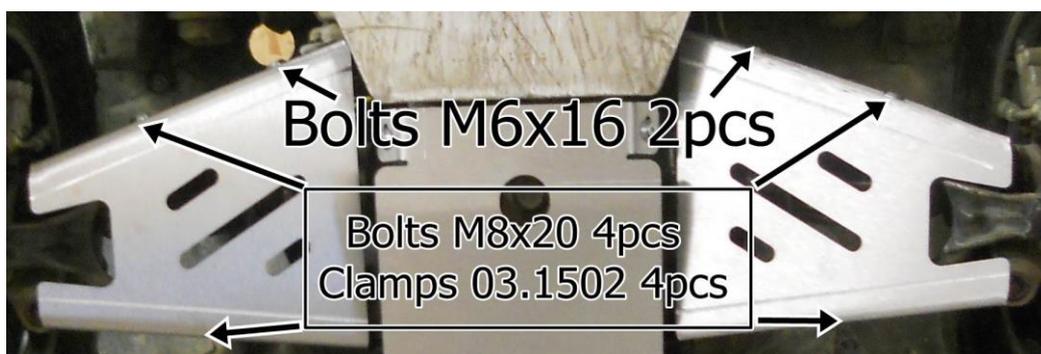

Step 9

Install rear arm protections, use bolts M6x20.

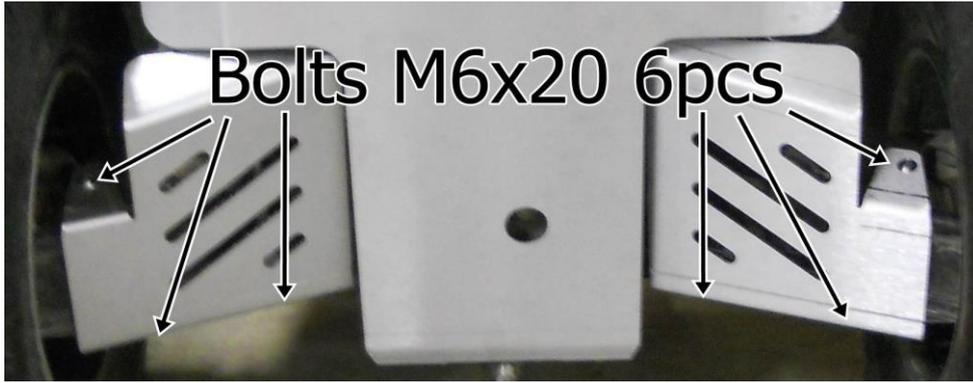

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

