

# IRON BALTIC

## ALUMINIUM SKID PLATE

# POLARIS

## Ranger 900 Diesel 4x4 EUT

Code 02.8000

Version 28102023

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/8RLrBcdc](https://code.ironbaltic.com/u/8RLrBcdc)



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Rear part	02.8001	1
2	Front part	02.8002	1
3	Right protection	02.8003K	1
4	Left protection	02.8004K	1
5	Front left arm protection	02.8006	1
6	Front right arm protection	02.8005	1
7	Rear arm protection	02.7007	2
8	Bracket for front A-arms	02.8007	2
9	Plate	02.5006	10
10	Clamp	02.1419	4
11	Plate	02.2305	6
12	Bolt M6x20 DIN 7991	OT.02.04.030	30
13	Bolt M6x25 DIN 7991	OT.02.04.040	8
14	Bolt M8x25 DIN 7991	OT.02.04.160	6
15	Bolt M8x30 DIN 7991	OT.02.04.170	3
16	Bolt UNC 1/4" x 5/8" (L=16mm) DIN 912	OT.02.07.010	15
17	Conical washer 6	14.502	38
18	Washer 6/15 SFS 3738	OT.04.03.020	27
19	Conical washer 8	14.501	9
20	Dished washer	14.503	15
21	Nut M6 Nyloc DIN 985	OT.03.02.030	12

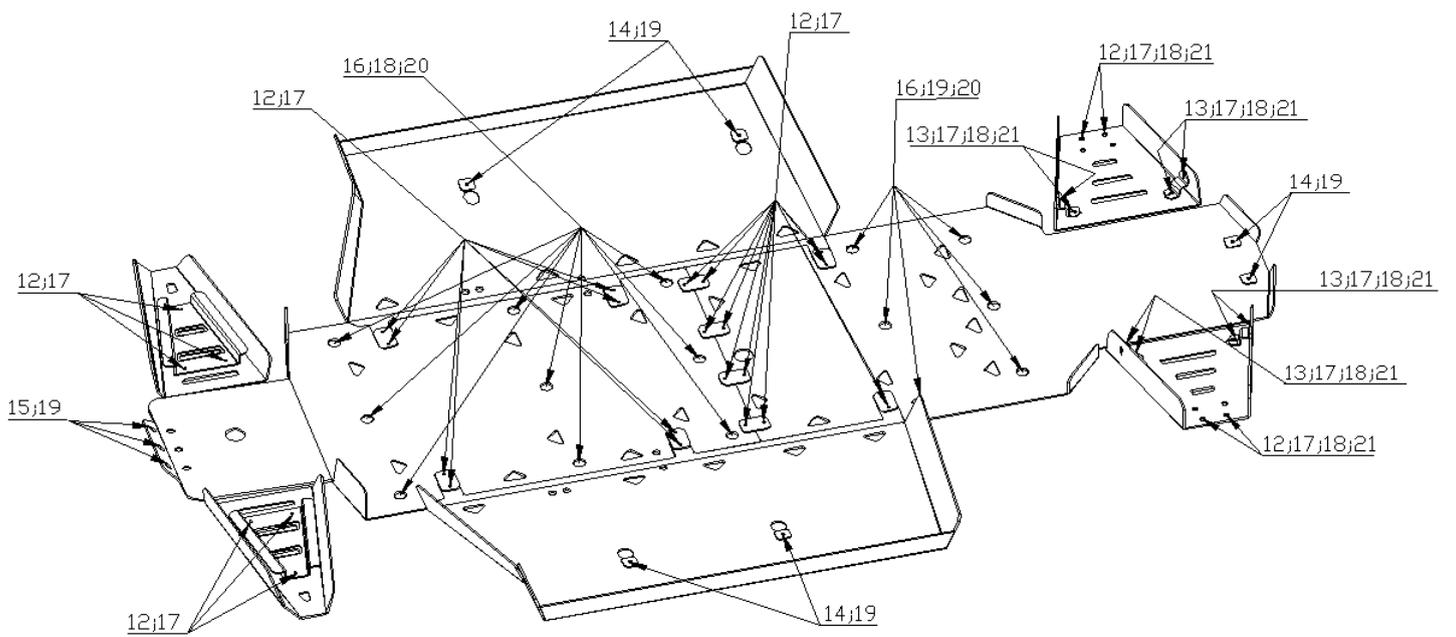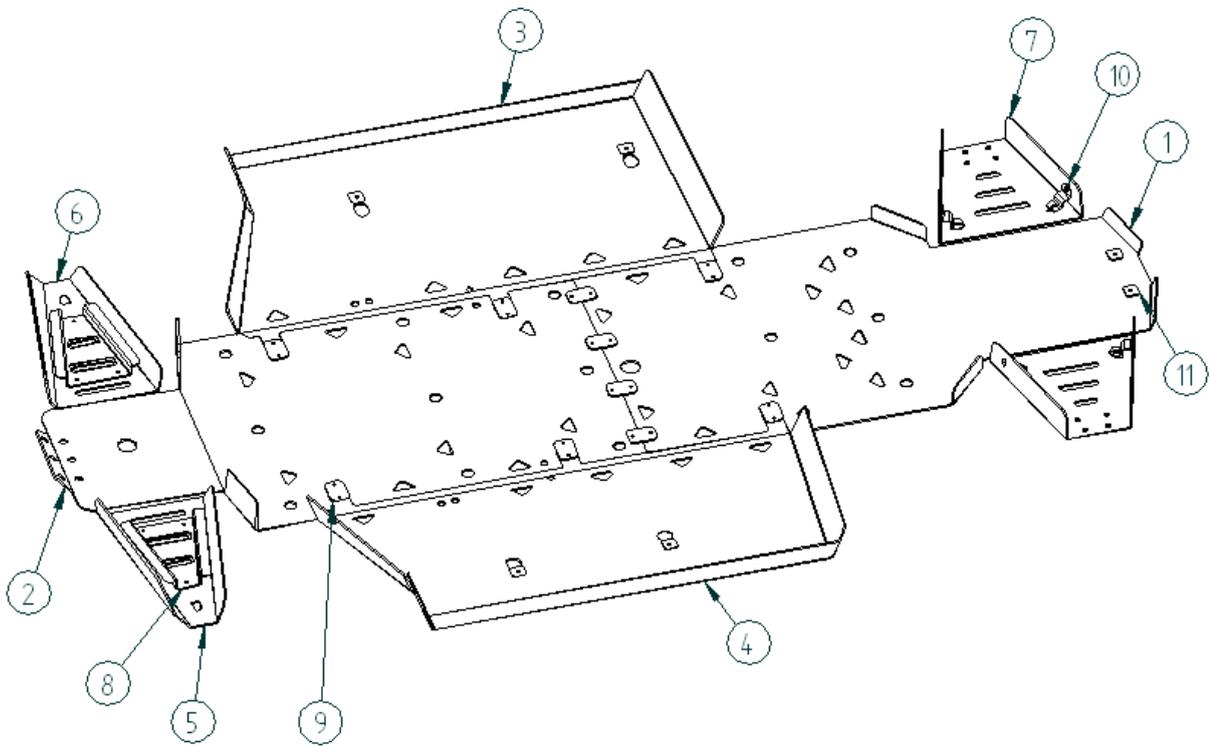


# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.

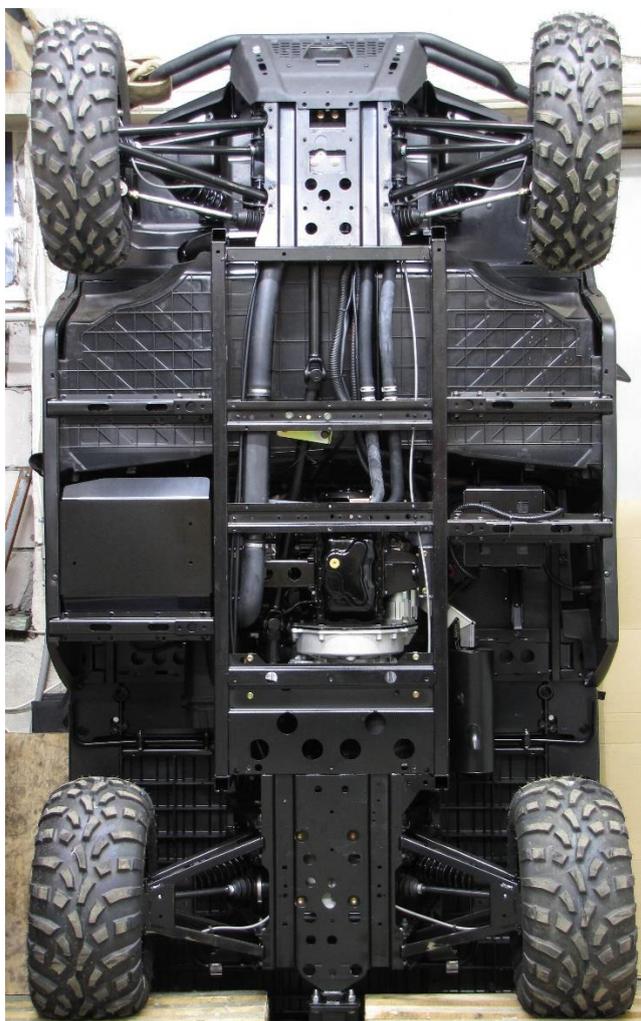


**Step 2** Install plates 03.5006 to rear part, use bolts M6x20.

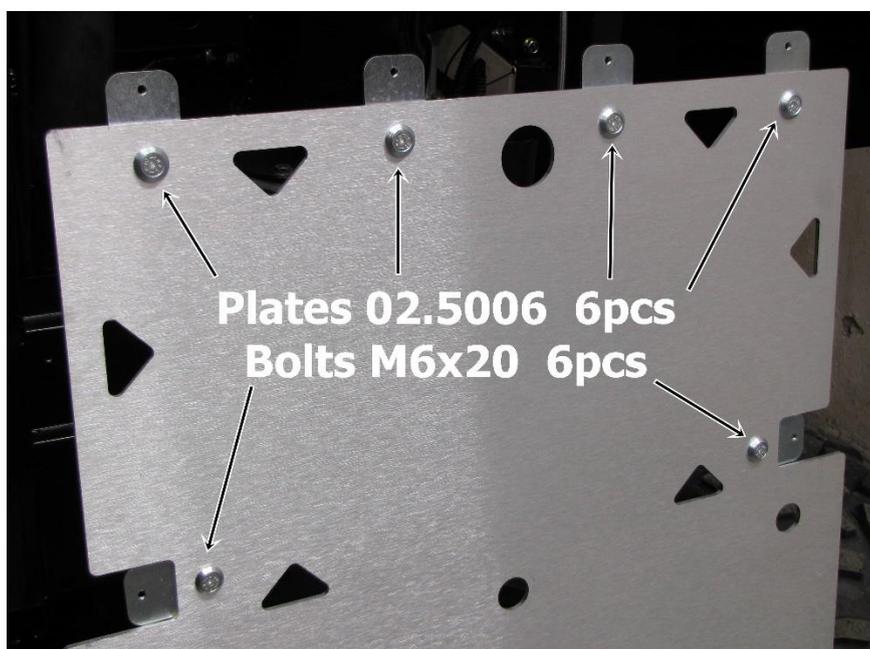


**Step 3**

Install rear part, use plates 02.2305, bolts UNC 1/4" x 1/8" and bolts M8x20.

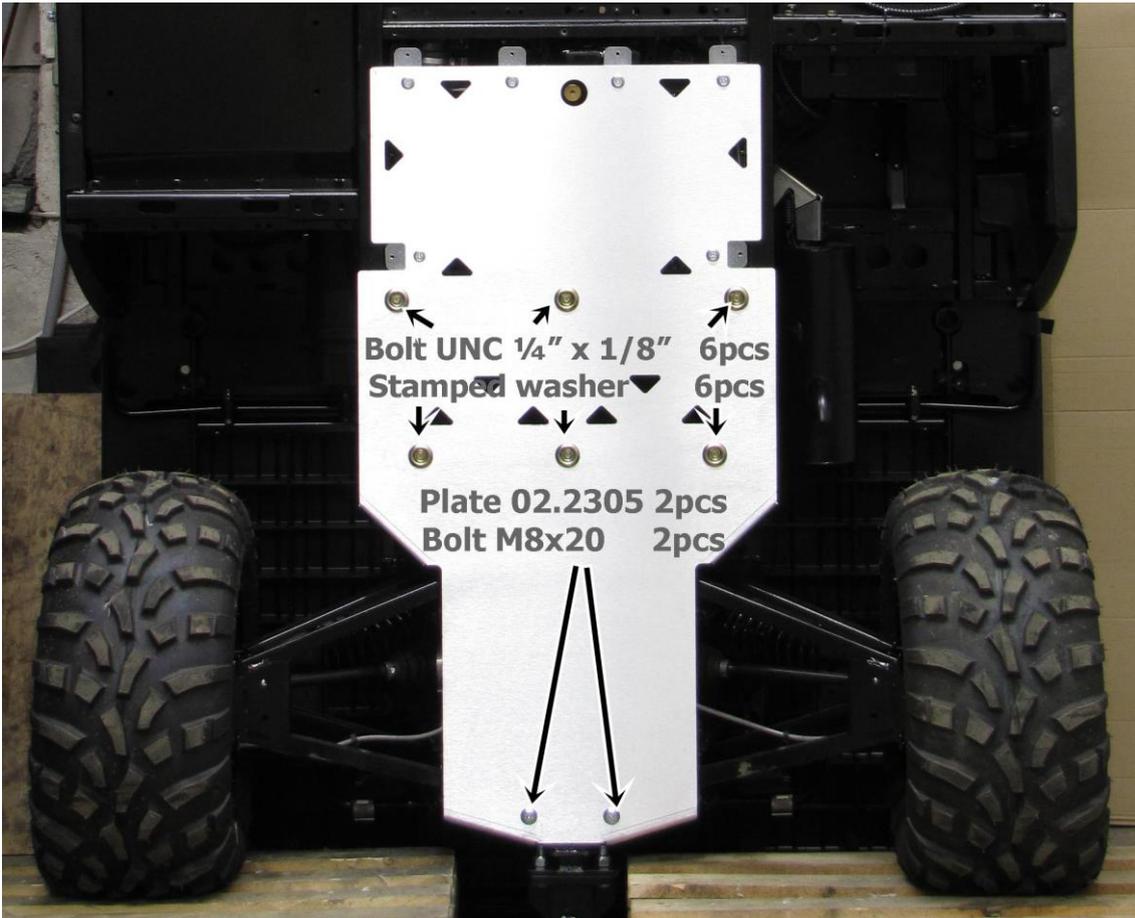

**Step 4**

Install plates 03.5006 to front part, use bolts M6x20.

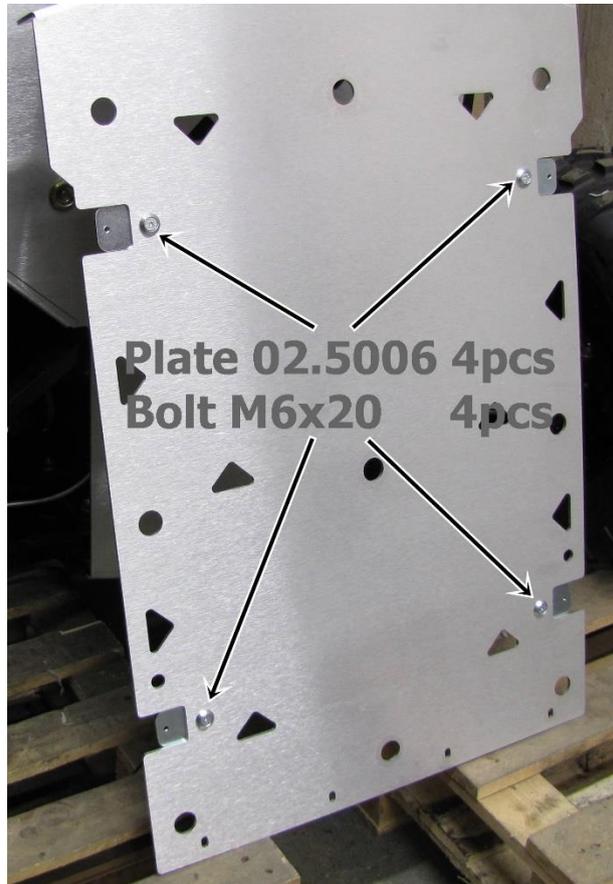



## Step 5

Install front part, use bolts UNC 1/4" x 1/8", bolts M8x30 and bolts M6x20.




## Step 6

Install plates 02.2305.

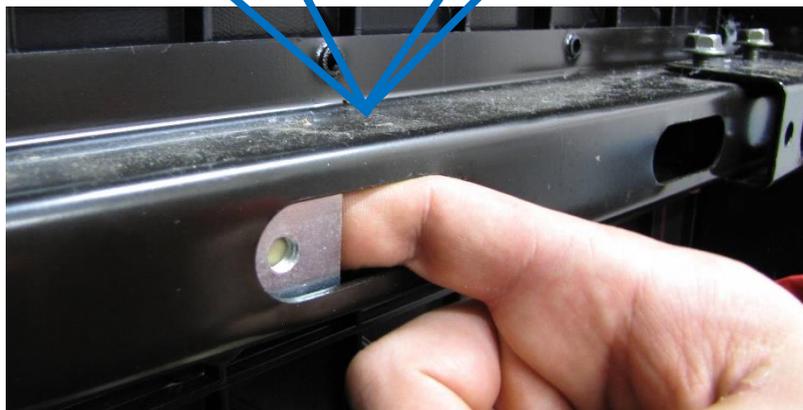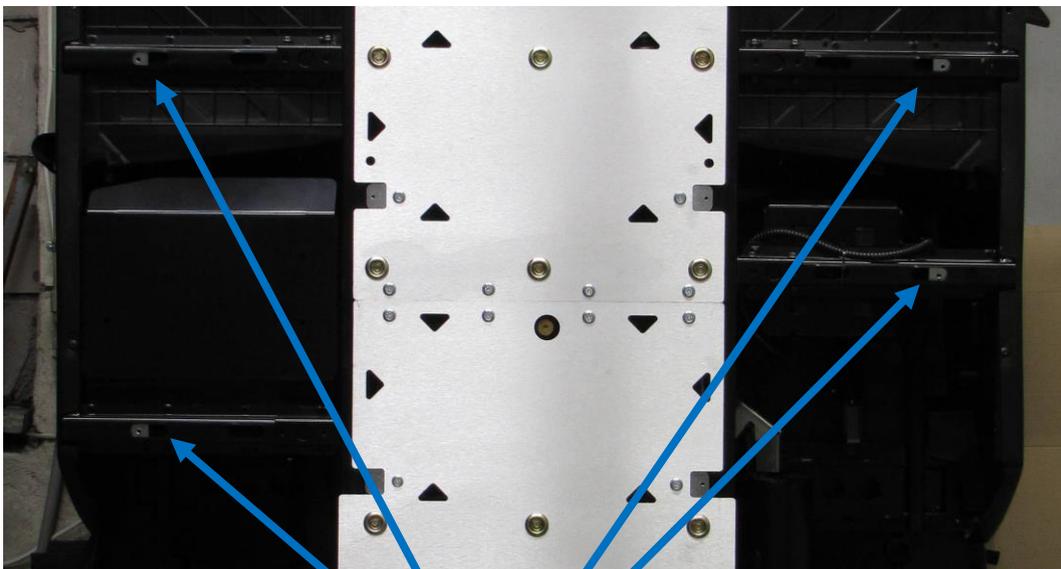


**Step 7**

Install side protections, use bolts M6x20 and M8x25.

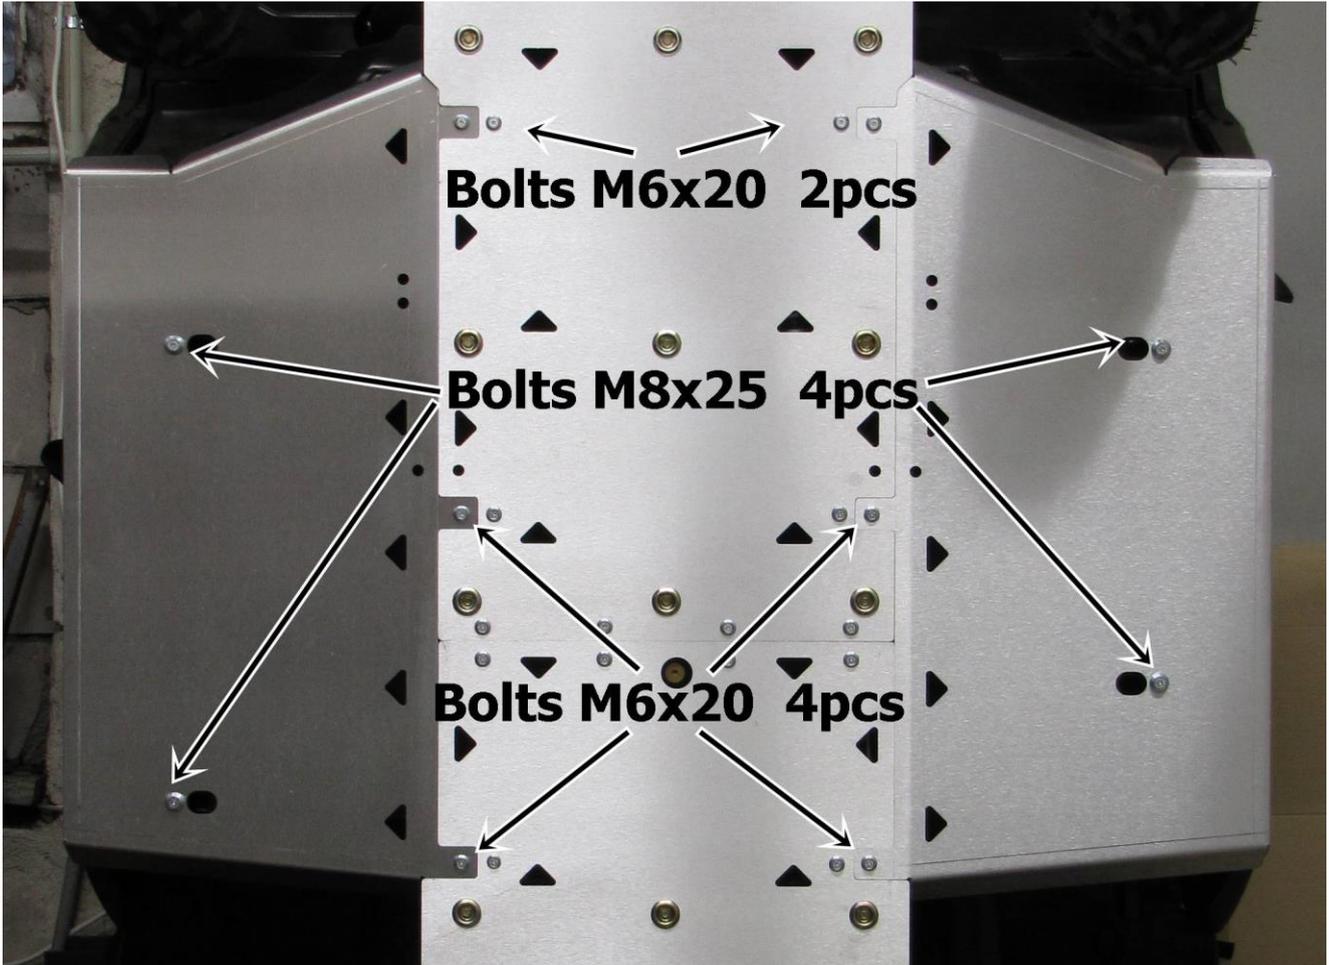



**Step 8**

Install rear A-arms protections, use clamps 02.1419, bolts M6x20, bolts M6x25, washers Ø6 and nuts M6.

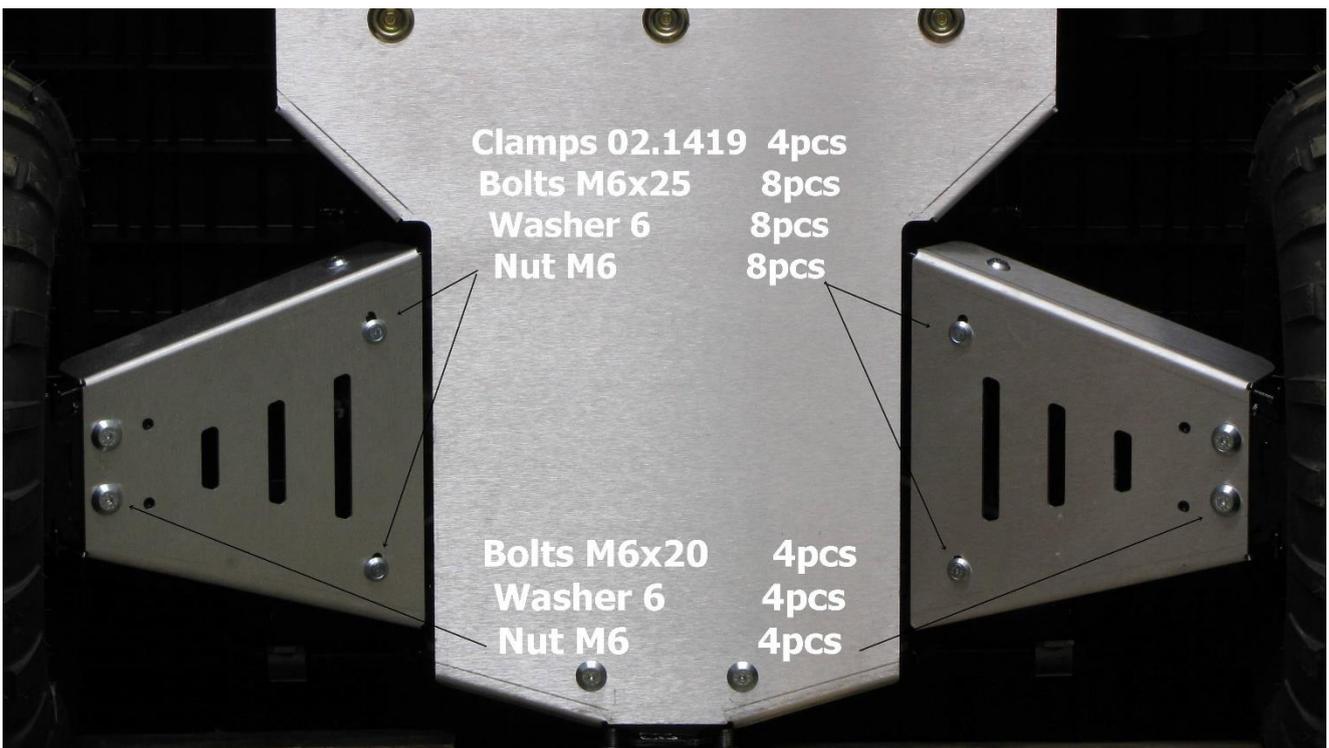

**Step 9**

Install front A-arms protections, use brackets 02.8007 and bolts M6x20.

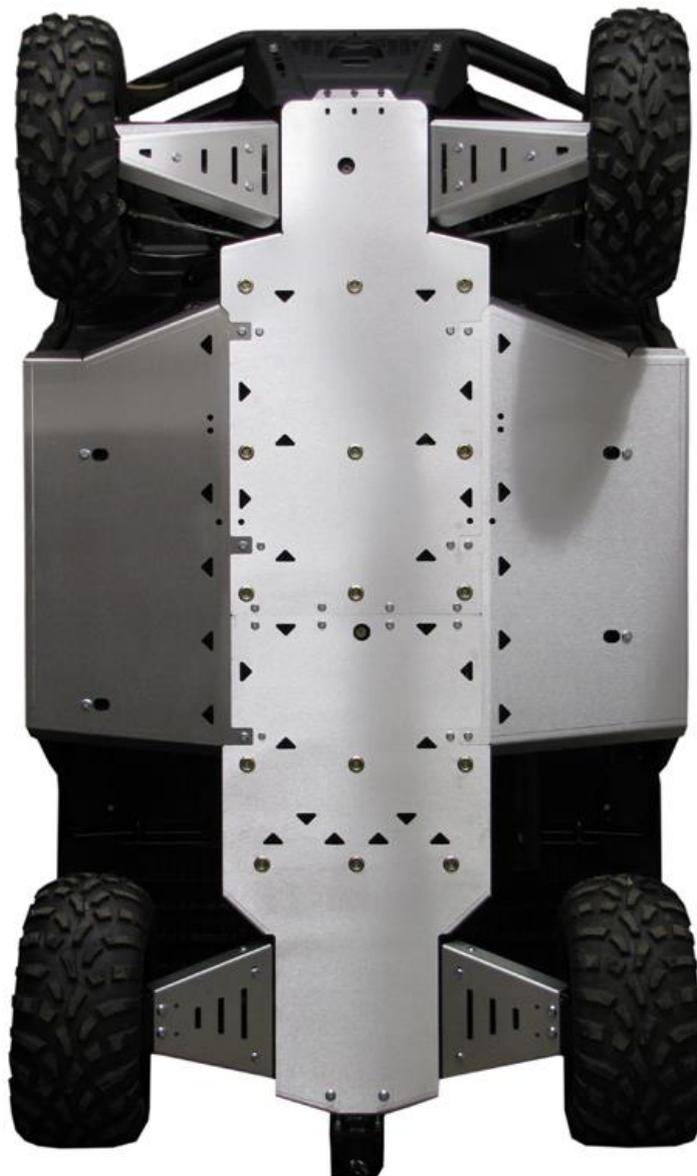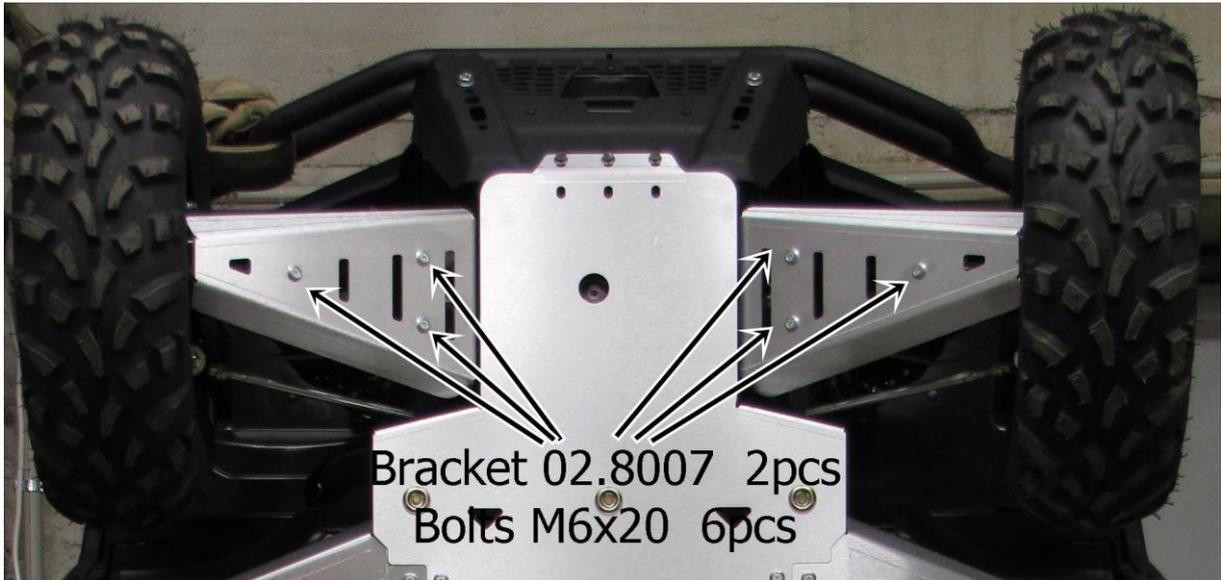







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

