

# IRON BALTIC

## ALUMINIUM SKID PLATE

# CAN AM

# Outlander 1000

Code 02.8400

Version 29102023

DOWNLOAD MULTILINGUAL  
USER MANUAL





[code.ironbaltic.com/u/1PFZYHKj](https://code.ironbaltic.com/u/1PFZYHKj)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.8401K	1
2	Front part	02.8402K	1
3	Rear part	02.8203K	1
4	Front right arm protection	02.8204	1
5	Front left arm protection	02.8205	1
6	Rear right arm protection	02.8206	1
7	Rear left arm protection	02.8207	1
8	Plate	02.5006	4
9	Clamp for front arm protection	02.8210	4
10	Clamp for rear arm protection	02.5709	2
11	Plate	02.2305	1
12	Bracket	03.3502	4
13	Plate for front part	02.10004	1
14	Bush for front part	02.10005	2
15	Bolt M6x12 DIN 933	OT.02.02.030	8
16	Bolt M6x16 DIN 933	OT.02.02.050	8
17	Bolt M6x25 DIN 933	OT.02.02.070	2
18	Bolt M6x35 DIN 933	OT.02.02.090	2
19	Bolt M6x50 DIN 933	OT.02.02.120	4
20	Bolt M8x16 DIN 933	OT.02.02.170	4
21	Bolt M8x30 DIN 933	OT.02.02.180	1
22	Bolt M6x25 DIN 7991	OT.02.04.040	3
23	Bolt M8x50 DIN 7991	OT.02.04.200	2
24	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
25	Washer Ø6/15 SFS 3738	OT.04.03.020	37
26	Washer Ø8/20 SFS 3738	OT.04.03.030	10
27	Dished washer	14.503	29
28	Conical washer Ø6	14.502	3
29	Conical washer Ø8	14.501	2
30	Nyloc nut M6 DIN 985	OT.03.02.030	13
31	Nyloc nut M8 DIN 985	OT.03.02.040	10

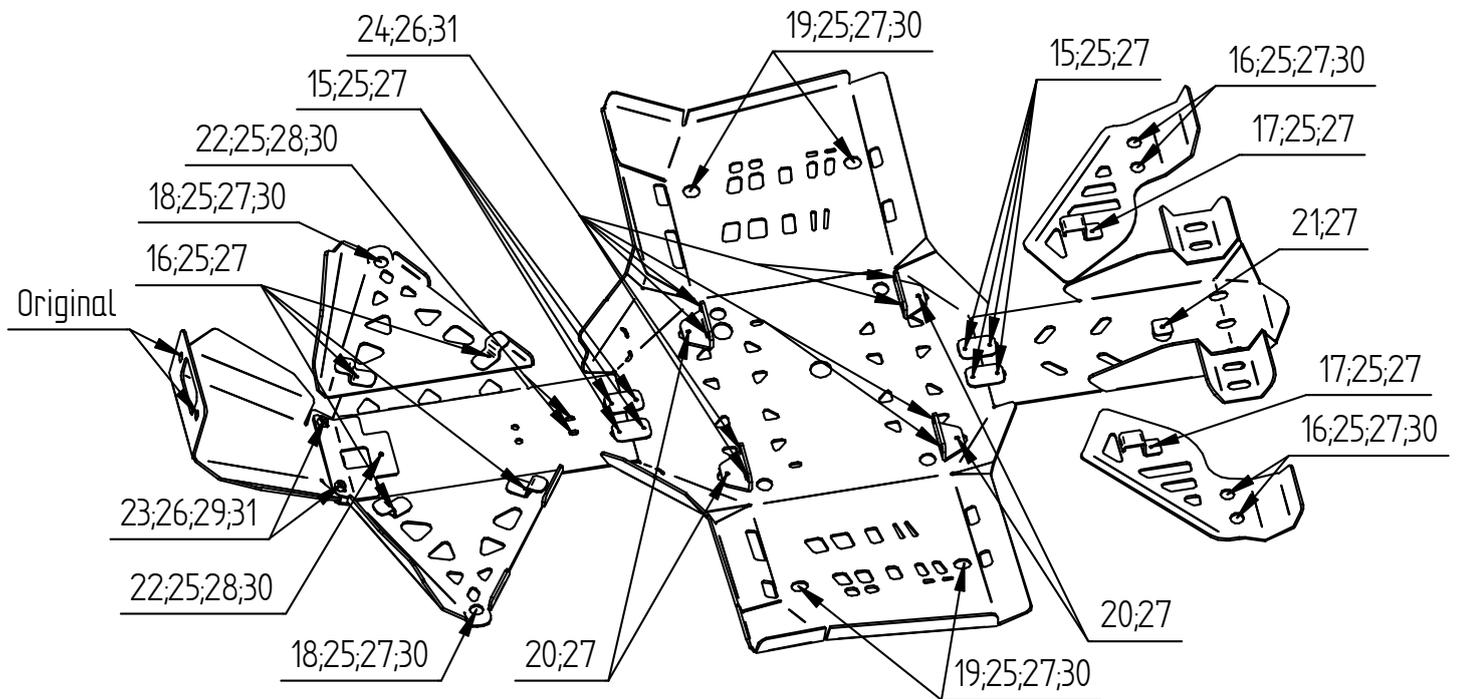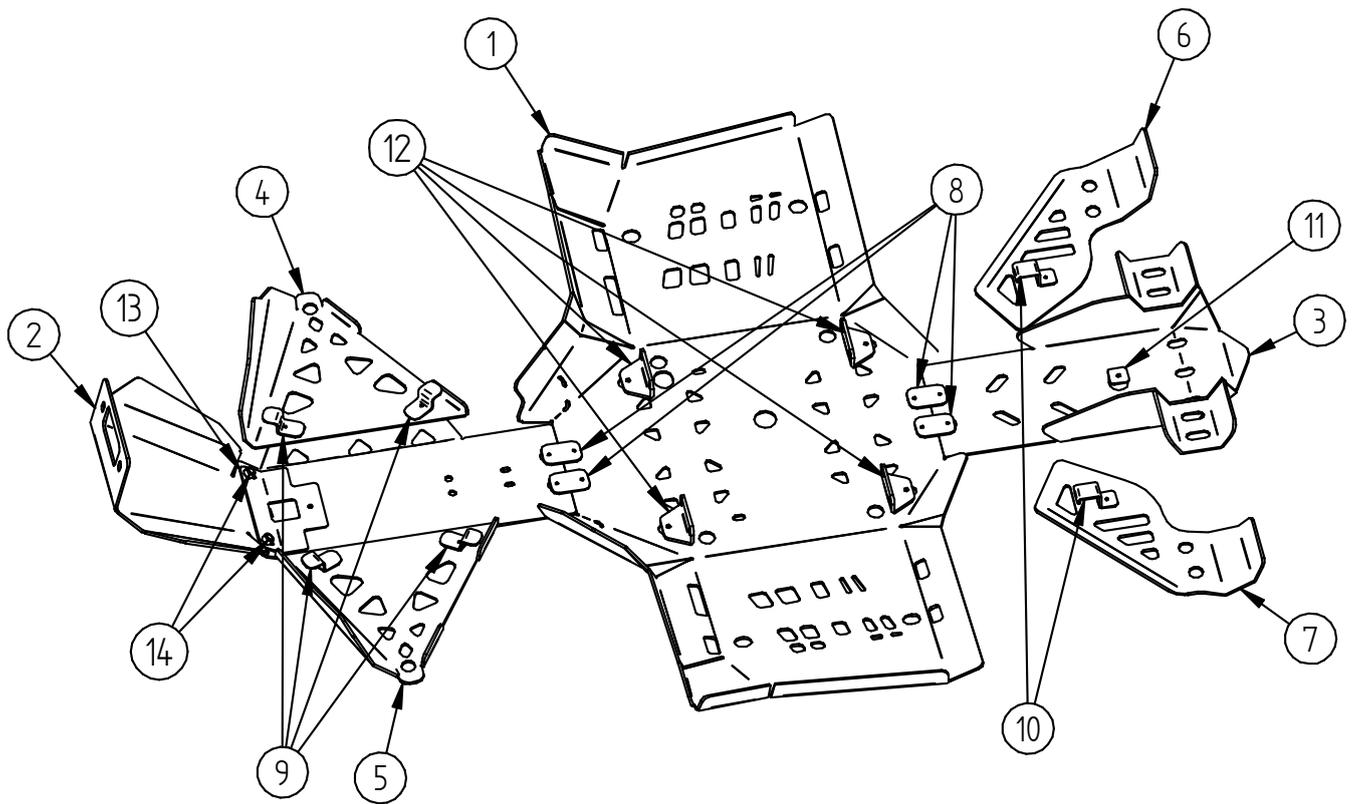



# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.




## Step 2

Install brackets 03.3502. Place brackets same plane as frame.

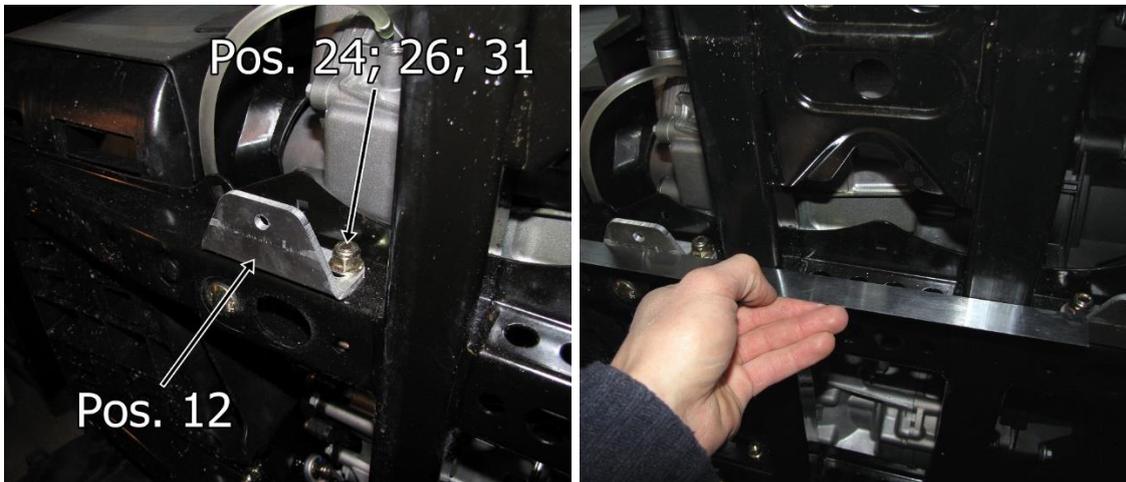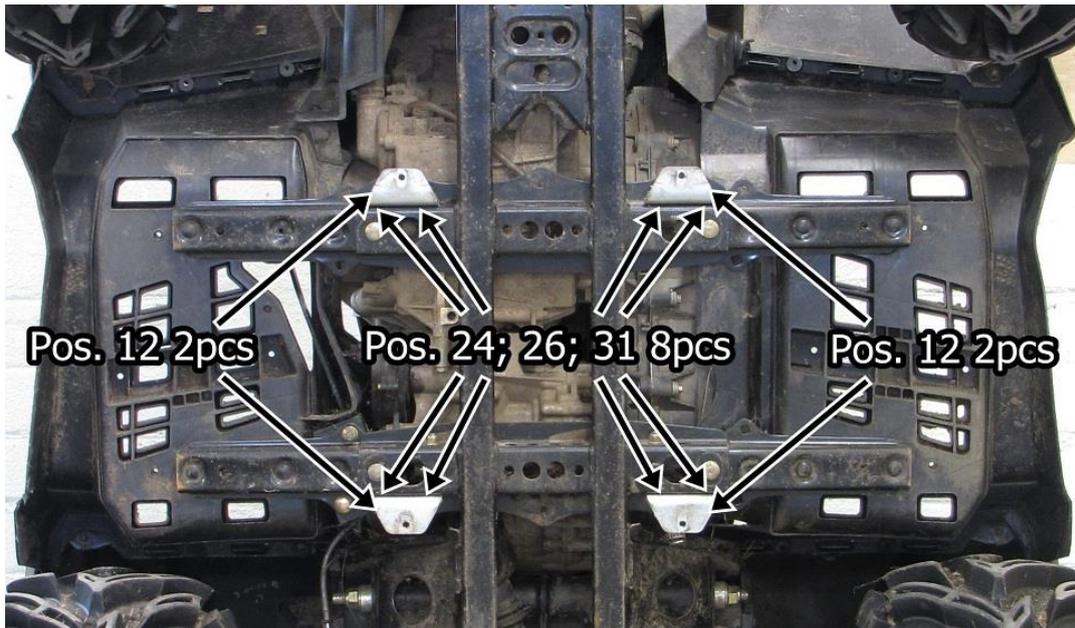


## Step 3

Install middle part 02. 8401K.

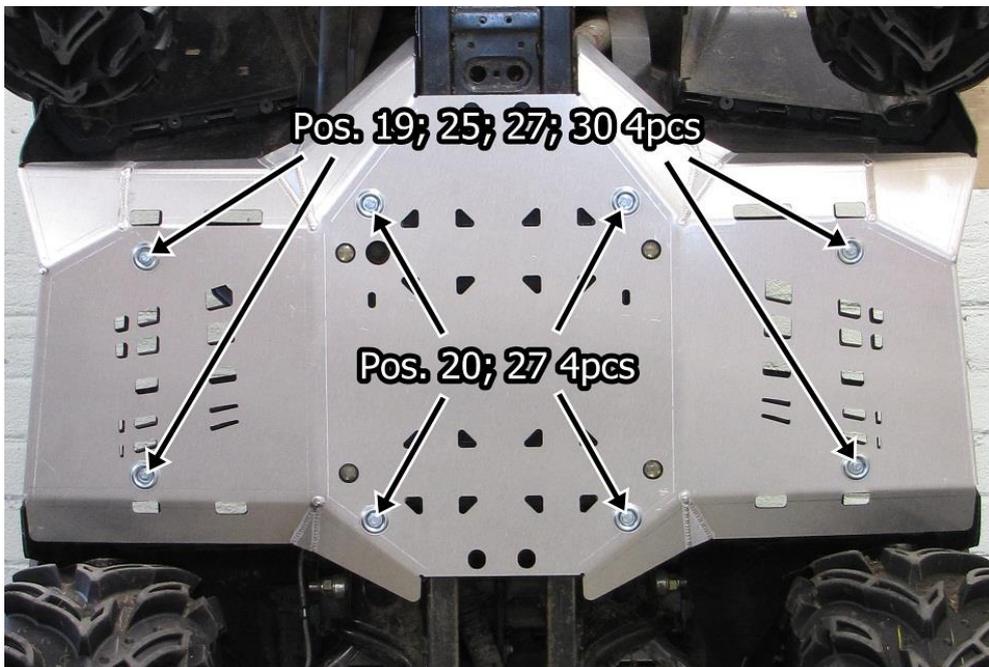



**Step 4**



Install plates 02.5006.

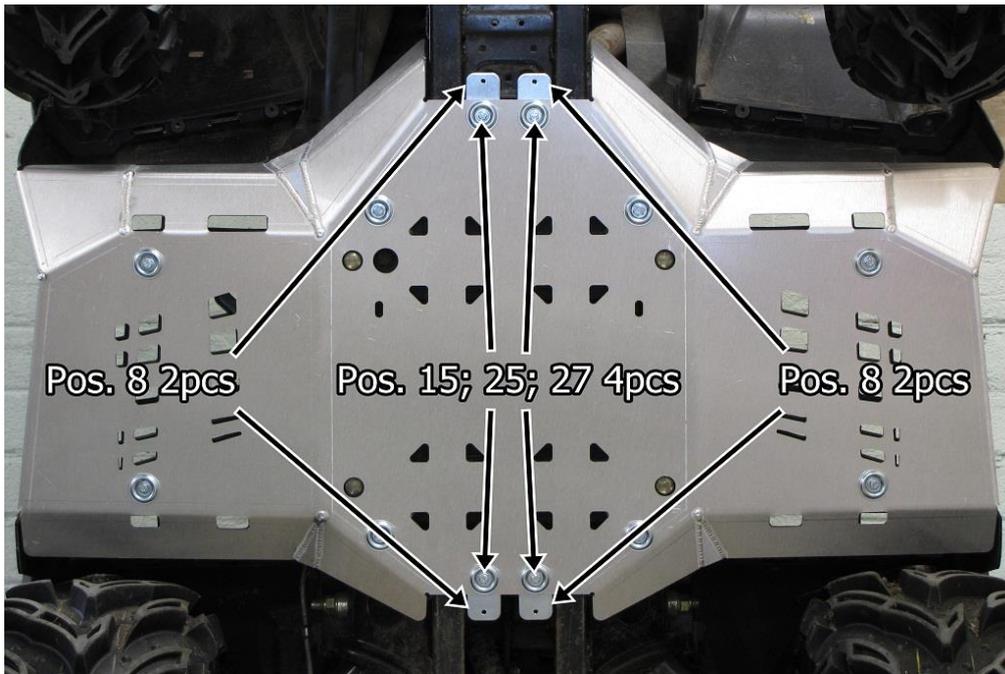

**Step 5**


Install front part 02.8402K.

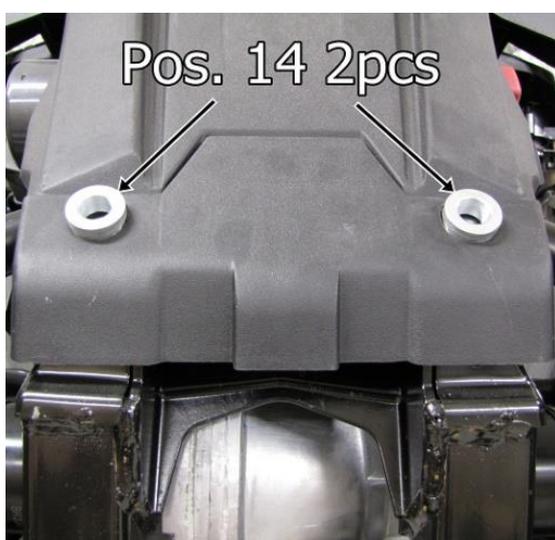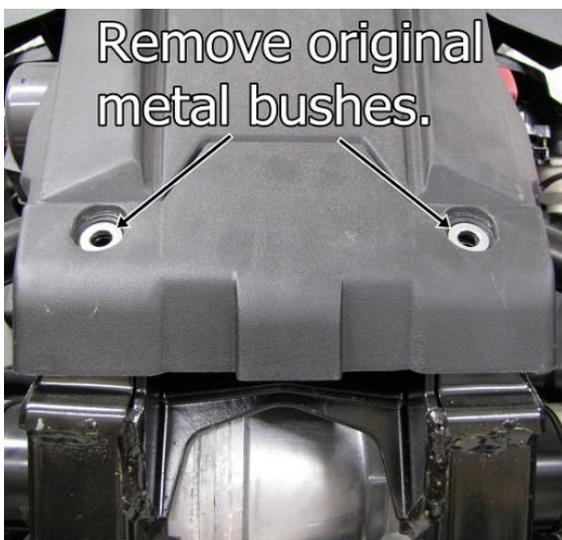

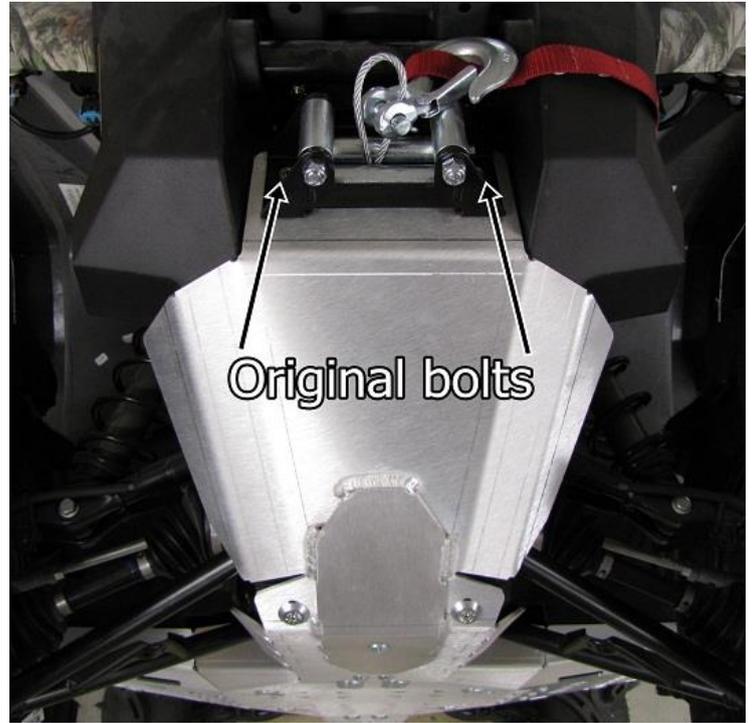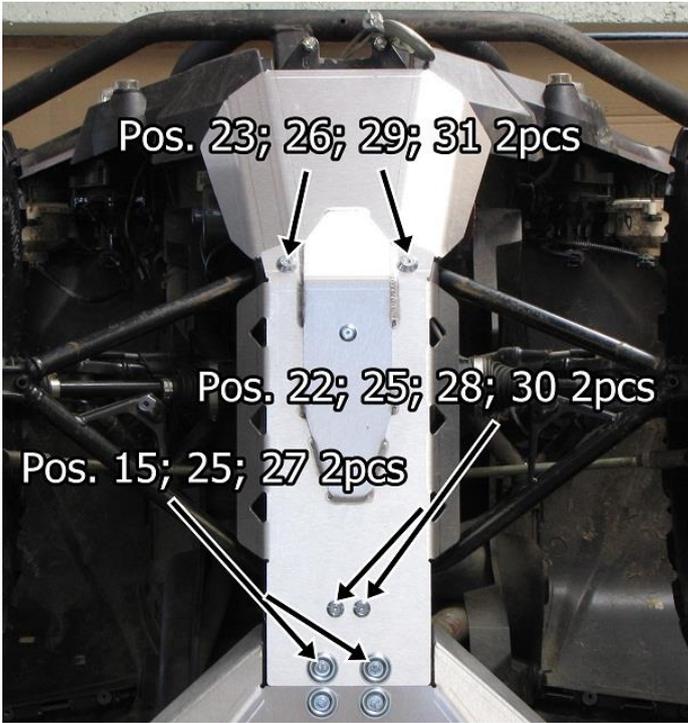



**Step 6**

Install rear part 02.8203K.

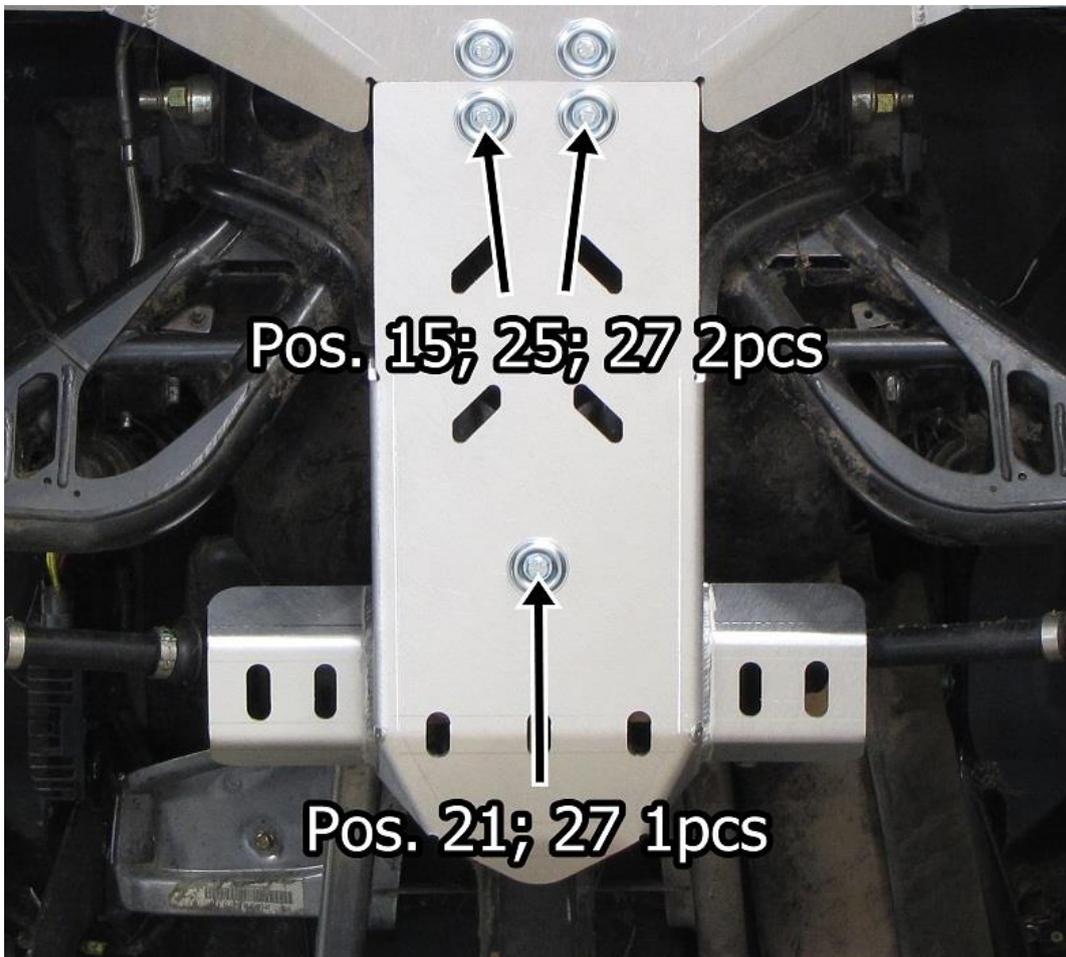



### Step 7

Install front arms protections 02.8204, 02.8205 and clamps 02.8210.

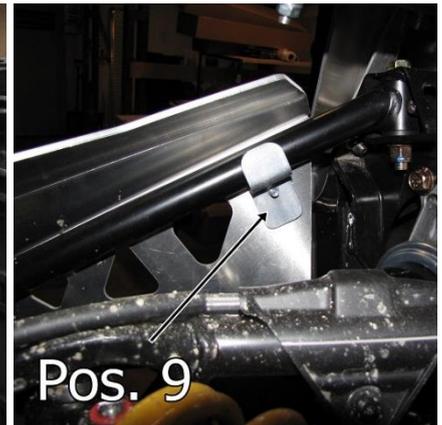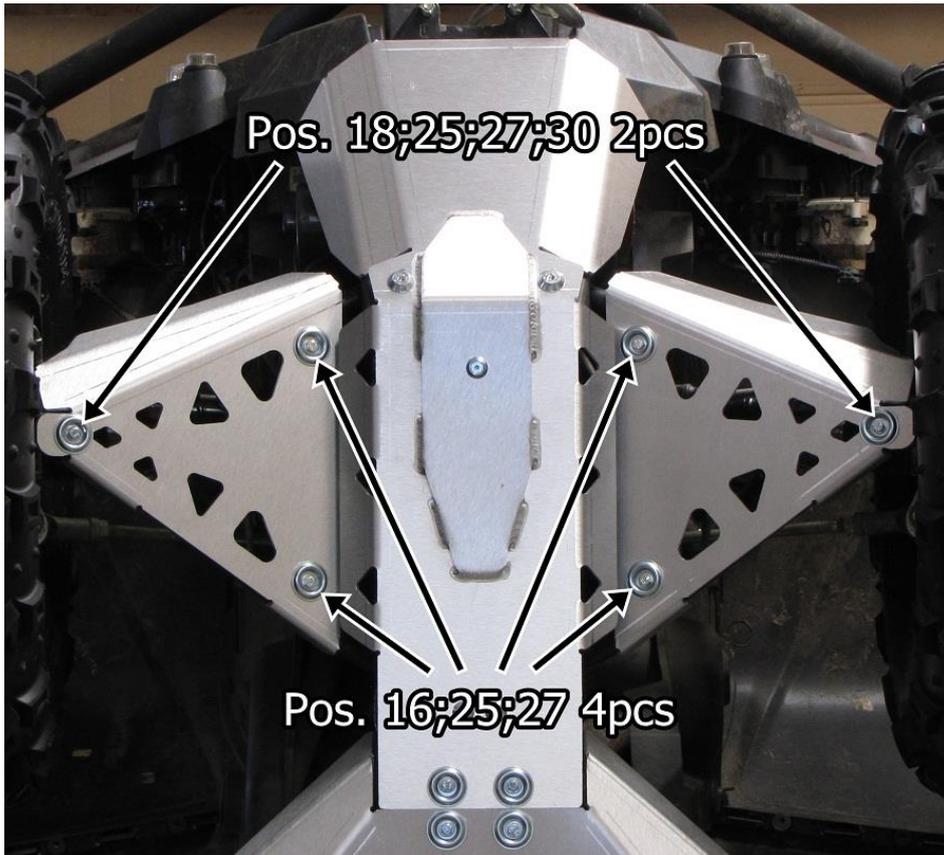

### Step 8

Install rear arms protections 02.8206, 02.8207 and clamps 02.5709.

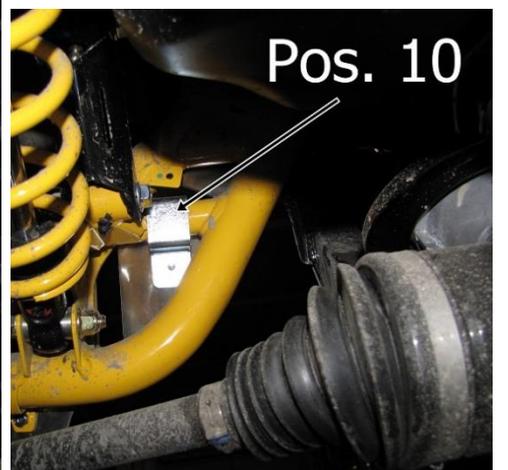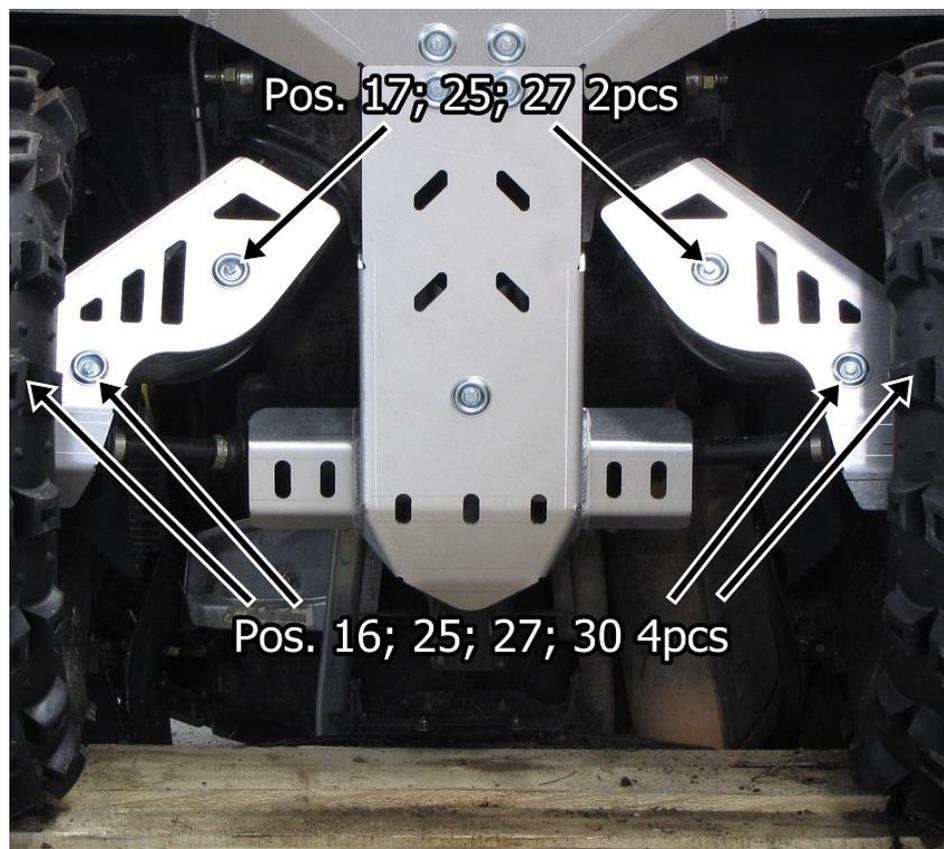







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

