

IRON BALTIC

PLASTIC SKID PLATE

CAN AM

Outlander (G2)

Code 02.8500

Version 29102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/nwUpLG2k



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.8501	1
2	Front part	02.8502K	1
3	Right side part	02.8503	1
4	Left side part	02.8504	1
5	Rear part	02.8303K	1
6	Front right arm protection	02.8304	1
7	Front left arm protection	02.8305	1
8	Rear right arm protection	02.8306	1
9	Rear left arm protection	02.8307	1
10	Bracket	03.3502	4
11	Plate	02.5006	11
12	Connecting plate (20)	02.8311	2
13	Connecting plate (40)	02.10006	2
14	Plate for front part	02.10004	1
15	Bush for front part	02.10005	2
16	Plate	02.2305	1
17	Clamp for front arm protection	02.8210	4
18	Clamp for rear arm protection	02.5709	2
19	Front part bracket	02.8506	1
20	Bolt M6x16 DIN 933	OT.02.02.050	10
21	Bolt M6x20 DIN 933	OT.02.02.060	8
22	Bolt M6x30 DIN 933	OT.02.02.080	2
23	Bolt M6x40 DIN 933	OT.02.02.100	2
24	Bolt M6x60 DIN 933	OT.02.02.140	4
25	Bolt M8x20 DIN 933	OT.02.02.180	7
26	Bolt M8x35 DIN 933	OT.02.02.210	1
27	Bolt M6x20 DIN 7991	OT.02.04.030	20
28	Bolt M6x30 DIN 7991	OT.02.04.050	3
29	Bolt M8x60 DIN 7991	OT.02.04.210	2
30	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
31	Washer Ø6/15 SFS 3738	OT.04.03.020	39
32	Washer Ø8/20 SFS 3738	OT.04.03.030	10
33	Dished washer	14.503	34
34	Conical washer Ø6	14.502	22
35	Conical washer Ø8	14.501	2
36	Nyloc nut M6 DIN 985	OT.03.02.030	13
37	Nyloc nut M8 DIN 985	OT.03.02.040	10

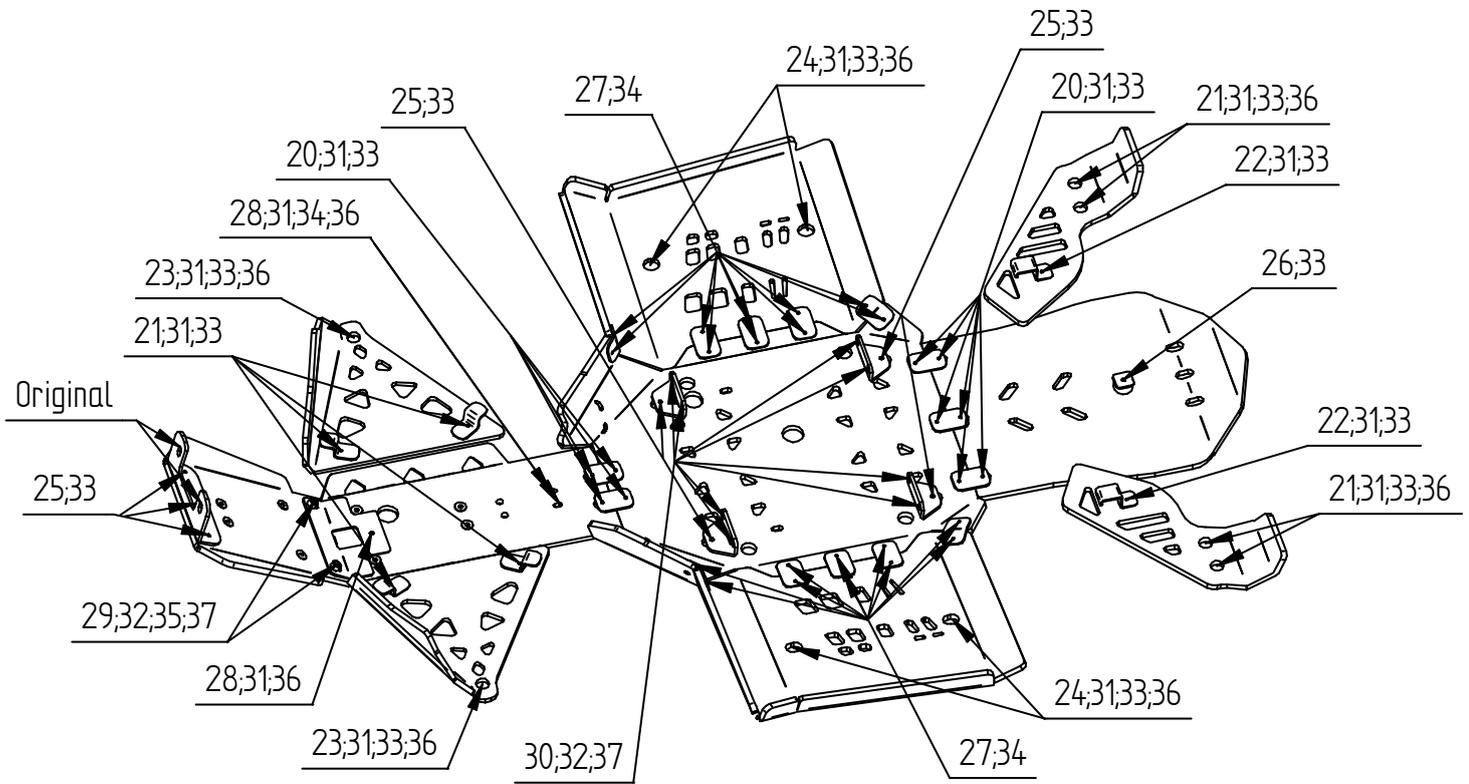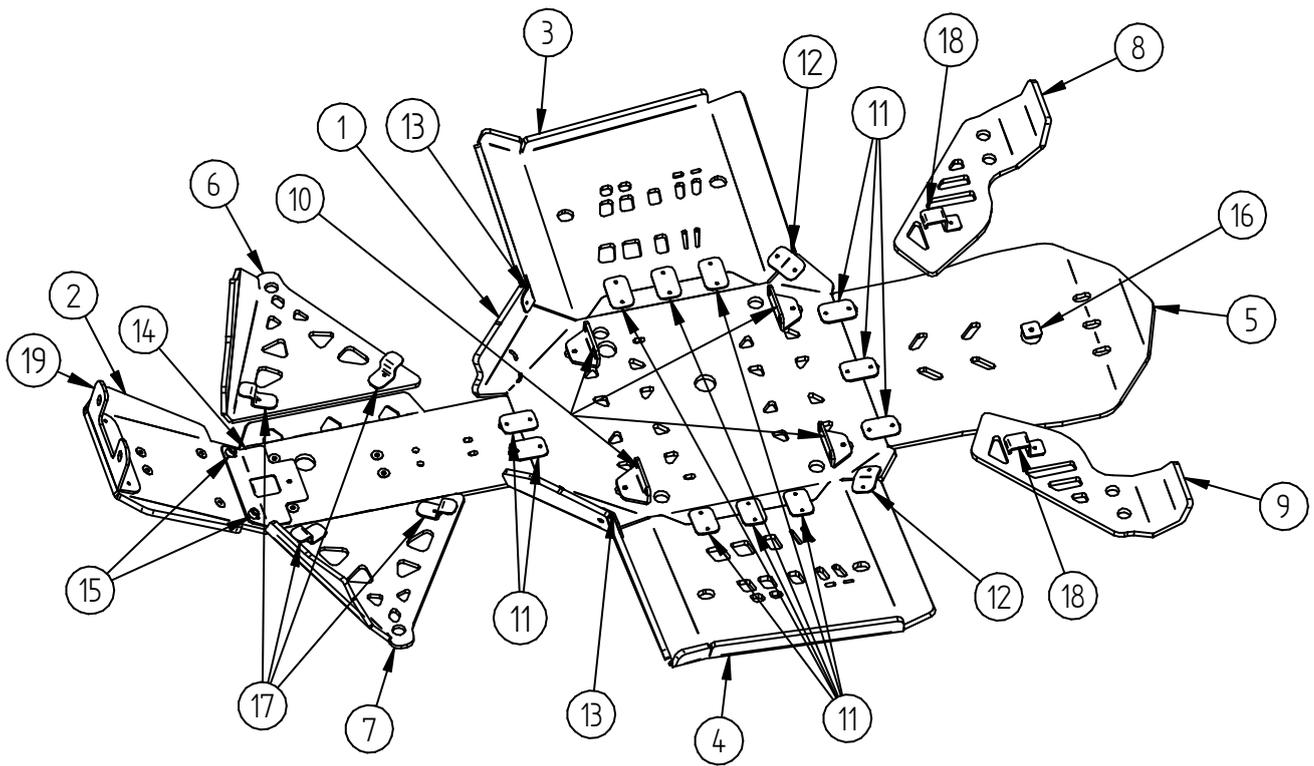


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

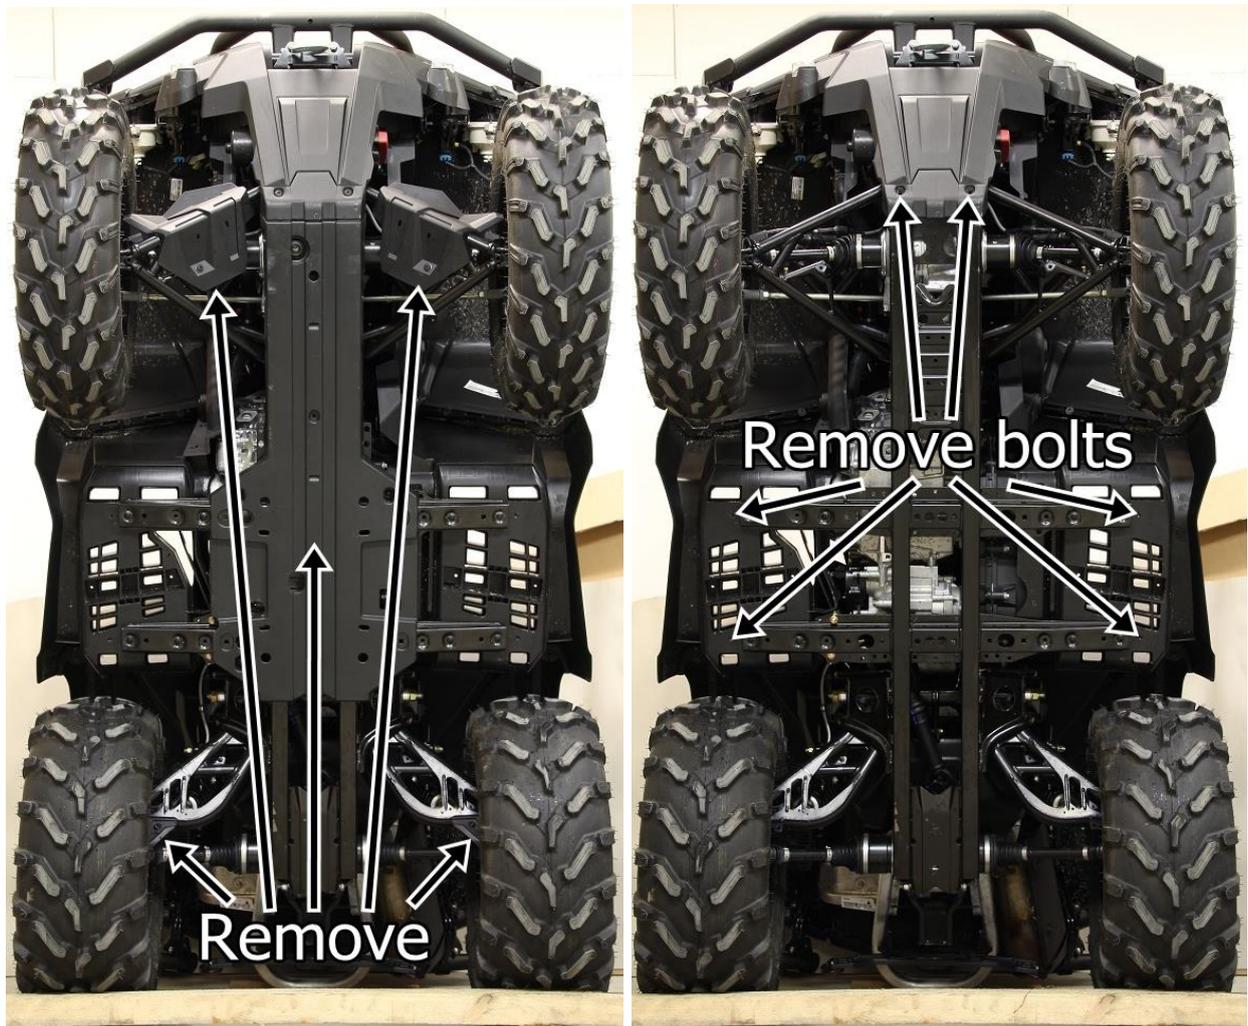


Step 2 Install brackets 02.3502. Place brackets same plane as frame.

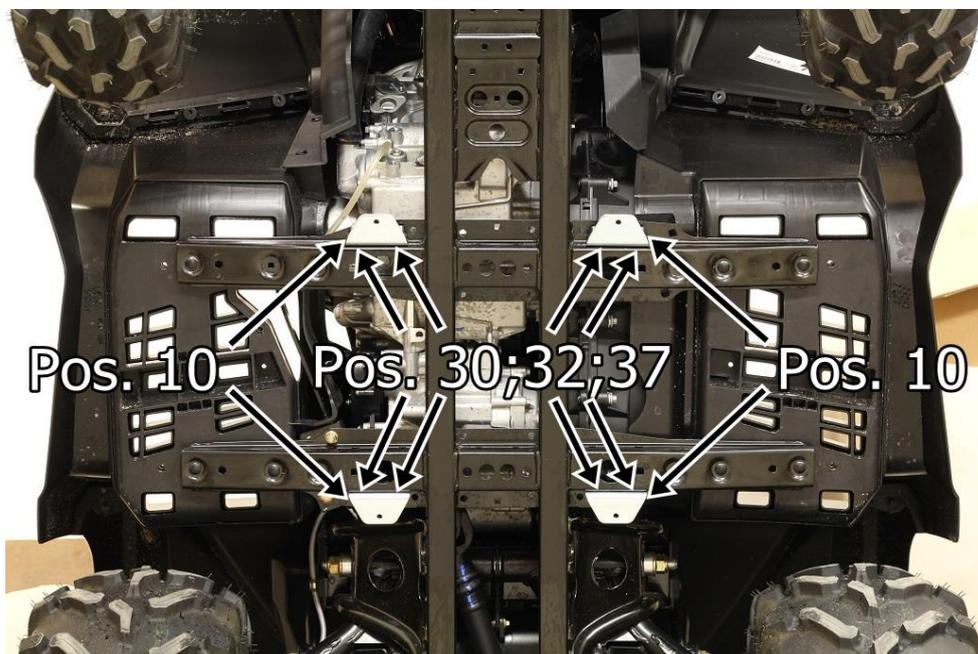



Step 3

Install middle part 02.8501.

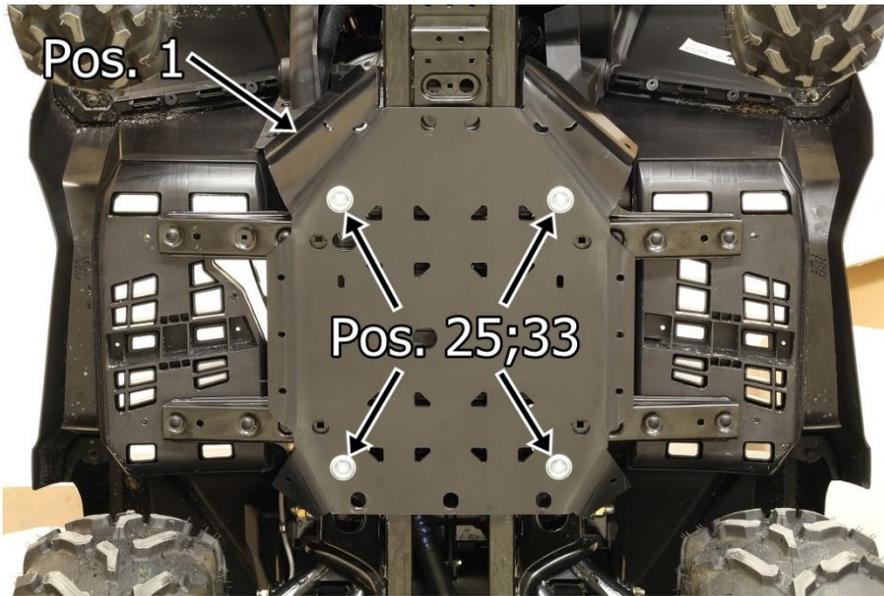


Step 4

Install plates 02.5006, 02.8311, 02.10006.

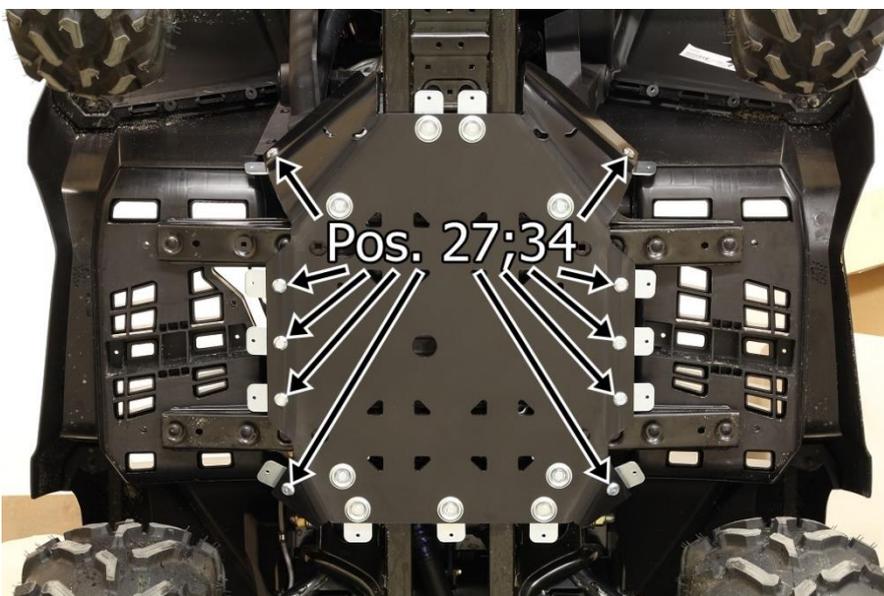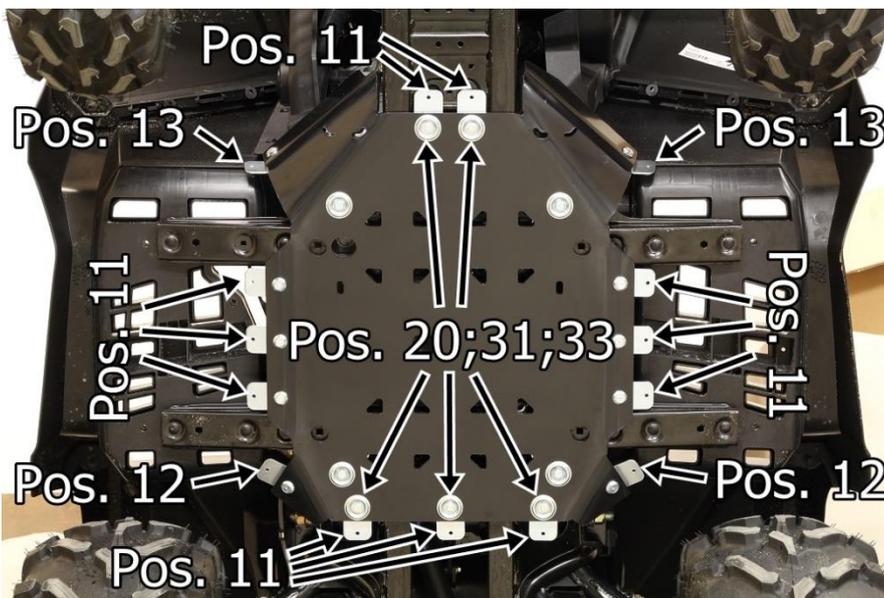




Step 5


Install right side part 02.8503 and left side part 02.8504.

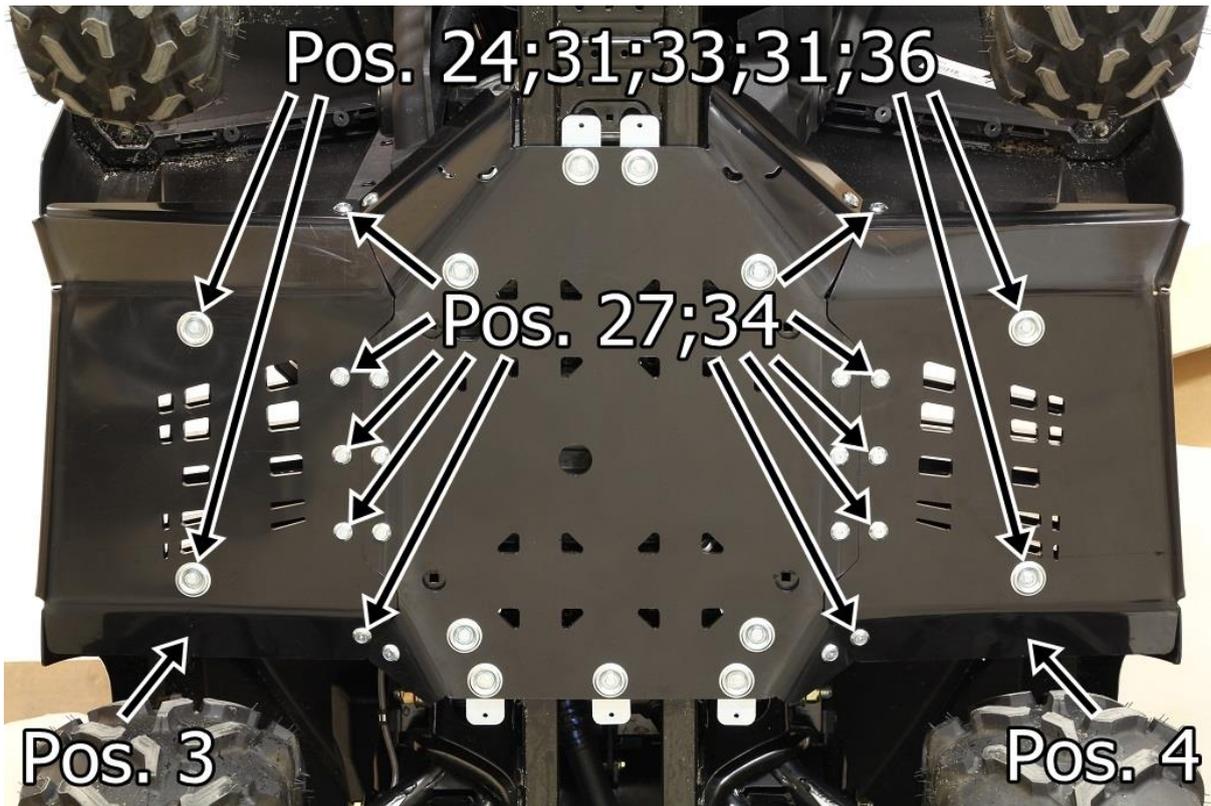

Step 6


Install front part 02.8502K.

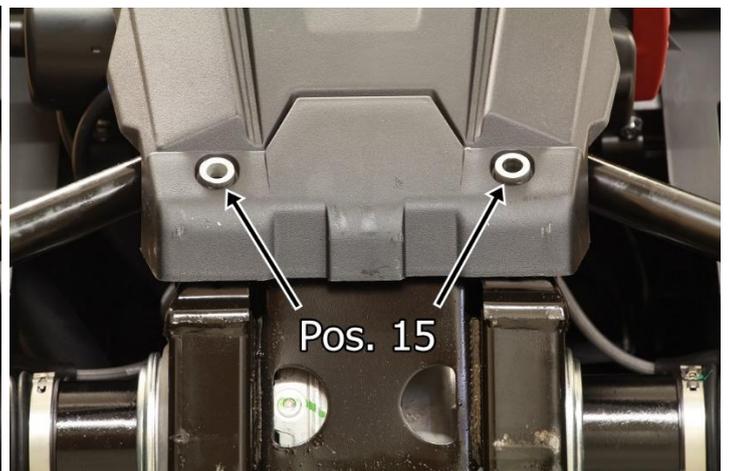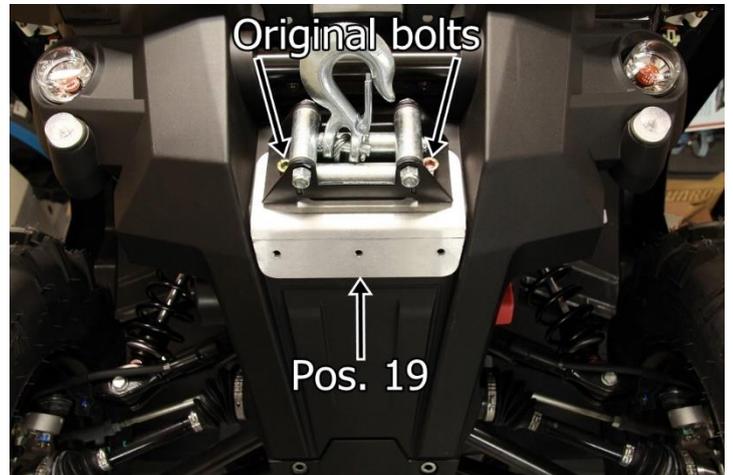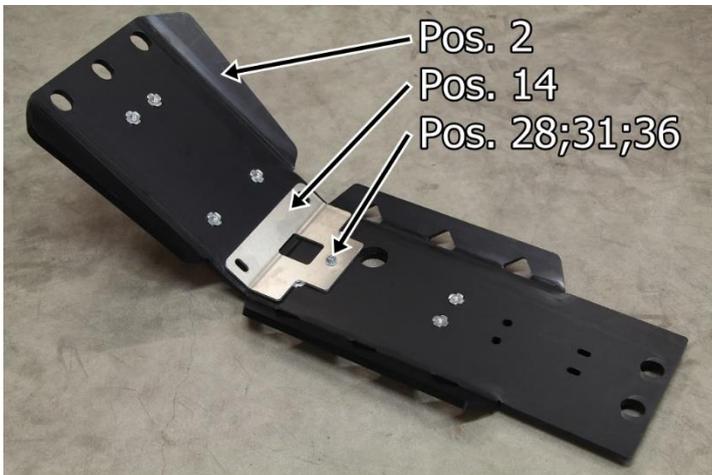

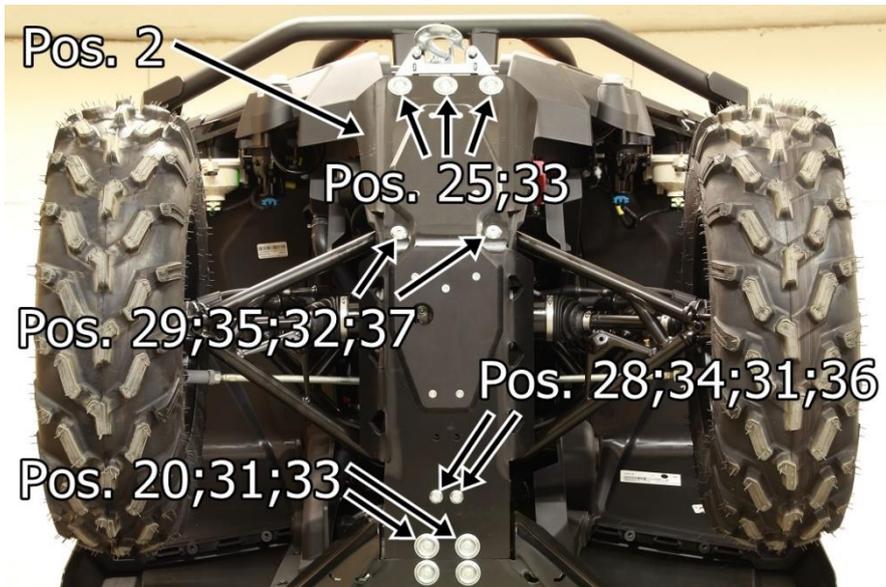


Step 7

Install rear part 02.8303K.

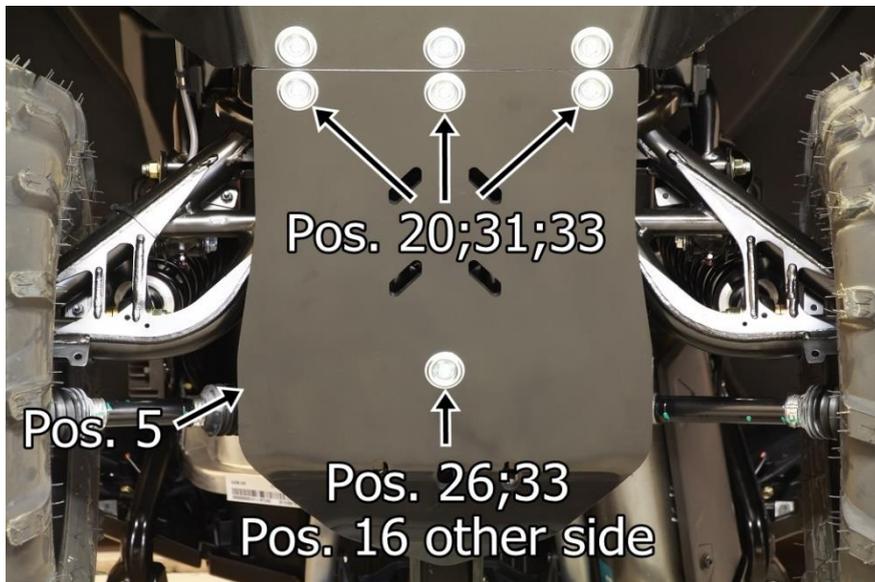


Step 8

Install front arms protections 02.8304, 02.8305 and clamps 02.8210.

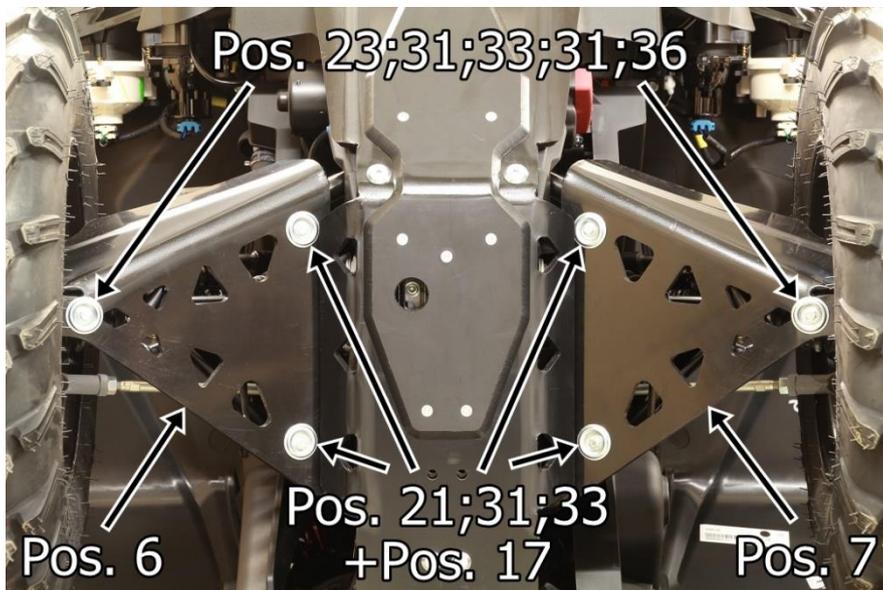

Step 9

Install rear arms protections 02.8306, 02.8307 and clamps 02.5709.

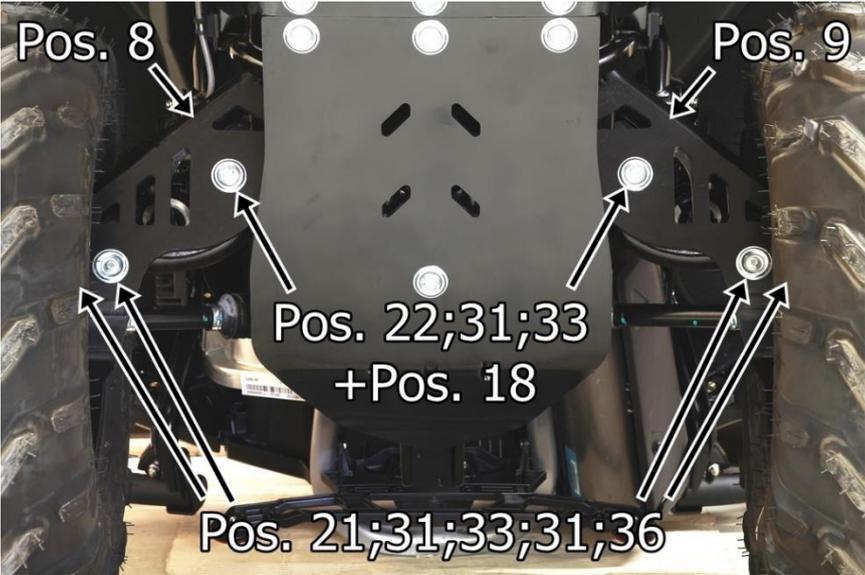

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

