

IRON BALTIC

ALUMINIUM SKID PLATE

HISUN

UTV HS700

Code 02.8600

Version 29102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/uob0IBpF

Keep this manual for future reference!


If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Middle part	02.8601K	1
2	Front part	02.8602	1
3	Rear part	02.8603	1
4	Front left arm protection	02.8604	1
5	Rear left arm protection	02.8606	1
6	Bracket	02.8608	2
7	Rear right arm protection	02.8607	1
8	Front right arm protection	02.8605	1
9	Plate	02.5006	5
10	Rear arm clamp	02.5709	2
11	Angular clamp	02.813	2
12	Bolt M6x16 DIN 7991	OT.02.04.020	10
13	Bolt M6x20 DIN 7991	OT.02.04.030	6
14	Bolt M6x25 DIN 7991	OT.02.04.040	15
15	Bolt M6x35 DIN 7991	OT.02.04.060	2
16	Bolt M6x50 DIN 7991	OT.02.04.080	4
17	Bolt M8x30 DIN 7991	OT.02.04.170	6
18	Conical washer 6	14.502	37
19	Washer 6/15 SFS 3738	OT.04.03.020	8
20	Conical washer 8	14.501	6
21	Nyloc nut M6 DIN 985	OT.03.02.030	8

FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

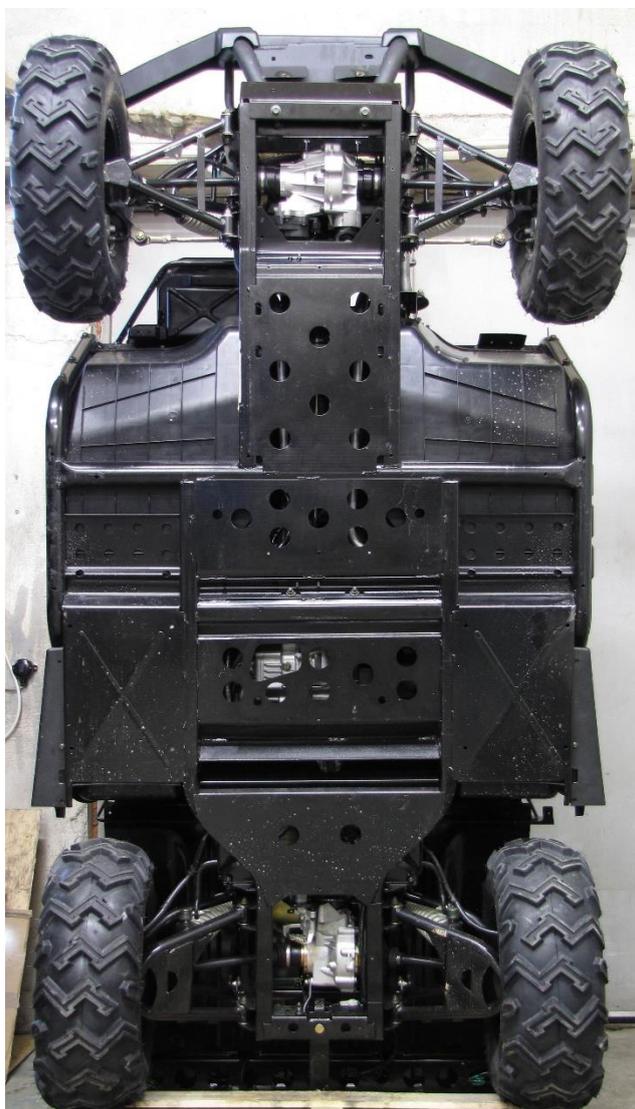


Step 2 Remove original bolts and install brackets 02.8608.

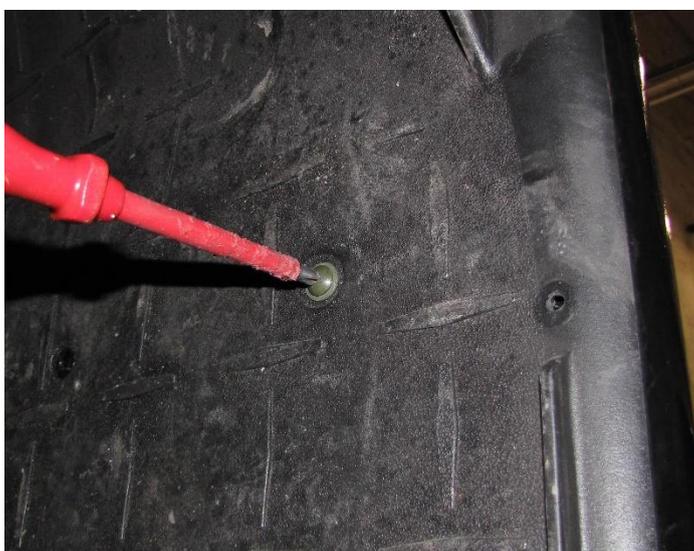


Step 3

Install middle part, use bolts M6x25, M6x50 and M8x30.

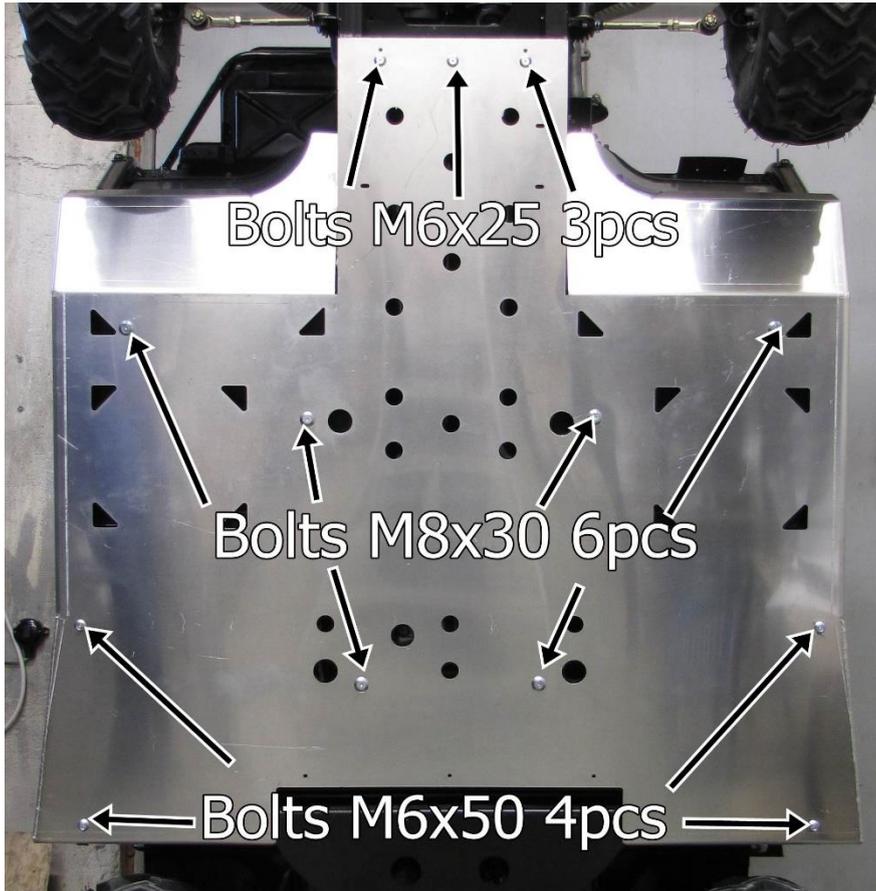


Step 4

Install plates 03.5006 to middle part, use bolts M6x16.

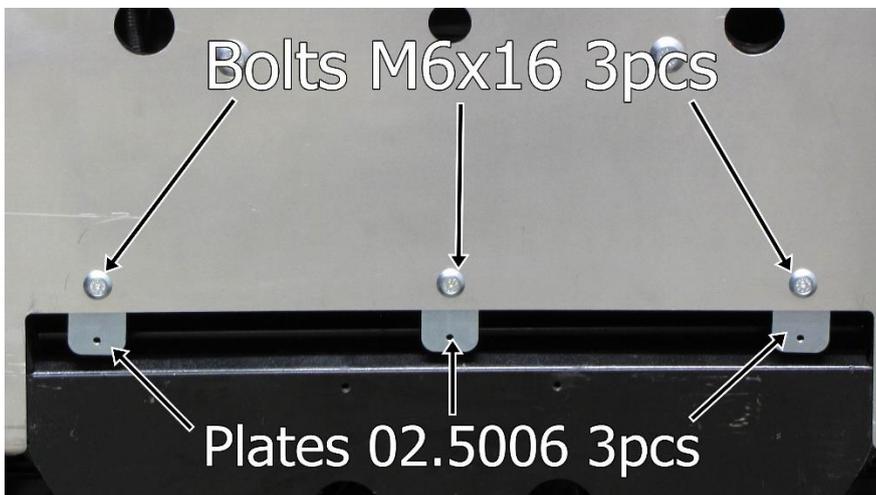


Step 5

Install rear part, use bolts M6x20 and M6x16.

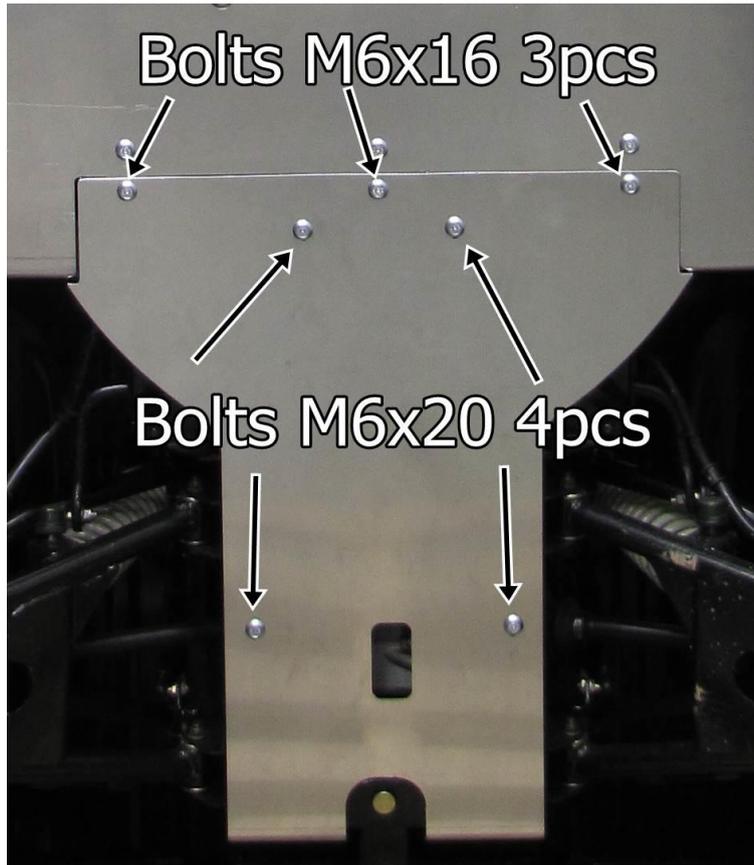


Step 6

Install front part, use bolts M6x16, M6x20 and M6x35.

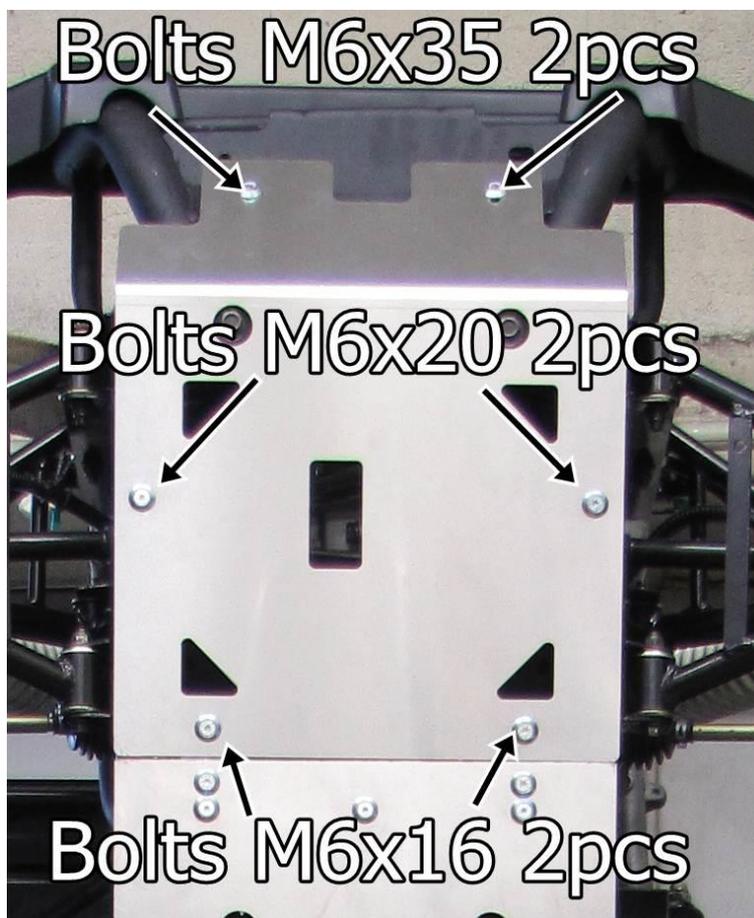


Step 7

Install rear arms protections, use bolts M6x25, nyloc nuts and clamp 02.5709.

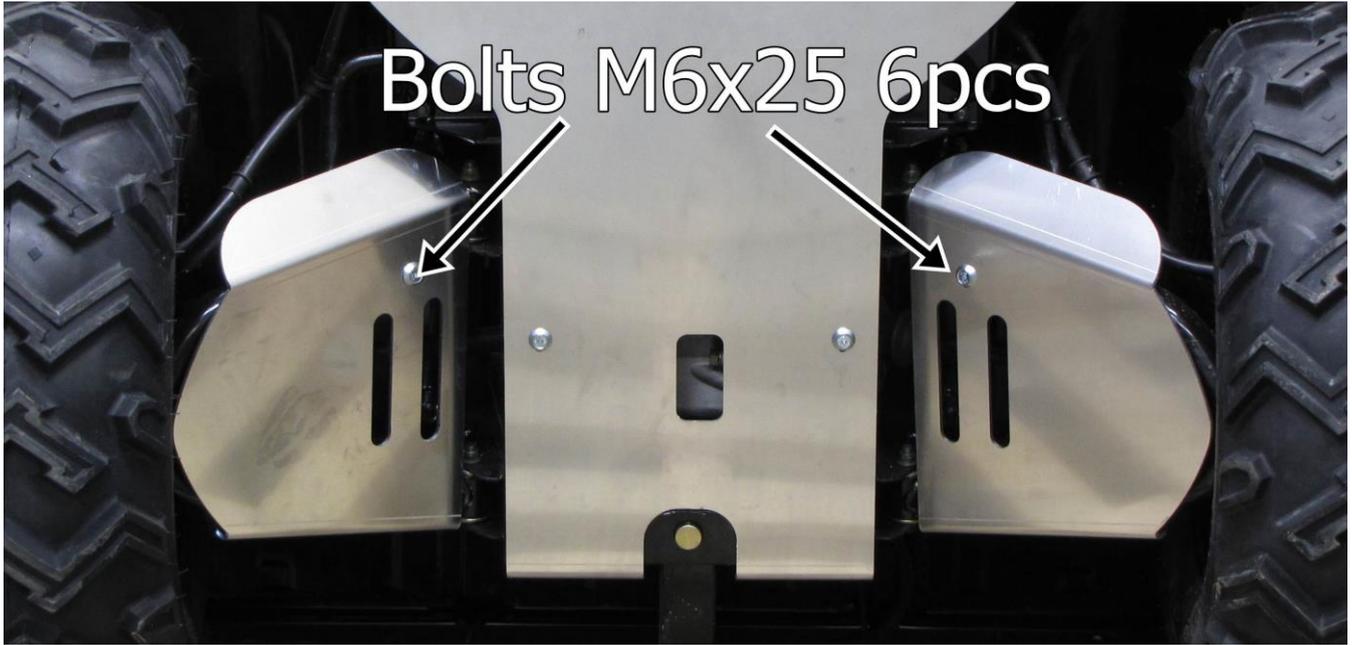

Step 8

Install front arms protections, use clamps 02.813, bolts M6x25, and nyloc nuts M6.

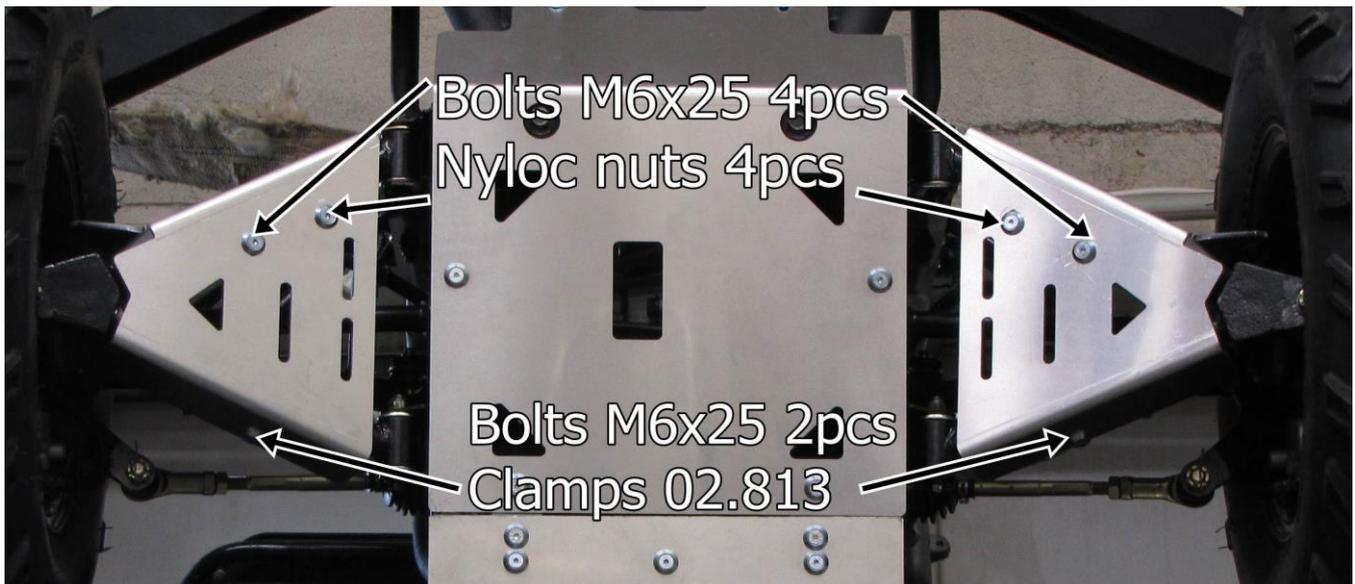

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

