

IRON BALTIC

ALUMINIUM SKID PLATE

CF MOTO

Terralander CF800-2

Code 02.8700

Version 29102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/RQhtuehc



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION



Pos.	Description	Code	Amount
1	Middle part	02.8701K	1
2	Rear part	02.8703	1
3	Front part	02.8702	1
4	Front left arm protection	02.1075V	1
5	Front right arm protection	02.1075P	1
6	Rear left arm protection	02.1076V	1
7	Rear right arm protection	02.1076P	1
8	Plate	02.5006	5
9	Clamp	03.1502	2
10	Intallation plate	02.5709	2
11	Bolt M6x12 DIN 933	OT.02.02.030	4
12	Bolt M6x16 DIN 7991	OT.02.04.020	10
13	Bolt M6x20 DIN 7991	OT.02.04.030	2
14	Bolt M6x20 DIN 933	OT.02.02.060	6
15	Bolt M6x35 DIN 933	OT.02.02.090	6
16	Bolt M6x70 DIN 933	OT.02.02.150	4
17	Bolt M8x16 DIN 933	OT.02.02.170	2
18	Conical washer 6	14.502	12
19	Dished washer	14.503	18
20	Washer 6/15 SFS 3738	OT.04.03.020	28
21	Washer 8/20 SFS 3738	OT.04.03.030	2
22	Nyloc nut M6 DIN 985	OT.03.02.030	8

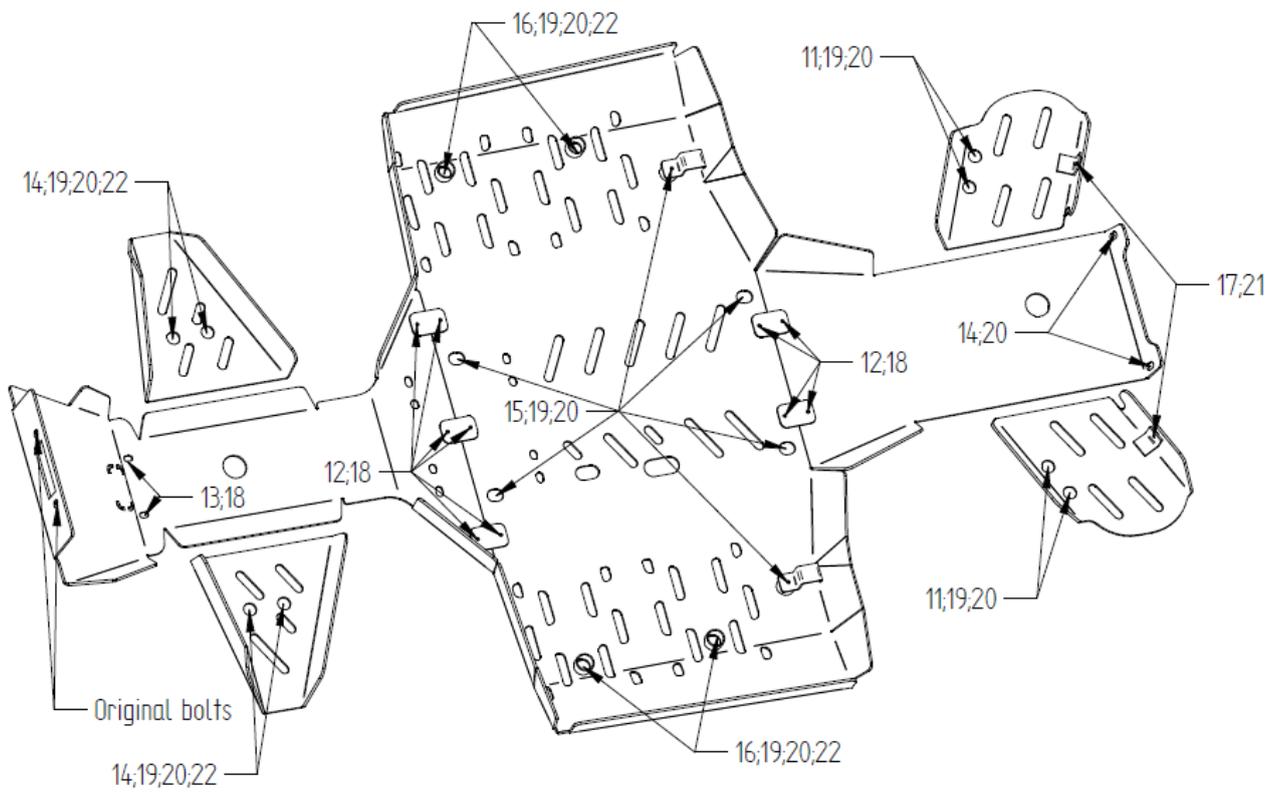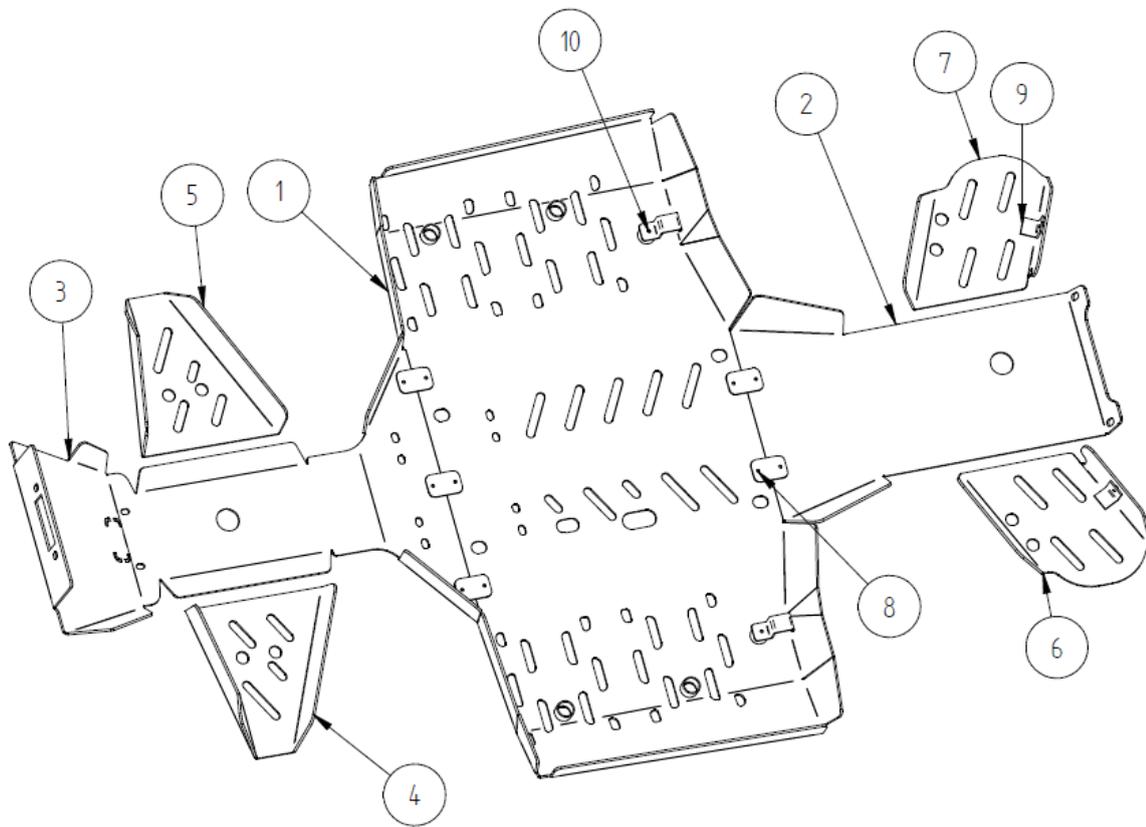

FITTING INSTRUCTIONS


Step 1

Remove all standard plastic covers, 4 bolts and install plates 02.5709.

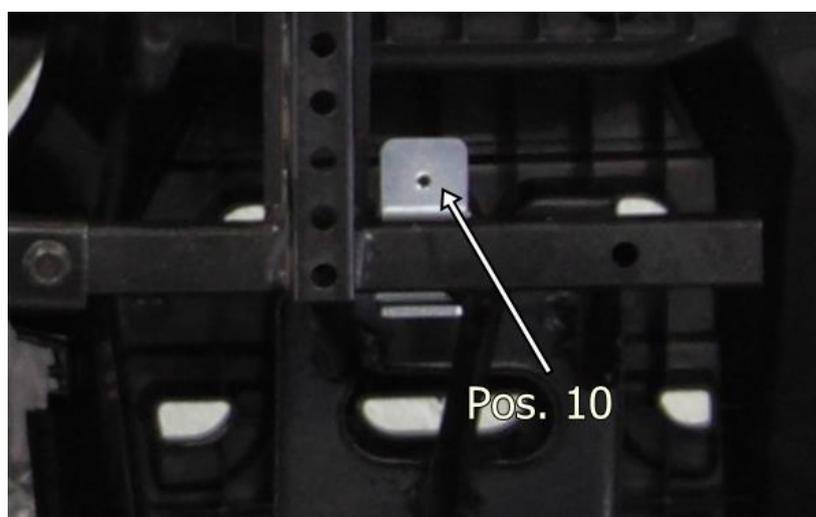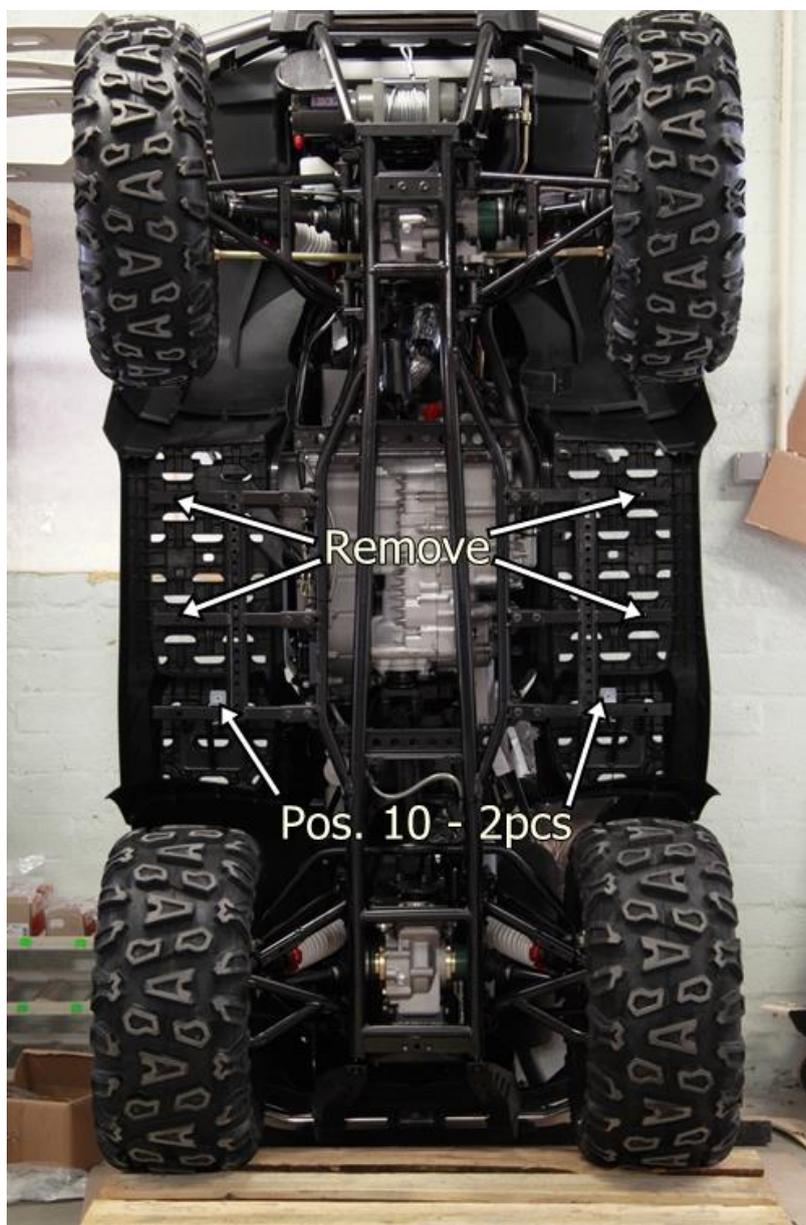


Step 2

Install middle part 02.8701K.

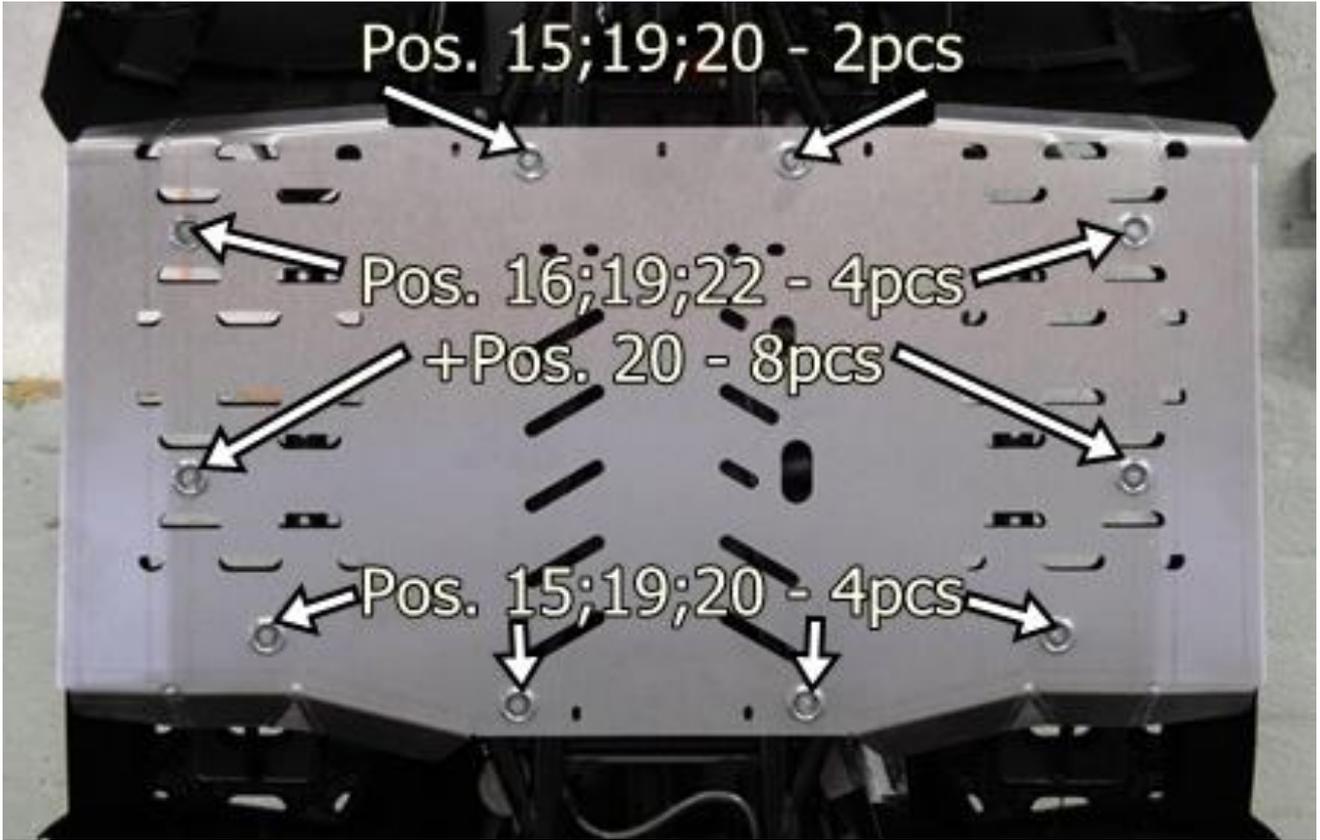


Step 3

Install plates 02.5006 to middle part.

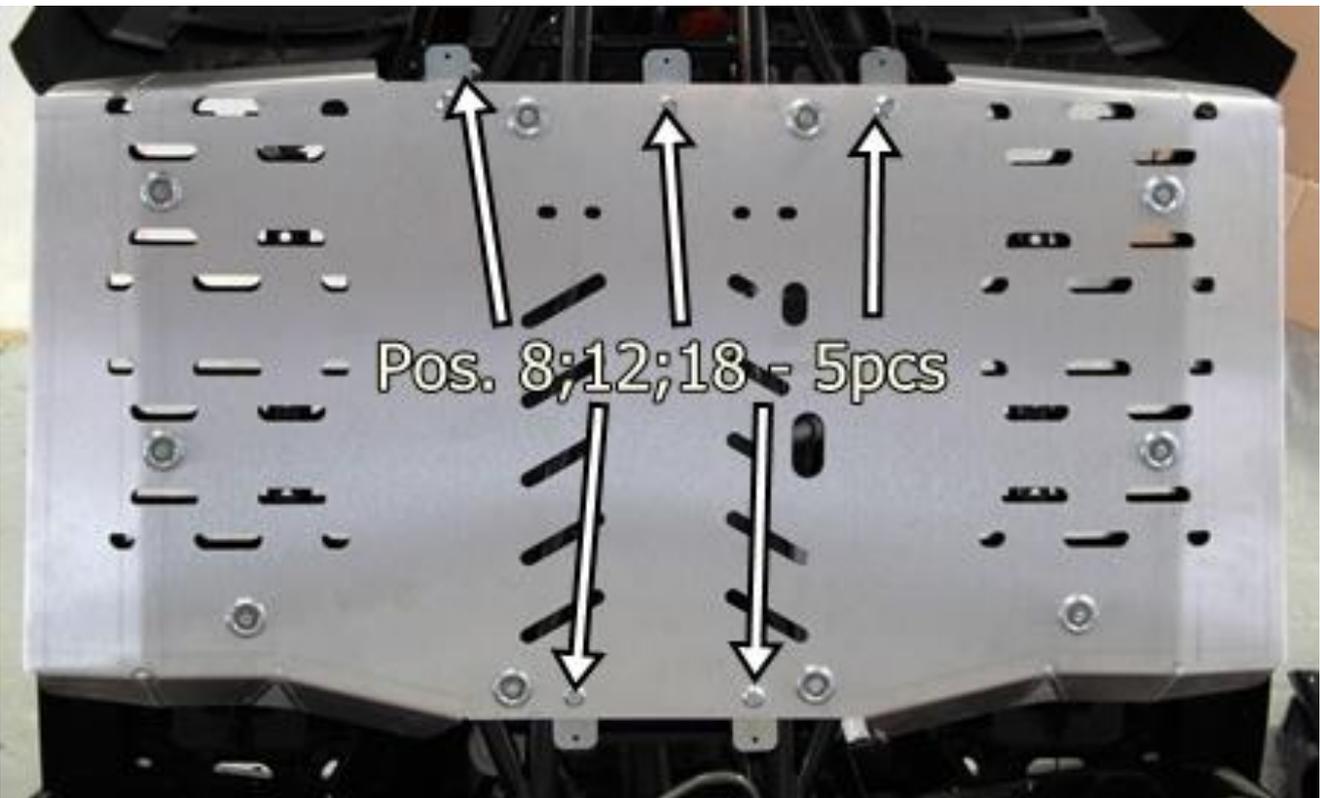



Step 4

Install rear part 02.8703.

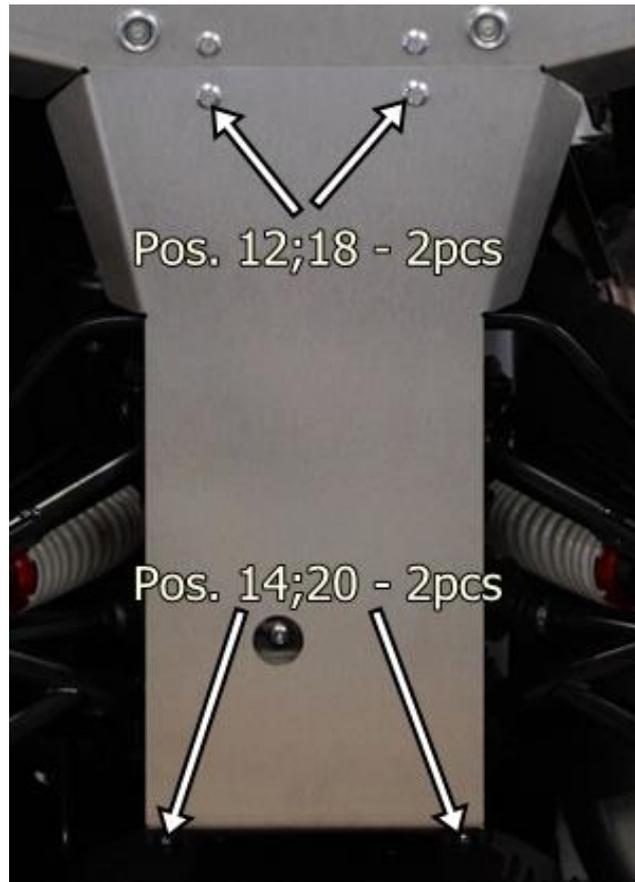

Step 5



Install front part 02.8702.

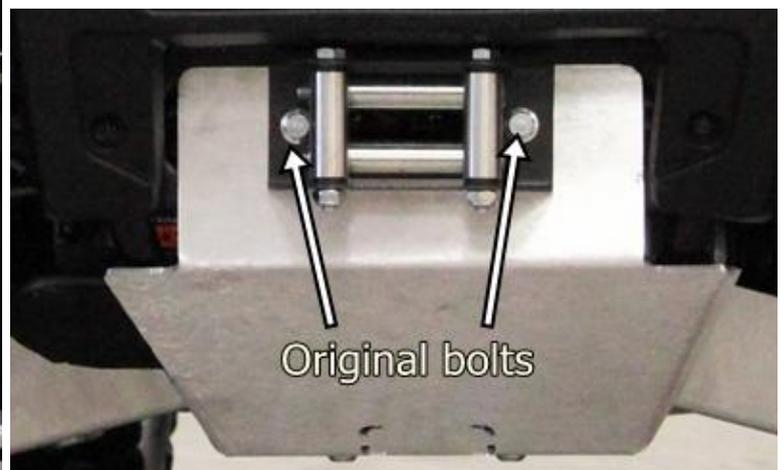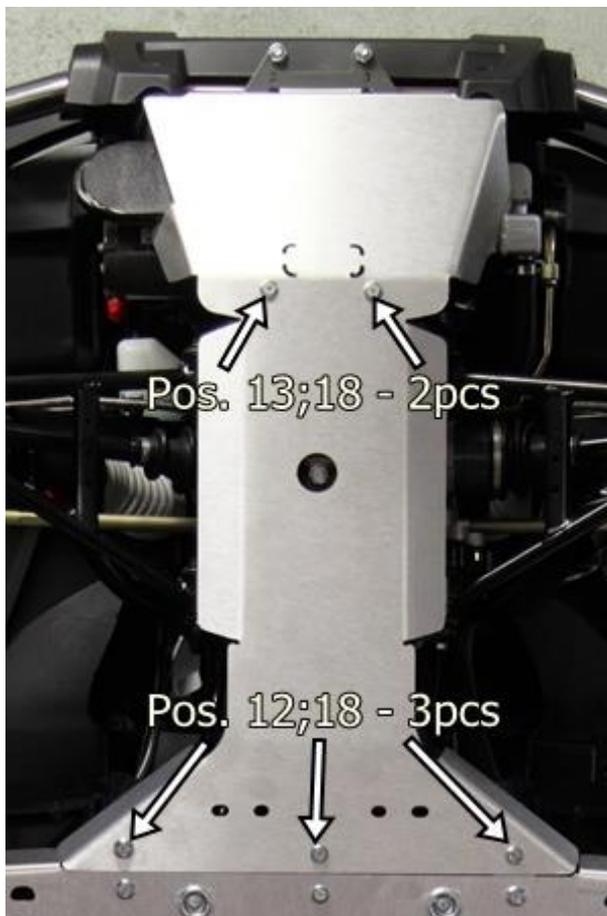

Step 6


Install rear arms protections 02.1076P and 02.1076V.

First install the bracket 03.1502 (Pos.9) to the arm protection (do not tighten the bolt). Then place the protection on to the ATV's A-arm. Press the guard against the A-arm tube and tighten the bracket bolt so that the side of the bracket is against the A-arm tube. Finally, attach the other side of the A-arm protection.

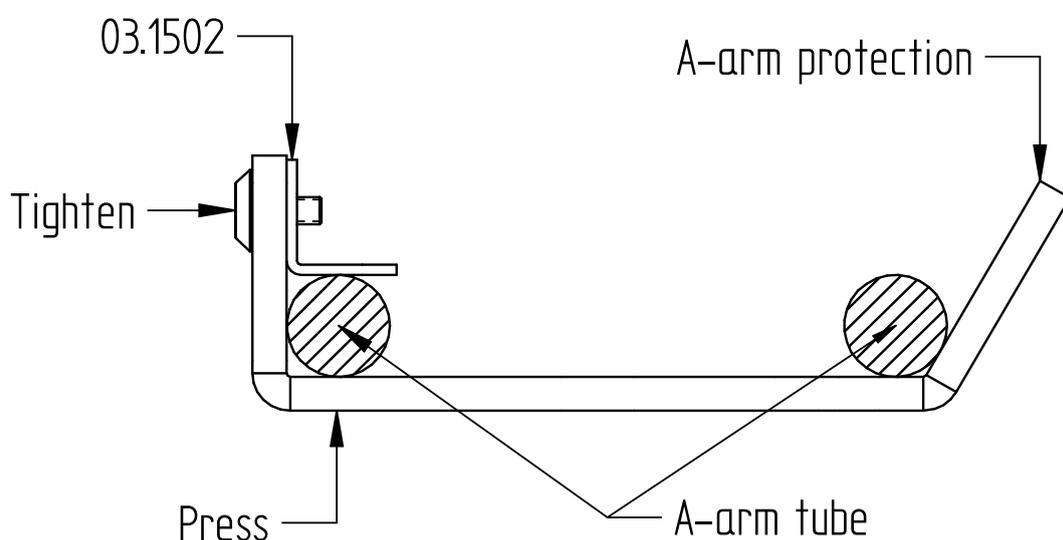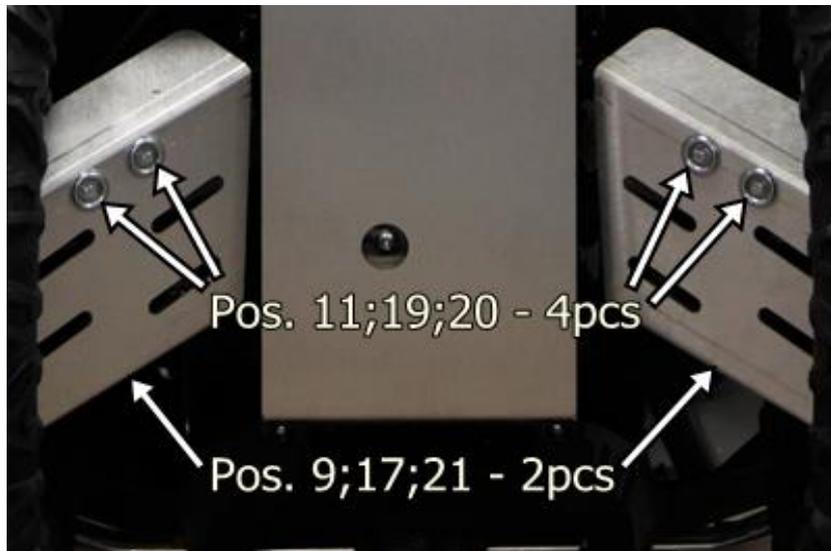

Step 7

Install front arms protections 02.1075P and 02.1075V.

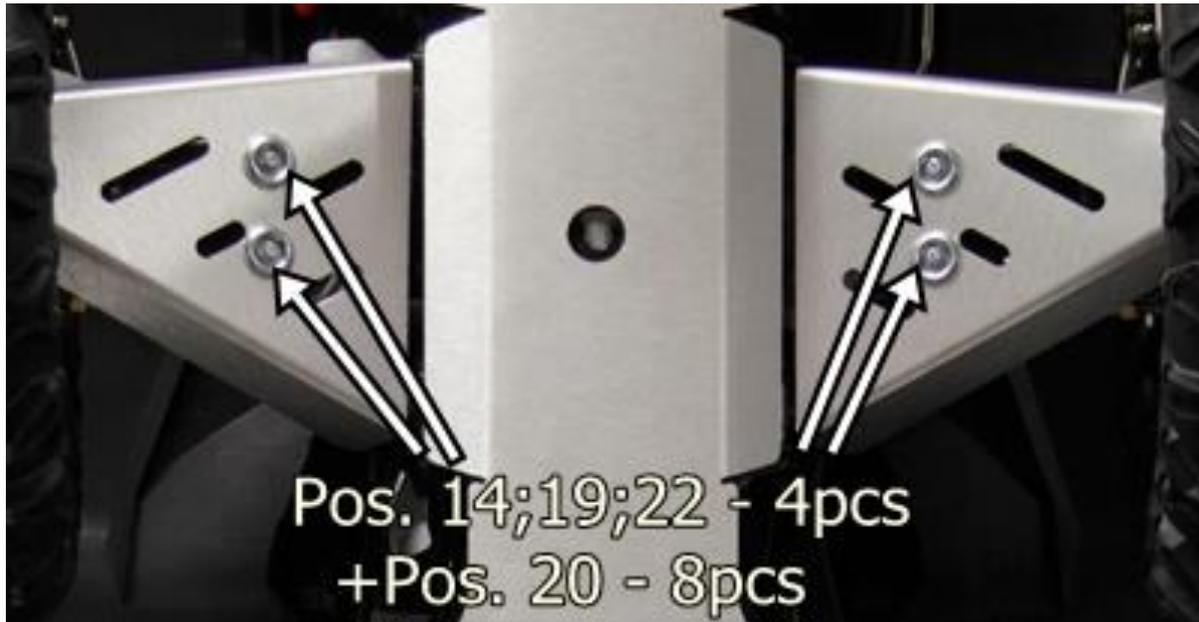

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

