

IRON BALTIC

PLASTIC SKID PLATE

ARCTIC CAT

1000

Code 02.9100

Version 29102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/1M12dGsv



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate front part	02.9101	1
2	Skid plate middle part	02.9102	1
3	Skid plate rear part	02.9103	1
4	Front right arm protection	02.11104	1
5	Front left arm protection	02.11105	1
6	Rear right arm protection	02.11106	1
7	Rear left arm protection	02.11107	1
8	Bracket (shorter)	02.6609	2
9	Bracket (longer)	02.6610	2
10	Installation plate	02.5006	6
11	Installation bracket	02.4606	4
12	Dished washer	14.503	40
13	Bolt M6x14 DIN 933	OT.02.02.040	12
14	Bolt M6x20 DIN 933	OT.02.02.060	12
15	Bolt M6x25 DIN 933	OT.02.02.070	2
16	Bolt M6x30 DIN 933	OT.02.02.080	6
17	Bolt M8x35 DIN 933	OT.02.02.090	2
18	Bolt M8x40 DIN 933	OT.02.02.220	4
19	Bolt M8x45 DIN 933	OT.02.02.230	4
20	Washer Ø6/15 SFS 3738	OT.04.03.020	34
21	Washer Ø8/20 SFS 3738	OT.04.03.030	2
22	Nut M6 Nyloc DIN 985	OT.03.02.030	2

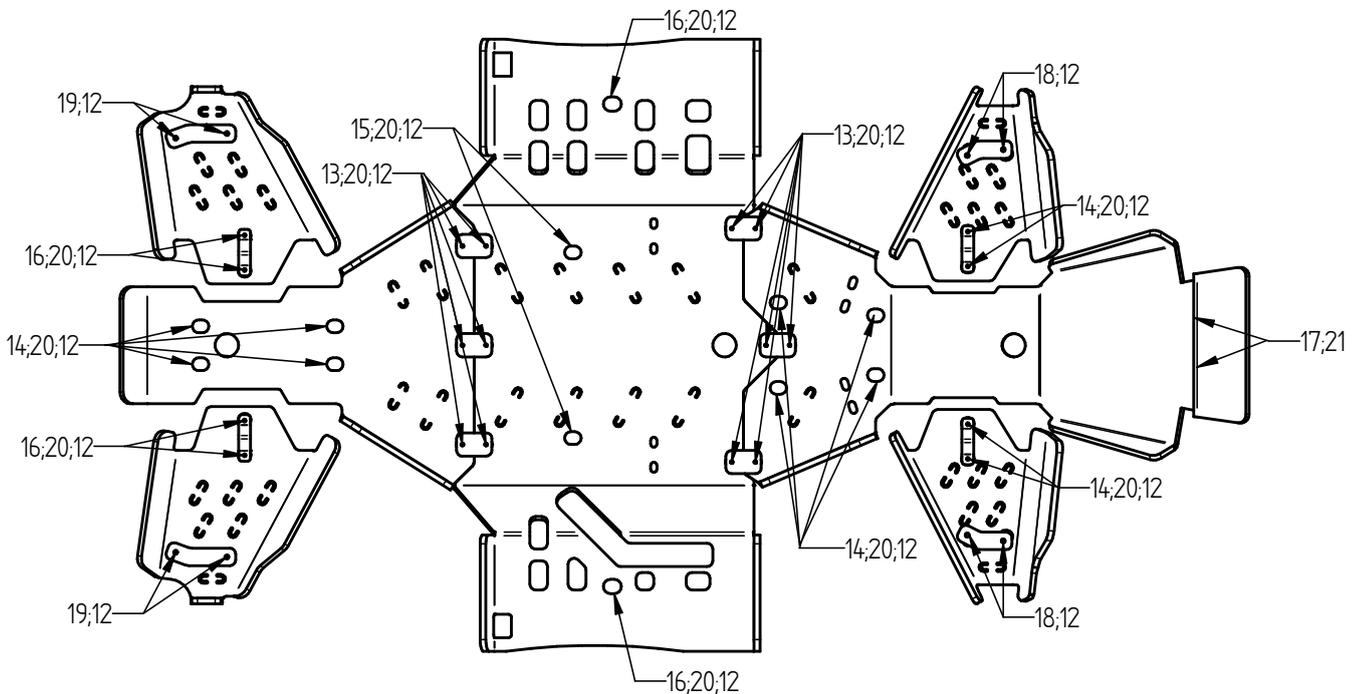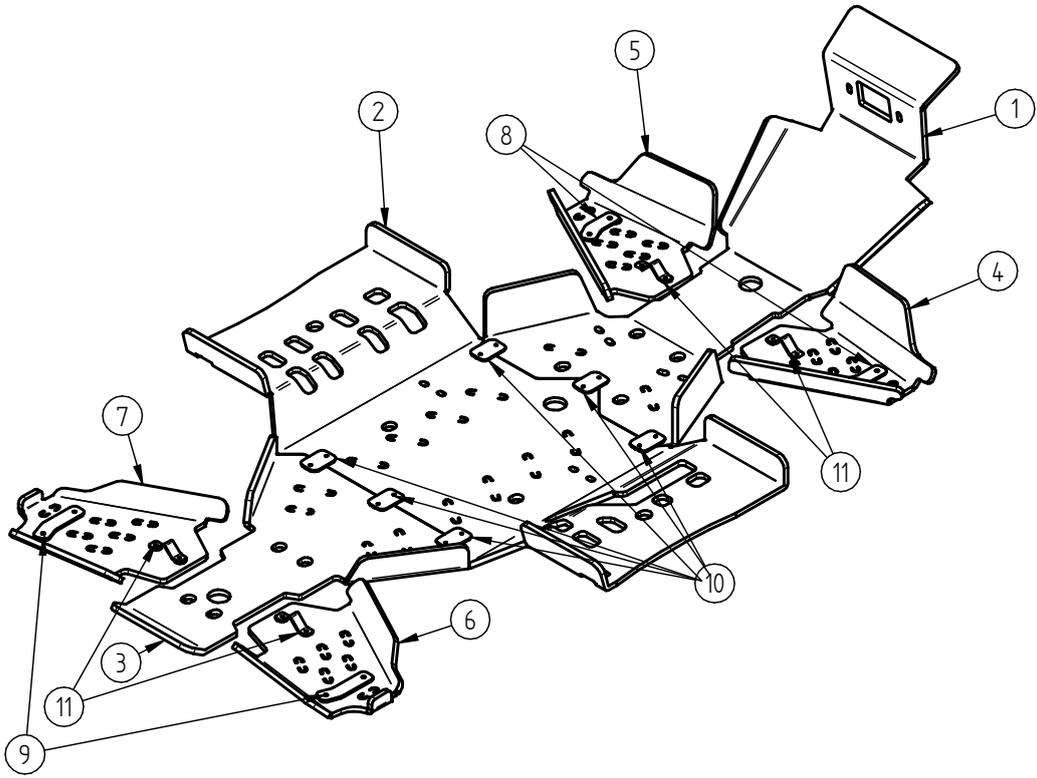


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

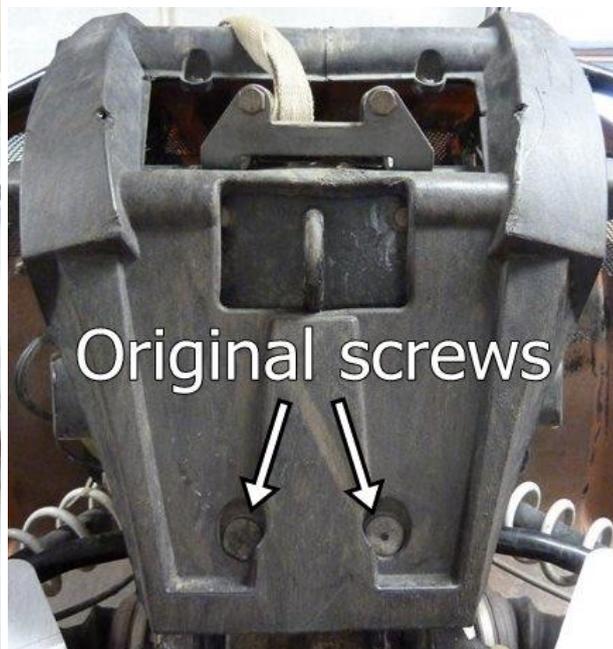


Step 2 Install front swingarm protections 02.11104 and 02.11105.

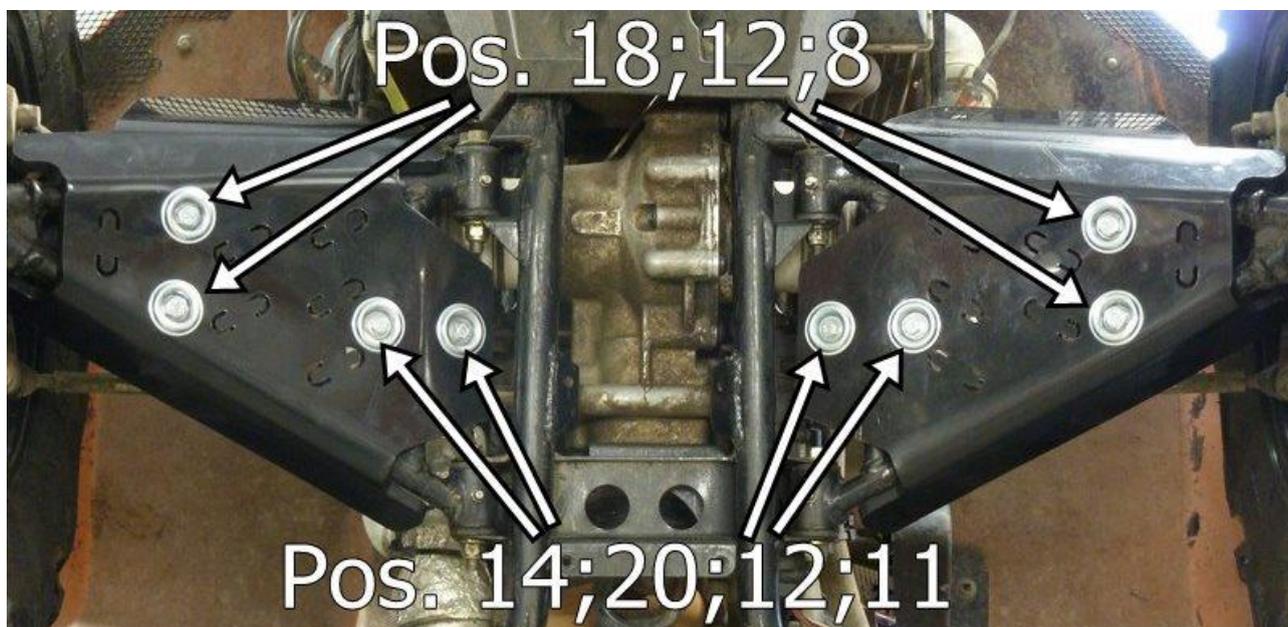


Step 3

Install rear swingarm protections 02.11106 and 02.11107.

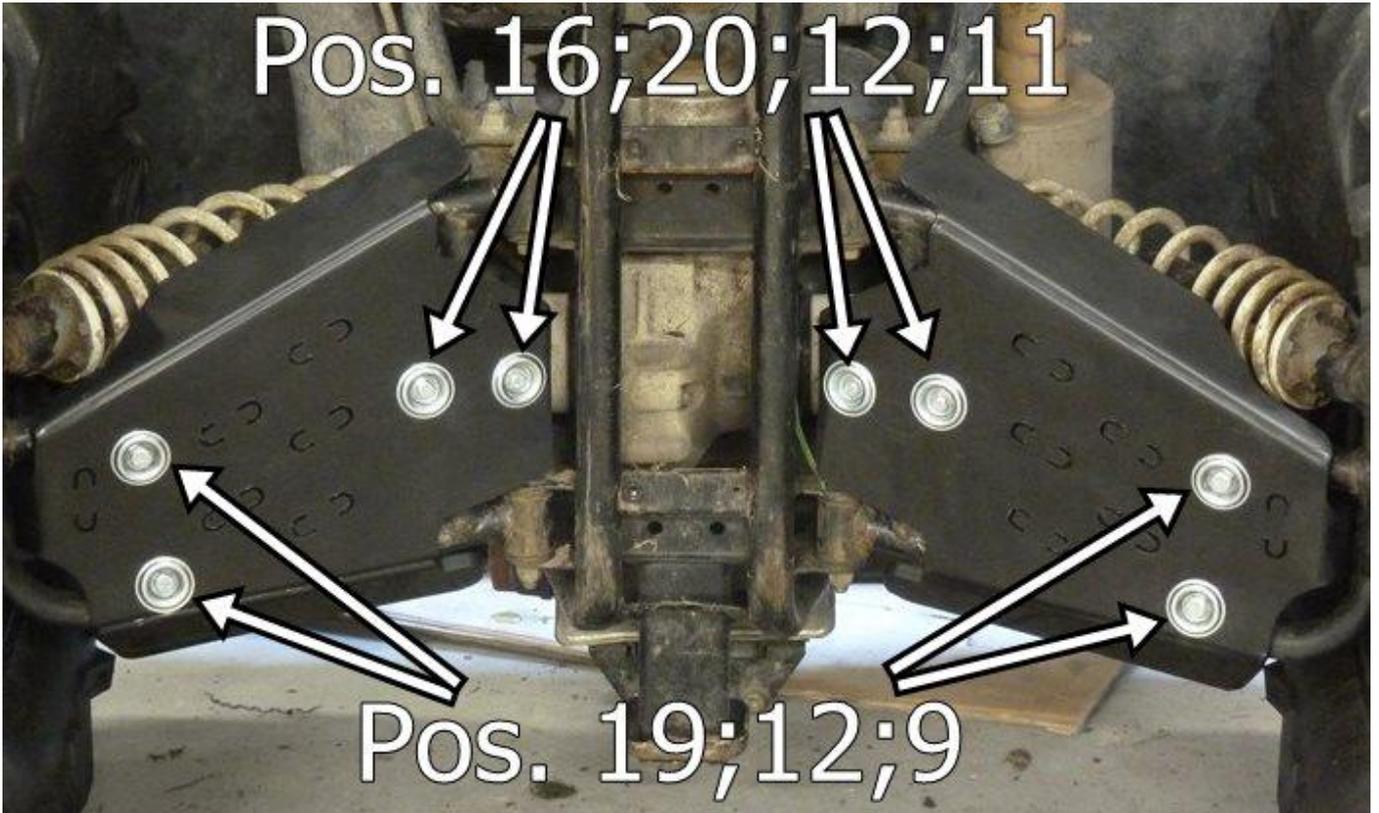


Step 4

Install middle protection 02.9102.

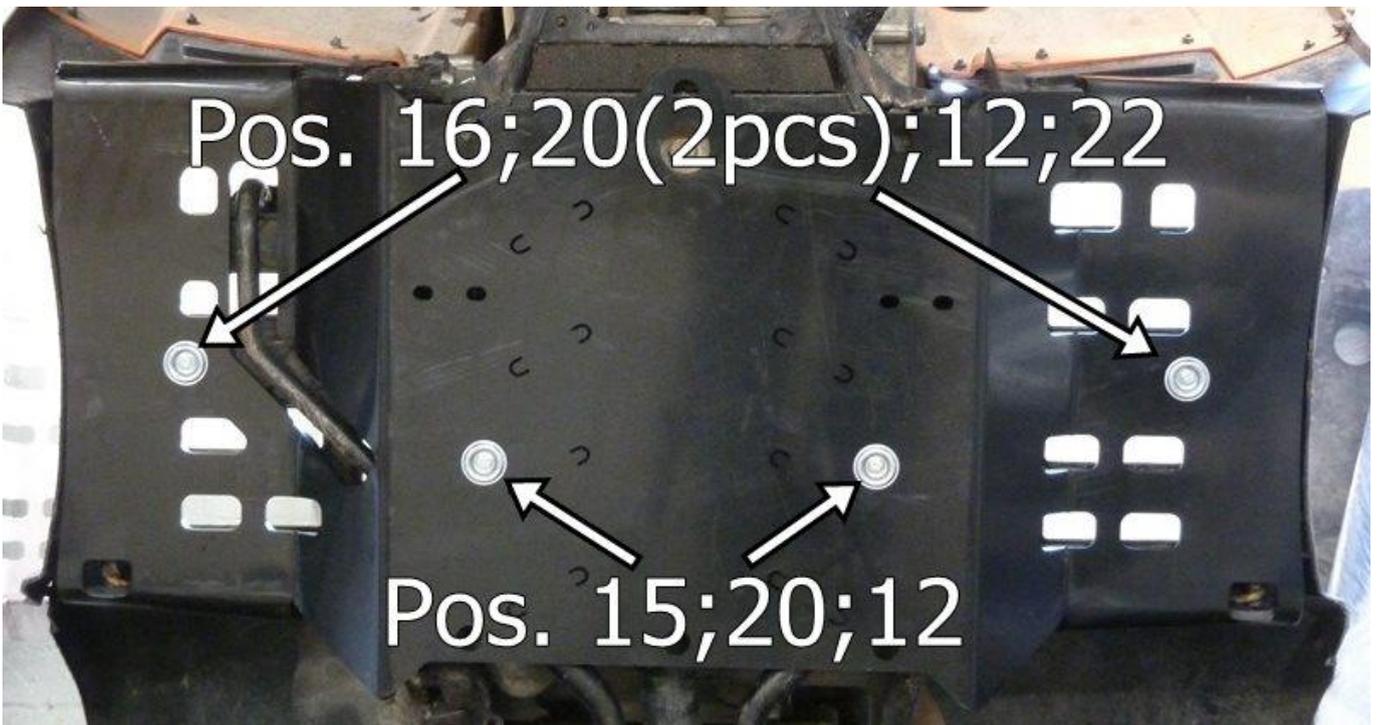



Step 5

Install plates 02.5006 to middle protection.

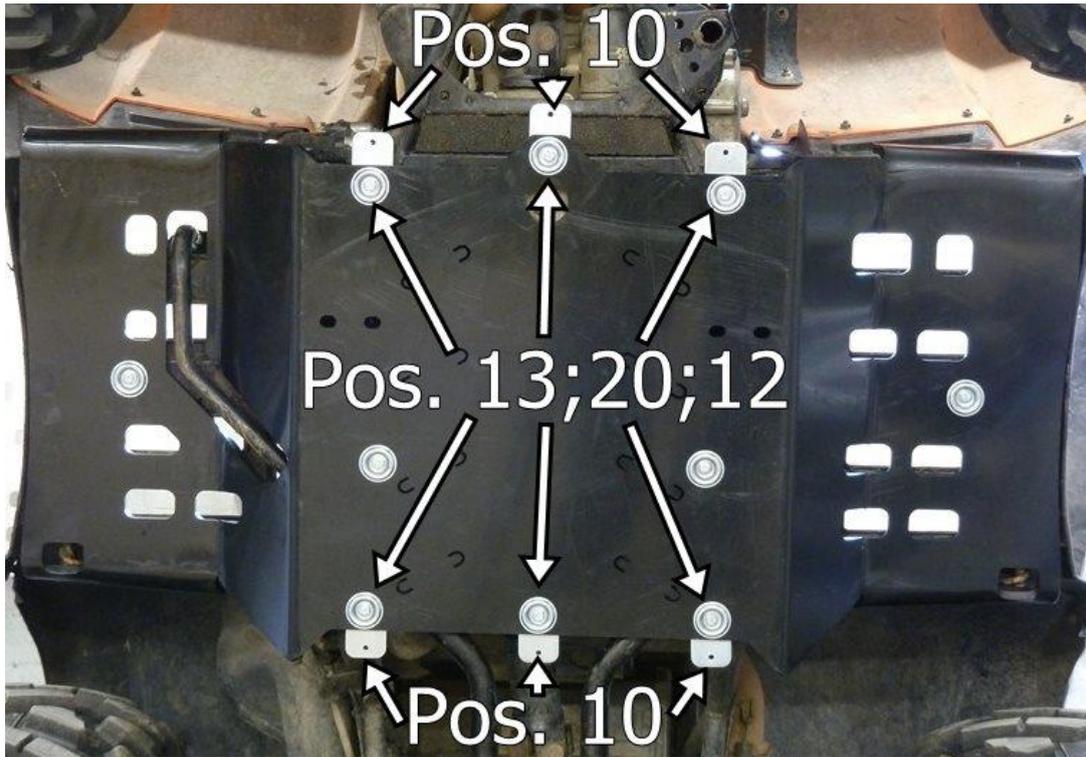


Step 6

Install front protection 02.9101

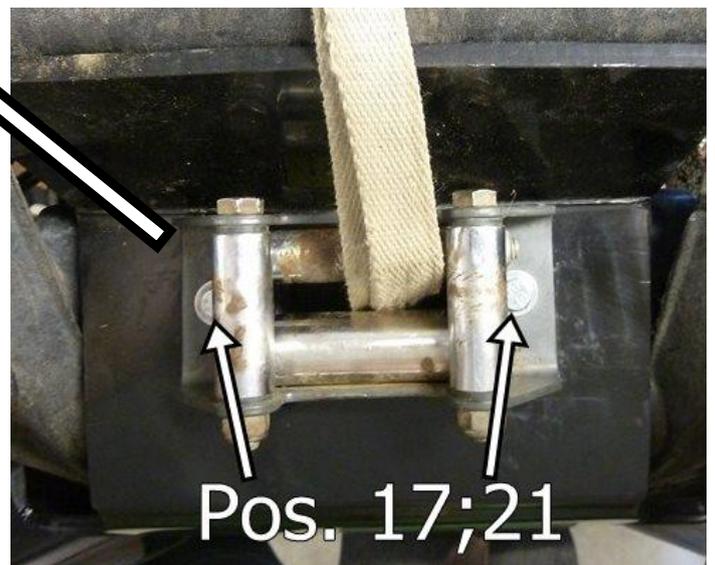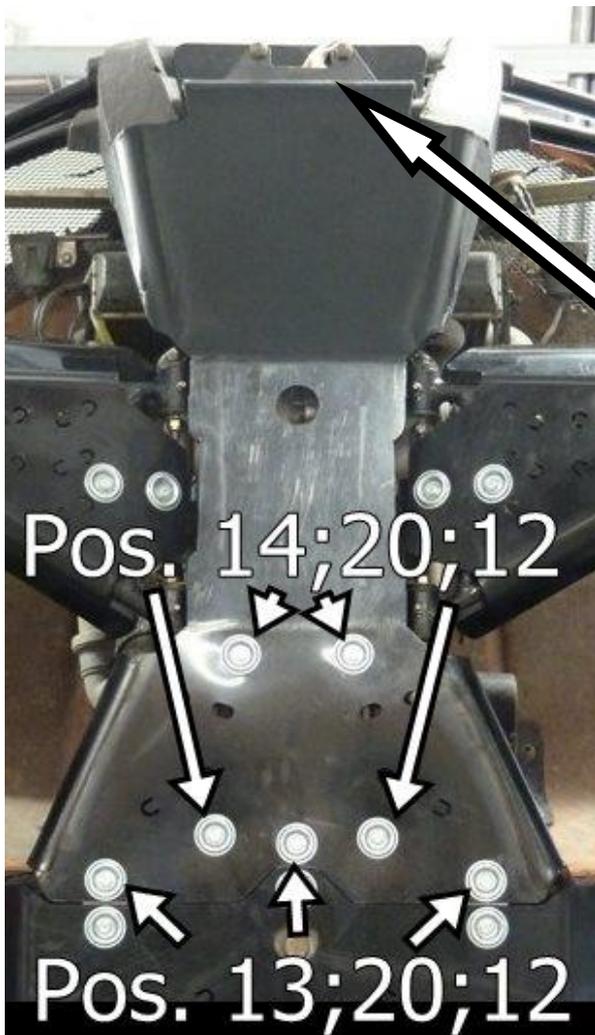

Step 7

Install rear protection 02.9103

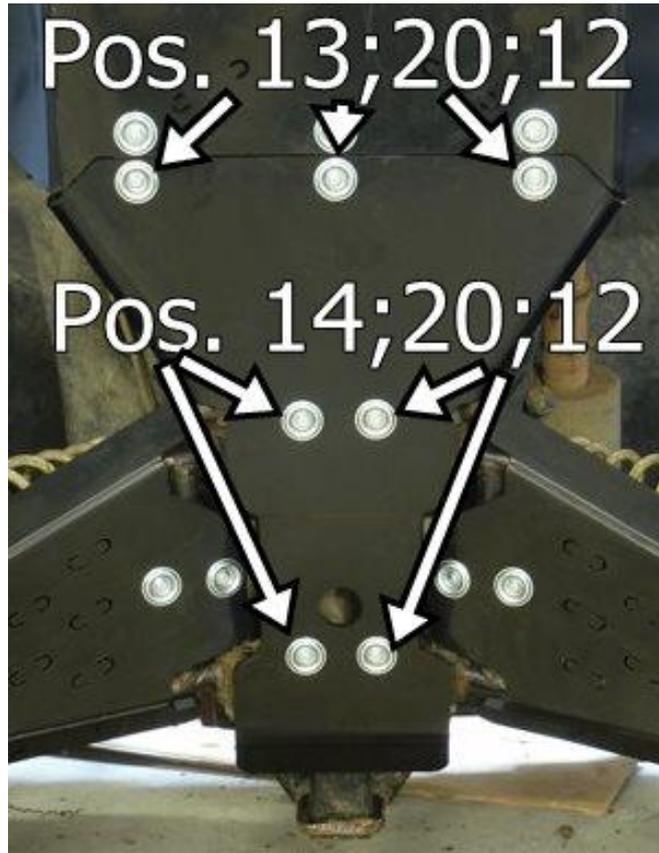

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

