

# IRON BALTIC


## PLASTIC SKID PLATE

# CFMOTO

# X8 LUX

Code 02.9300

Version 30102023

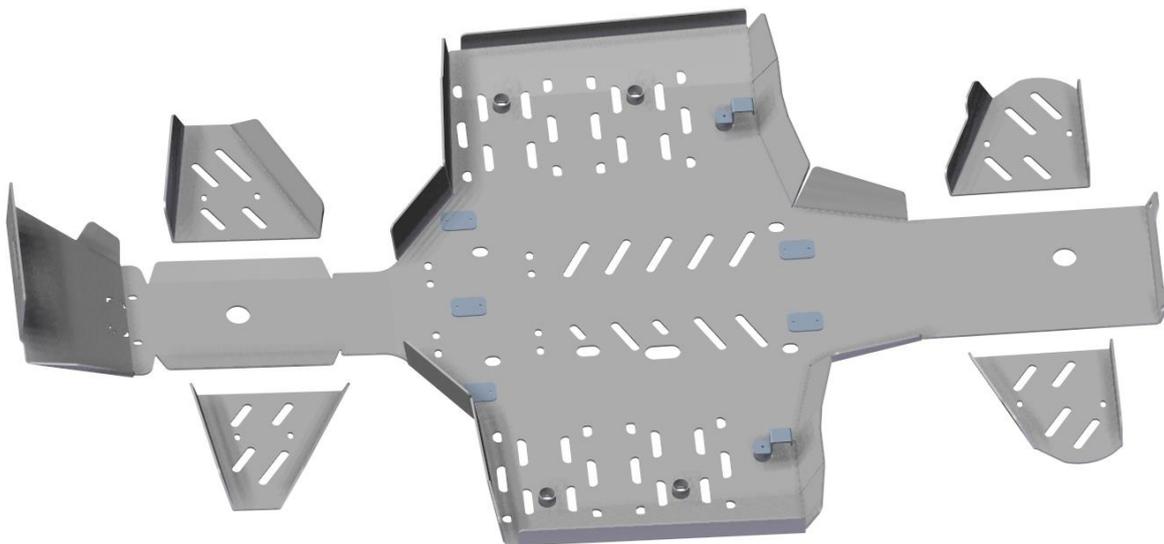

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/1L3ZdhCd](https://code.ironbaltic.com/u/1L3ZdhCd)

# SPECIFICATION



Pos.	Description	Code	Amount
1	Middle part	02.8801K	1
2	Rear part	02.8803	1
3	Front part	02.8802	1
4	Front left arm protection	02.9304	1
5	Front right arm protection	02.9305	1
6	Rear left arm protection	02.9306	1
7	Rear right arm protection	02.9307	1
8	Plate	02.5006	5
9	Installation plate	02.5709	2
10	Bolt M6x20 DIN 7991	OT.02.04.030	18
11	Bolt M6x25 DIN 7991	OT.02.04.040	2
12	Bolt M6x25 DIN 933	OT.02.02.070	2
13	Bolt M6x40 DIN 933	OT.02.02.100	6
14	Bolt M6x70 DIN 933	OT.02.02.150	4
15	Conical washer 6	14.502	20
16	Dished washer	14.503	10
17	Washer 6/15 SFS 3738	OT.04.03.020	16
18	Nut M6 Nyloc DIN 985	OT.03.02.030	4

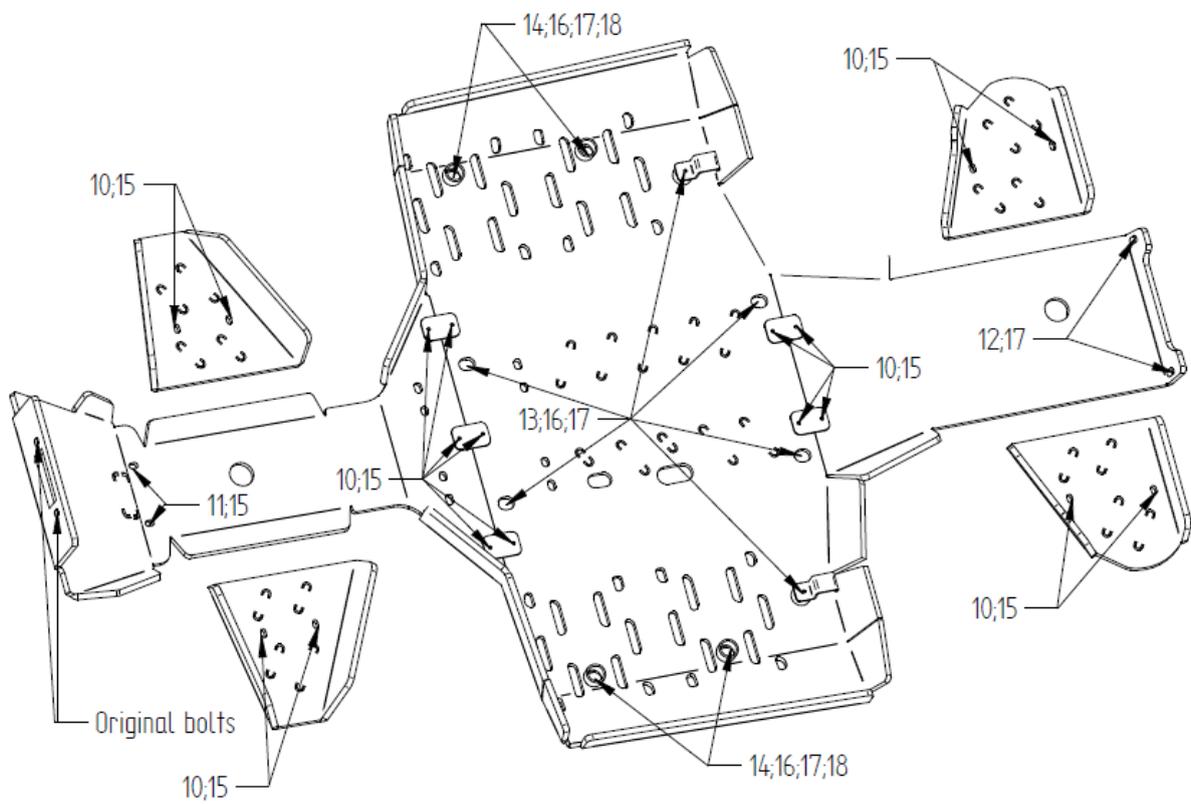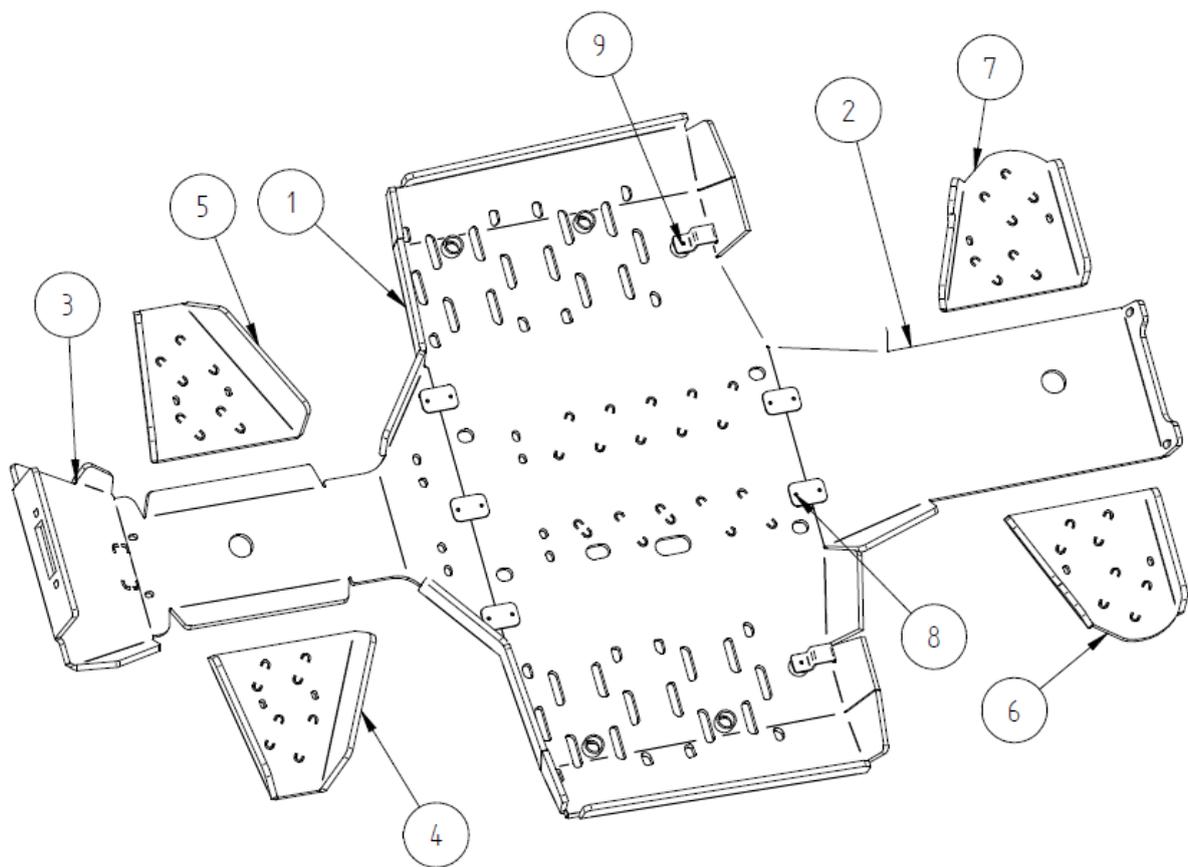

# FITTING INSTRUCTIONS


## Step 1

Remove all standard plastic covers, 4 bolts and install plates 02.5709.

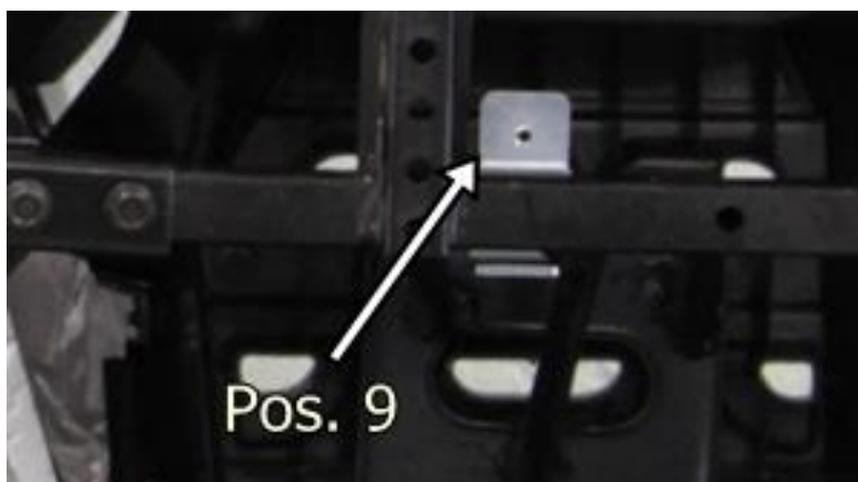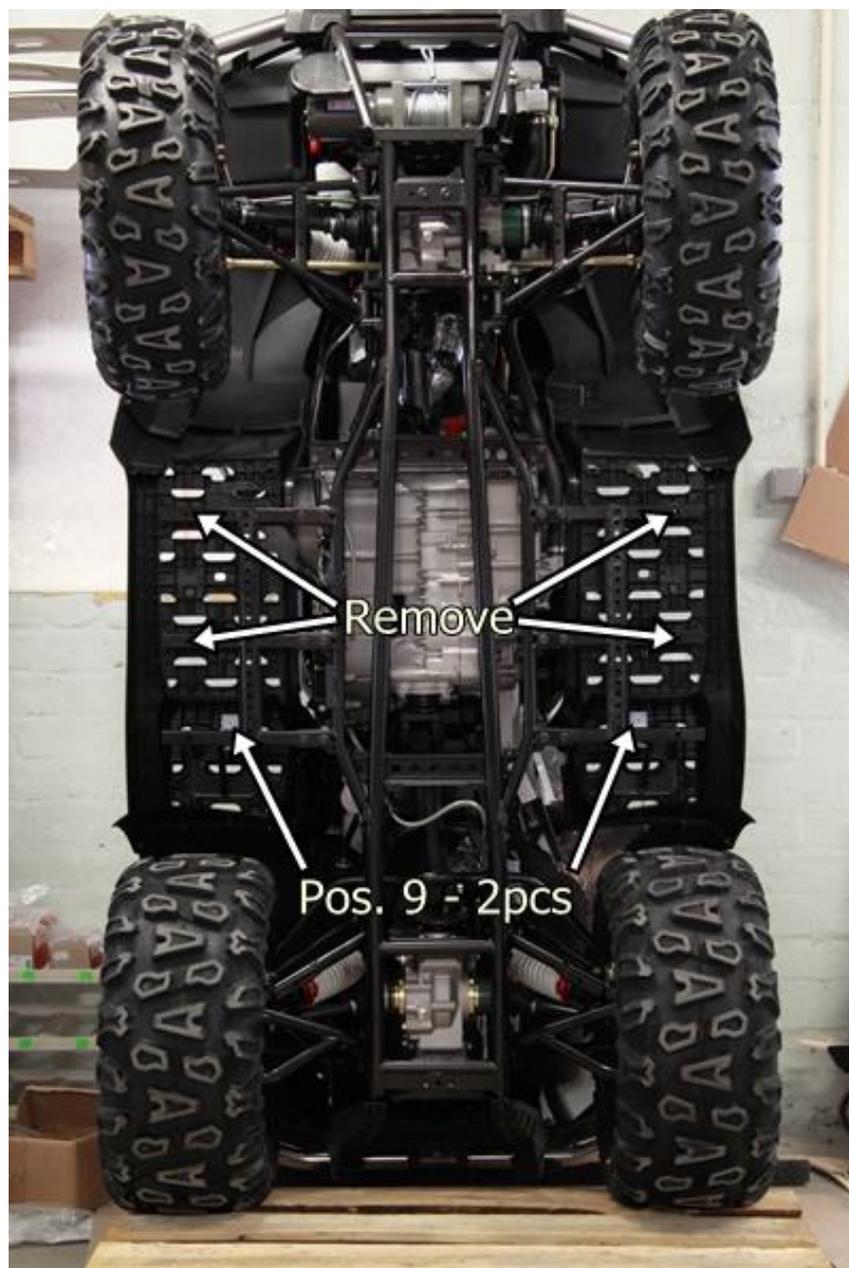


**Step 2**

Install middle part 02.8801K.

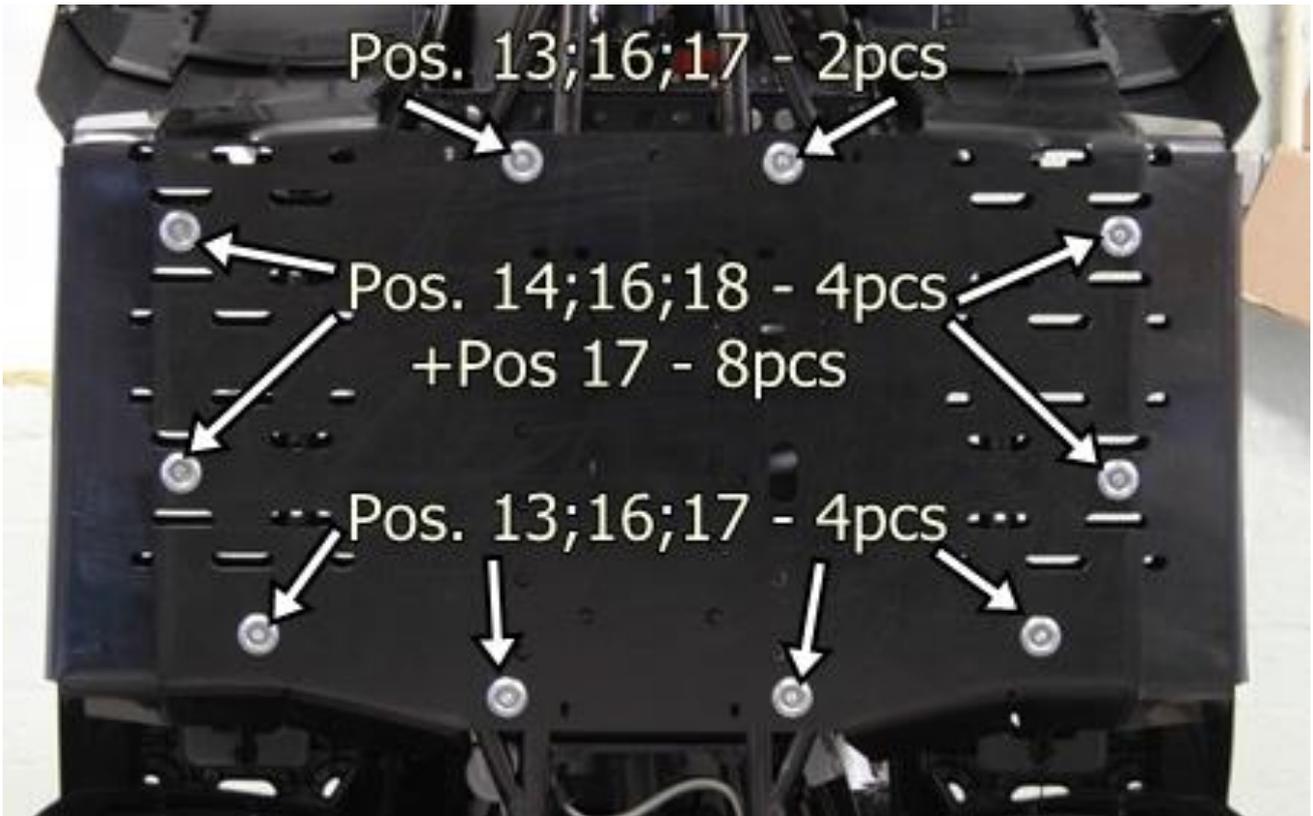


**Step 3**

Install plates 02.5006 to middle part.

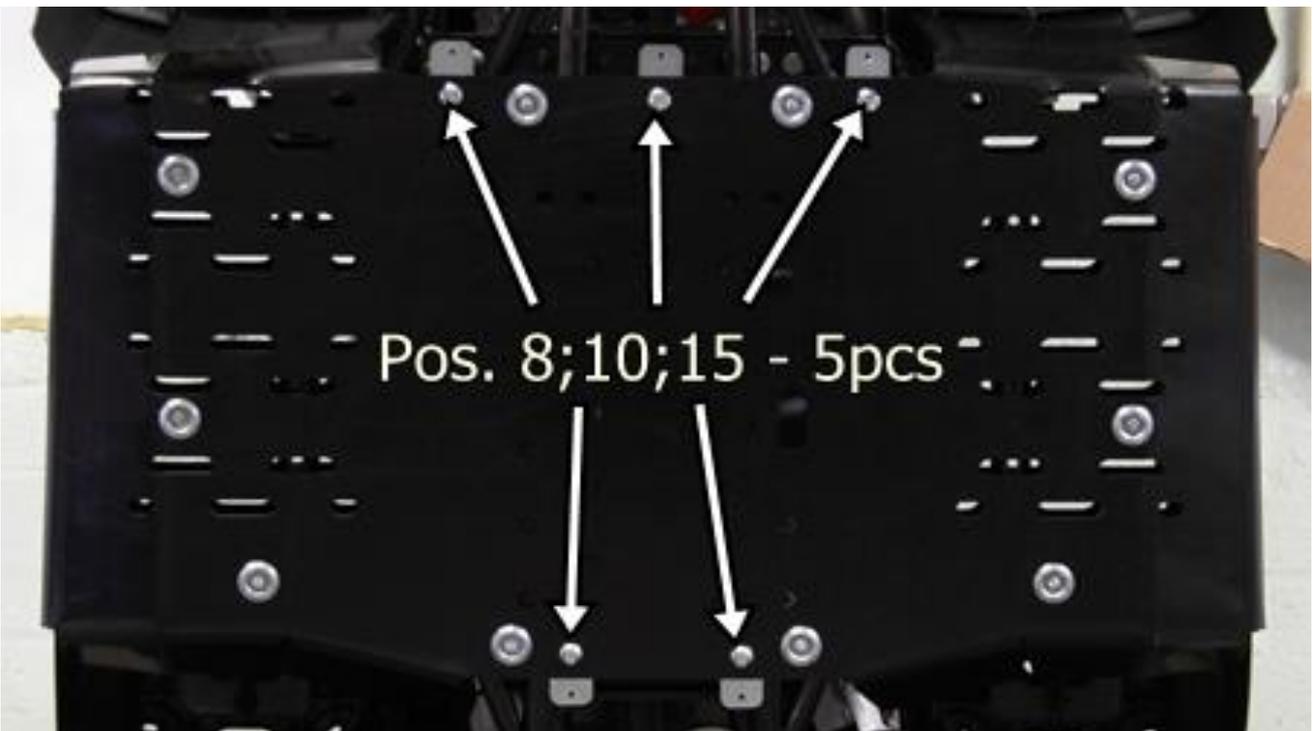



**Step 4**

Install rear part 02.8803.

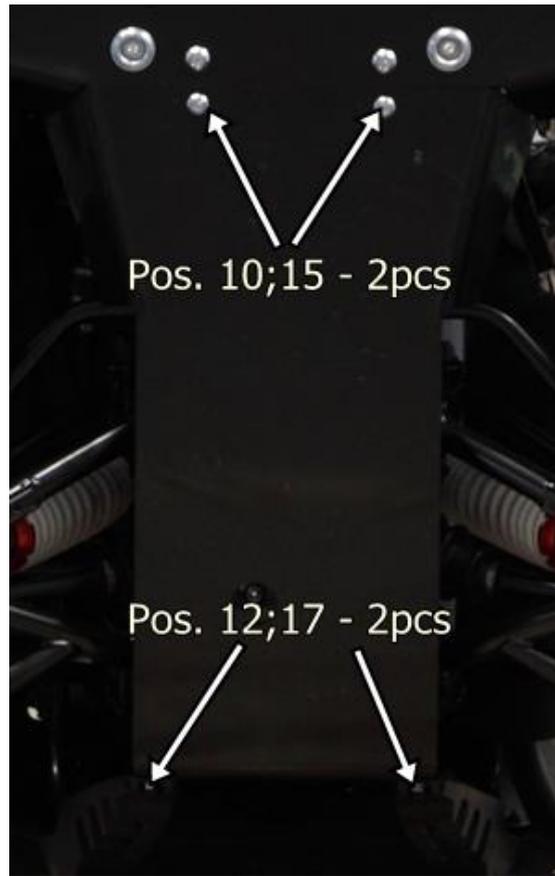


**Step 5**

Install front part 02.8802.

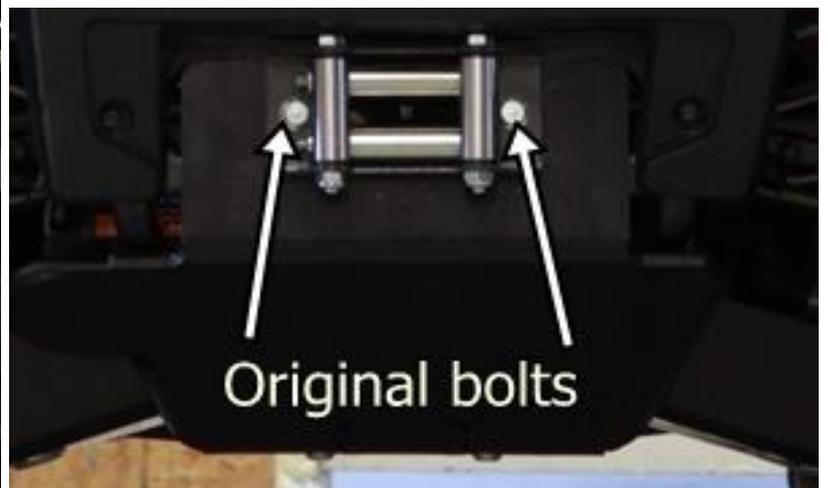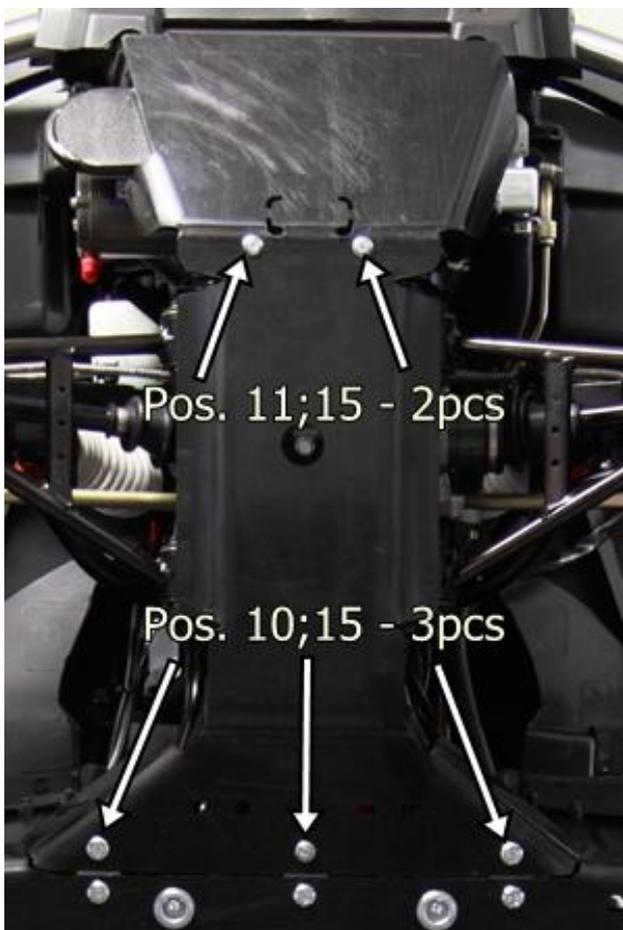


**Step 6**

Install rear arms protections 02.9306 and 02. 9307.

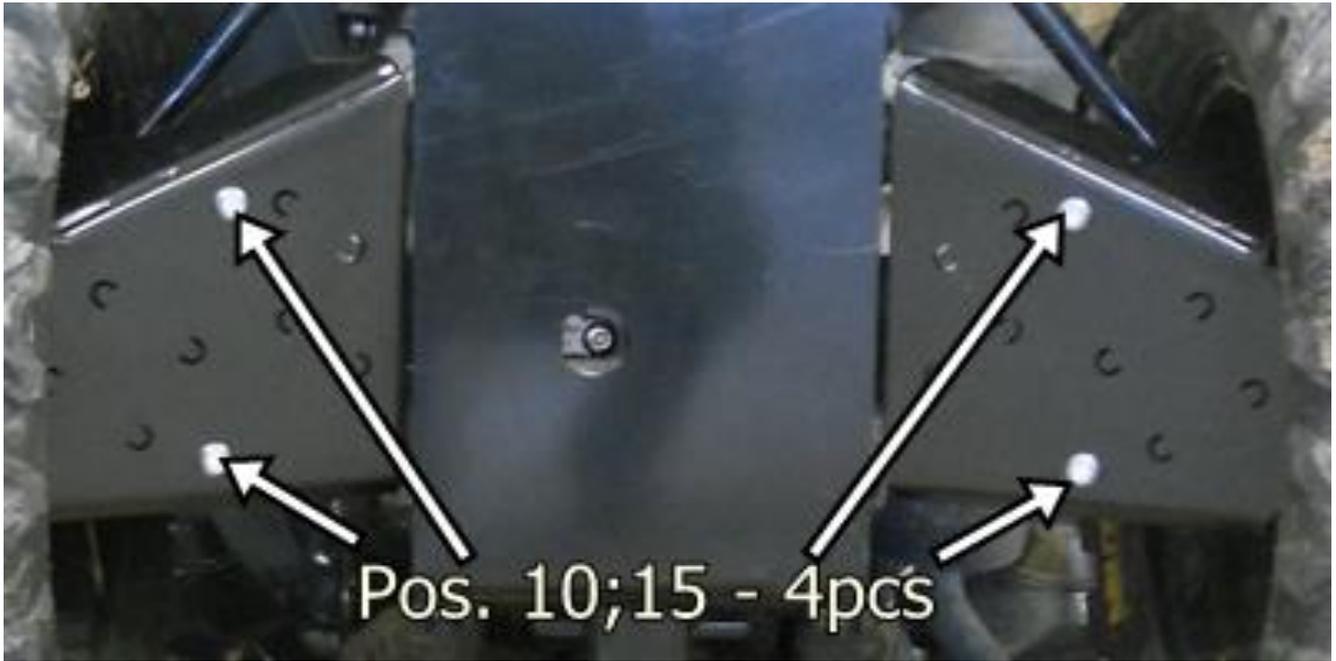

**Step 7**

Install front arms protections 02.9304 and 02. 9305.

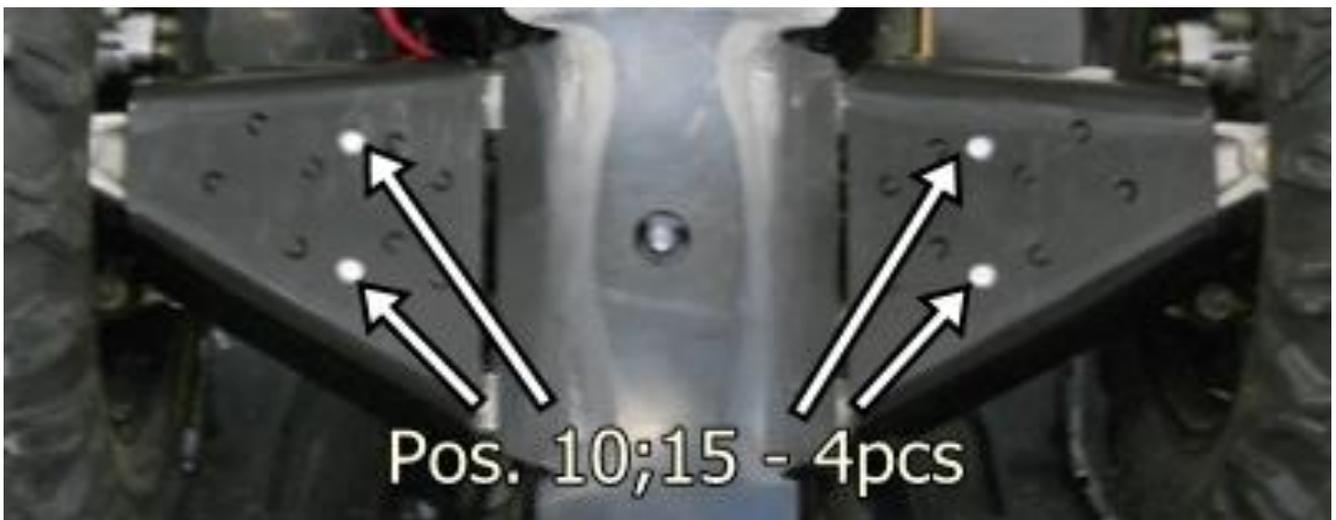

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

