

IRON BALTIC

PLASTIC SKID PLATE

POLARIS

800 Big Boss

Code 02.9700

Version 30102023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/o9Lcs8aa



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.9701	1
2	Front part	02.9702	1
3	Rear part 1	02.9703	1
4	Rear part 2	02.9704	1
5	Front right arm protection	02.1412	1
6	Front left arm protection	02.1413	1
7	Rear right arm protection	02.1414	2
8	Rear left arm protection	02.1415	2
9	Middle part bracket 1	02.9608	2
10	Middle part bracket 2	02.9609	2
11	Front part bracket	02.5602	1
12	Installation plate	02.5006	6
13	Installation plate	02.4010	2
14	Installation plate	02.2305	3
15	Installation plate	02.4011	5
16	Clamp for front arm protection	02.1416	1
17	Clamp for front arm protection	02.1417	1
18	Clamp for rear arm protection	02.1418	4
19	Bolt M6x20 DIN 7991	OT.02.04.030	10
20	Bolt M6x25 DIN 7991	OT.02.04.040	24
21	Bolt M6x20 DIN 933	OT.02.02.060	4
22	Bolt M6x40 DIN 7991	OT.02.04.070	2
23	Bolt M8x30 DIN 7991	OT.02.04.170	10
24	Screw 3/16 UNC X 1" x 16	DIN 912	8
25	Conical washer Ø6	14.502	36
26	Conical washer Ø8	14.501	10
27	Washer Ø5/15 DIN 9021	OT.04.02.010	8
28	Washerr Ø6/18 DIN 9021	OT.04.02.020	4

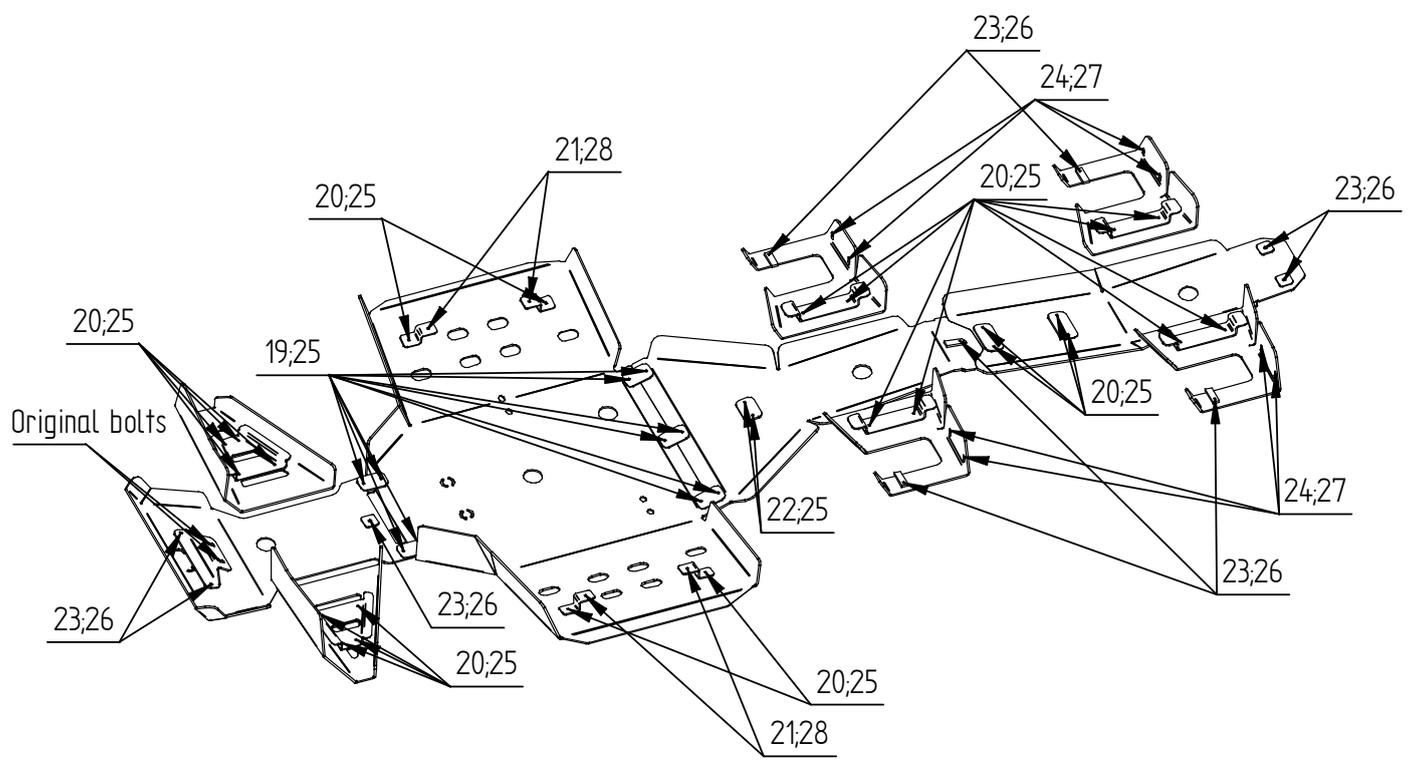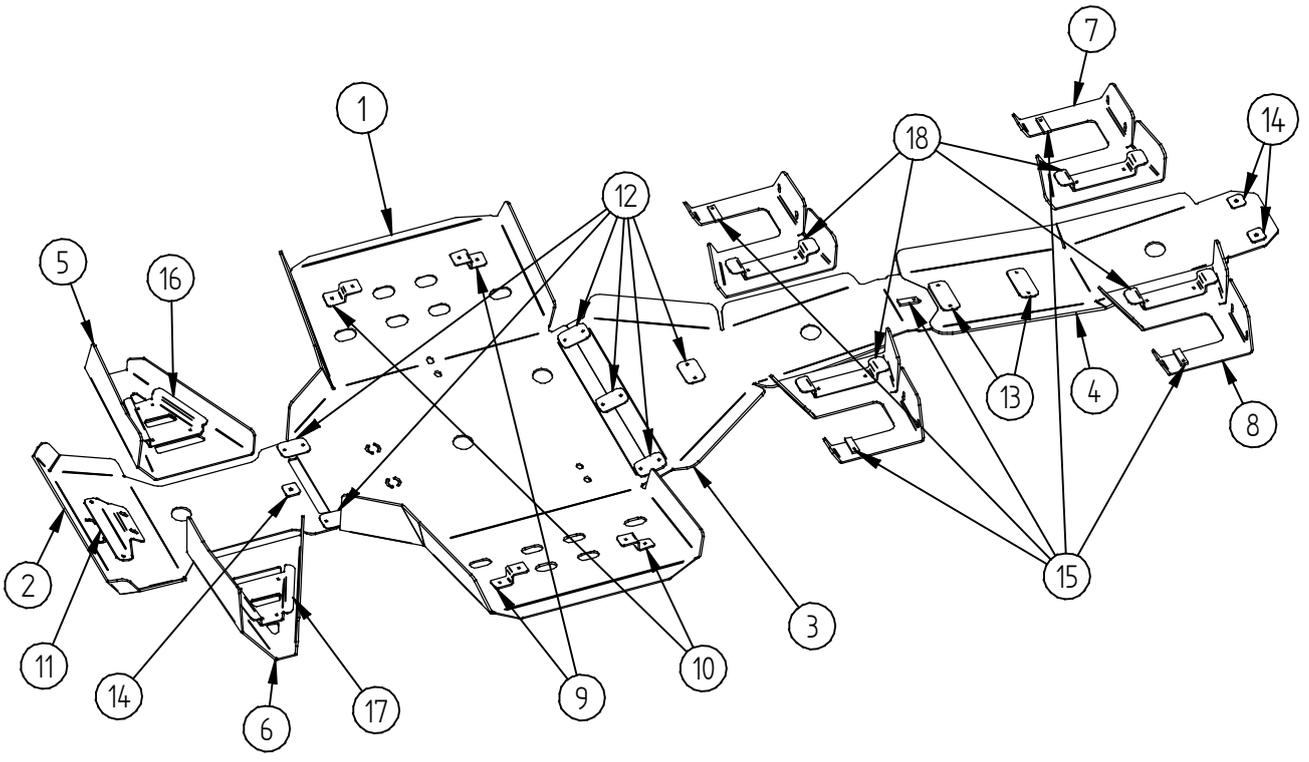


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

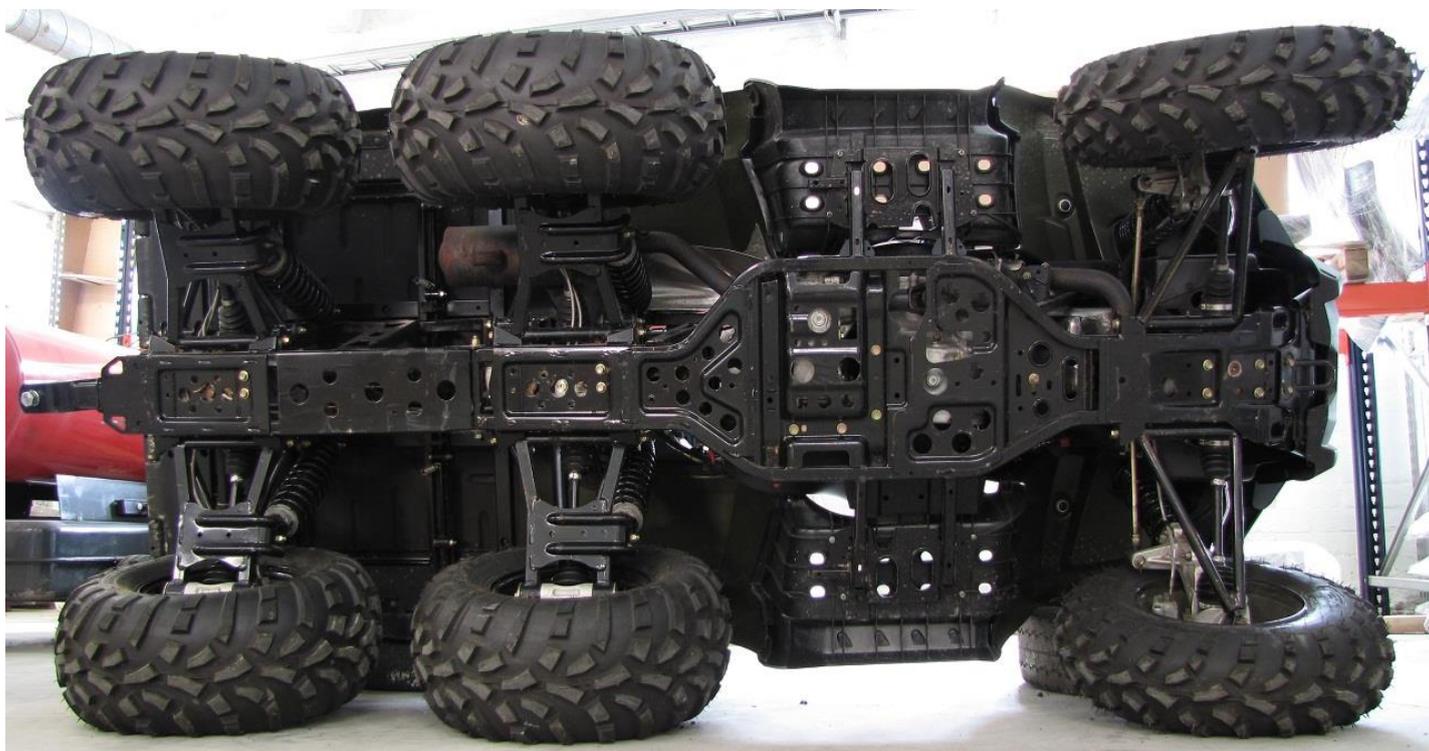


Step 2 Install brackets 02.9608, 02.9609 and 02.5602, use bolts M6x20 and washers Ø6/18.

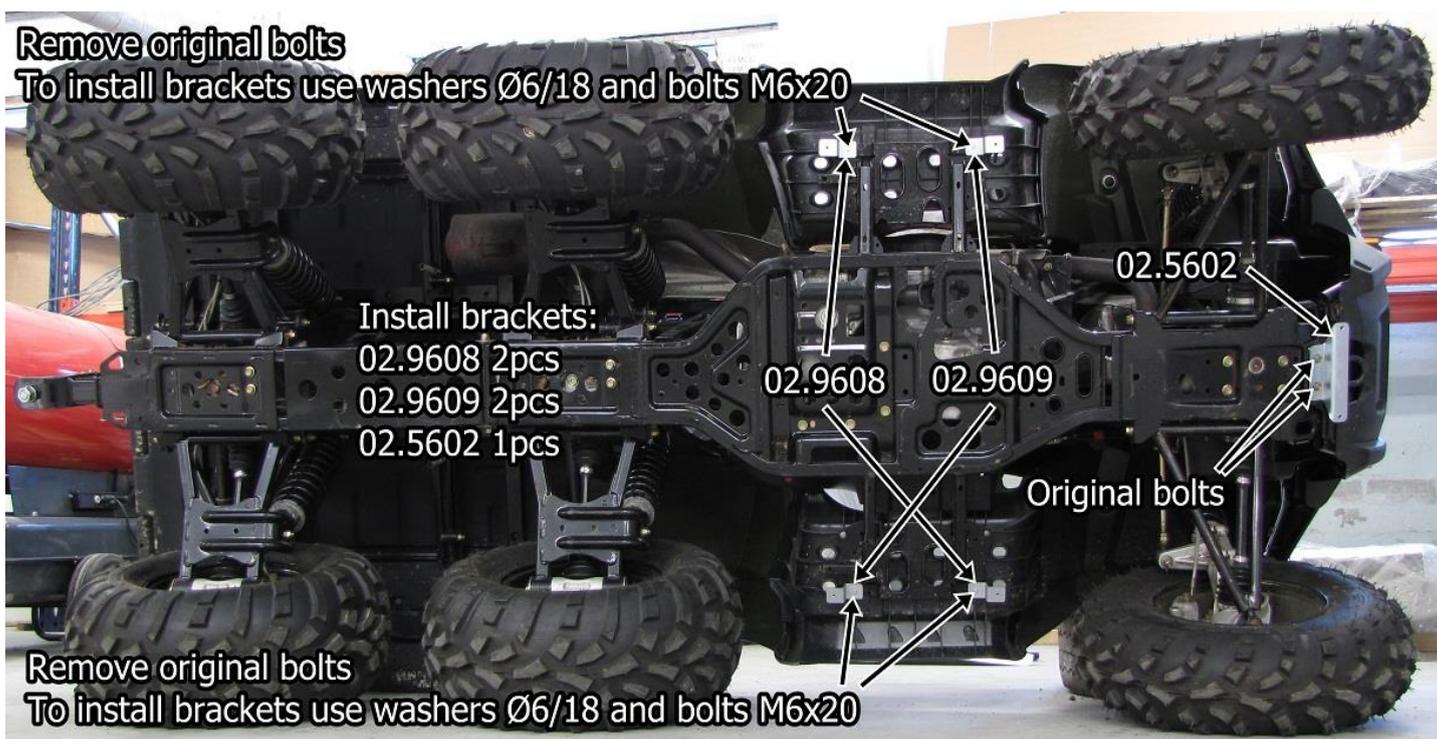


Step 3

Install middle part 02.9701, use bolts M6x25.

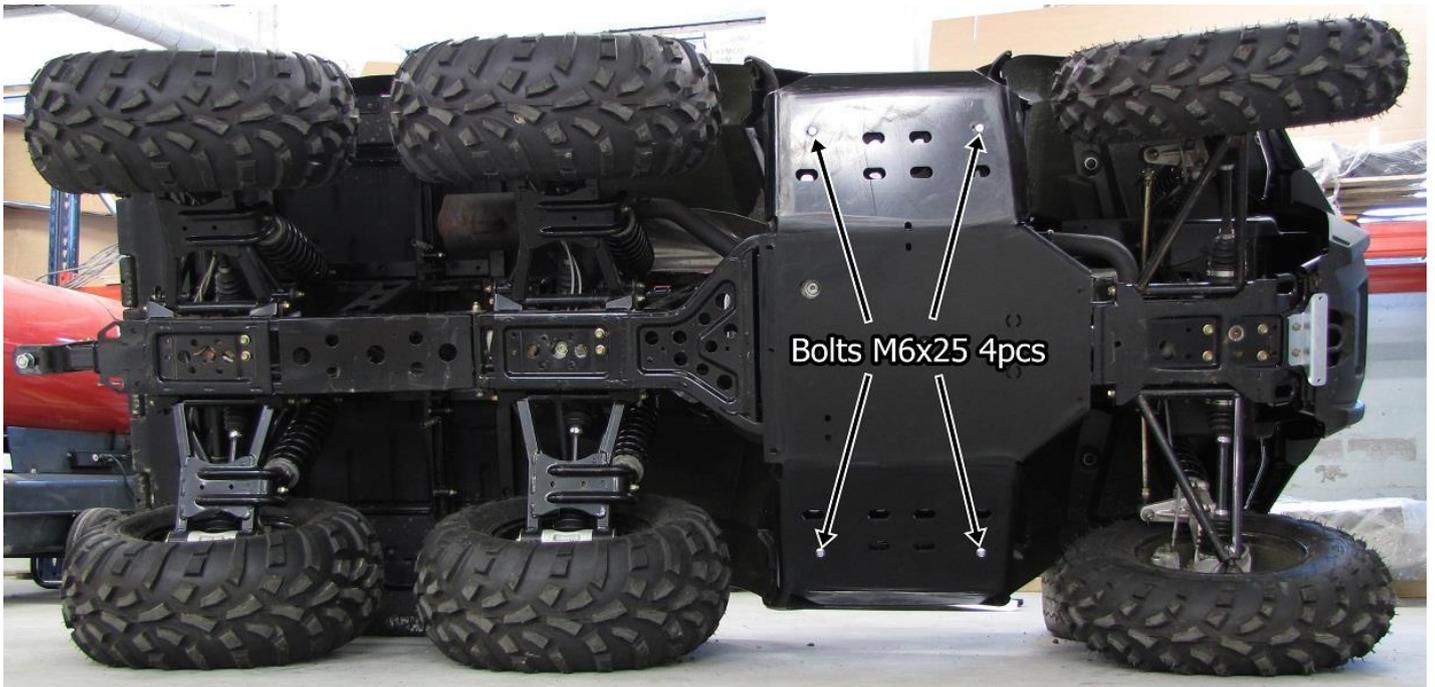

Step 4

Install plates 02.5006, use bolts M6x20.

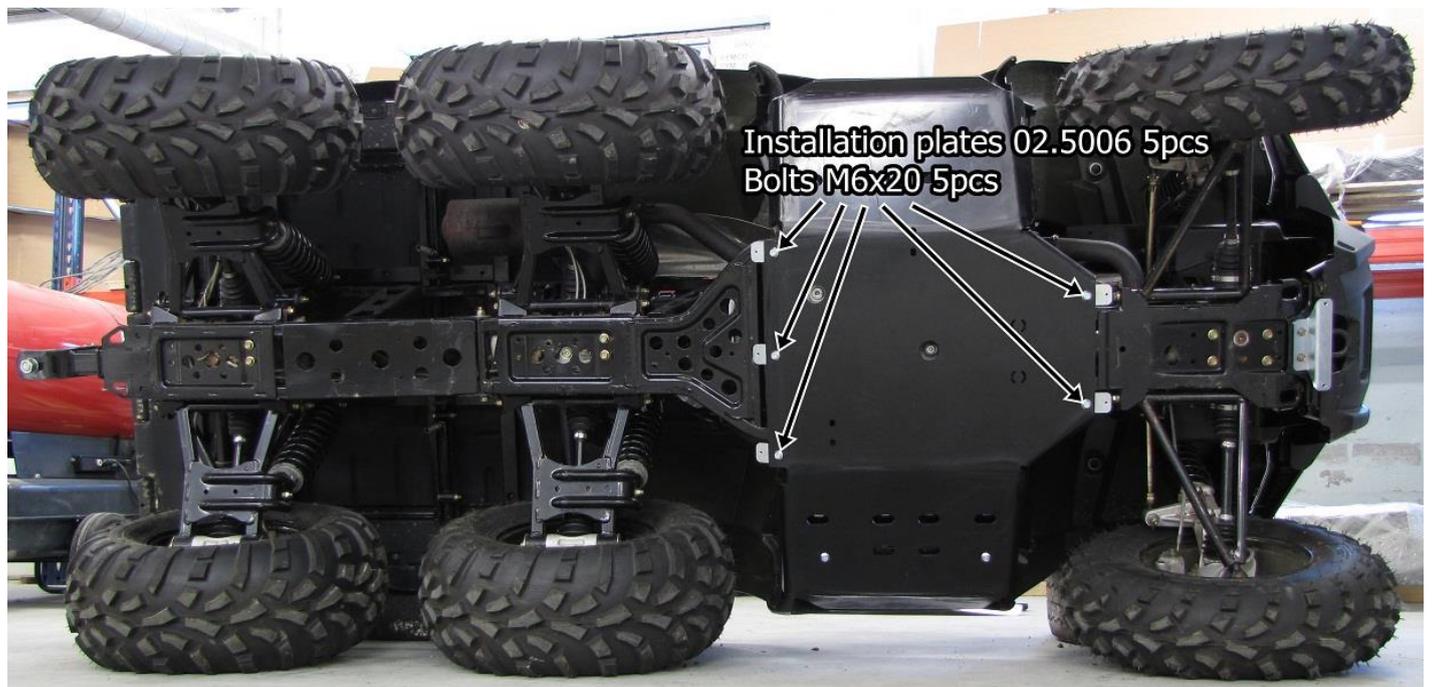


Step 5

Install front part 029702, use bolts M6x20 ja M8x30.




Step 6

Install rear part 02.9703, use bolts M6x20, M6x40, M8x30, installation plate 02.5006 and 02.4011.

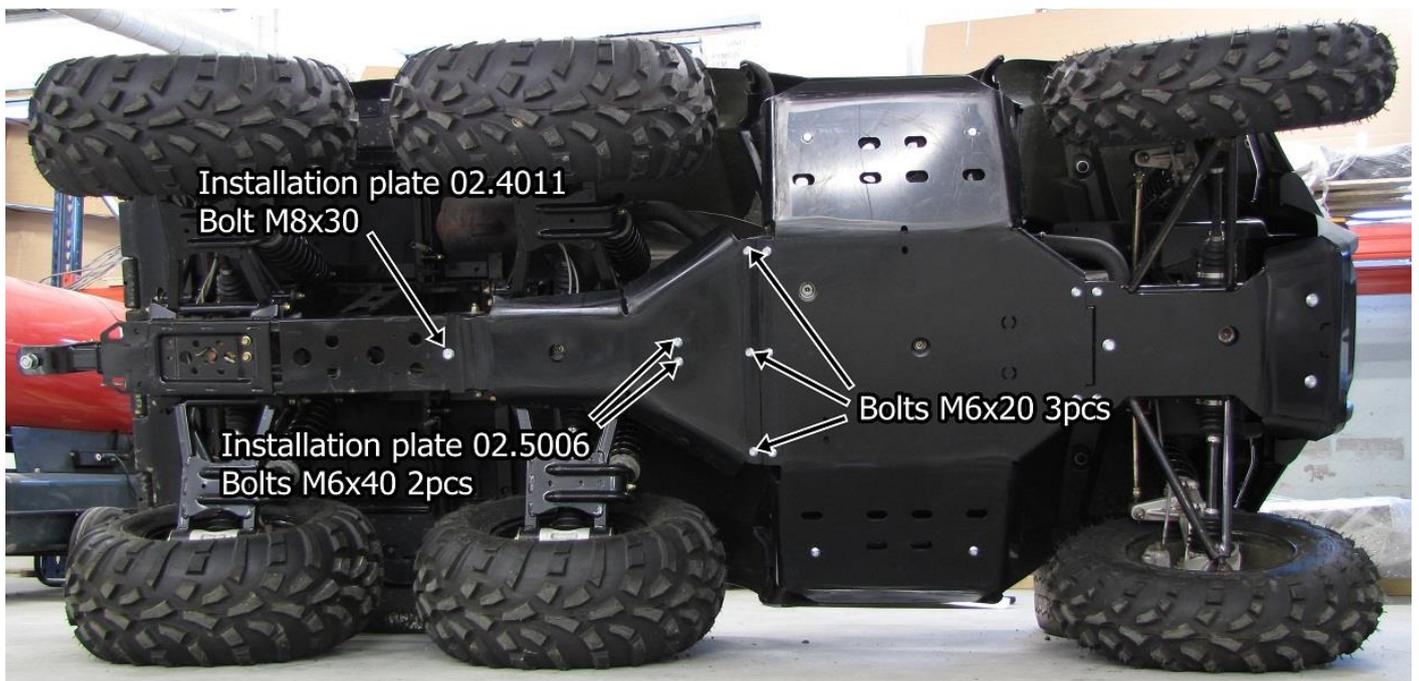


Step 7

Install rear part 02.9704, use bolts M6x25, M8x30, installation plates 02.4010 and 02.2305.

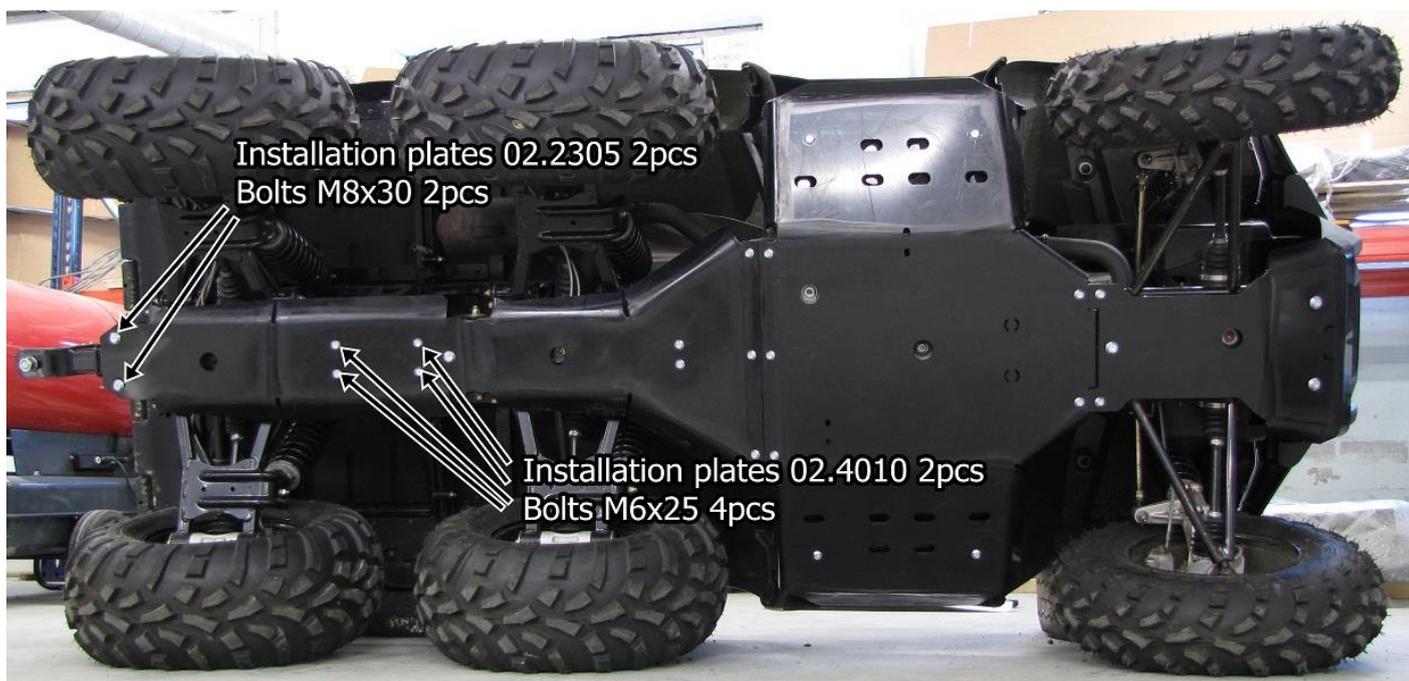


Step 8

Install front arms protections 02.1412, 02.1413, use bolts M6x25 and front arm clamps 02.1416, 02.1417.

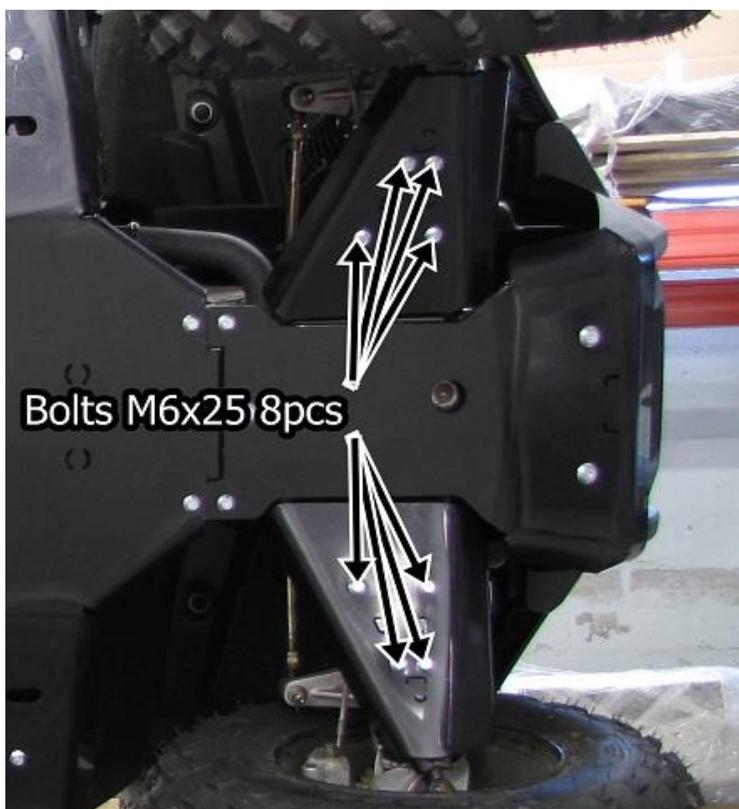

Step 9

Install rear arm protections 02.1414, 02.1415, use bolts M6x25, M8x30, rear arm clamps 02.1418 and installation plate 02.4011.

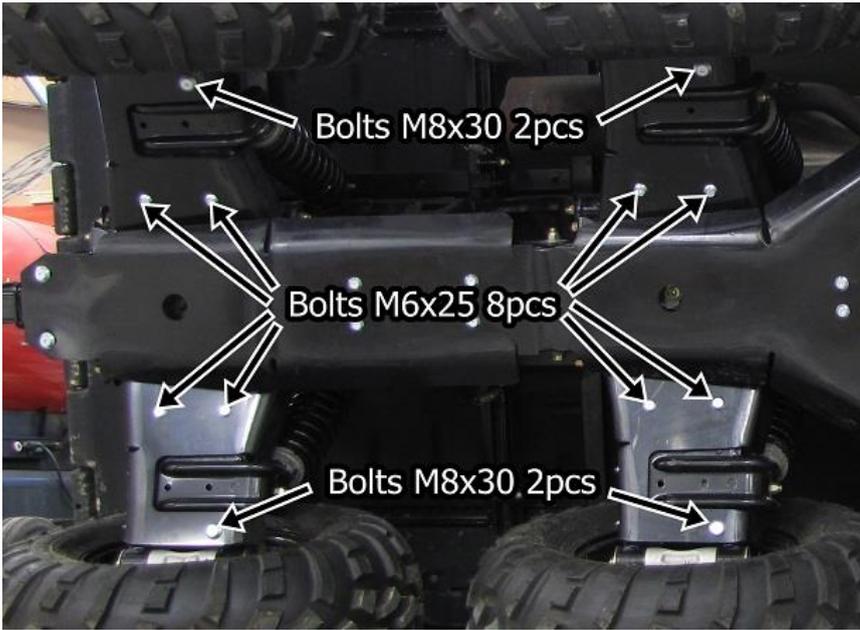

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

