

# IRON BALTIC

## FRONT MOUNT ADAPTER

# LINHAI

# 500

Code 03.10100

Version 11112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/CzsbMp6L](https://code.ironbaltic.com/u/CzsbMp6L)

# SPECIFICATION


Pos.	Description	Code	Amount
1	Adapter	03.10101K	1
2	Installation plate	03.10107	1
3	Bush	03.5906	2
4	Bolt M8x20 DIN933	OT.02.02.180	2
5	Bolt M10x50 DIN931	OT.02.01.042	2
6	Carriage bolt M8x50 DIN603	OT.02.05.075	4
7	Washer 8/20 SFS3738	OT.04.03.030	6
8	Washer M10 DIN125	OT.04.01.040	4
9	Nylock nut M8 DIN985	OT.03.02.040	4
10	Nylock nut M10 DIN985	OT.03.02.050	2

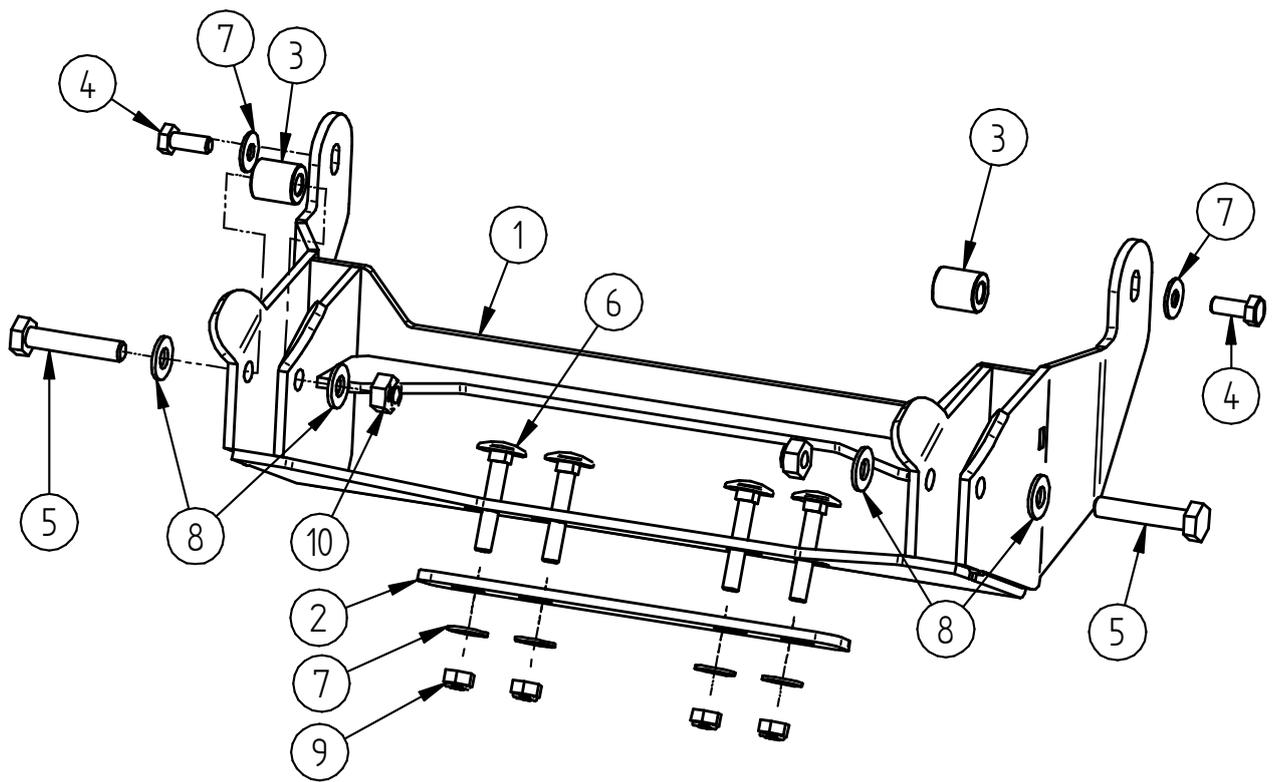

# FITTING INSTRUCTIONS

## Step 1

Remove front bumper original bolts, indicated with arrows.

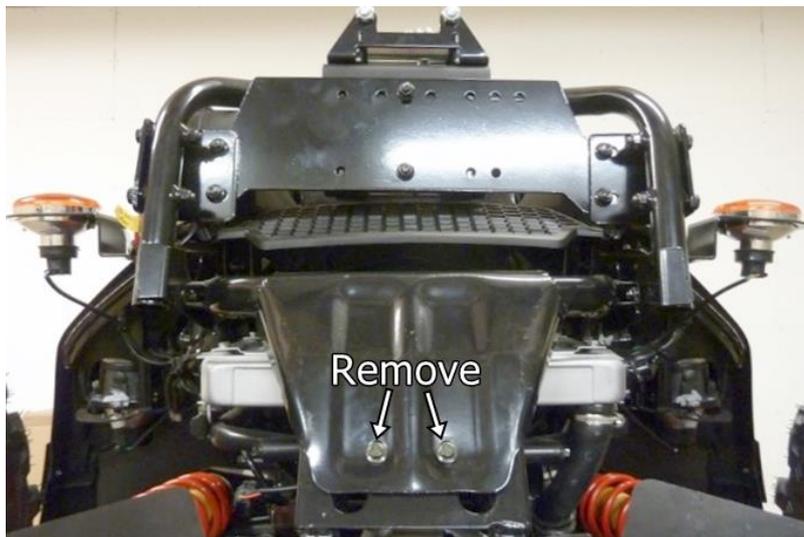

## Step 2

Install bushes 03.5906 to the adapter.



### Step 3

Install adapter. Lift front bumper and place the adapter in place.





### Step 4

Install carriage bolts to adapter and then install plate 03.10107.  
Do not tighten bolts/nuts!



## Step 5

Reinstall front bumper bolts back and then tighten previously installed carriage bolts.

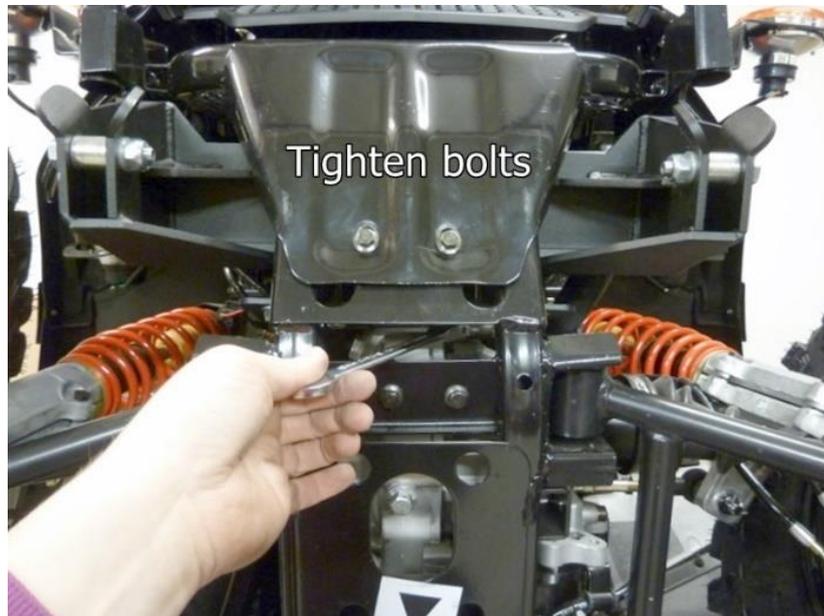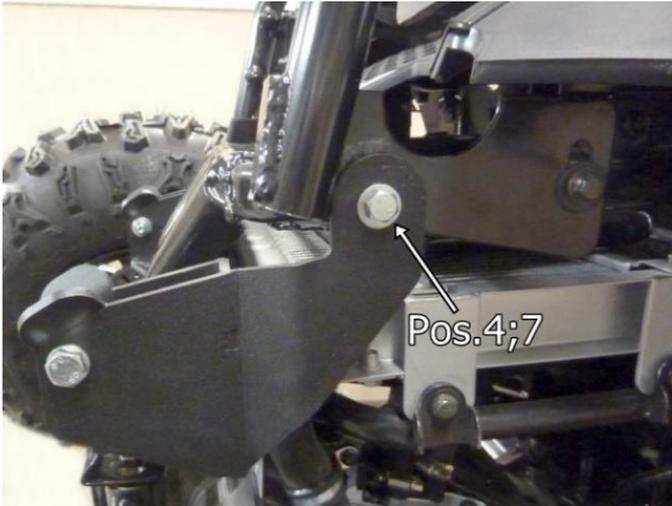



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

