

IRON BALTIC

FRONT MOUNT ADAPTER

UFORCE

1000

Code 03.10600

Version 11112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/vku4kuOE


FITTING INSTRUCTIONS

Step 1 Remove front bumper original bolts and receiver. Installing with Iron Baltic skid plate, remove front part.

Step 2 Install adapter 03.10601K and bushes 03.10605 to the adapter.

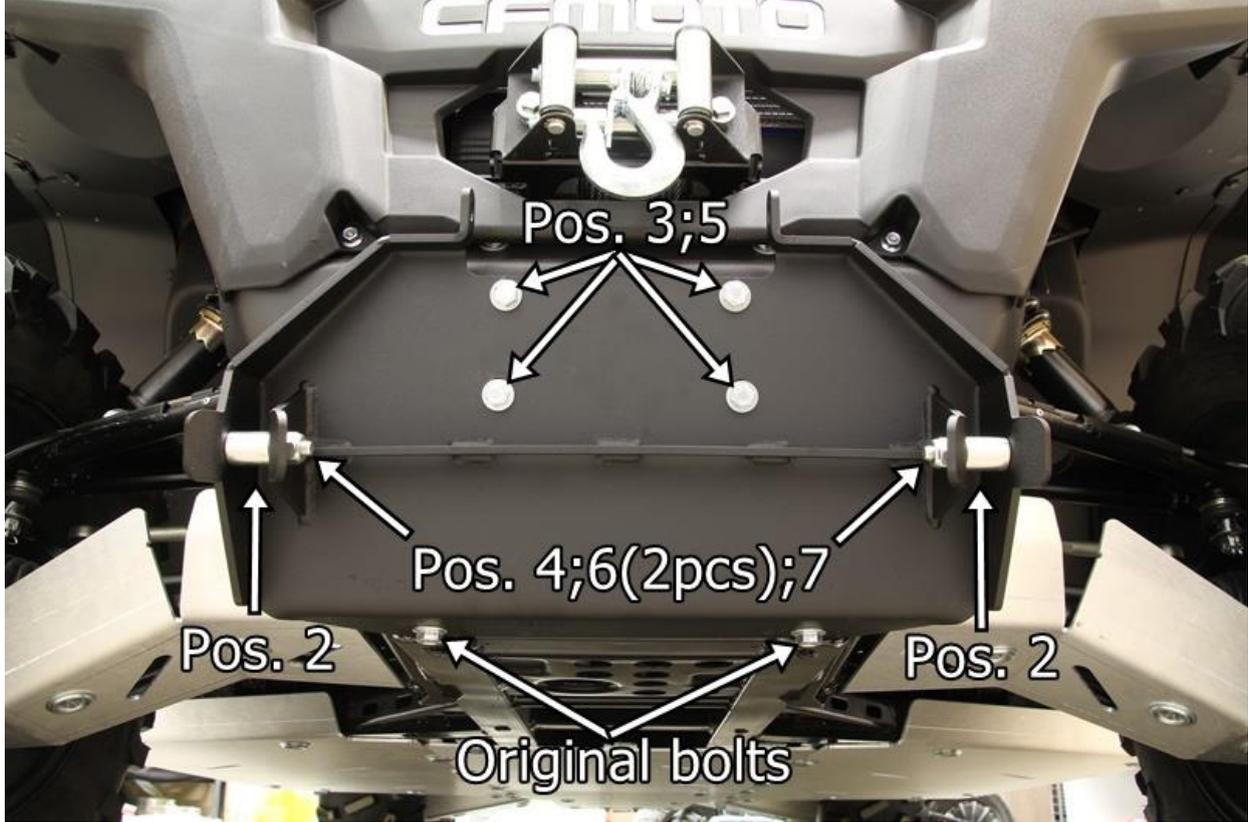

Step 3 Installing with Iron Baltic skid plate, attach the front part to the adapter first and then to the bottom of the UTV.

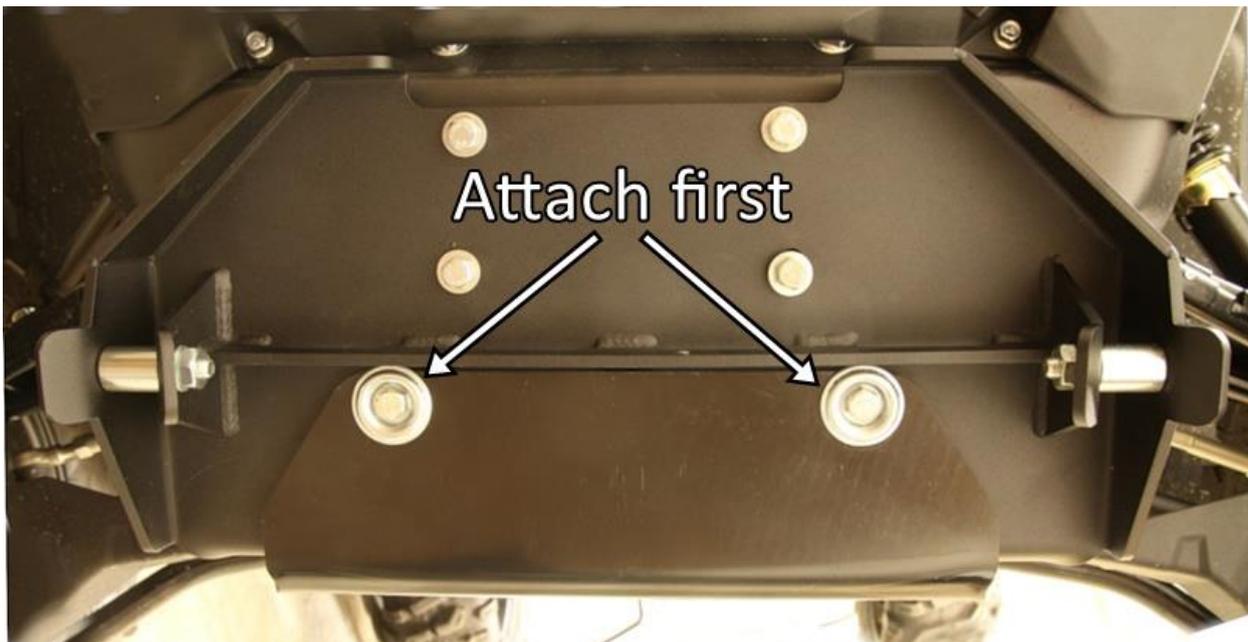

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

