

# IRON BALTIC

## FRONT MOUNT ADAPTER

### LINHAI

### M550 / M550L

Code 03.11100

Version 12112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/LLR1kHVa](https://code.ironbaltic.com/u/LLR1kHVa)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.11101K	1
2	Bush	03.5906	2
3	Installation plate	03.4003	2
4	Carriage bolt M8x50 DIN603	OT.02.05.075	4
5	Bolt M8x25 DIN933	OT.02.02.190	2
6	Bolt M10x50 DIN931	OT.02.01.042	2
7	Bolt M12x35 DIN933	OT.02.02.400	2
8	Washer ø8/20 SFS3738	OT.04.03.030	6
9	Washer M10 DIN125	OT.04.01.040	4
10	Washer M12 DIN125	OT.04.01.050	4
11	Nyloc nut M8 DIN985	OT.03.02.040	4
12	Nyloc nut M10 DIN985	OT.03.02.050	2
13	Nyloc nut M12 DIN985	OT.03.02.060	2

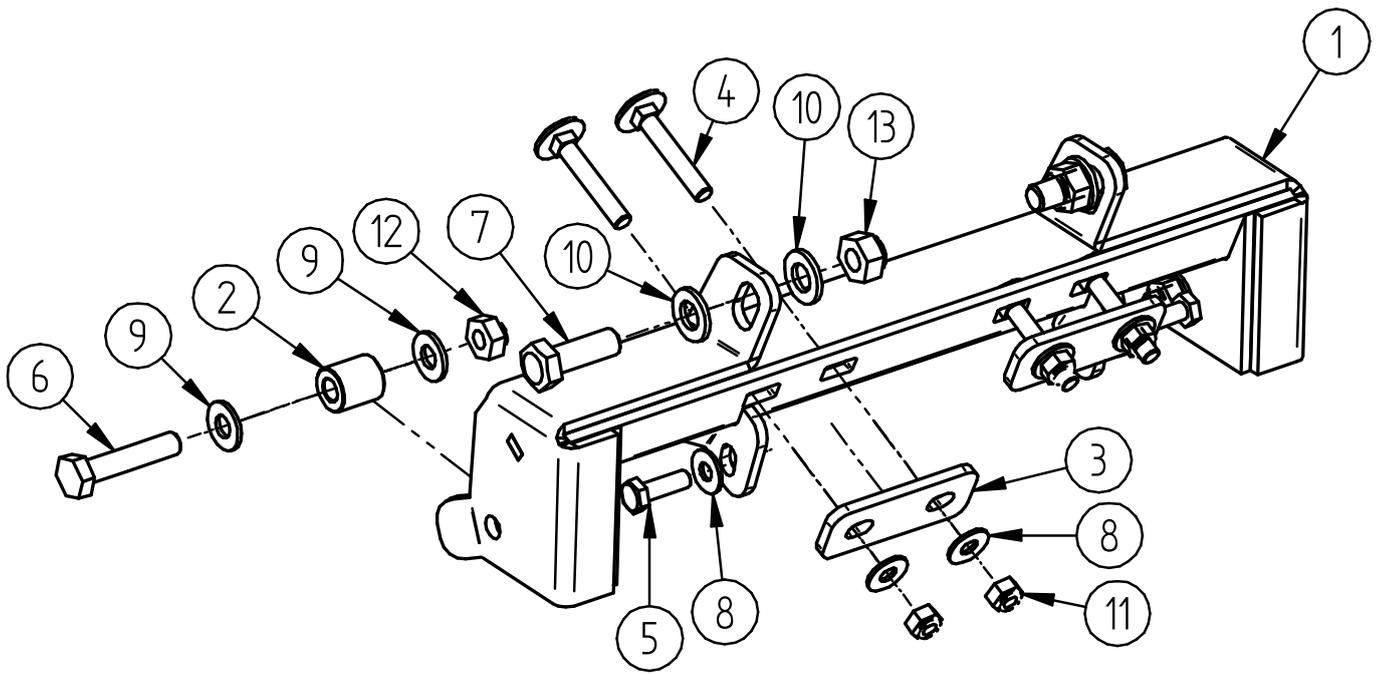

# FITTING INSTRUCTIONS

## Step 1

Remove protective plate in front of the ATV and front bumper bolts on both sides. For easier installation, remove the bolt from coolant hose clamp.




## Step 2

Install bushes 03.5906.






## Step 3

Install adapter between ATV frame from the right side. Pull the front bumper away little bit and if needed push the coolant hose upwards.

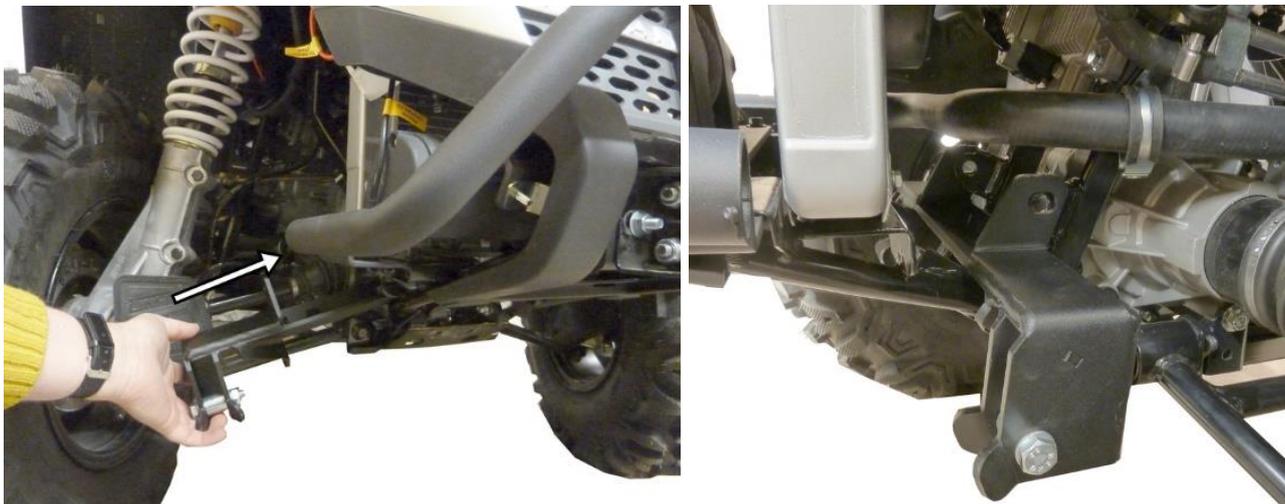

### Step 4

Place bolts/nuts. Tighten bolts/nuts only after every bolt/nut has been placed in position.

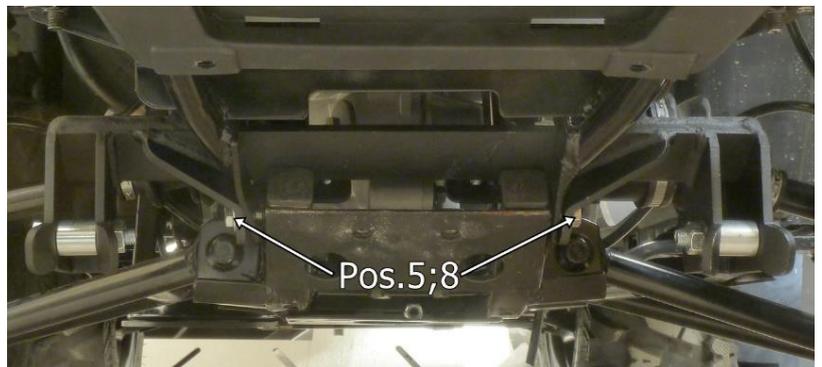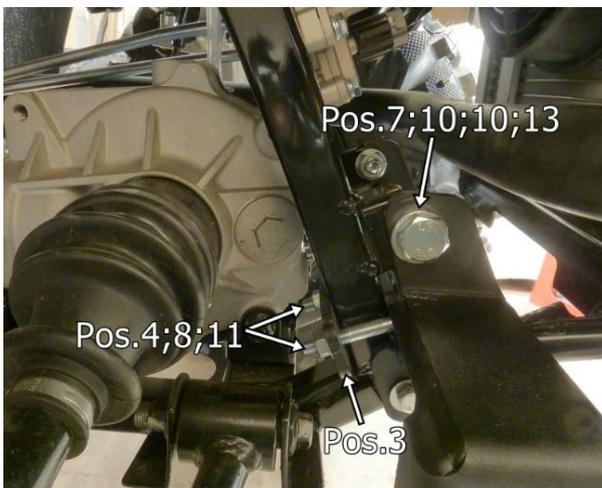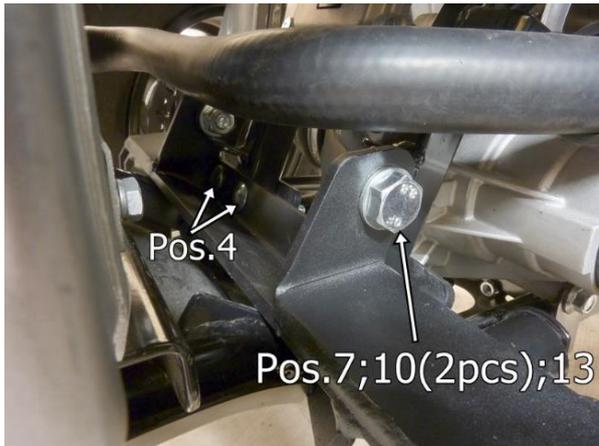

### Step 5

Reinstall protective plate back in front of the ATV and radiator hose clamp bolt.







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

