

IRON BALTIC


FRONT MOUNT ADAPTER

KYMCO

MXU 700 (2020)

Code 03.12300

Version 13112023

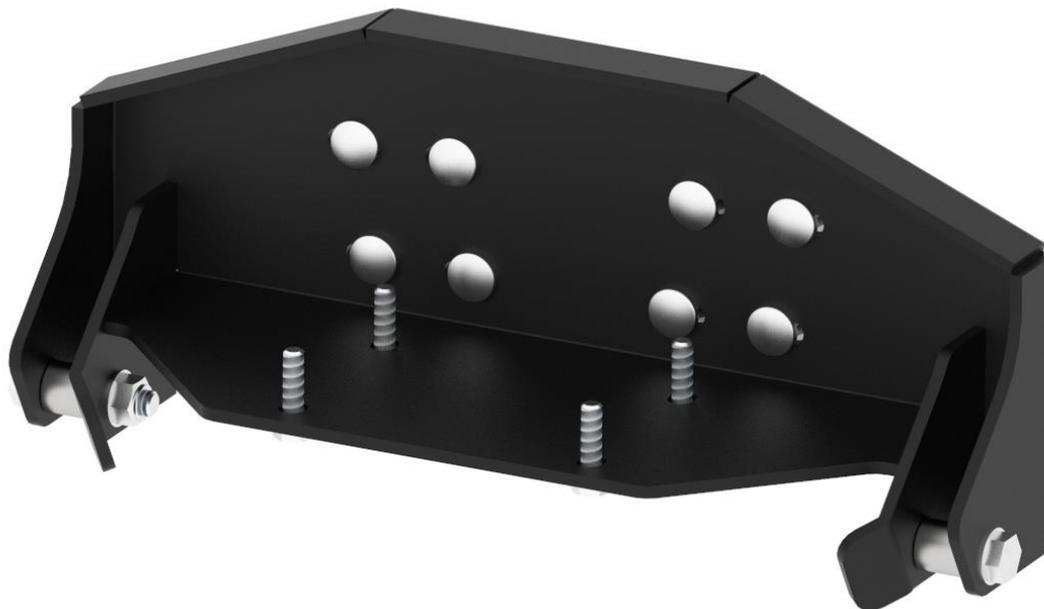

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/9gxLsYf8

SPECIFICATION


Pos.	Description	Code	Amount
1	Snow plow adapter	03.12301K	1
2	Bush	03.5906	2
3	Pipe clamp bracket (32mm)	OT.05.04.020	4
4	Bolt M8x30 DIN933	OT.02.02.200	4
5	Carriage bolt M8x60 DIN603	OT.02.05.080	8
6	Bolt M10x50 DIN931	OT.02.01.042	2
7	Washer Ø8/20 SFS3738	OT.04.03.030	12
8	Washer Ø10 DIN125	OT.04.01.040	4
9	Nyloc nut M8 DIN985	OT.03.02.040	8
10	Nyloc nut M10 DIN985	OT.03.02.050	2

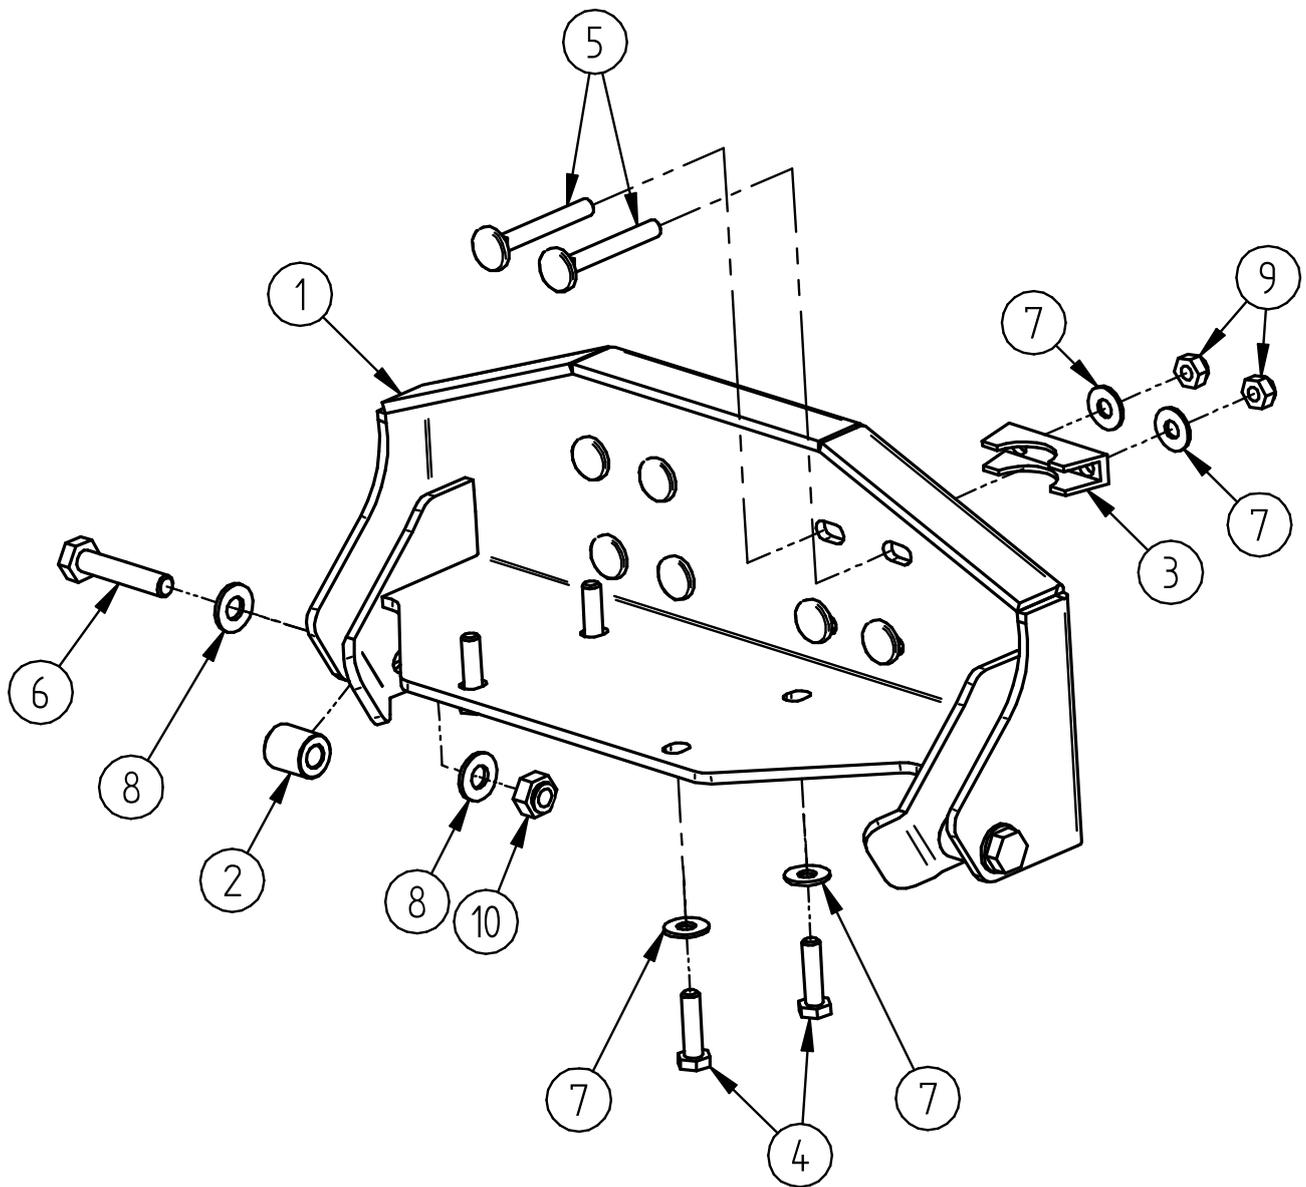

FITTING INSTRUCTIONS


Step 1

Remove winch.

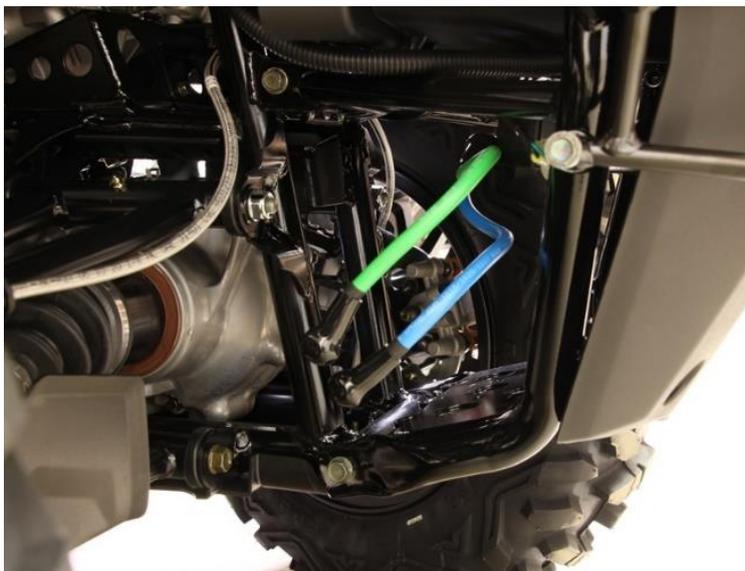

Step 2


Install adapter (Pos.1).

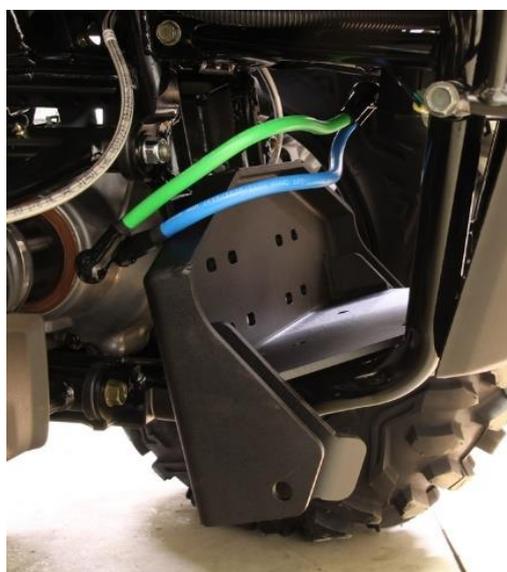

Step 3


Attach the adapter to the ATV frame. For fastening use M8x60 carriage bolts (Pos.5), clamp brackets (Pos.3), Ø8 mm washers (Pos.7) and M8 nyloc nuts (Pos.9).

NB! To not tighten the bolts completely!

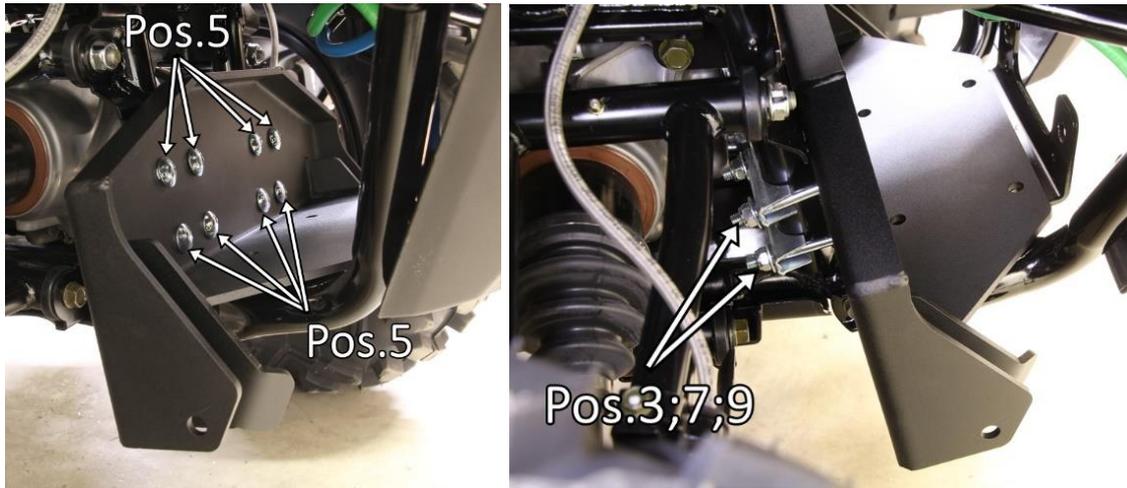


Step 4

Reinstall the winch. Use M8x30 bolts (Pos.4) and Ø8 mm washers (Pos.7). NB! Tighten the bolts shown in the previous step!

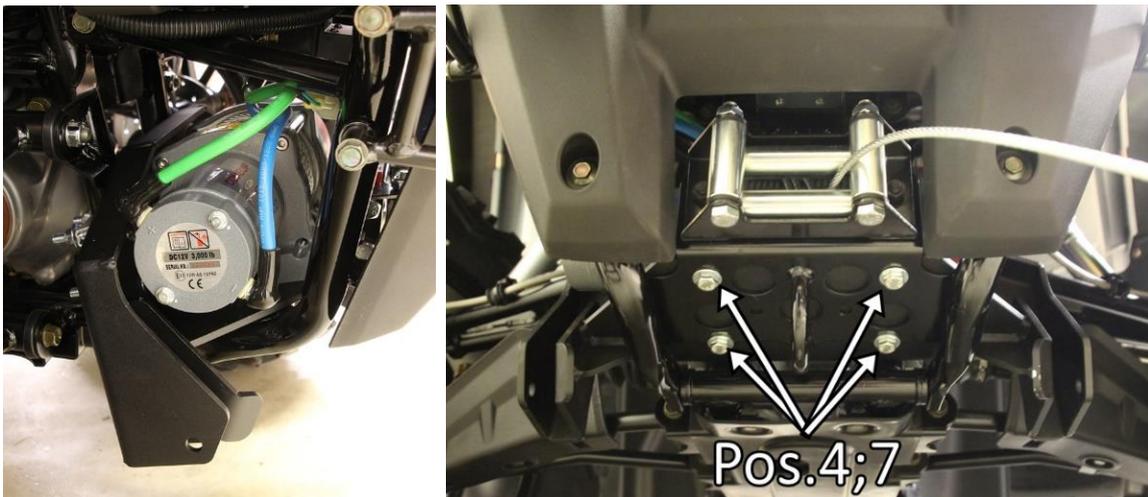

Step 5

Install bushes (Pos.2) to adapter. For fastening use M10x50 bolts (Pos.6), Ø10 mm washers (Pos.8) and M10 nyloc nuts (Pos.10).

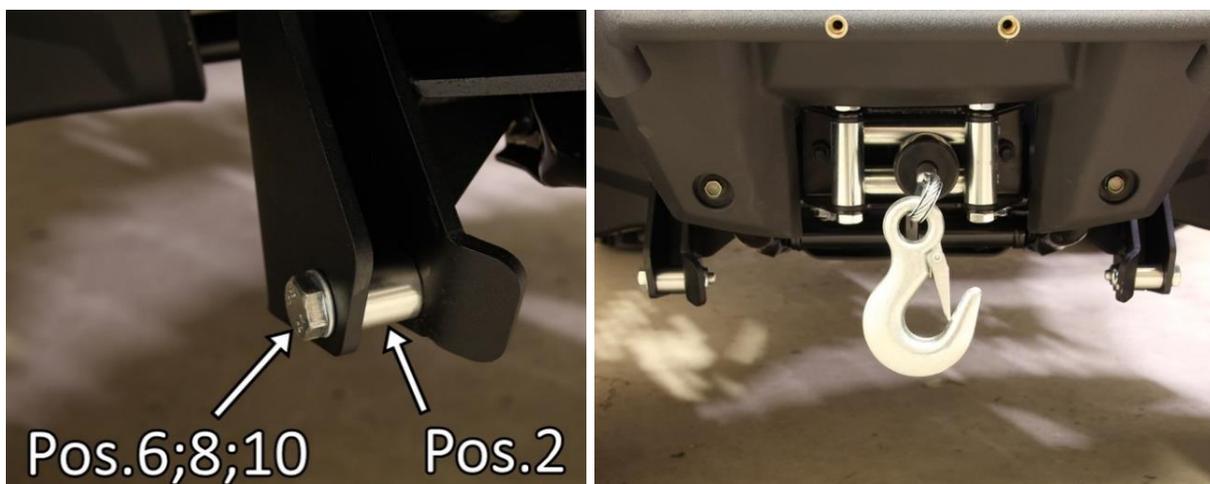

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

