



FRONT MOUNT ADAPTER

AODES

Pathcross 650 / 800 / 1000 (2021-...)

Code 03.12900

Version 13112023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.12901K	1
2	Installation plate	03.4003	2
3	Bush	03.5906	2
4	Bolt M8x80 DIN931	OT.02.01.017	4
5	Bolt M10x50 DIN933	OT.02.02.340	2
6	Washer Ø8/20 SFS3738	OT.04.03.030	8
7	Washer Ø10 DIN125	OT.04.01.040	4
8	Nyloc nut M8 DIN985	OT.03.02.040	4
9	Nyloc nut M10 DIN985	OT.03.02.050	2

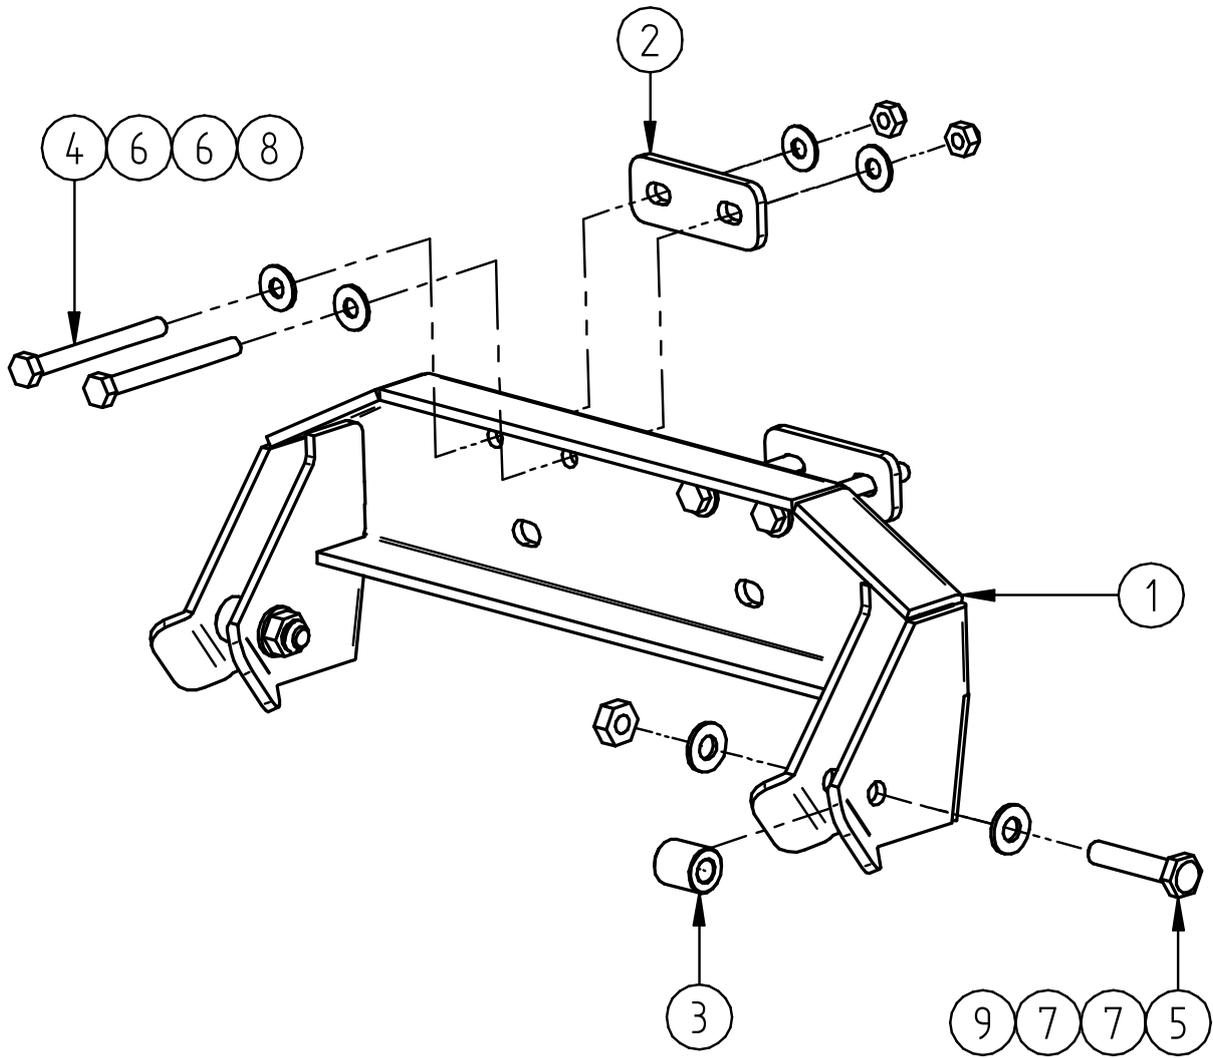

FITTING INSTRUCTIONS


Step 1

Support the front of the ATV. Use a car jack or other lifting device.




Step 2

Remove front A-arms bolts. If necessary, use jack to lift up or lower the front of the ATV.

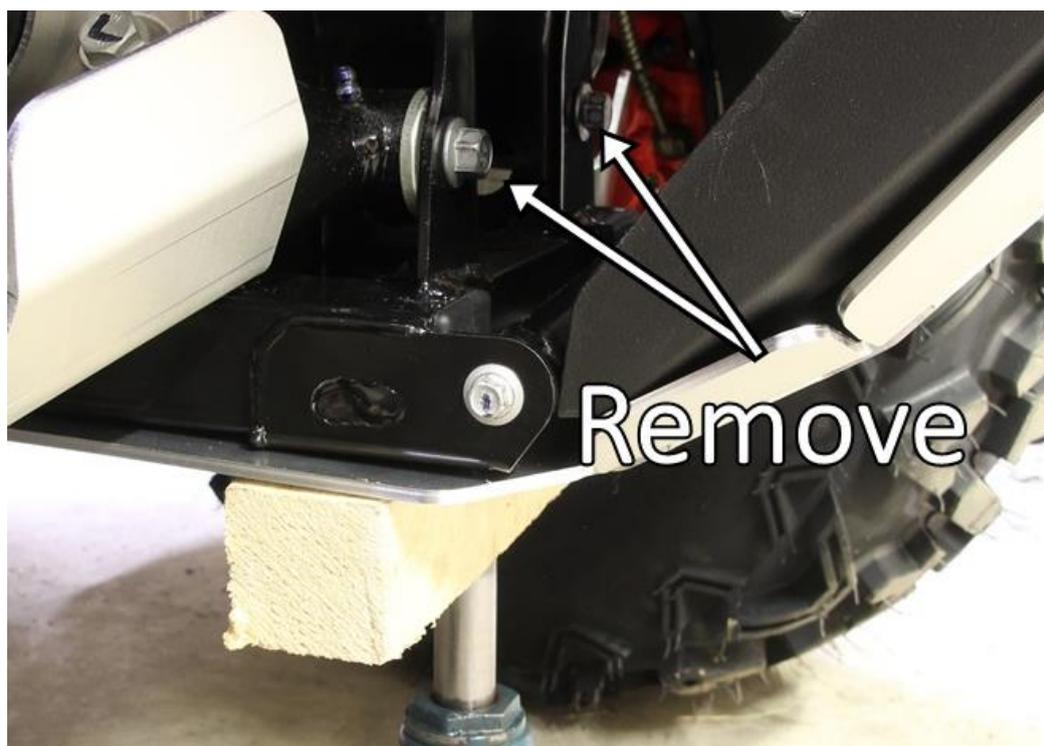


Step 3

Install adapter (Pos.1).

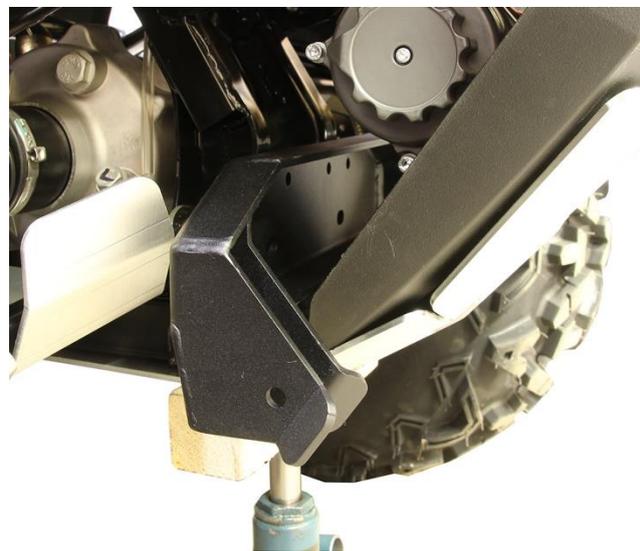


Step 4

Attach the adapter to the ATV. For fastening use the original A-arm bolts and nuts. If necessary, use jack to lift up or lower the front of the ATV.

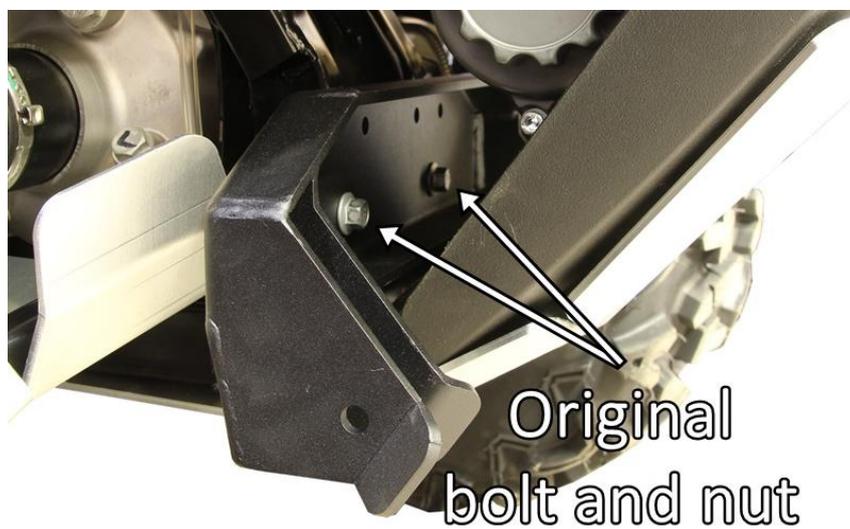

Step 5

Install installation plates (Pos.2). For fastening use M8x80 bolts (Pos.4), Ø8 mm washers (Pos.6) and M8 nyloc nuts (Pos.8).

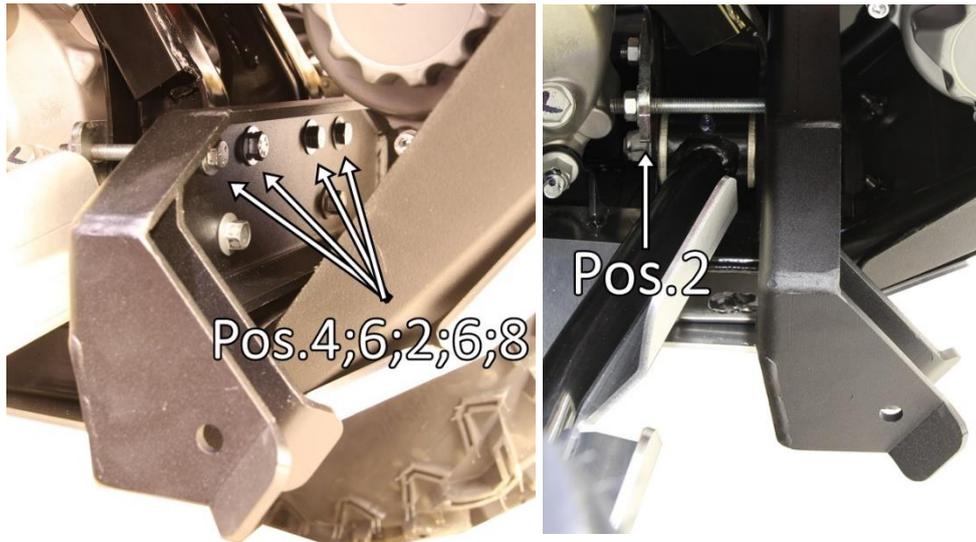

Step 6

Install bushes (Pos.3). For fastening use M10x50 bolts (Pos.5), Ø10 mm washers (Pos.7) and M10 nyloc nuts (Pos.9).



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

