

IRON BALTIC

FRONT MOUNT ADAPTER

SEGWAY

Fugleman UT10

Code 03.13200

Version 13112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/2n1bhVWT

SPECIFICATION



Pos.	Description	Code	Amount
1	Adapter	03.13201K	1
2	Bush 28mm	03.10605	2
3	Distance plate	05.3902	1
4	Bolt M10x55 DIN933	OT.02.02.342	2
5	Bolt M10x1,25-30 DIN961	OT.02.08.340	2
6	Bolt M10x1,25-35 DIN961	OT.02.08.345	2
7	Washer M10 DIN125	OT.04.01.040	8
8	Nyloc nut M10 DIN985	OT.03.02.050	2

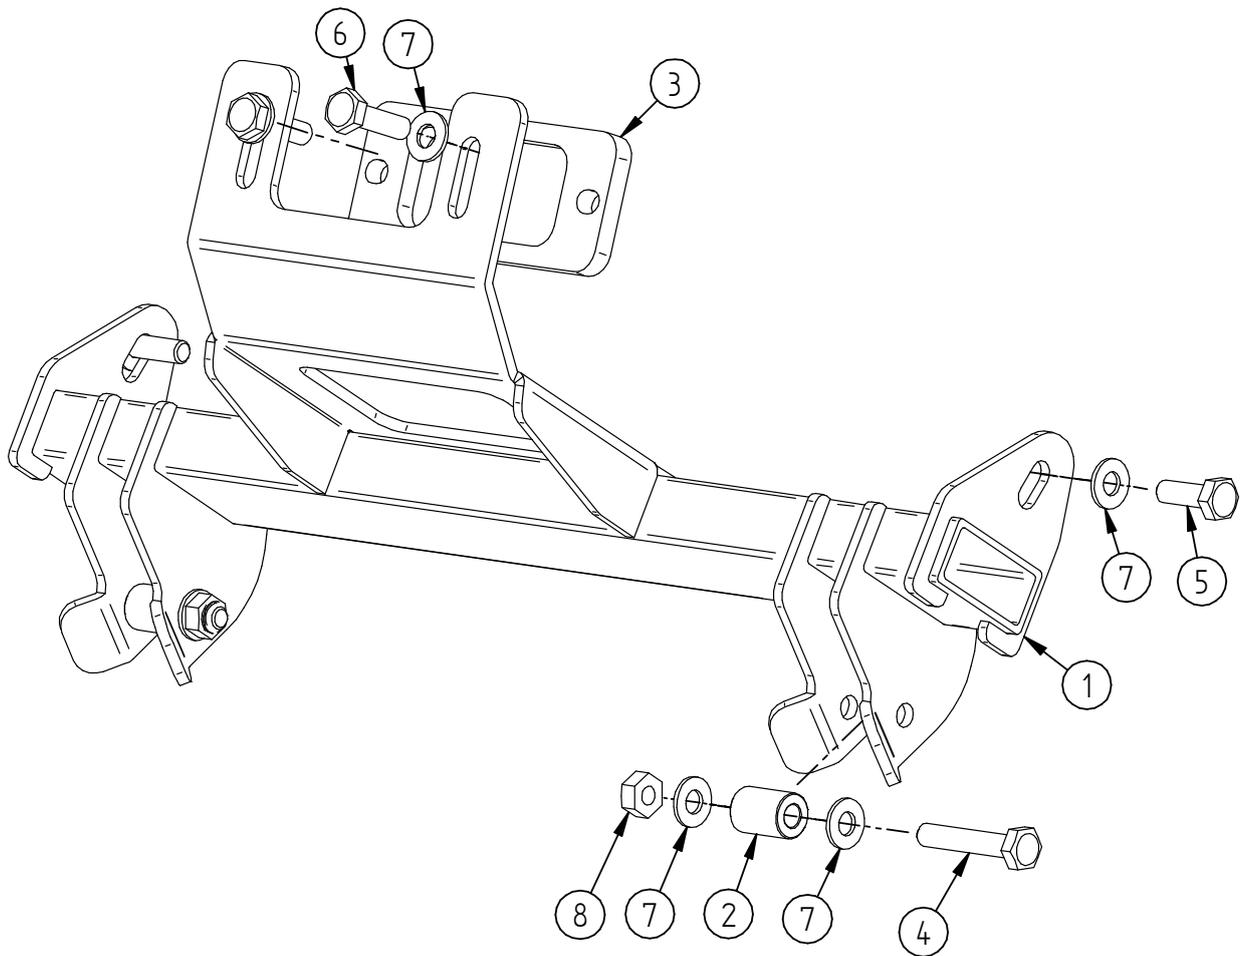

FITTING INSTRUCTIONS

Step 1

Install bushes 03.10605 to adapter and remove winch fairlead from UTV.

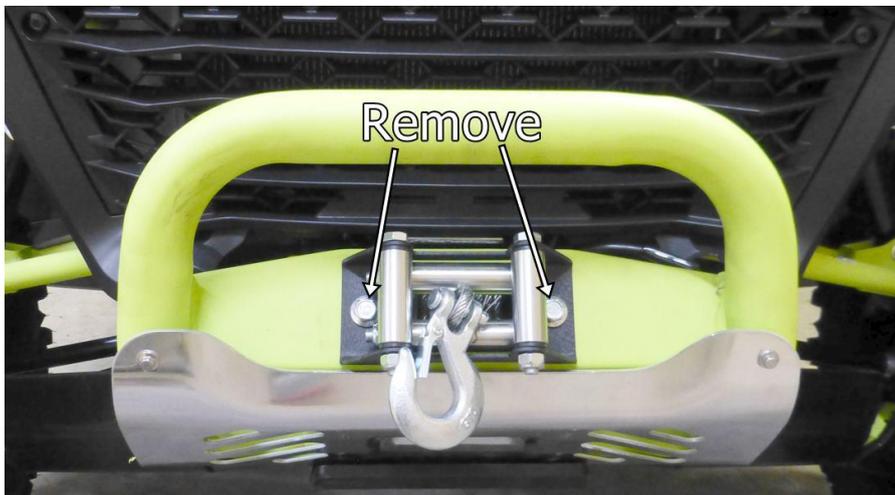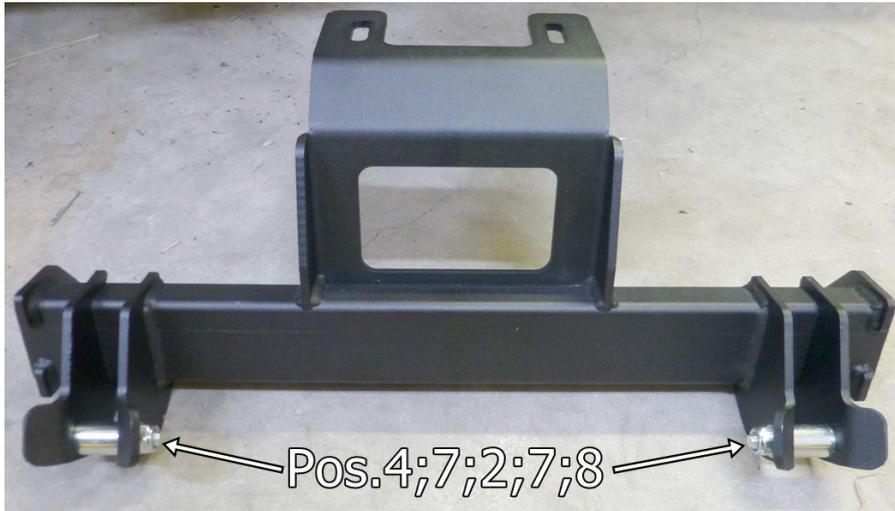


Step 2

Install adapter to UTV. Place the distanceplate 05.3902 between UTV frame and adapter.



Step 3

If you are using adapter with IronBaltic skid plate, then cut away piece of the front part, marked by pre-cut slots.

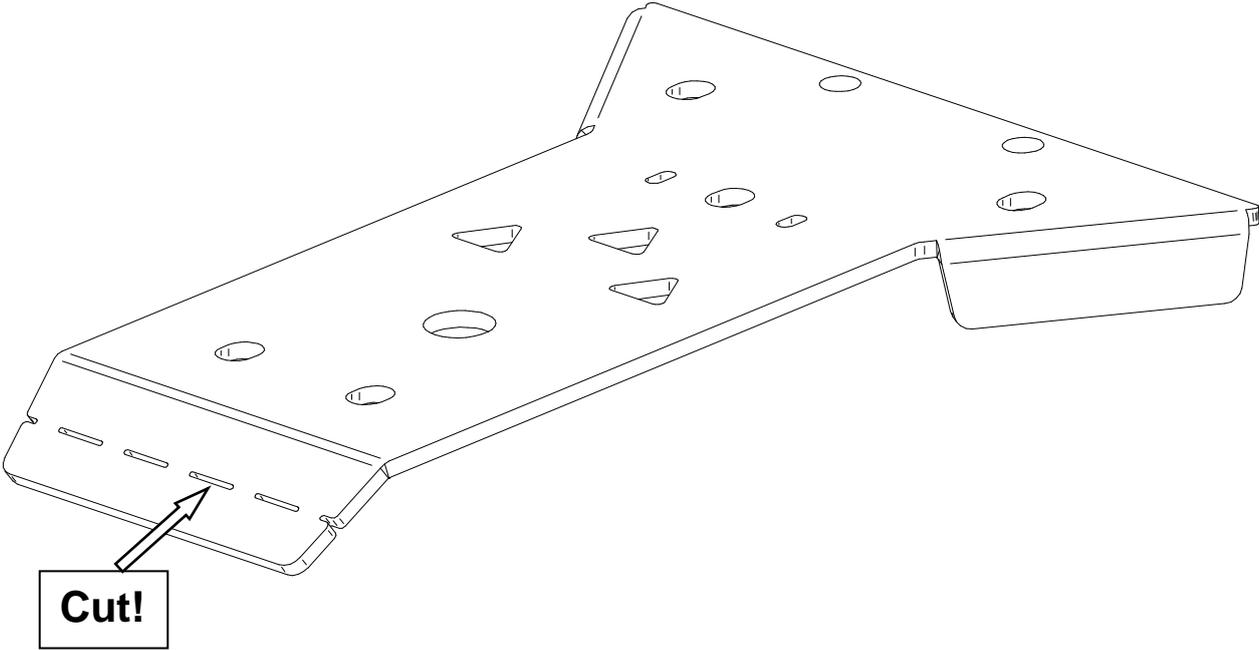

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

