

FRONT MOUNT ADAPTER

CFMOTO

CForce 450 / 520 (2022-...)

Code 03.13300

Version 13112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/7gegTZGy


SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.13301K	1
2	Bush 22mm	03.5906	2
3	U-bolt M8x26	OT.05.01.005	2
4	Bolt M8x12 DIN933	OT.02.02.168	4
5	Bolt M10x50 DIN933	OT.02.01.042	2
6	Washer M8/20 SFS3738	OT.04.03.030	8
7	Washer M10 DIN125	OT.04.01.040	4
8	Nyloc nut M8 DIN985	OT.03.02.040	4
9	Nyloc nut M10 DIN985	OT.03.02.050	2

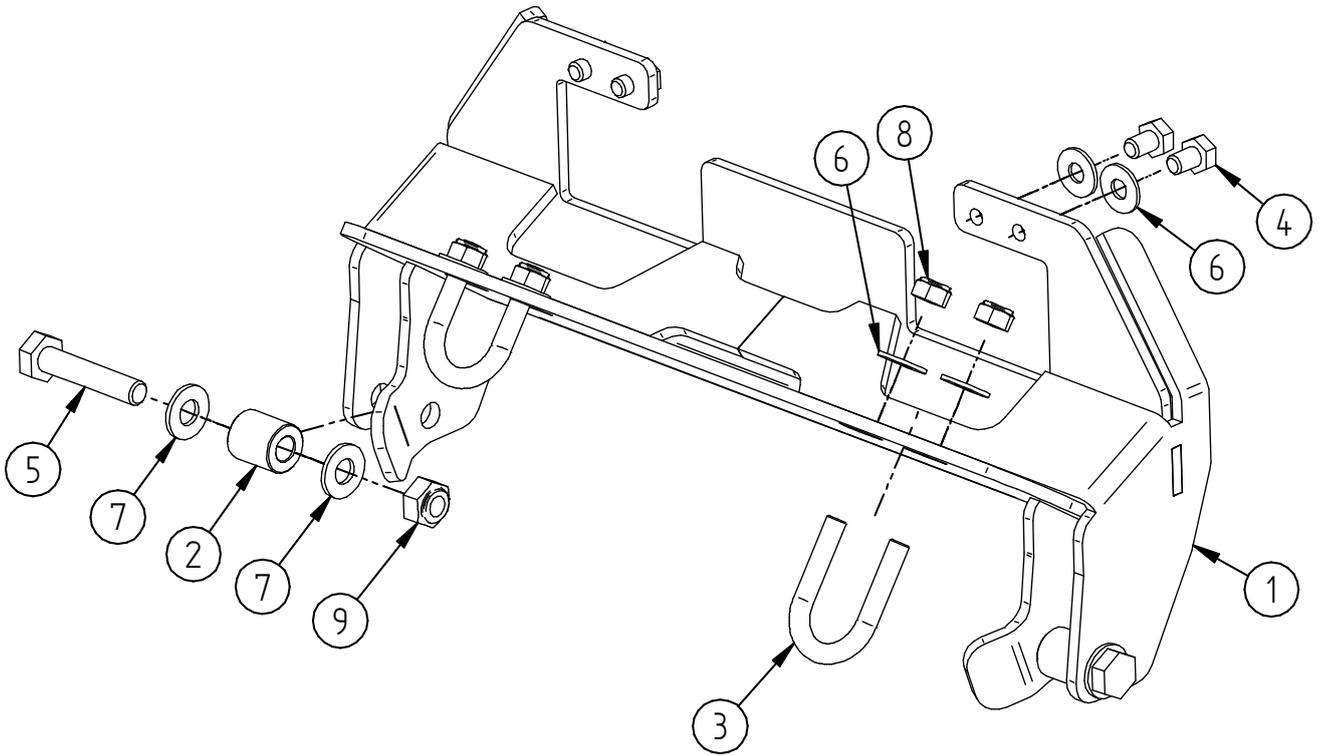


FITTING INSTRUCTIONS

Step 1 Install bushes 03.5906 to adapter.

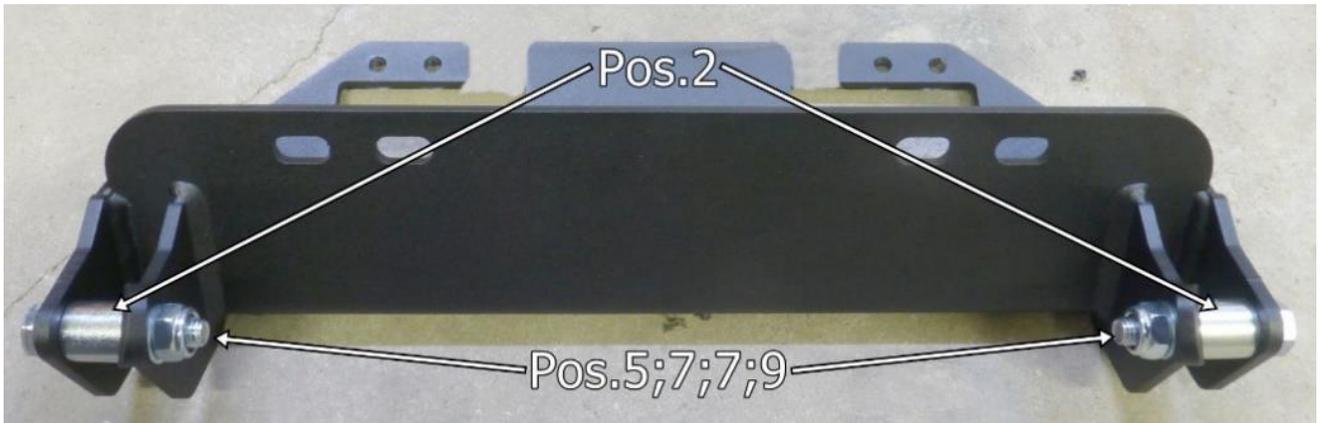


Step 2 Remove winch powercables! Remove original front plastic protection and original winch with mountingplate. Do not remove winch from original mounting plate!

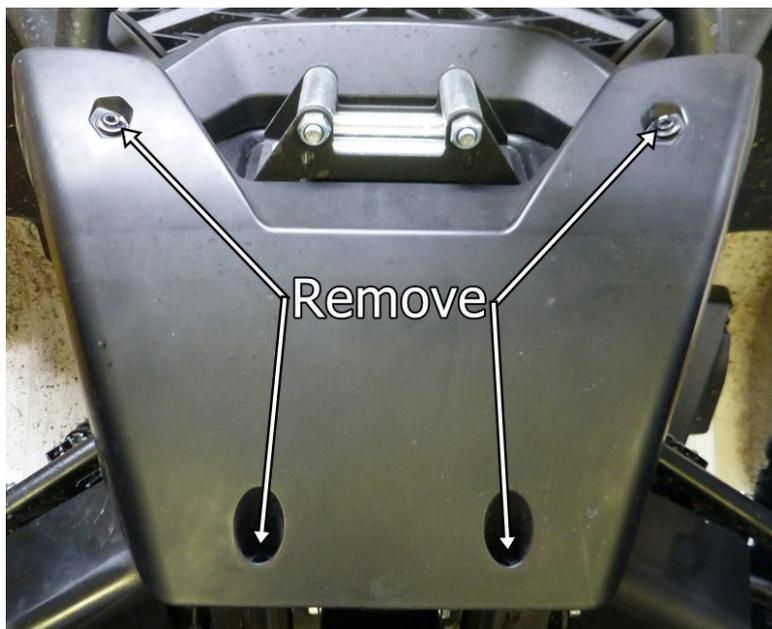


Step 3

Place adapter between ATV frame and then place the winch back with original mountingplate. Install winch from the side as shown with the arrow. If necessary, release the front bumper bolts.

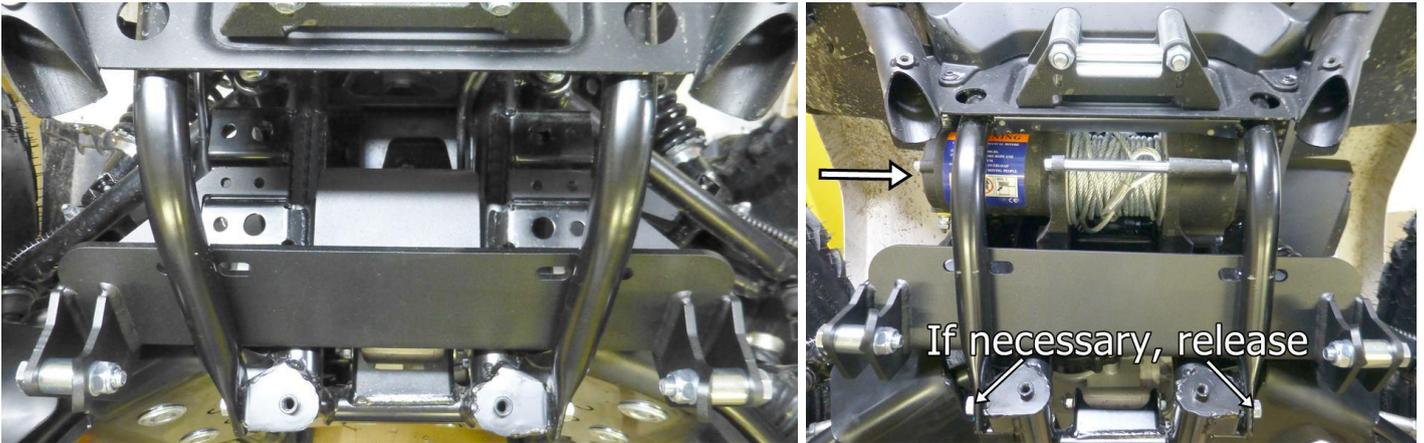



Step 4

Place all the winch bolts back and then the adapter bolts. First tighten Pos.4 bolts, then winch mounting bolts and finally U-bolts.

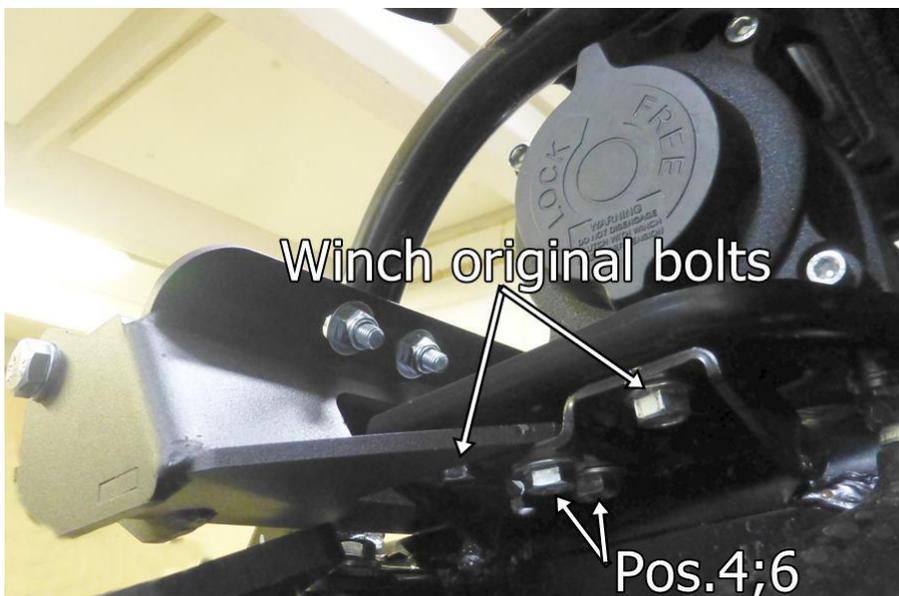


Step 5

On the original plastic, mark the area to be cut away (on both sides) and remove that piece. Install original plastic to ATV.

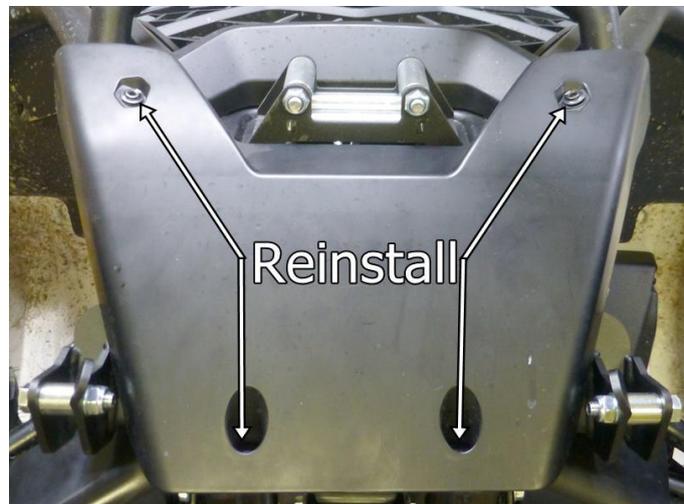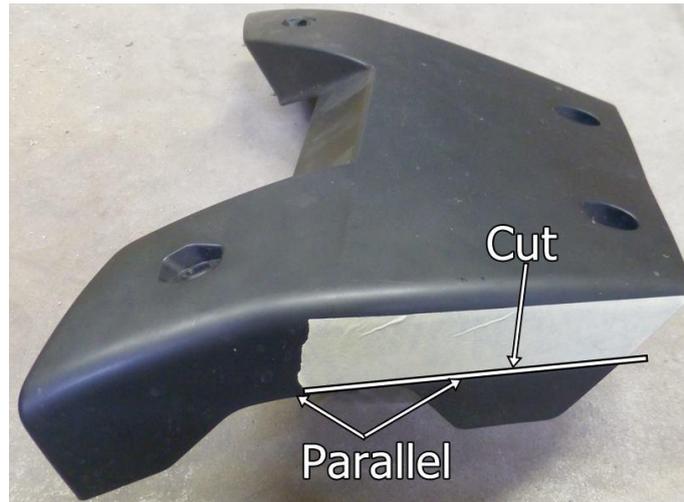

Step 6

If you are using adapter with IronBaltic skid plate, then cut away piece of the front part, marked by pre-cut slots.

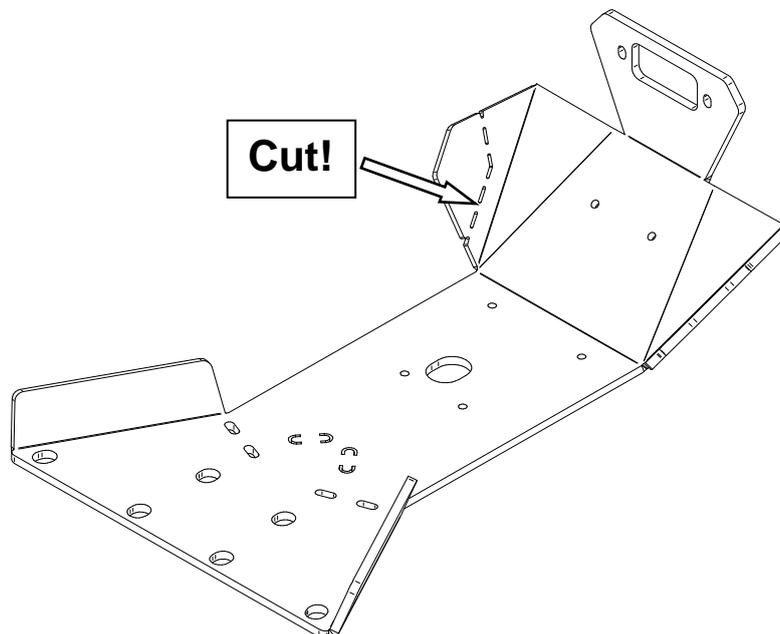

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

