

# IRON BALTIC

## FRONT MOUNT ADAPTER

# SEGWAY

## Villain SX10

Code 03.13400

Version 13112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/4mZz4HMs](https://code.ironbaltic.com/u/4mZz4HMs)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.13401K	1
2	Installation plate	03.13406	2
3	Distance plate	05.3902	1
4	Bush 28mm	03.10605	2
5	Bolt M8x20 DIN933	OT.02.02.180	2
6	Bolt M8x30 DIN933	OT.02.02.200	2
7	Bolt M10x40 DIN933	OT.02.02.330	2
8	Bolt M10x55 DIN933	OT.02.02.342	2
9	Washer Ø8/20 SFS3738	OT.04.03.030	2
10	Washer Ø10 DIN125	OT.04.01.040	8
11	Nyloc nut M10 DIN985	OT.03.02.050	4

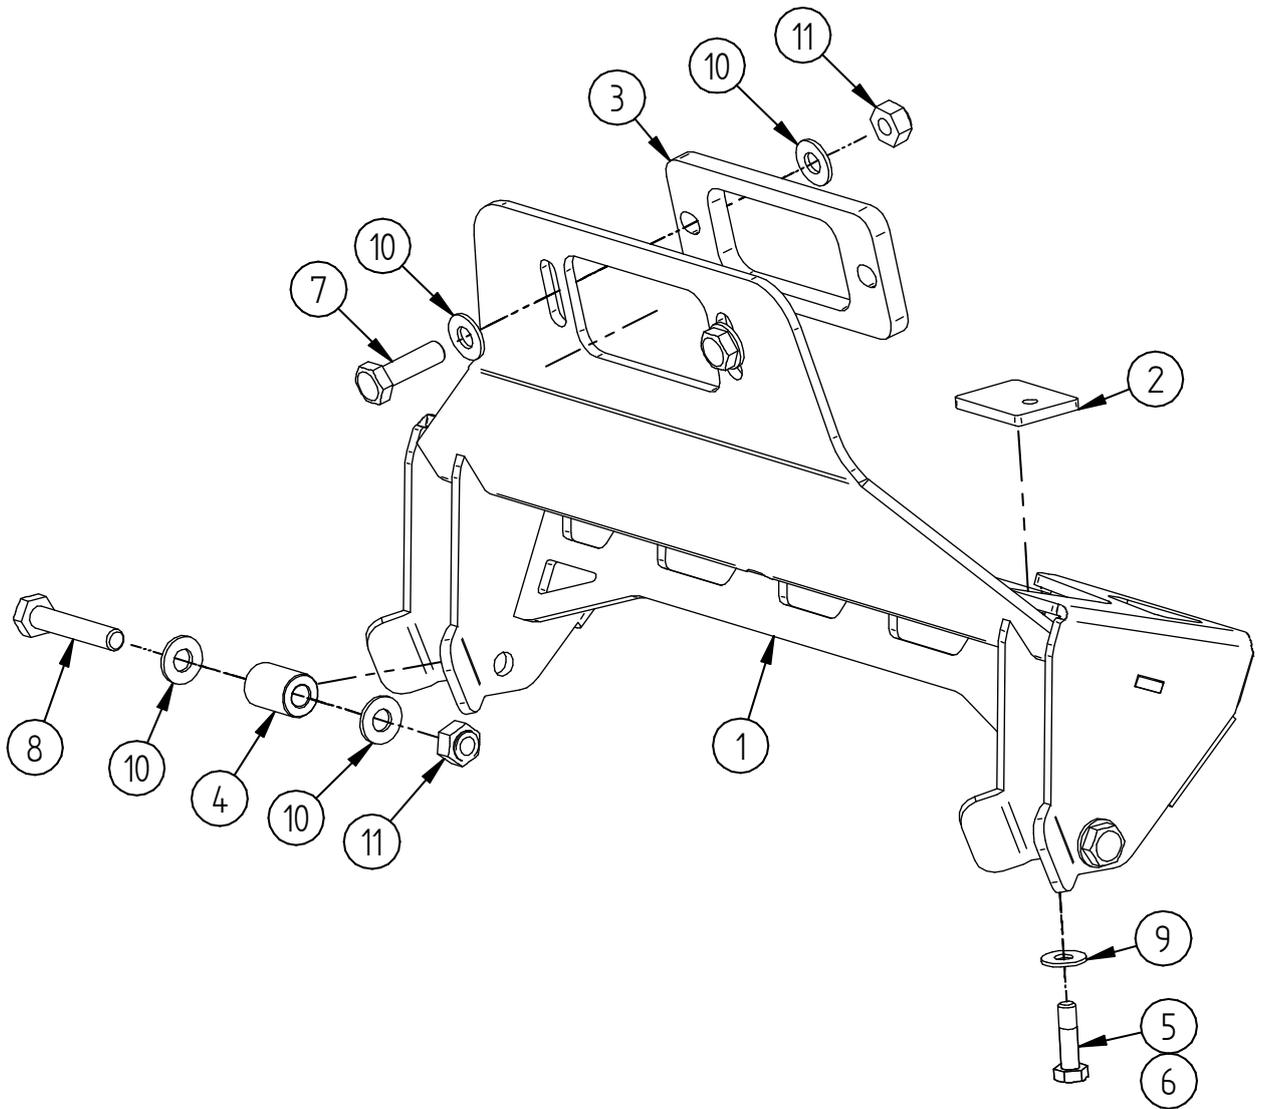

# FITTING INSTRUCTIONS

## Step 1

Install bushes 03.10605 to adapter and remove original front protection plate and winch fairlead from UTV.




## Step 2

Install adapter to UTV.

When installing **WITH IronBaltic skid plate**, remove the strengthening piece from the front protection and place the adapter on top of the skid plate and use bolts **M8x30**!

When installing **WITHOUT IronBaltic skid plate**, use bolts **M8x20** and place the distance plate 05.3902 between UTV frame and adapter!

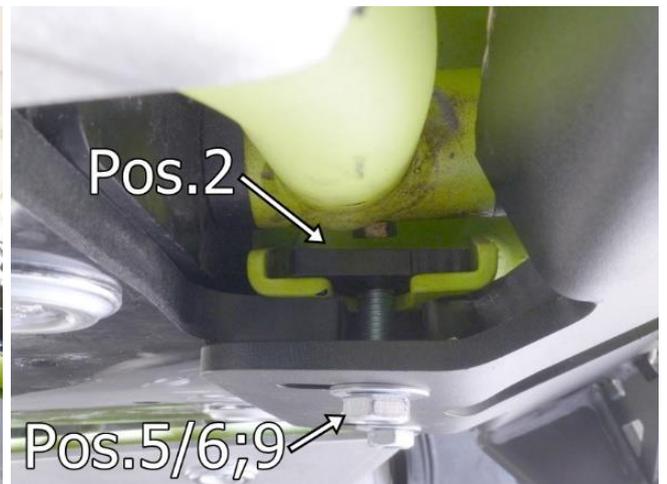





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

