

IRON BALTIC

FRONT MOUNT ADAPTER

YAMAHA

Kodiak 450

Code 03.13700

Version 15112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/kHTLueG2

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.13701K	1
2	Relay distance bush	03.13702	2
3	Installation plate	03.4003	2
4	Bush 22mm	03.5906	2
5	U-bolt M8x28	OT.05.01.010	2
6	Allen socket bolt M6x25 ISO7380	OT.02.03.040	2
7	Carriage bolt M8x50 DIN603	OT.02.05.075	4
8	Bolt M10x50 DIN933	OT.02.02.340	2
9	Washer Ø6/15 SFS3738	OT.04.03.020	2
10	Washer Ø8/20 SFS3738	OT.04.03.030	8
11	Washer Ø10 DIN125	OT.04.01.040	4
12	Nyloc nut M8 DIN985	OT.03.02.040	8
13	Nyloc nut M10 DIN985	OT.03.02.050	2

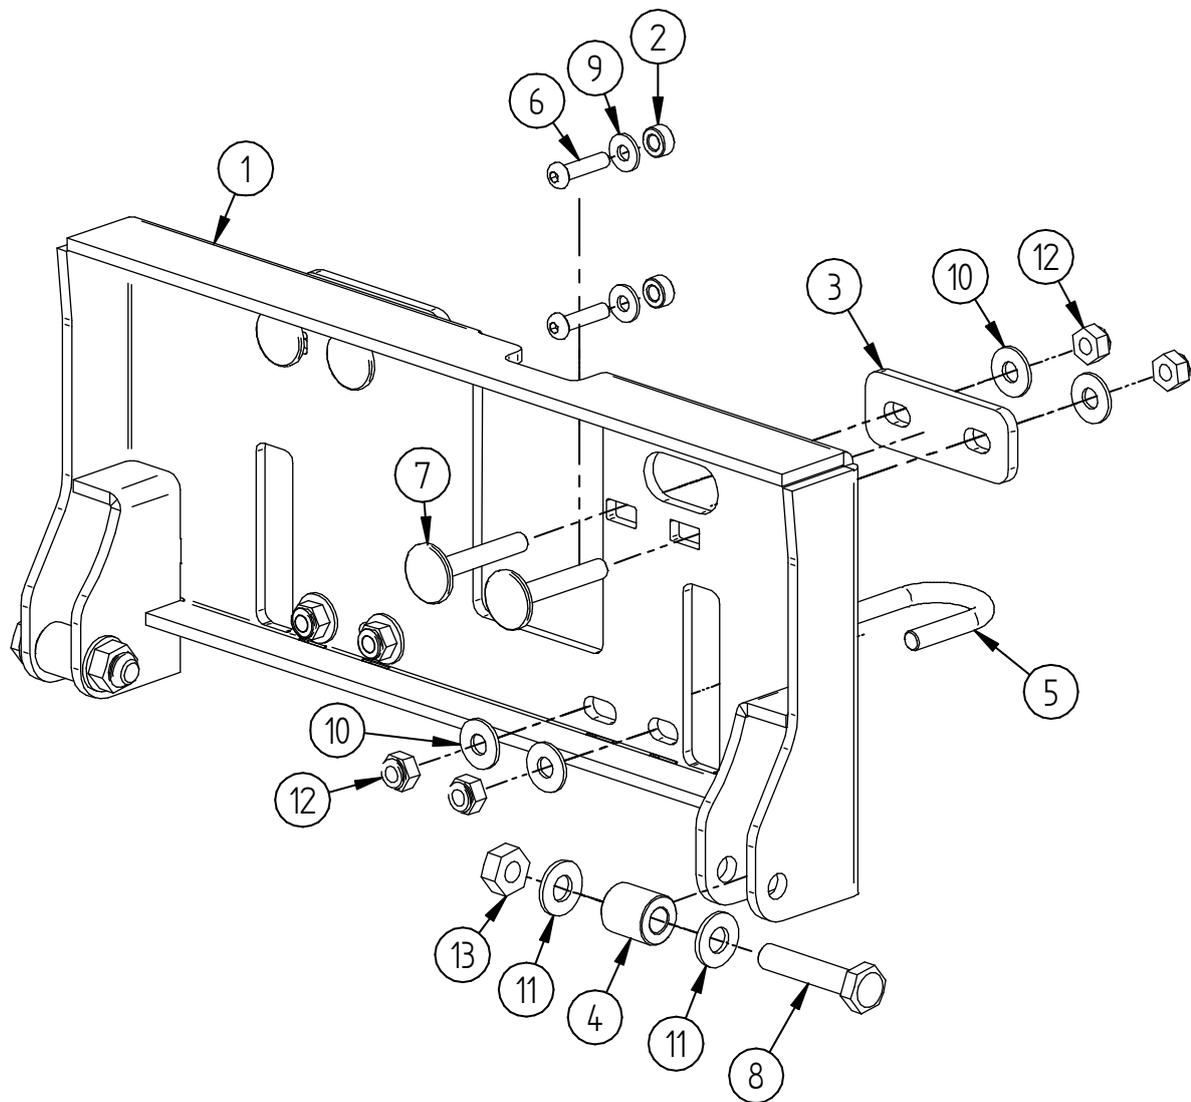

FITTING INSTRUCTIONS


Step 1

Install bushes 03.5906 to adapter.



Step 2


Remove winch powercables from winch relay.

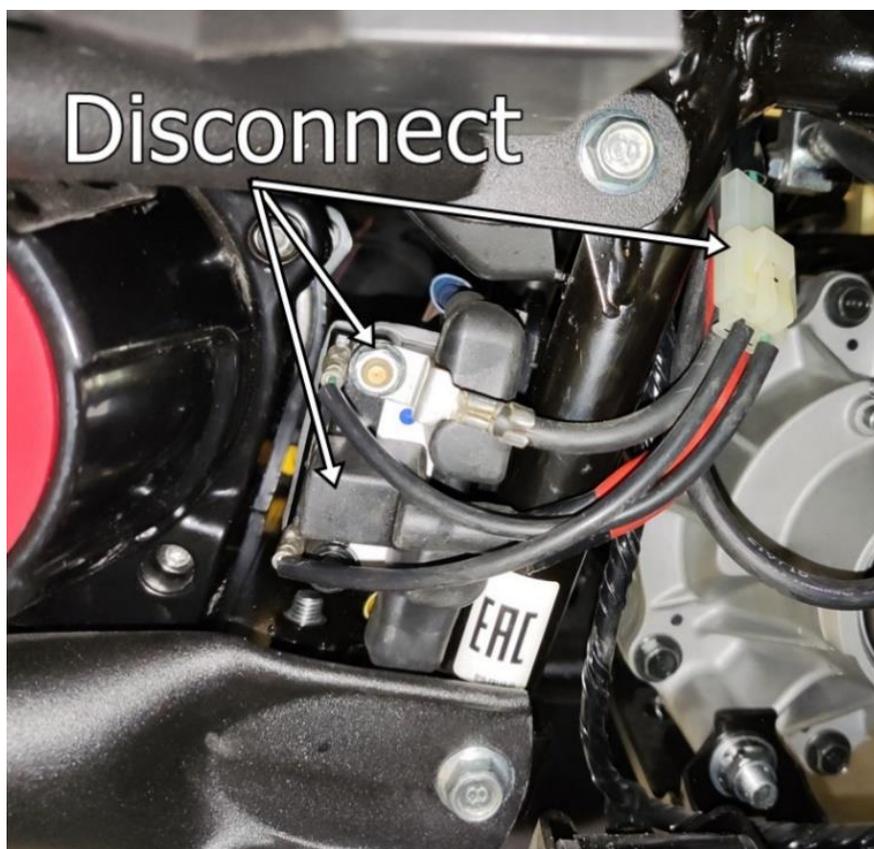

Step 3

Remove front bumper with winch.

NB! There are two plastic dowels under the front lights!

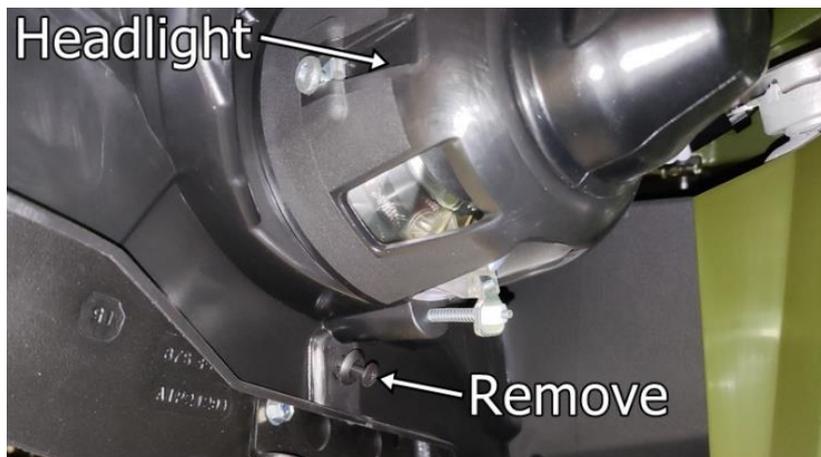



Step 4

Place distance bush 03.13702 (Pos.2) under the winch relay.
For easier installation we recommend removing bolts holding the winch.



Step 5

Install adapter to ATV but DO NOT TIGHTEN bolts/nuts!
First place U-bolts in place.
Place the winch powercables through the hole in the adapter.

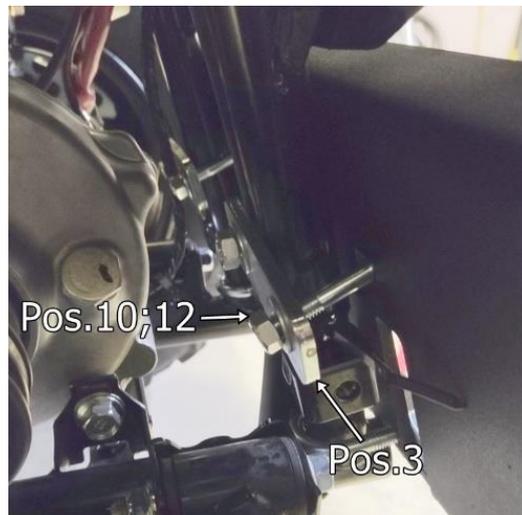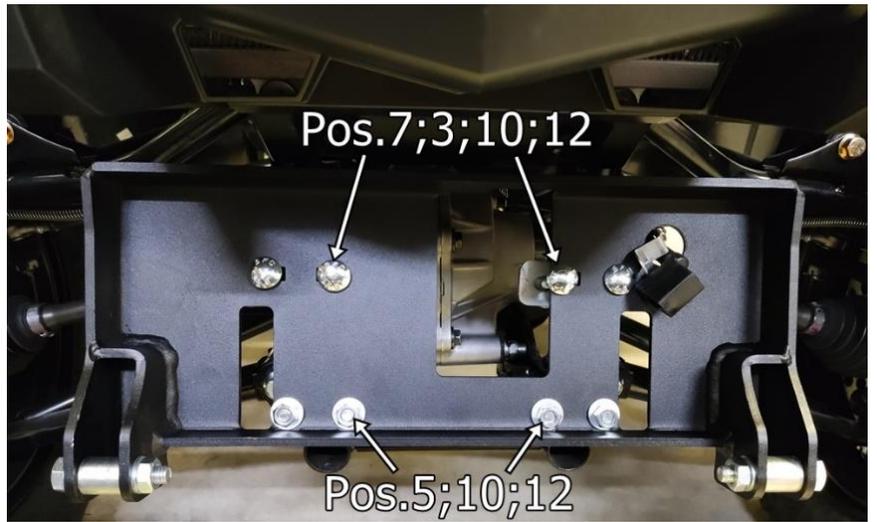


Step 6

Reinstall front bumper with winch to ATV.
Tighten all the bolts and reinstall plastic dowels.

Step 7

Reconnect winch plug and powercables with relay.

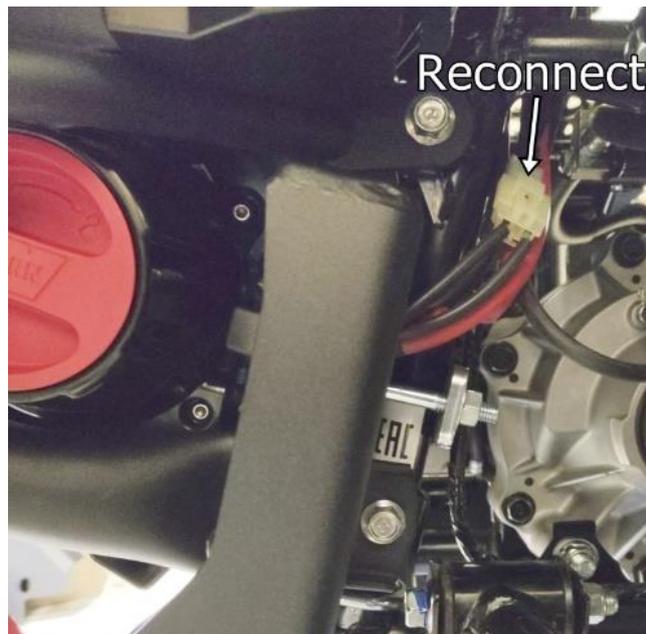

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

