



## MID-MOUNT ADAPTER

# CFMOTO

## ZForce 950 Sport (2023-...)

Code 03.14300

Version 15112023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION




Pos.	Description	Code	Amount
1	Adapter	03.14301K	1
2	Lifting plate	03.12406	2
3	Installation plate	03.4003	2
4	Installation plate 2	03.5102	2
5	Pin 10 x 40 DIN1444	14.003	2
6	Cotter pin 2 mm DIN11024	OT.07.01.010	2
7	Lifting eye M12 DIN580	OT.19.01.010	1
8	Bolt M8x45 DIN933	OT.02.02.230	4
9	Bolt M8x55 DIN933	OT.02.02.241	4
10	Bolt M8x60 DIN931	OT.02.01.015	4
11	Bolt M8x70 DIN933	OT.02.02.260	4
12	Washer Ø8/20 SFS3738	OT.04.03.030	20
13	Washer Ø12 DIN125	OT.04.01.050	1
14	Nyloc nut M8 DIN985	OT.03.02.040	8
15	Nyloc nut M12 DIN985	OT.03.02.060	1

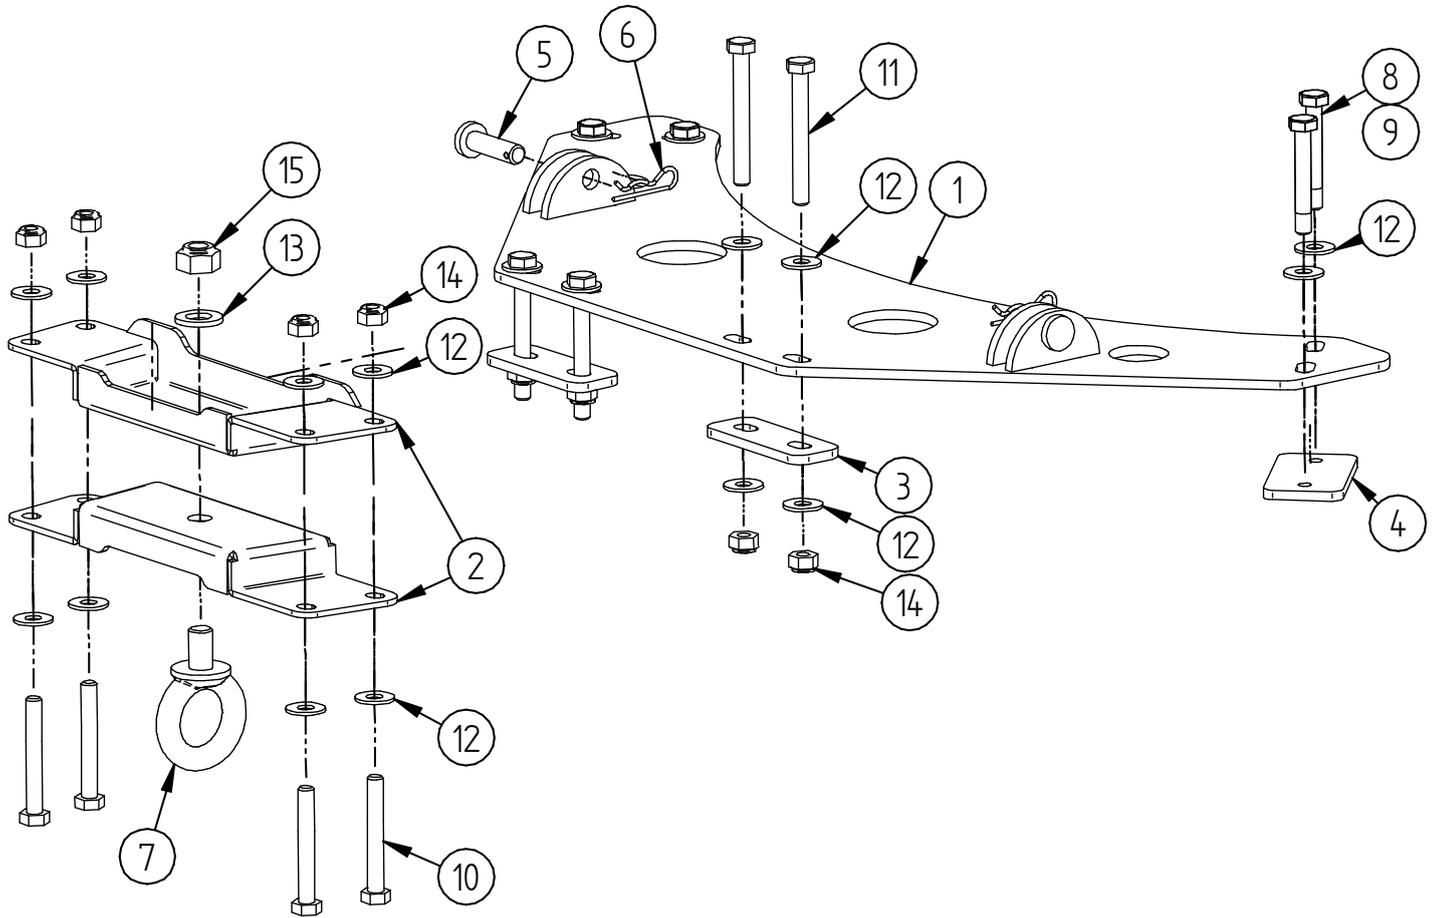

# FITTING INSTRUCTIONS


**Step 1** Remove original plastic protectors or drill holes to mounting points for bolts.

**Step 2** Install adapter to ATV. If you are using IronBaltic skid plate, then use M8x55 (Pos.9) bolts on rear mounting points and without skid plate, use M8x45 (Pos.8) bolts!

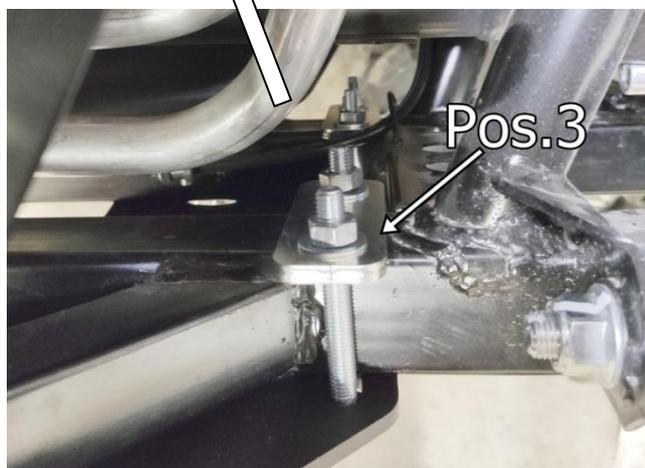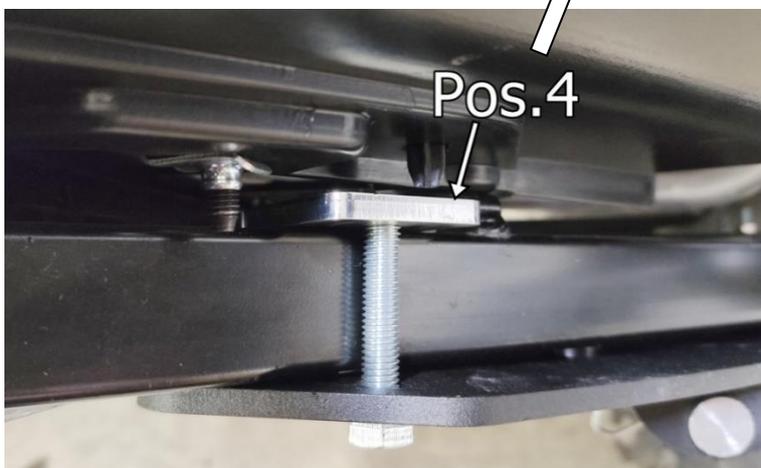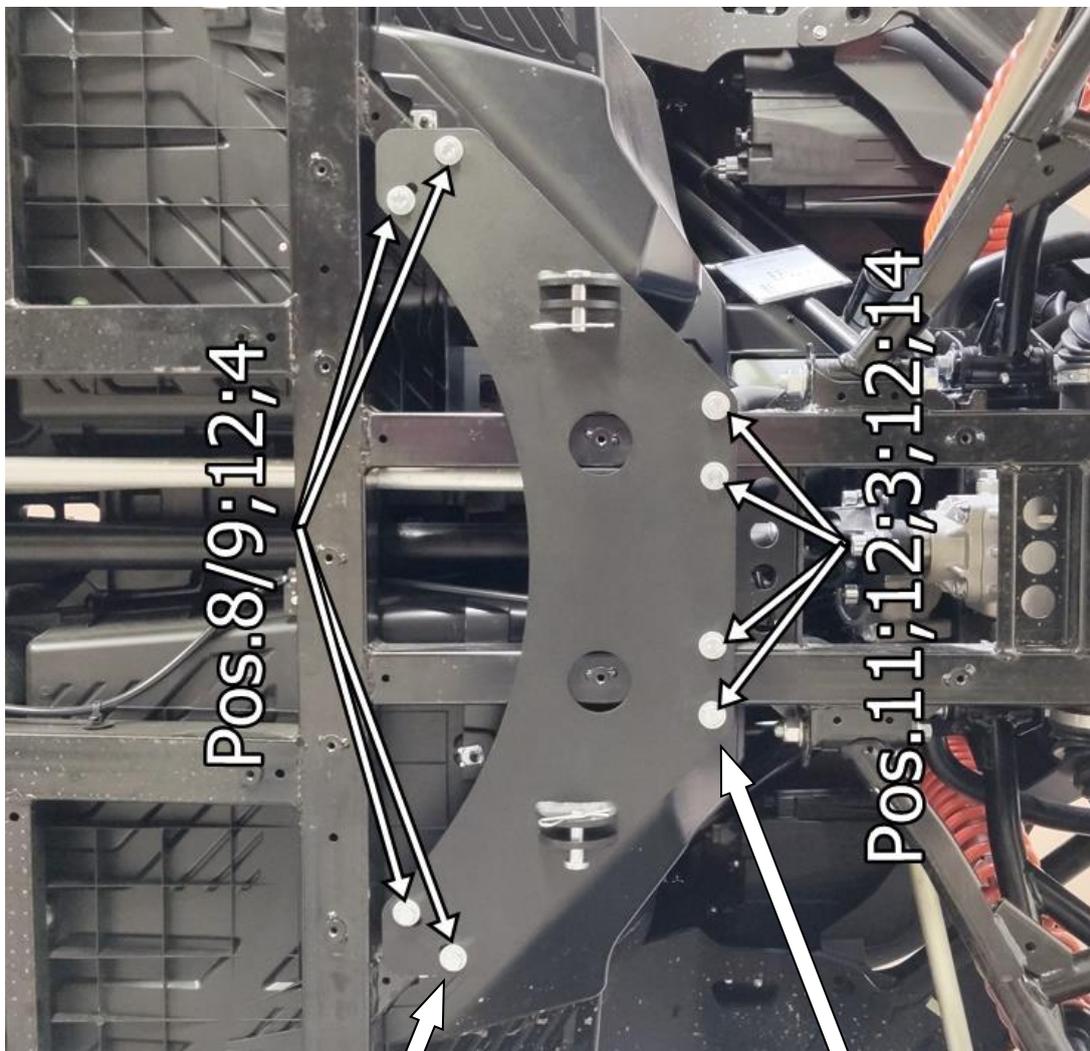

### Step 3

Install lifting plates (Pos.2) to the snow plow frame and lifting eye bolt (Pos.7) to lifting plate. For fastening the lifting plates use M8x60 bolts (Pos.10), Ø8 mm washers (Pos.12) and M8 nyloc nuts (Pos.14). For fastening the lifting eye use Ø12 mm washer (Pos.13) and M12 nyloc nuts (Pos.15).

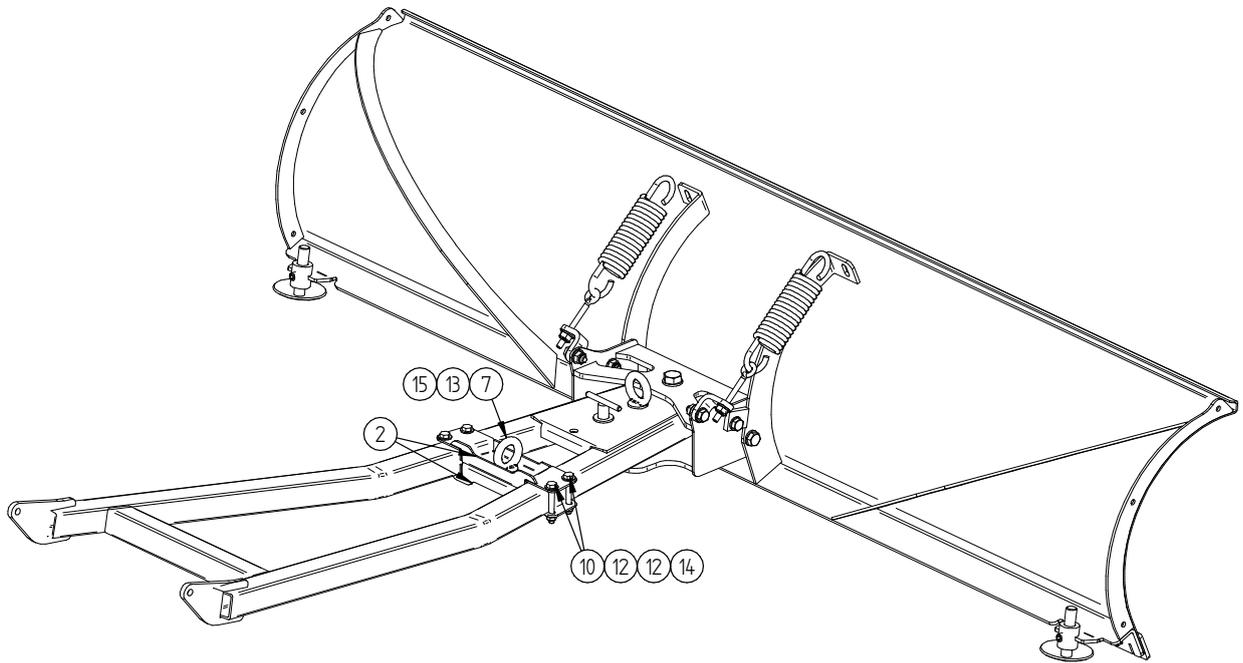





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

