

IRON BALTIC

MID-MOUNT ADAPTER

CAN AM Outlander 500/700 (2023+)

Code 03.14500

Version 14082023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



qr.ironbaltic.com/g/F1ve0O5GfK

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.14501K	1
2	Pin 10 x 30 DIN1444	14.003	2
3	Cotter pin 2 mm DIN11024	OT.07.01.010	2
4	U-bolt M8 x 38	OT.05.01.030	4
5	Washer \varnothing 8/20 SFS3738	OT.04.03.030	8
6	Nyloc nut M8 DIN985	OT.03.02.040	8


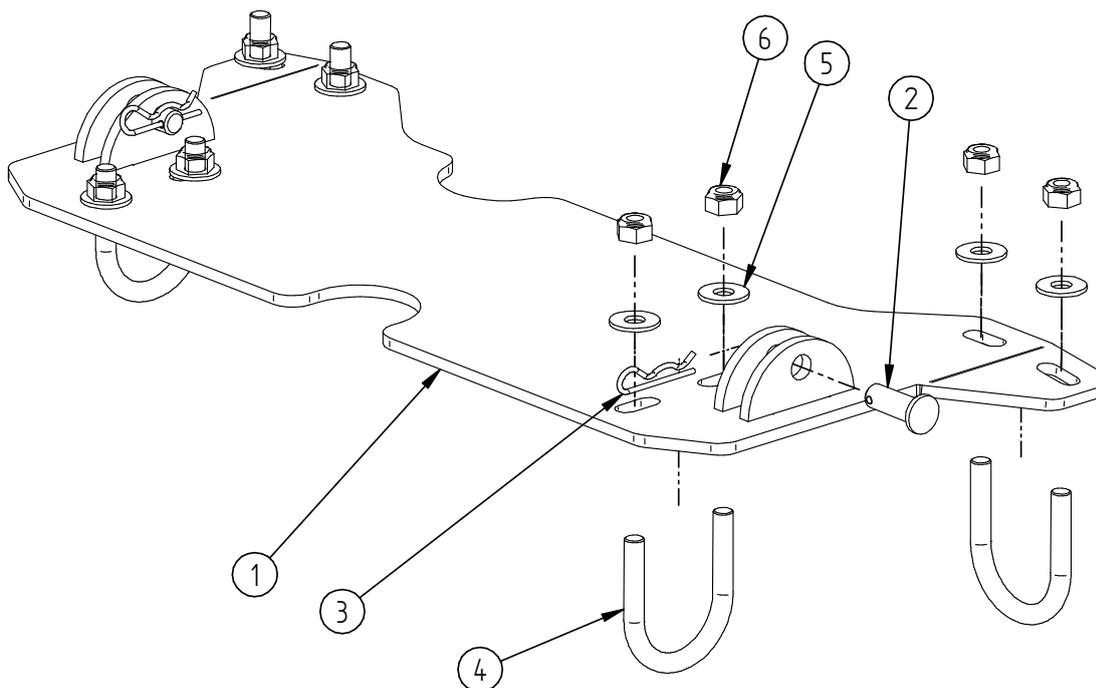


TOOLS REQUIRED FOR INSTALLATION:


- Spanner 13mm

FITTING INSTRUCTIONS

Step 1 Remove original plastic protectors or drill holes to mounting points for U-bolts. If using adapter with Iron Baltic skid plate, then remove side protections.

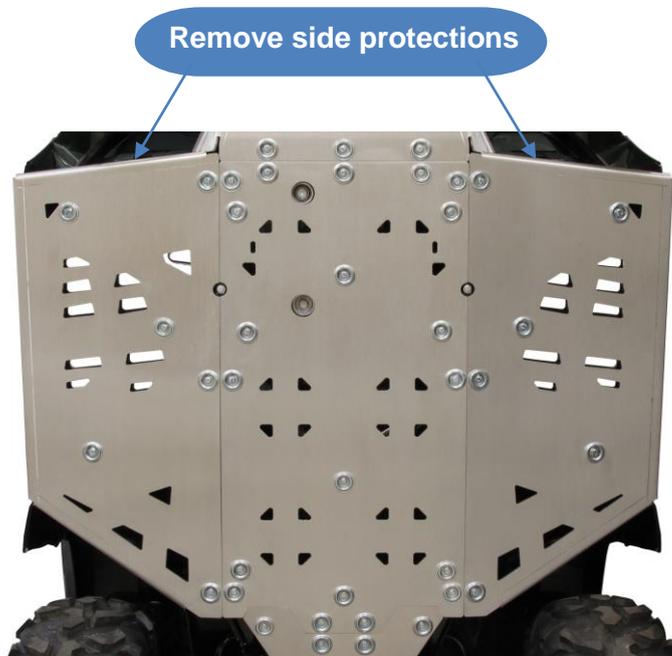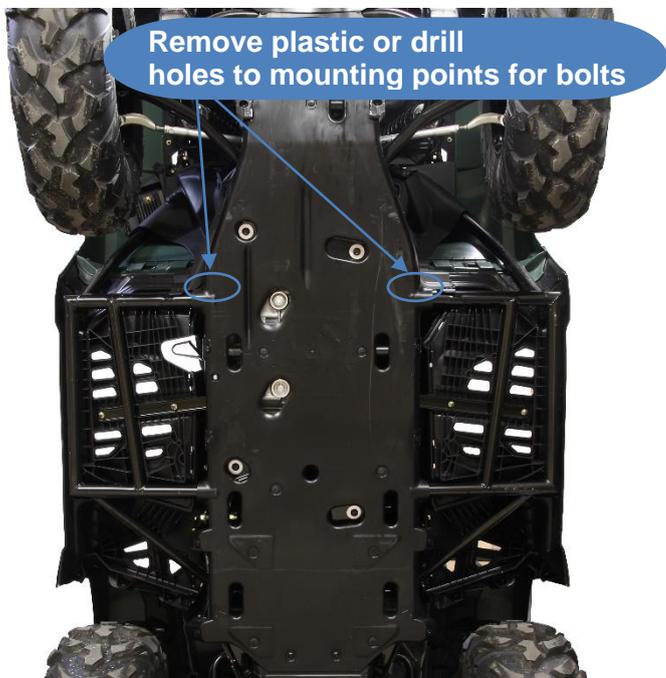


Step 2 Kui If you are not using adapter with Iron Baltic skid plate, then proceed to step 5. If you are using adapter with Iron Baltic skid plate, then remove the plates and bolts shown in the picture.

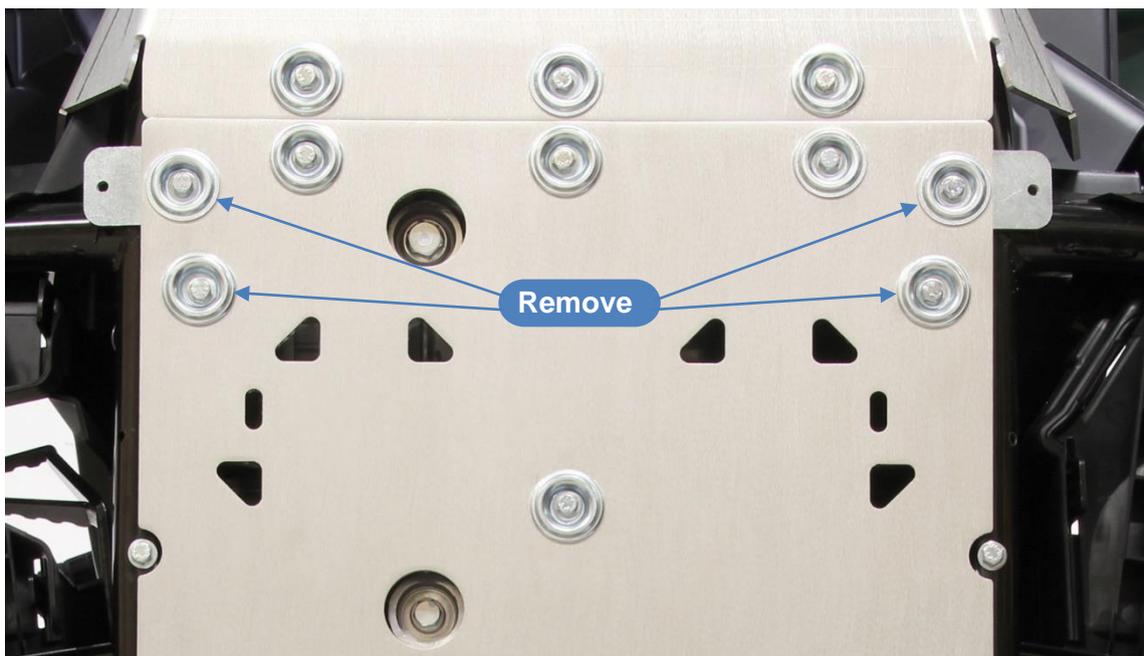


Step 3

Install U-bolts (Pos. 4). **NB! Install U-bolt under the hose!**

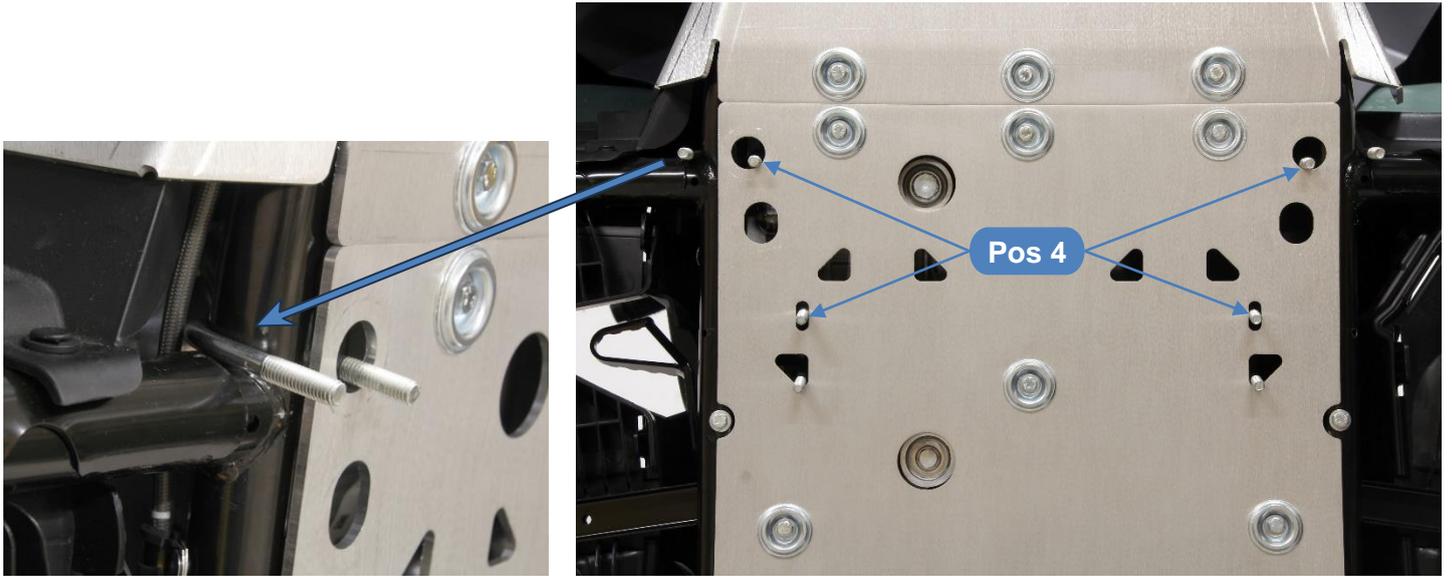



Step 4

Reinstall side protections.

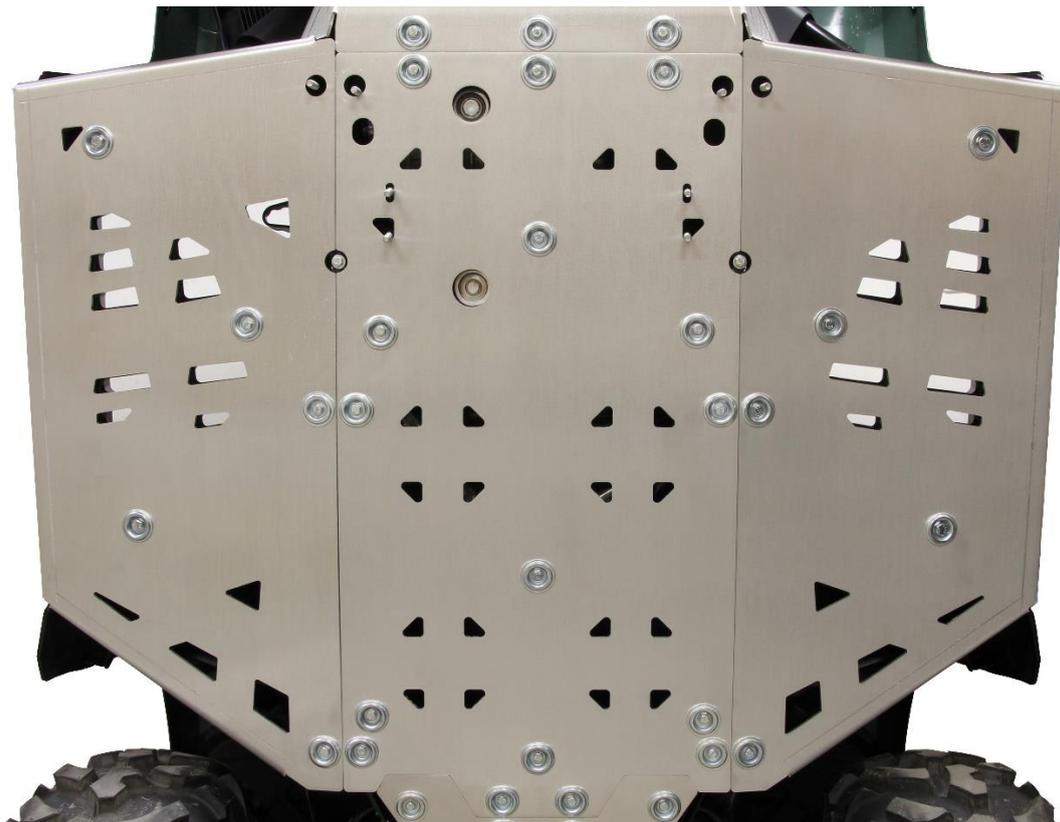

Step 5

Install adapter to the U-bolts. For fastening use \varnothing 8 washers (Pos. 5) and M8 nyloc nuts (Pos. 6). Install pins (Pos. 2) to the adapter. Use cotter pins (Pos. 3) to fix the pins.

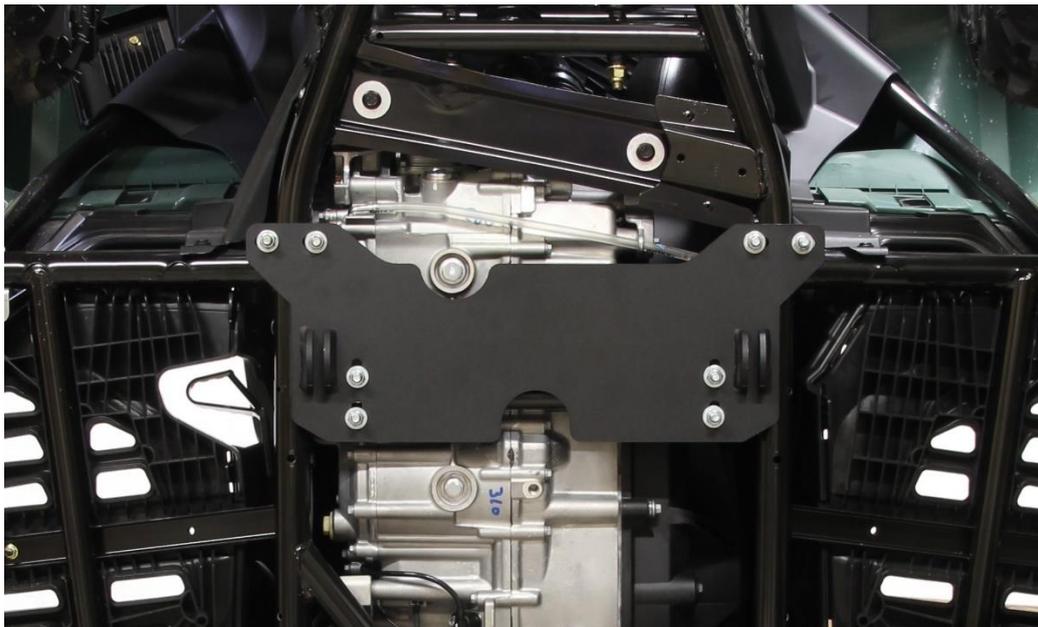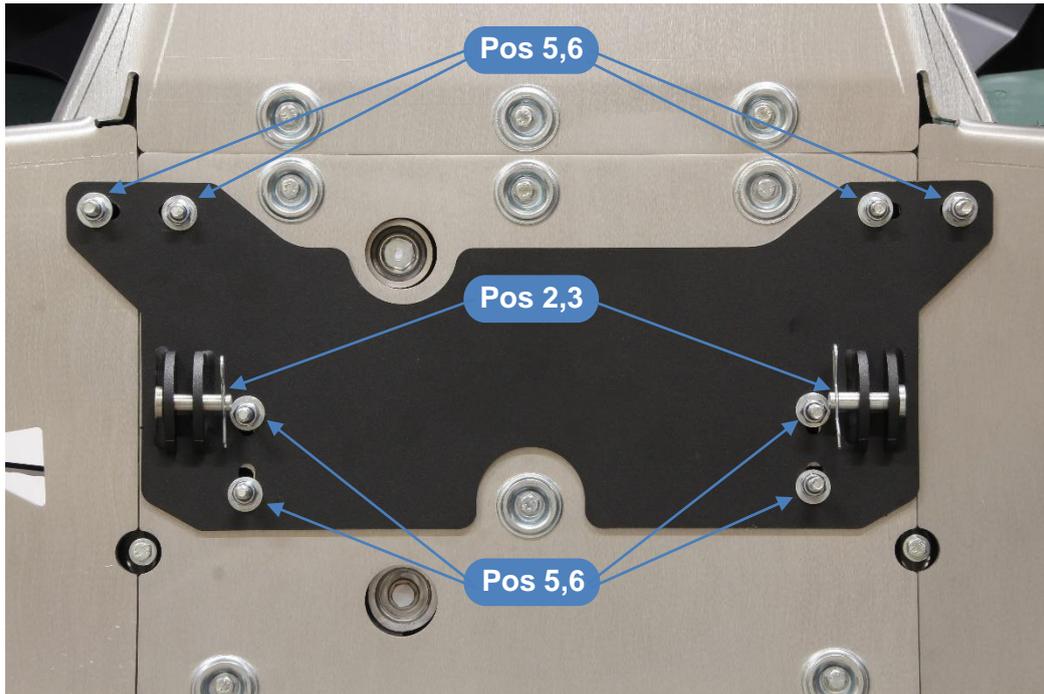

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

