

IRON BALTIC

FRONT-MOUNT ADAPTER


CAN AM

Outlander 500/700 (2023+)

Outlander 850/1000 (2025+)

Code 03.14600

Version 17082023

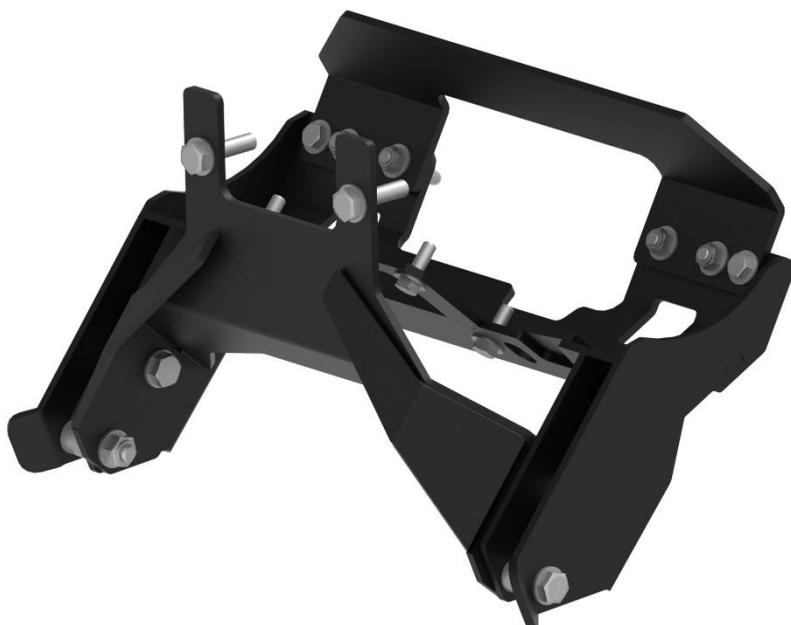

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com


DOWNLOAD MULTILINGUAL USER
MANUAL



code.ironbaltic.com/u/7PMhqx7C

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.14601K	1
2	Front plate	03.14607K	1
3	Rear plate	03.14610	1
4	Winch plate	03.14611	1
5	Bushing	03.5906	2
6	Spacer bushing	05.5405	4
7	U-bolt M8x32	OT.05.01.020	2
8	Bolt M8x55 DIN931	OT.02.01.012	2
9	Bolt M10x60 DIN931	OT.02.01.043	2
10	Bolt M8x25 DIN933	OT.02.02.190	6
11	Bolt M10x30 DIN933	OT.02.02.320	2
12	Bolt M10x40 DIN933	OT.02.02.330	2
13	Washer Ø 8/20 SFS3738	OT.04.03.030	16
14	Washer Ø 10 DIN125	OT.04.01.040	12
15	Nyloc nut M8 DIN985	OT.03.02.040	8
16	Nyloc nut M10 DIN985	OT.03.02.050	6

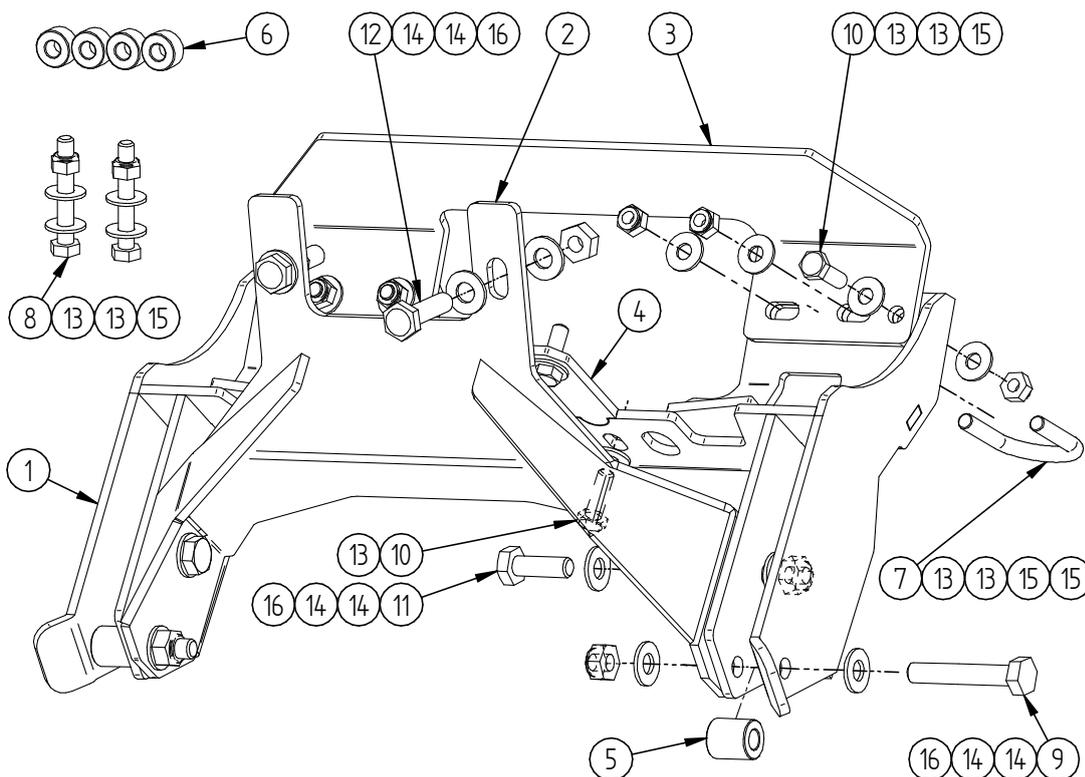

TOOLS REQUIRED FOR INSTALLATION:


- Spanner 13mm
- Spanner 17mm
- Socket wrench 13mm
- Socket wrench 17mm



FITTING INSTRUCTIONS



Step 1

Remove winch and winch fairlead. When installing the adapter to Outlander 500/700, remove the front bumper. When installing the adapter to Outlander 850/1000, the front bumper does not need to be removed. If Iron Baltic plastic or aluminium skid plate has been installed to the ATV, then remove the front protection.

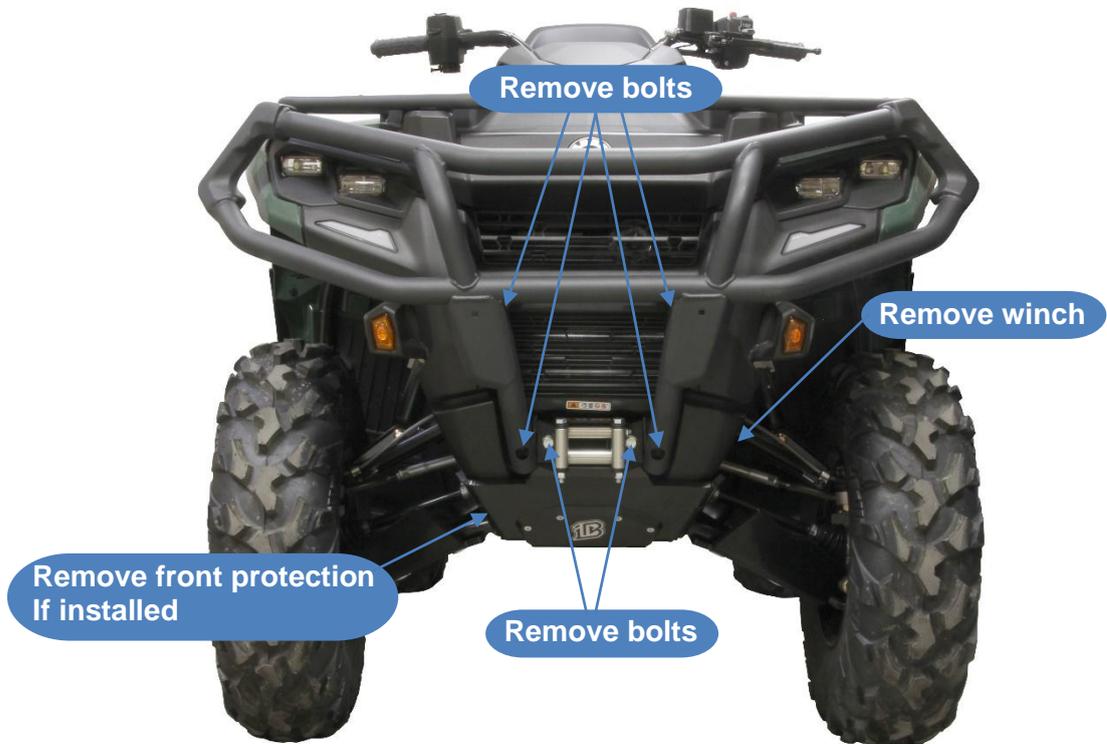


Step 2 Remove plastic shown in the picture and cut the sides (see picture).

OUTLANDER 500/700:

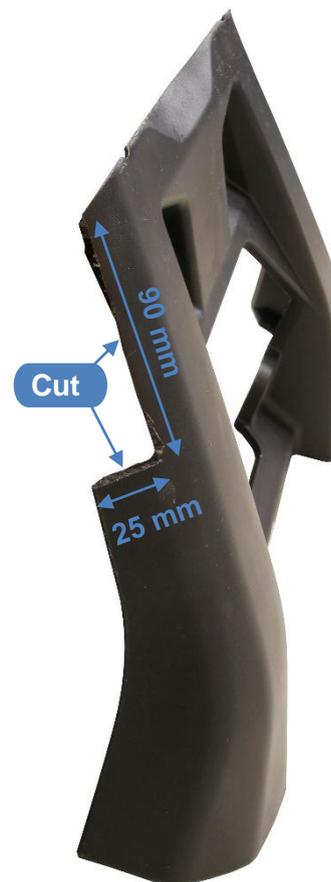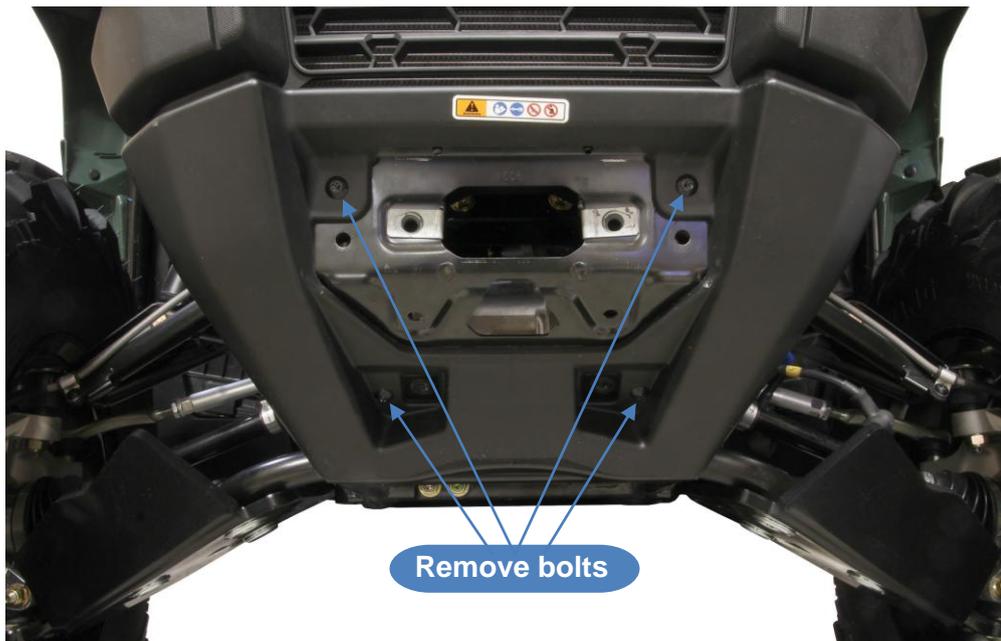

OUTLANDER 850/1000:

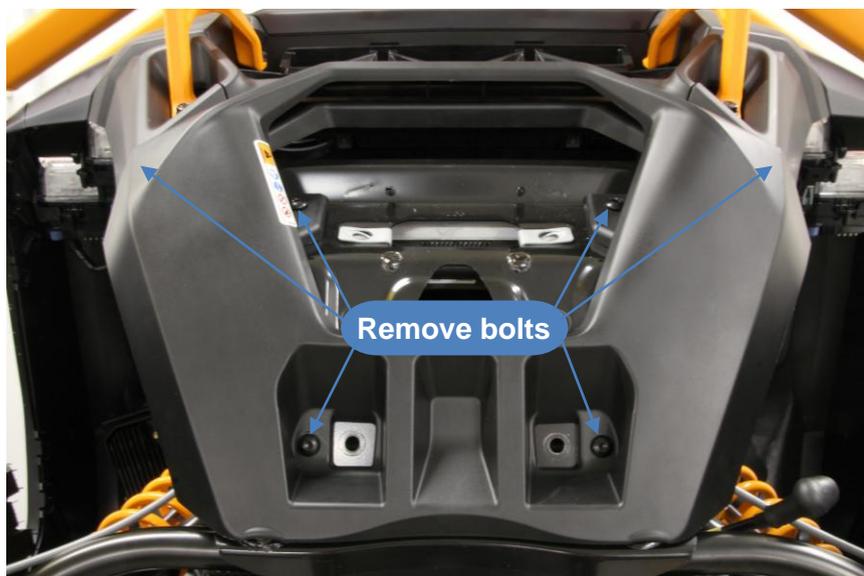

Step 3

OUTLANDER 500/700:


Reinstall the plastic and front bumper. **If you are using adapter with Iron Baltic plastic skid plate, then install distance bushings (Pos. 6) between the front bumper and mounting points!** In this case, use M8x55 bolts (Pos. 8), Ø 8 washers (Pos. 13) and M8 nyloc nuts (Pos. 15) to fix the lower part of the bumper.

Front bumper assembly if using adapter with Iron Baltic plastic skid plate:



OUTLANDER 850/1000:

Remove the plate shown in the picture and release the brake hose clamps. Loosen the A-arm bolts shown in the picture to create more space for installing the adapter.

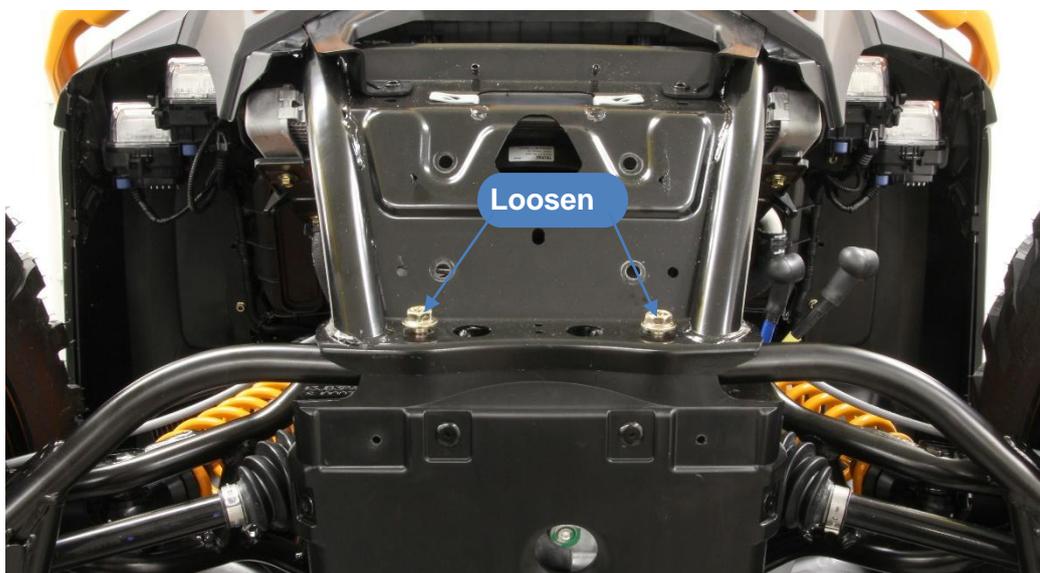

Step 4


Install adapter (Pos. 1) and winch plate (Pos. 4). When installing to Outlander 850/1000, reinstall the plate and brake hose clamps removed in step 3. Also tighten the A-arm bolts and reinstall front plastic.





Step 5

Install the winch. First connect wires to the winch, then fix the winch. For fastening use M8x25 bolts (Pos. 10) and Ø 8 washers (Pos. 13).

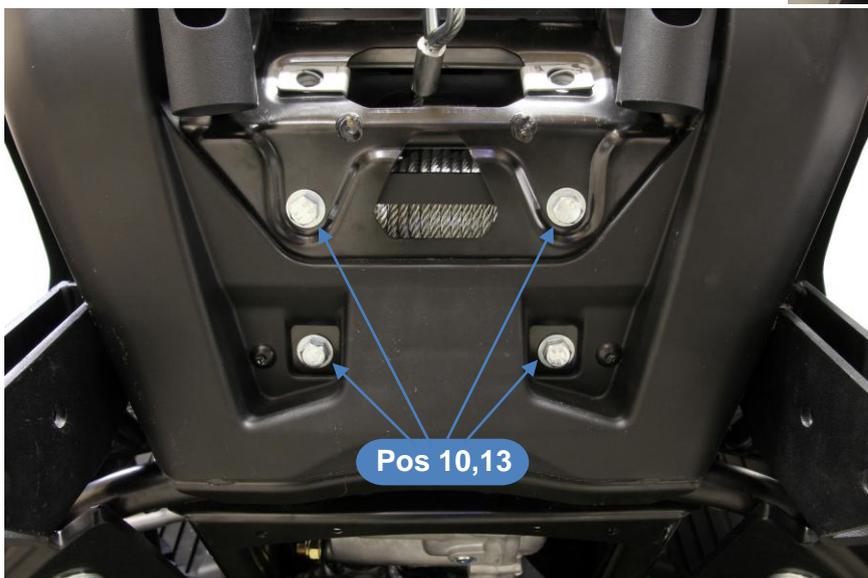


Step 6

If using adapter with Iron Baltic plastic or aluminium skid plate, then cut the side bends of the front protection (see picture). Then reinstall the front protection.




Step 7

Install front plate (Pos. 2). Use M10x30 bolts (Pos. 11), M10x60 bolts (Pos. 9), Ø 10 washers (Pos. 14) and M10 nyloc nuts (Pos. 16) to fasten the lower part of the front plate. When attaching the lower part of the front plate, also install the bushings to the adapter (Pos. 5). Attach the upper part of the front plate under the winch fairlead. Use M10x40 bolts (Pos. 12), Ø 10 washers (Pos. 14) and if necessary M10 nyloc nuts (Pos. 16) to fasten the fairlead.

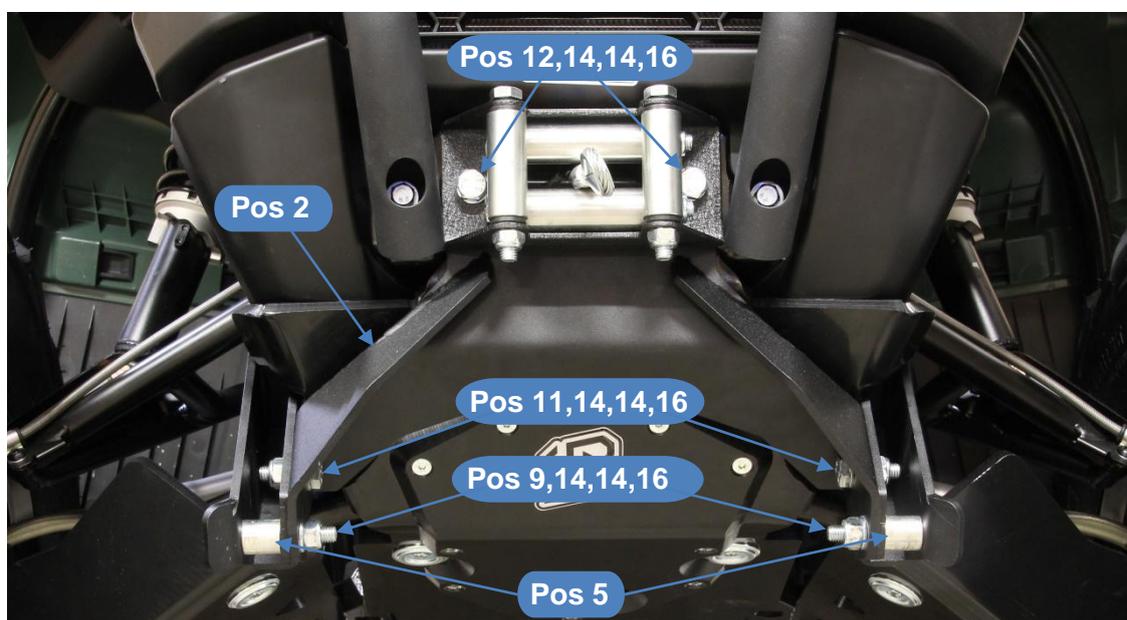



Step 8

Install rear plate (Pos. 3). For fastening use M8x25 bolts (Pos. 10), Ø 8 washers (Pos. 13) and M8 nyloc nuts (Pos. 15).

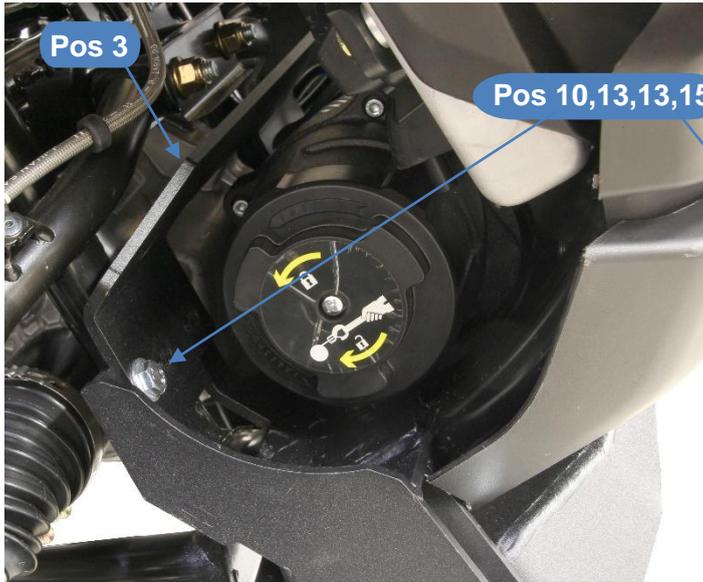

Step 9

Attach adapter to the ATV frame. For fastening use U-bolts (Pos. 7), Ø 8 washers (Pos. 13) and M8 nyloc nuts (Pos. 15).

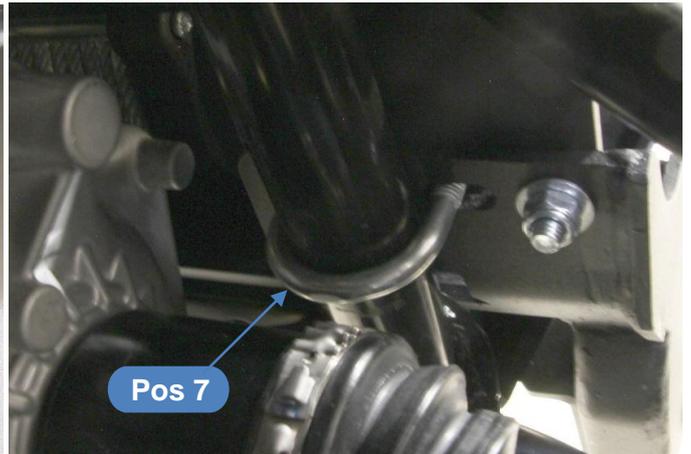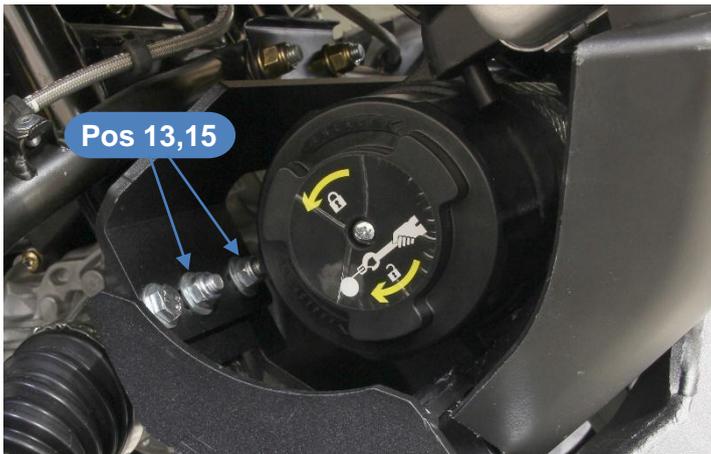

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld

