



## FRONT-MOUNT ADAPTER

# KAWASAKI

## Mule SX 4x4

Code 03.14700

Version 19122023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow adapter	03.14701K	1
2	Connector plate	03.14704K	1
3	Winch adapter	05.11201	1
4	Fairlead holder	05.11202	1
5	Bush 28 mm	03.10605	2
6	U-bolt M8x32	OT.05.01.020	4
7	Pipe clamp bracket 32 mm	OT.05.04.020	2
8	Bolt M8x16 DIN7500D	OT.02.06.040	4
9	Carriage bolt M8x55 DIN603	OT.02.05.077	4
10	Bolt M8x25 DIN933	OT.02.02.190	6
11	Bolt M10x25 DIN933	OT.02.02.317	2
12	Bolt M10x55 DIN933	OT.02.02.342	2
13	Washer Ø8/20 SFS3738	OT.04.03.030	24
14	Washer Ø10 DIN125	OT.04.01.040	8
15	Nyloc nut M8 DIN985	OT.03.02.040	18
16	Nyloc nut M10 DIN985	OT.03.02.050	4

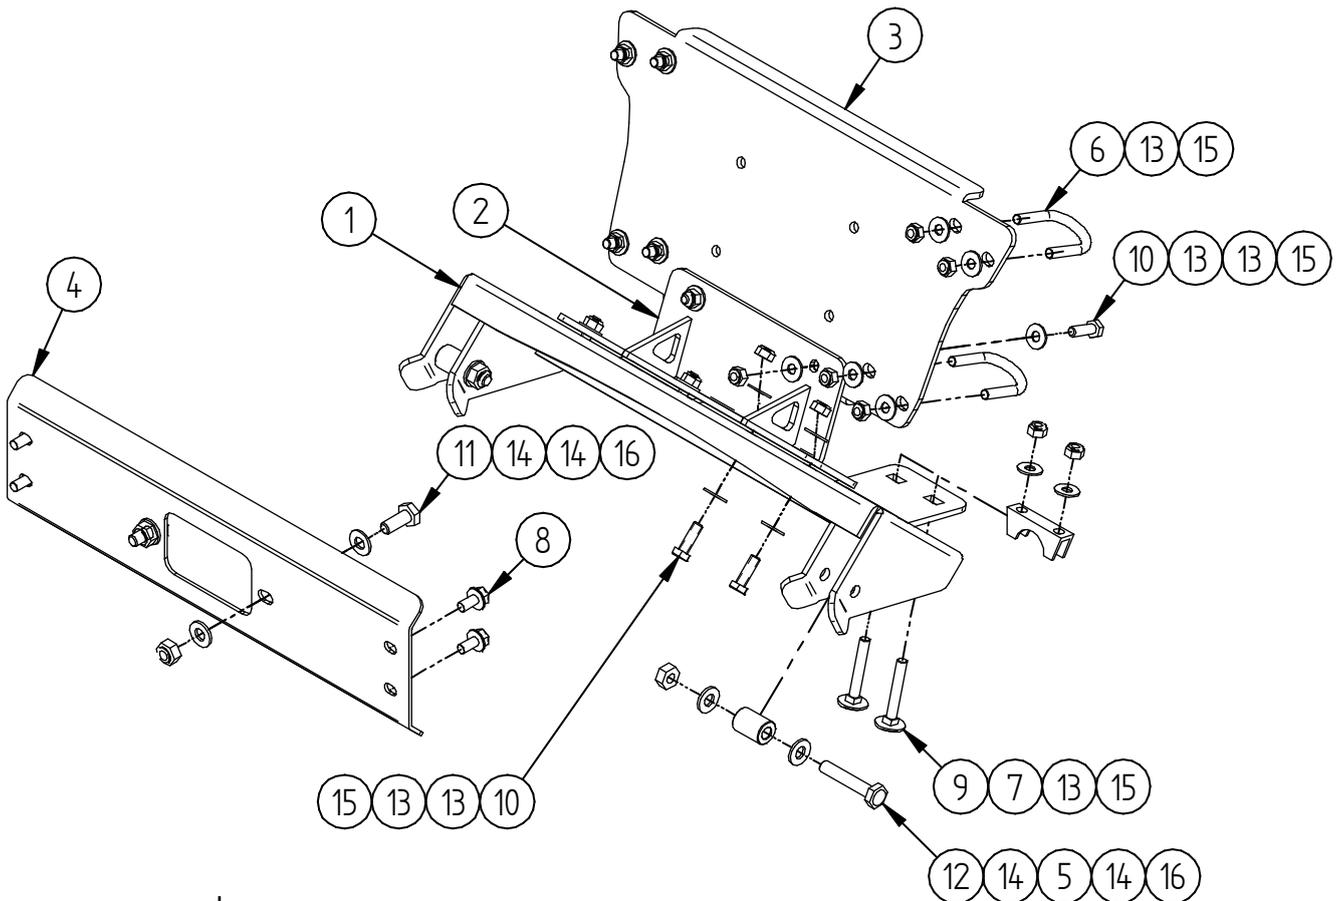

## TOOLS REQUIRED FOR INSTALLATION:


- Spanner 13 mm
- Spanner 17 mm
- Socket wrench 13 mm
- Socket wrench 17 mm



# FITTING INSTRUCTIONS


## Step 1

Remove front bumper bolts and plastic cover screws on both sides.

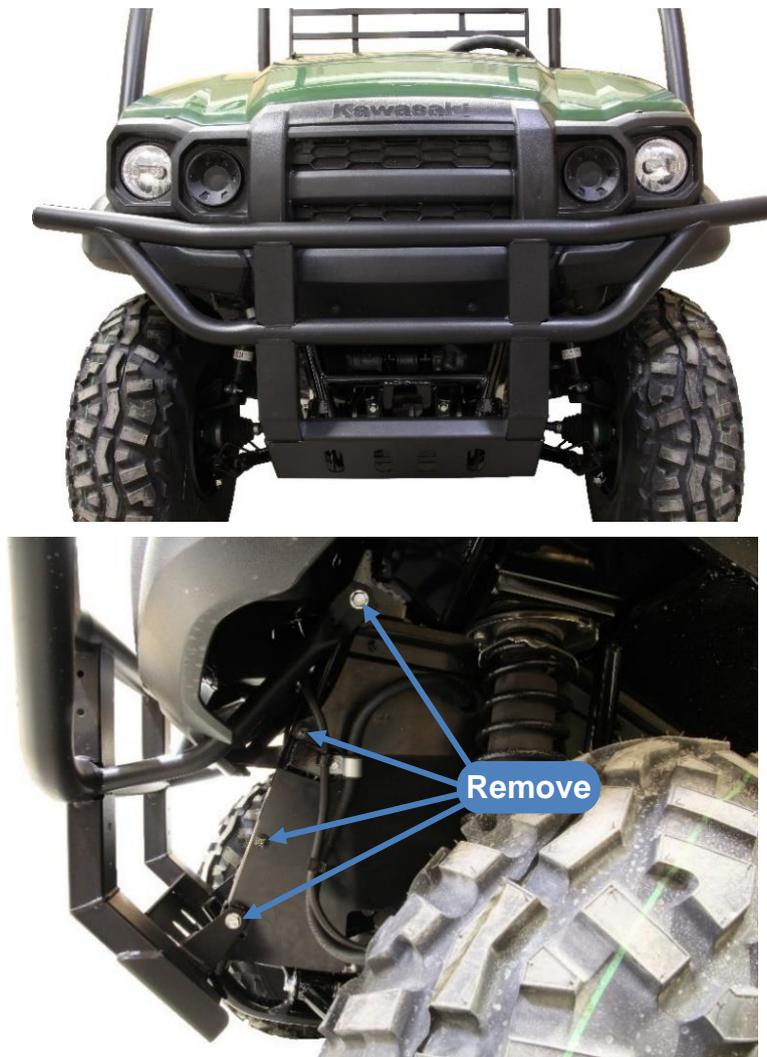


## Step 2

Install the winch adapter (Pos.3) to the UTV frame. For fastening use M8x32 U-bolts (Pos.6), Ø8 mm washers (Pos.13) and M8 nyloc nuts (Pos.15). **NB! Make sure that the bottom U-bolts (Pos.6) are placed below the UTV frame bracket as shown in the picture!**

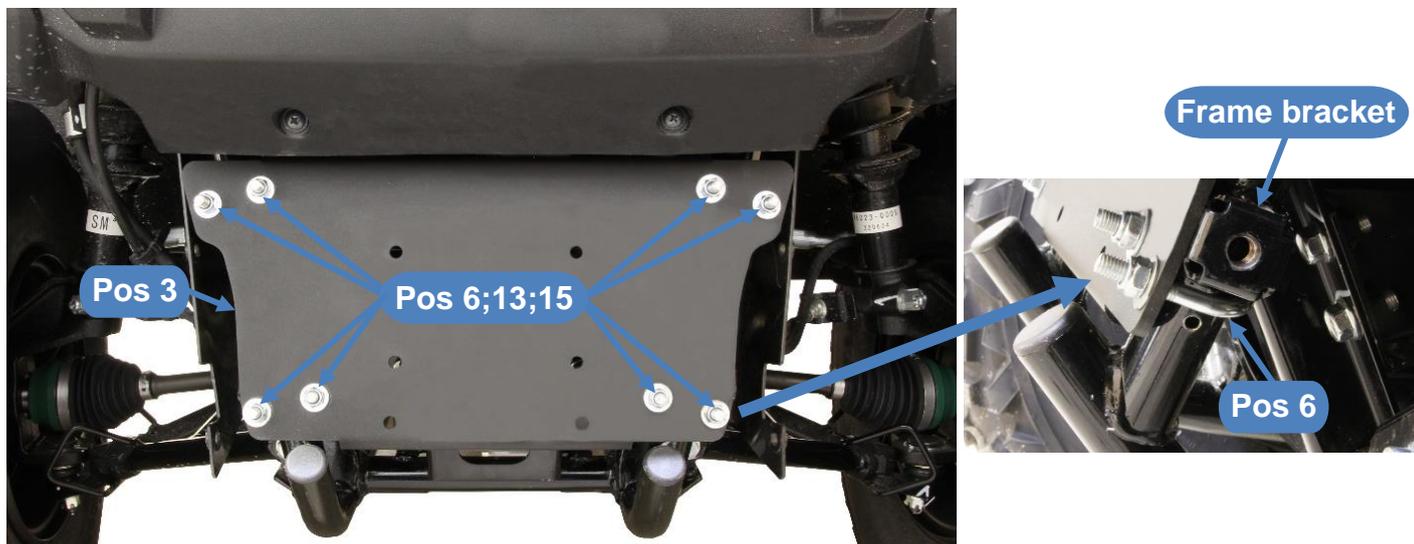

### Step 3

Attach the connector plate (Pos.2) to the winch adapter (Pos.3). For fastening use M8x25 bolts (Pos.10), Ø8 mm washers (Pos.13) and M8 nyloc nuts (Pos.15). **Do not tighten bolts completely!**

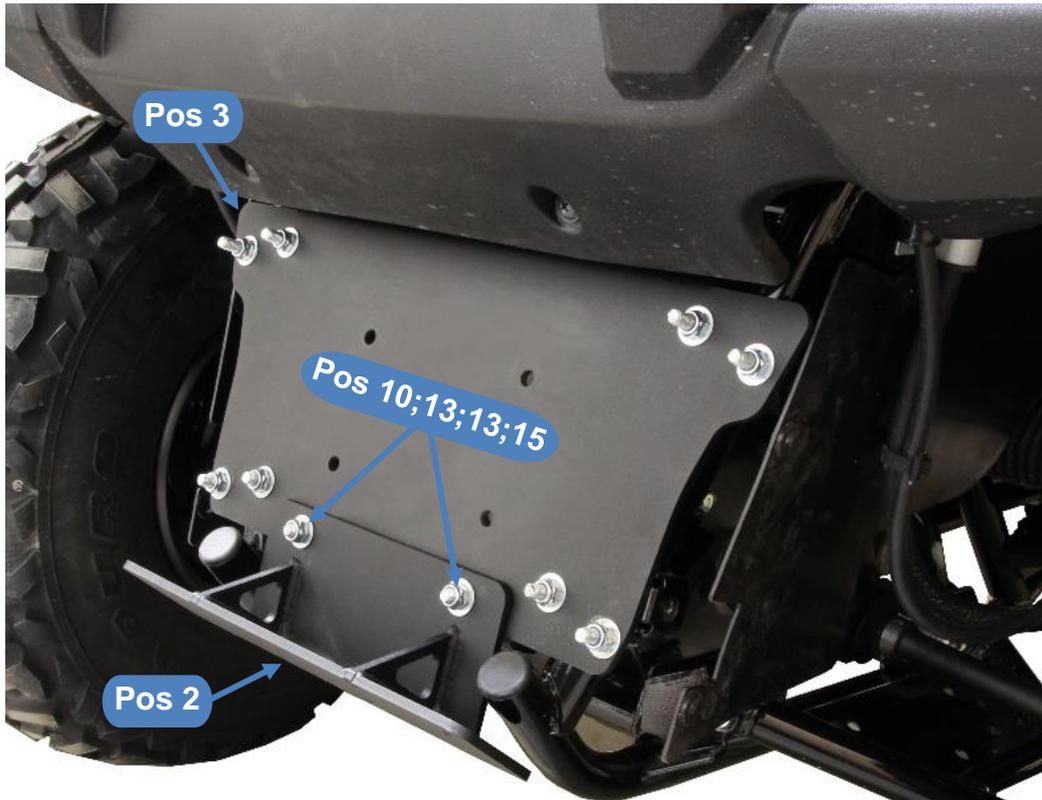

### Step 4

Re-install front bumper with original bolts.

### Step 5

Install bushes (Pos.5) to the snow plow adapter (Pos.1). For fastening use M10x55 bolts (Pos.12), Ø10 mm washers (Pos.14) and M10 nyloc nuts (Pos.16).



## Step 6

Place the snow plow adapter (Pos.1) on top of the front bumper and secure it to the connector plate (Pos.2). For fastening use 32 mm pipe clamp brackets (Pos.7), M8x25 bolts (Pos.10), M8x55 carriage bolts (Pos.9), Ø8 mm washers (Pos.13) and M8 nyloc nuts (Pos.15). **Tighten all bolts described in previous steps!**




### Step 7

Place the winch onto the winch adapter (Pos.3). For fastening use bolts supplied with winch. **NB! Make sure that the winch line runs from top of the winch!**



### Step 8

Re-install plastic covers with original screws. Fasten only the top screw.

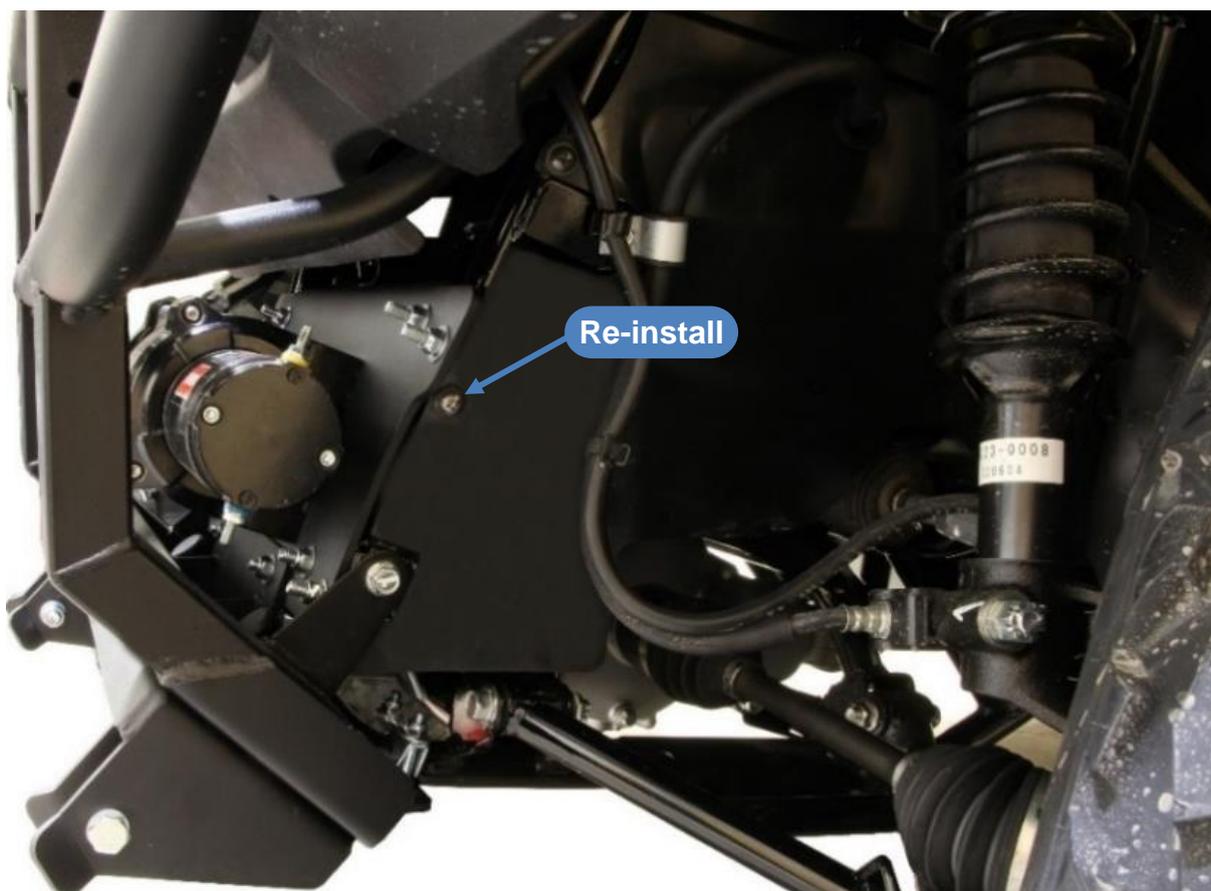


## Step 9

Install fairlead to fairlead holder (Pos.4). For fastening use M10x25 bolts (Pos.11), Ø10 mm washers (Pos.14) and M10 nyloc nuts (Pos.16). **NB! Pay attention to the entering direction of M10x25 (Pos.11) bolts.**



## Step 10

Attach the fairlead holder (Pos.4) to the UTV front bumper. For fastening use M8x16 self tapping bolts (Pos.8). Bolt holes may not have been threaded originally, so self tapping bolts may require more force when fastening.

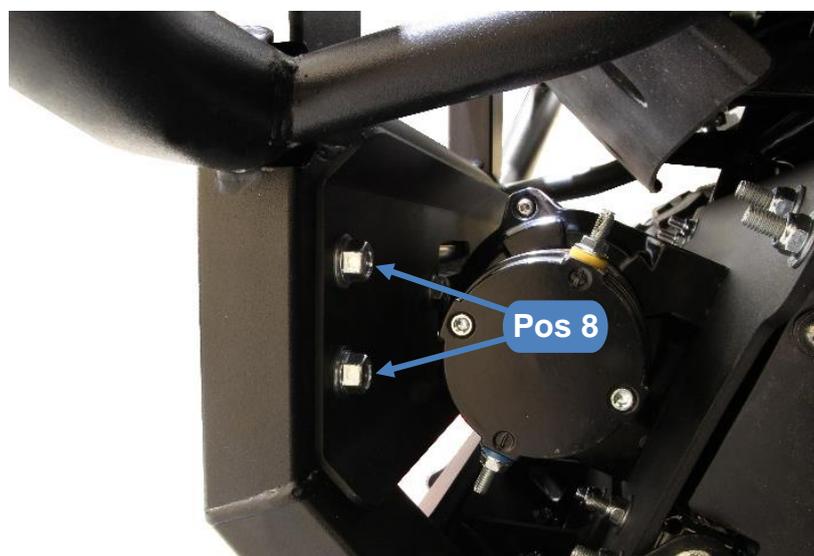

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticld](https://www.youtube.com/user/ironbalticld)

