

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



<https://code.ironbaltic.com/u/jkLTmxNc>

FRONT MOUNT ADAPTER

SEGWAY Snarler AT5

Code 03.15100

Version 21122023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.15101K	1
2	Mounting plate	03.15104	1
3	Lifting plate	03.12406	2
4	Distance plate	05.3902	1
5	Distance bushing	05.5405	2
6	Lifting eye bolt M12 DIN580	OT.19.01.010	1
7	Bolt M8x25 DIN933	OT.02.02.190	4
8	Bolt M8x60 DIN931	OT.02.01.015	4
9	Bolt M10x35 DIN961	OT.02.08.345	2
10	Washer Ø8/20 SFS3738	OT.04.03.030	12
11	Washer M10 DIN125	OT.04.01.040	2
12	Washer M12 DIN125	OT.04.01.050	1
13	Nyloc nut M8 DIN985	OT.03.02.040	4
14	Nyloc nut M12 DIN985	OT.03.02.060	1

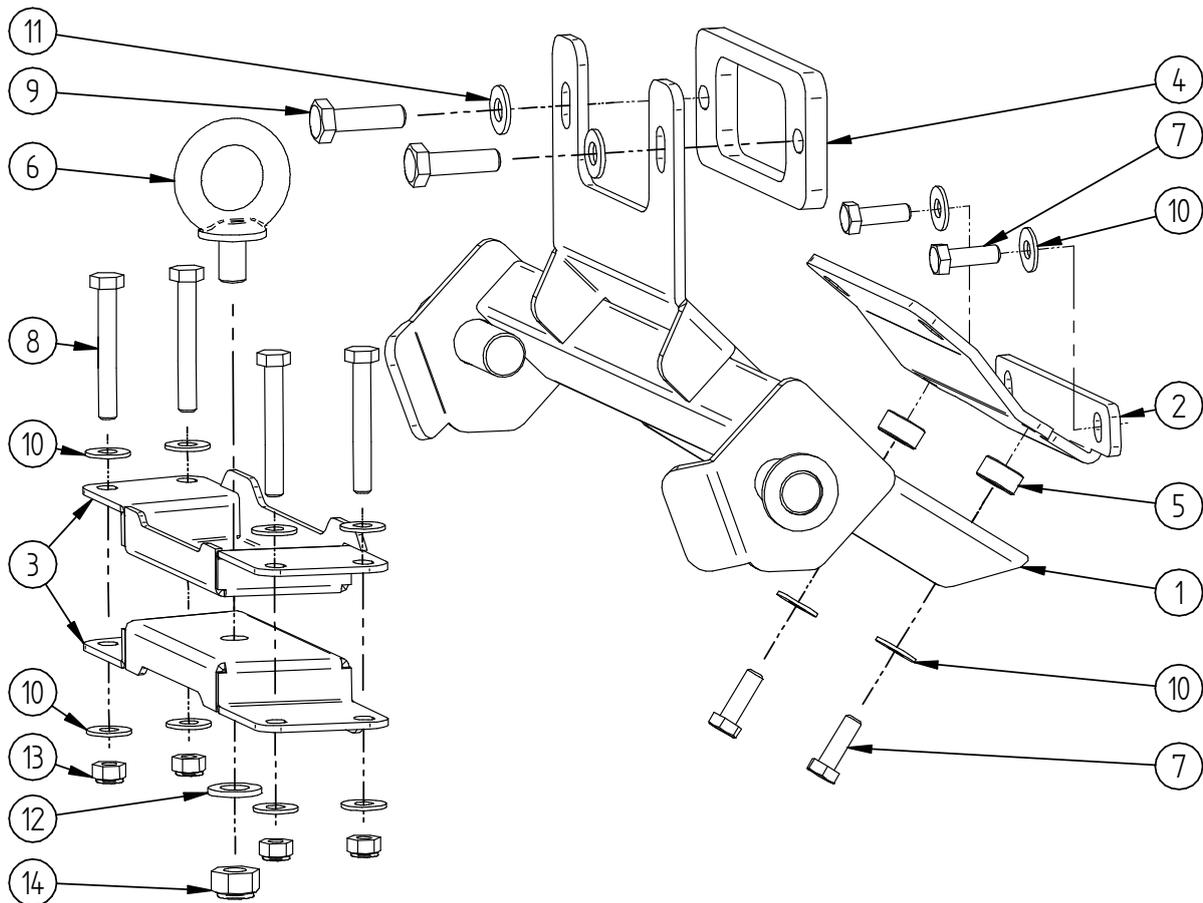

TOOLS REQUIRED FOR INSTALLATION:



- Spanner 13mm
- Spanner 15mm
- Spanner 17mm
- Socket wrench 10mm
- Socket wrench 13mm
- Socket wrench 19mm
- Allen wrench 5mm

FITTING INSTRUCTIONS

Step 1


Remove winch fairlead and the plastic on the front of the ATV. When using the Iron Baltic skid plate, then remove the skid plate front part.

Iron Baltic skid plate front part:



Step 2

Remove bolts shown in the picture.

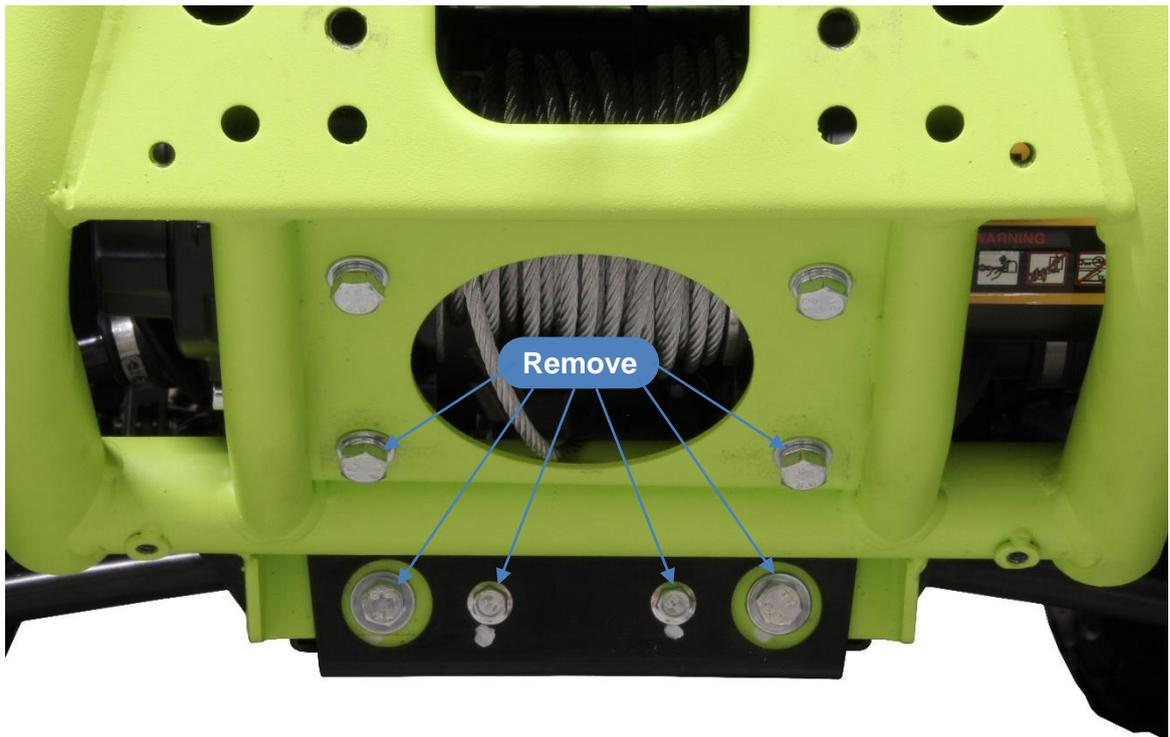


Step 3

Install mounting plate (Pos. 2). For fastening use original winch mounting bolts, M8x25 bolts (Pos. 7) and Ø8 mm washers (Pos. 10).




If installing with original skid plate, then install mounting plate on the plastic

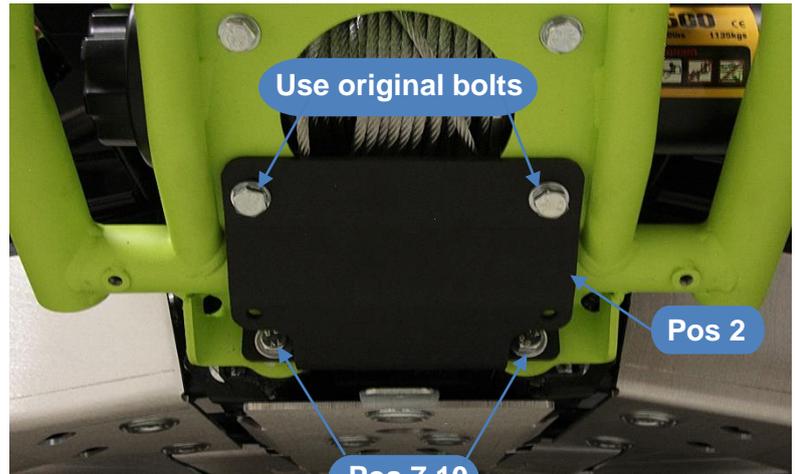

Step 4

Reinstall front plastic / skid plate front part. When installing adapter with original front plastic, make a cut-out as shown in the picture. If using the Iron Baltic skid plate, then remove the reinforcement from the front part.


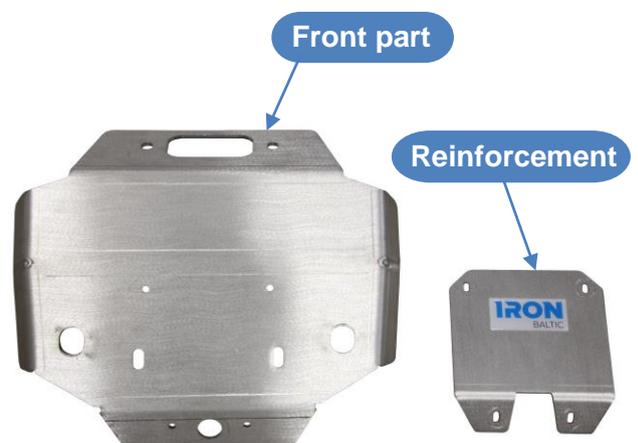


Step 5


Install adapter (Pos. 1) together with winch fairlead. For fastening use M10x35 bolts (Pos. 9), Ø10 mm washers (Pos. 11), M8x25 bolts (Pos. 7) and Ø8 mm washers (Pos. 10). NB! If you are installing adapter with original skid plate, then install distance bushings (Pos. 5) between the adapter (Pos. 1) and mounting plate (Pos. 2). Use distance plate (Pos. 4) when fixing the upper part of the adapter.

When installing with Iron Baltic skid plate, then distance bushings and distance plate are not needed!

Installation with original skid plate:

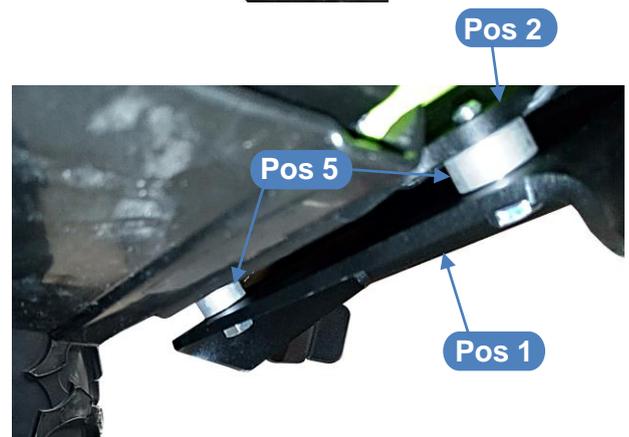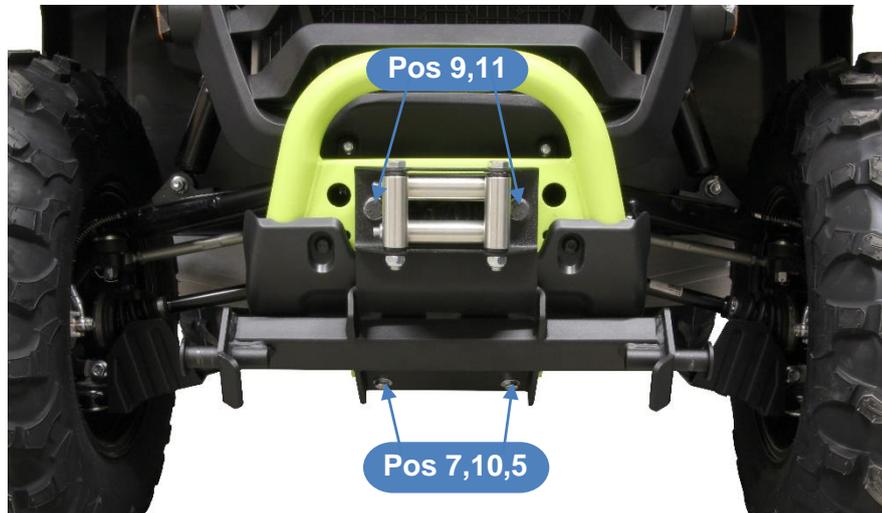


Installation with Iron Baltic skid plate:

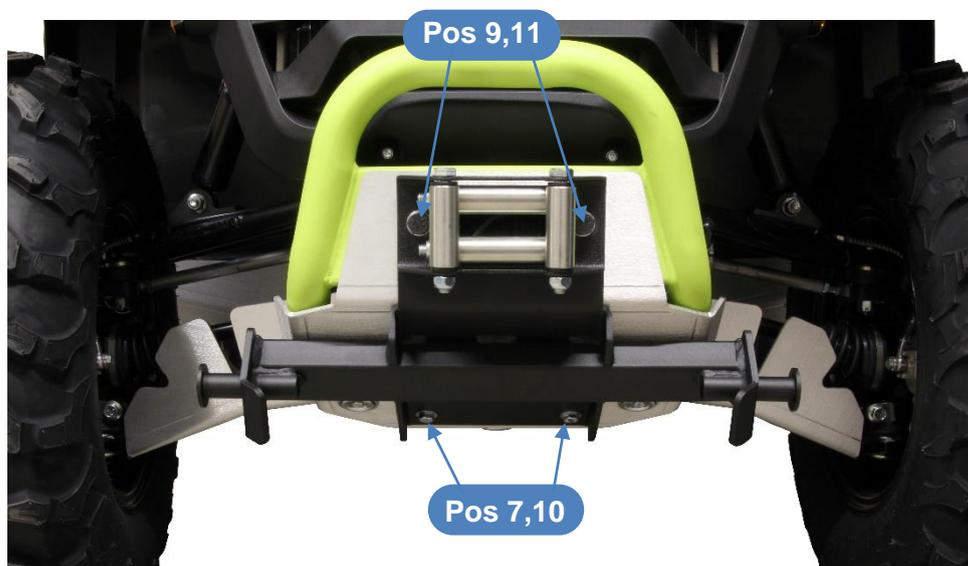

Step 6

Install lifting plates (Pos. 3) to the snow plow frame and lifting eye bolt (Pos. 6) to lifting plate. For fastening the lifting plates use M8x60 bolts (Pos. 8), Ø8 mm washers (Pos. 10) and M8 nyloc nuts (Pos. 13). For fastening the lifting eye use Ø12 mm washer (Pos. 12) and M12 nyloc nut (Pos. 14).

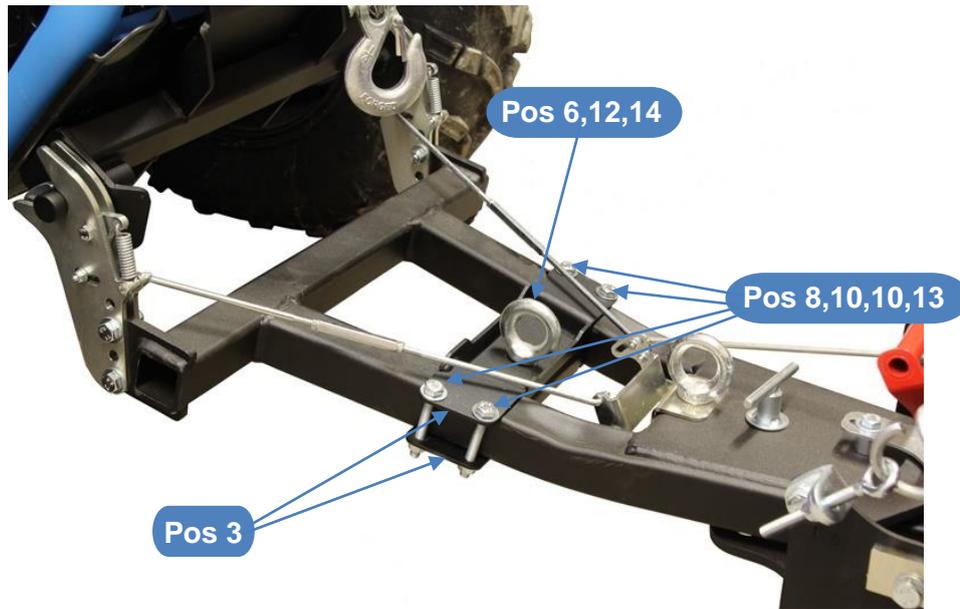

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

