

IRON BALTIC

FRONT MOUNT ADAPTER

KAWASAKI Mule DX PRO

Code 03.15200

Version 15042024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/txZG56do

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.15202K	1
2	Bracket	03.15201	1
3	Bush 28 mm	03.10605	2
4	Bolt M8x20 DIN933	OT.02.02.180	4
5	Bolt M8x65 DIN931	OT.02.01.013	4
6	Bolt M10x25 DIN933	OT.02.02.317	2
7	Bolt M10x55 DIN933	OT.02.02.342	2
8	Washer Ø8/20 SFS3738	OT.04.03.030	12
9	Washer M10 DIN125	OT.04.01.040	8
10	Nyloc nut M8 DIN985	OT.03.02.040	4
11	Nyloc nut M10 DIN985	OT.03.02.050	4

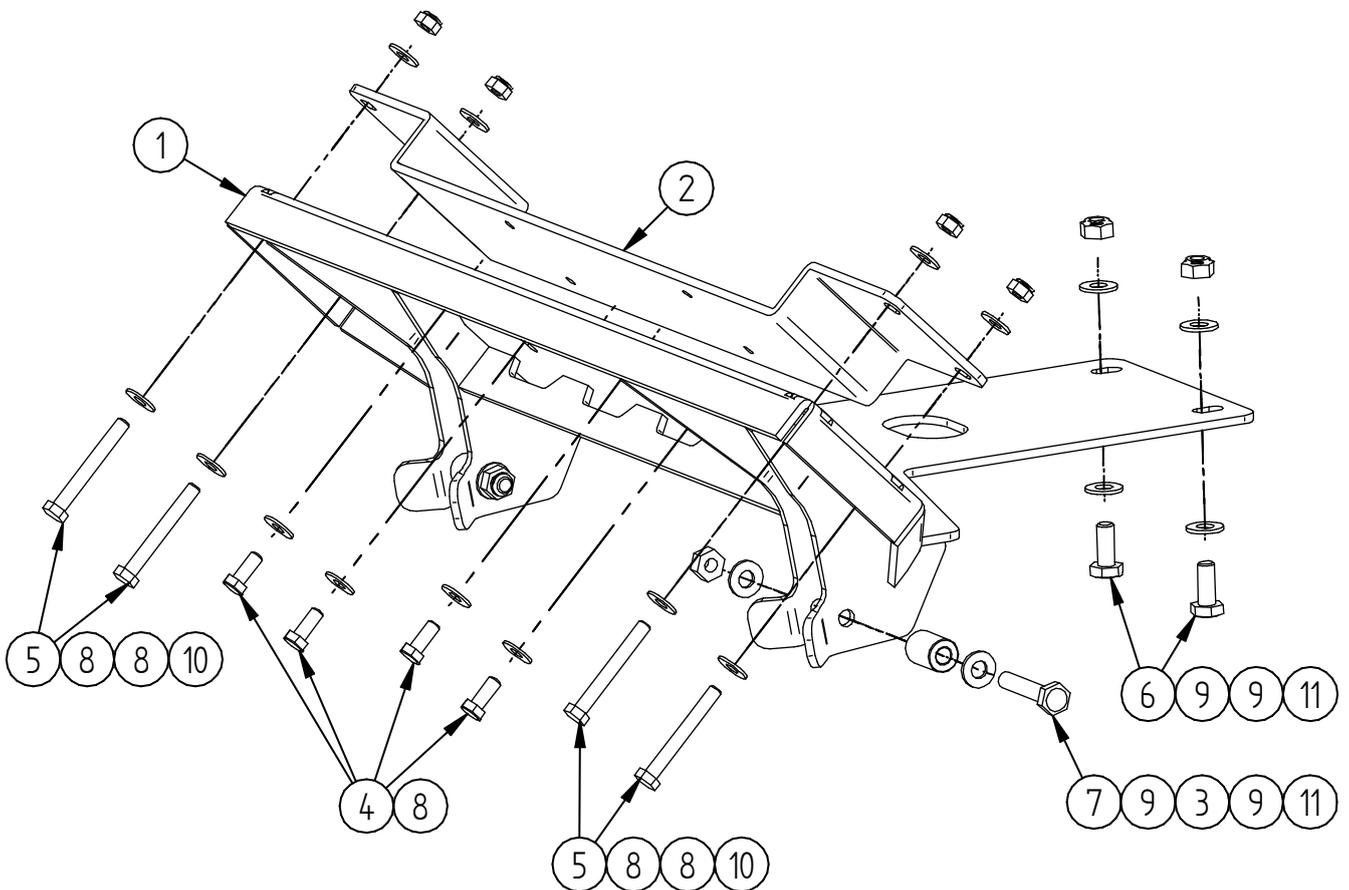


TOOLS REQUIRED FOR INSTALLATION:

- Spanner 13mm
- Spanner 15mm
- Socket wrench 13mm
- Socket wrench 15mm

FITTING INSTRUCTIONS


Step 1

This step is only needed when Iron Baltic front winch mount is installed!
Remove 3 original bumper bolts. Pull the bumper away and fit mounting plate (Pos.2). Reinstall original bolts.

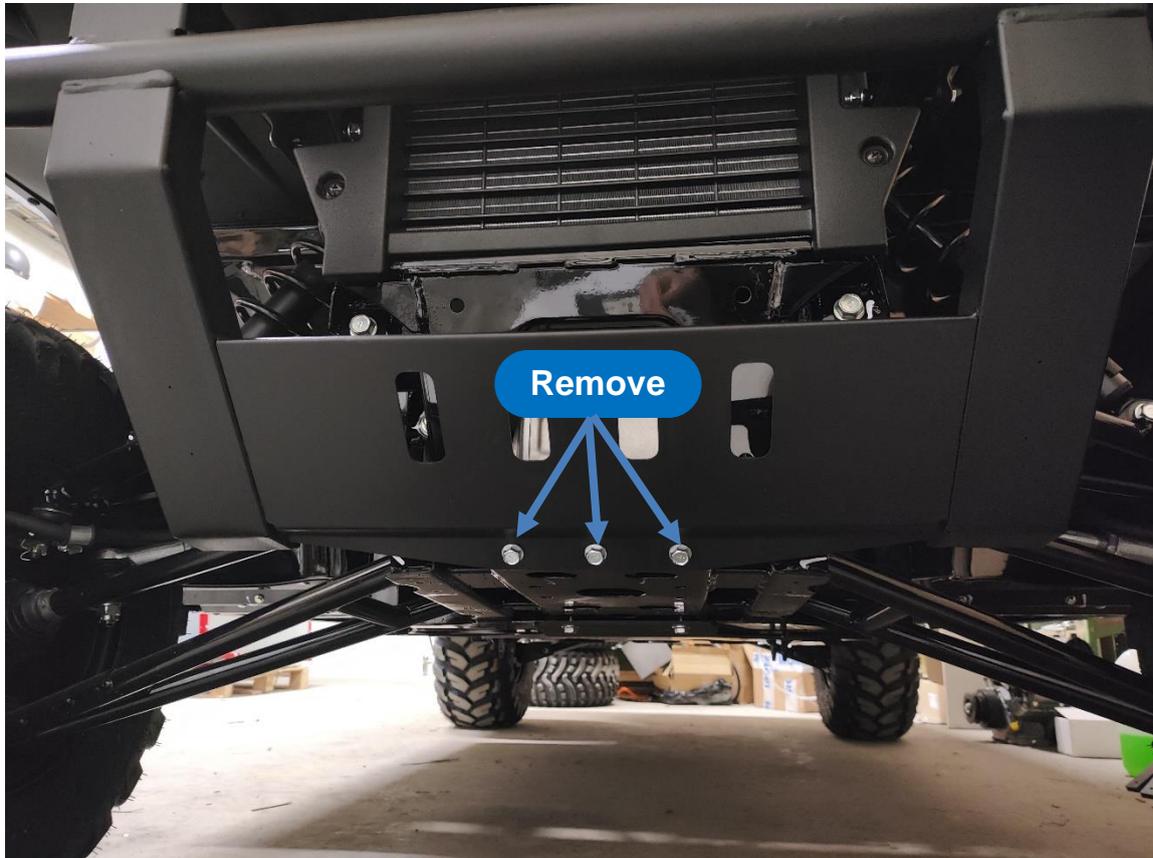

Step 2



Install bushes (Pos.3) on the adapter (Pos.1). For fastening use M10x55 bolts (Pos.7), M10 washers (Pos.8) and M10 nyloc nuts (Pos.11)

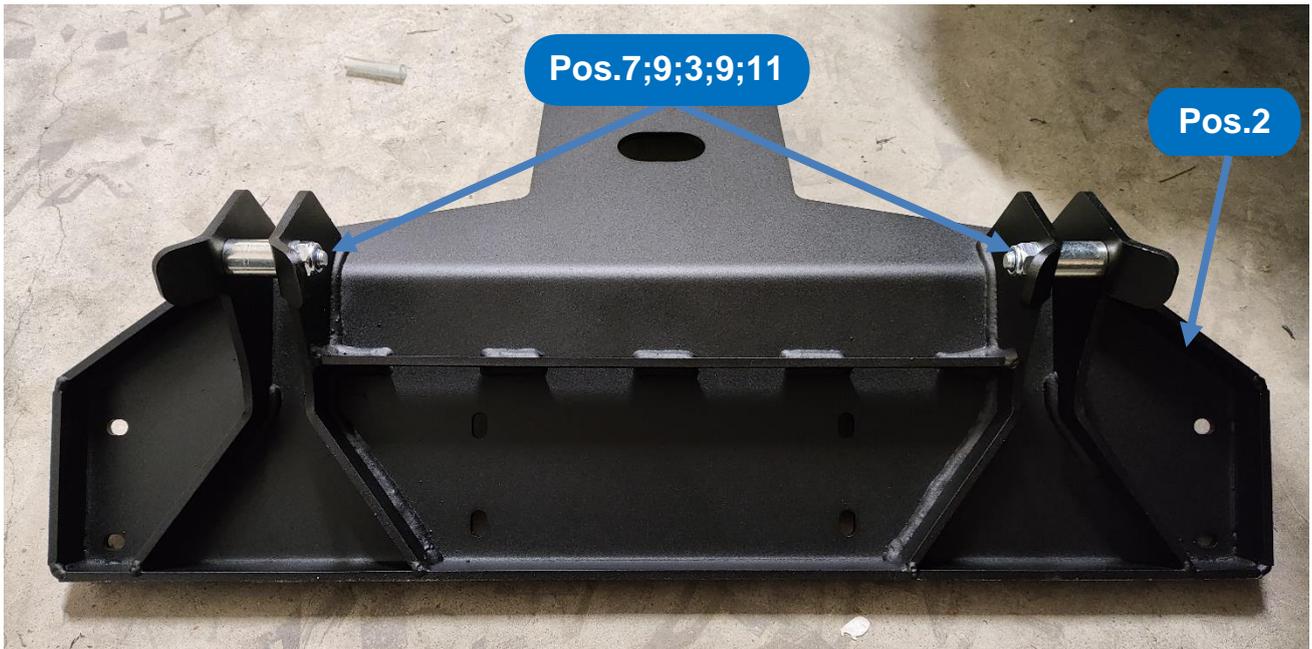

Step 3

Install adapter (Pos.1). For fastening use M8x20 bolts (Pos.4), M8x65 bolts (Pos.5), M10x25 (Pos.6), Ø8 mm washers (Pos.8), M10 washers (Pos.9), M8 nyloc nuts (Pos.10) and M10 nyloc nuts (Pos.11).



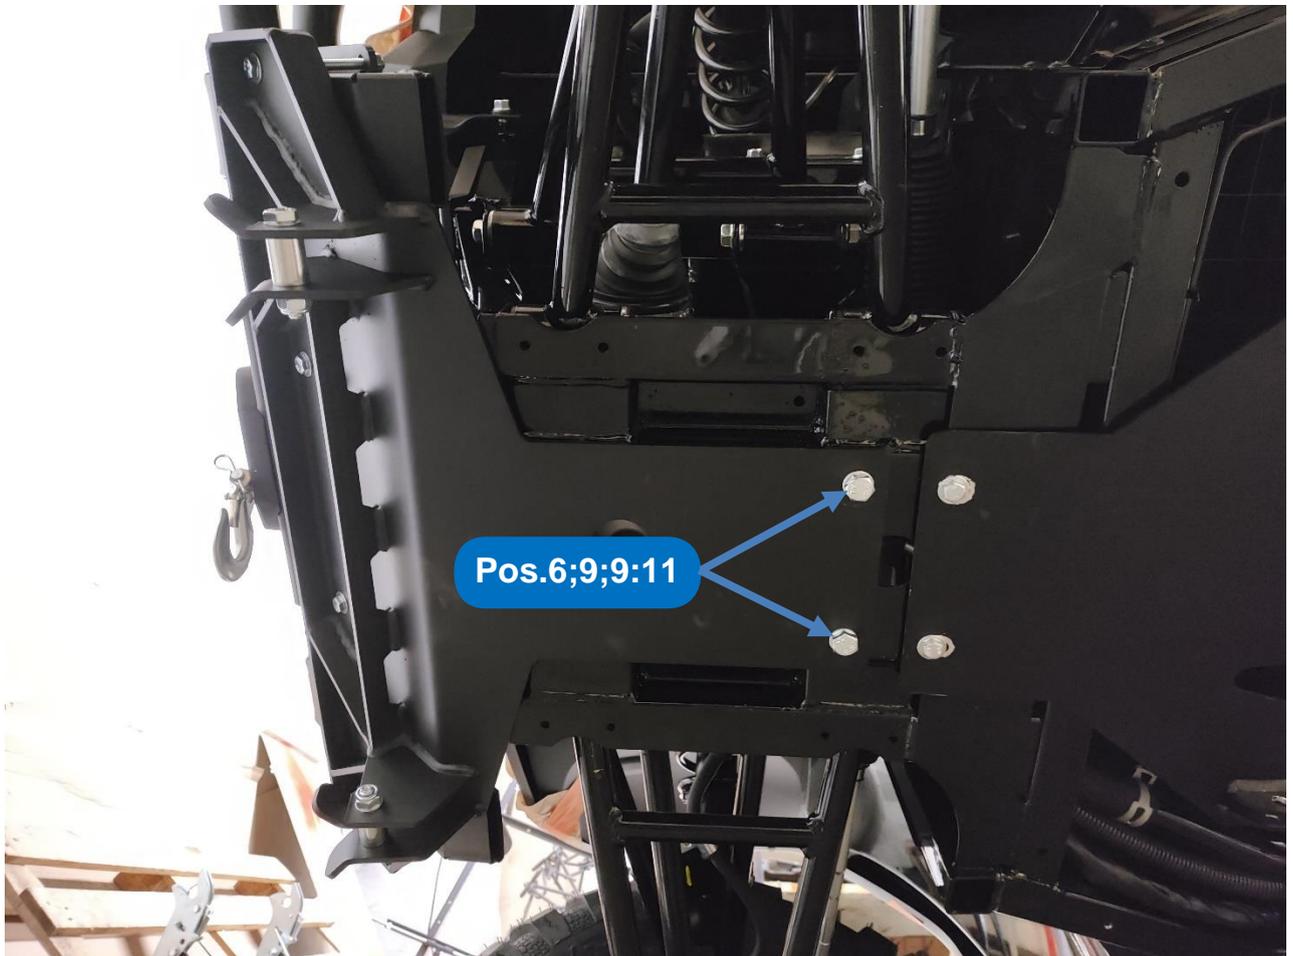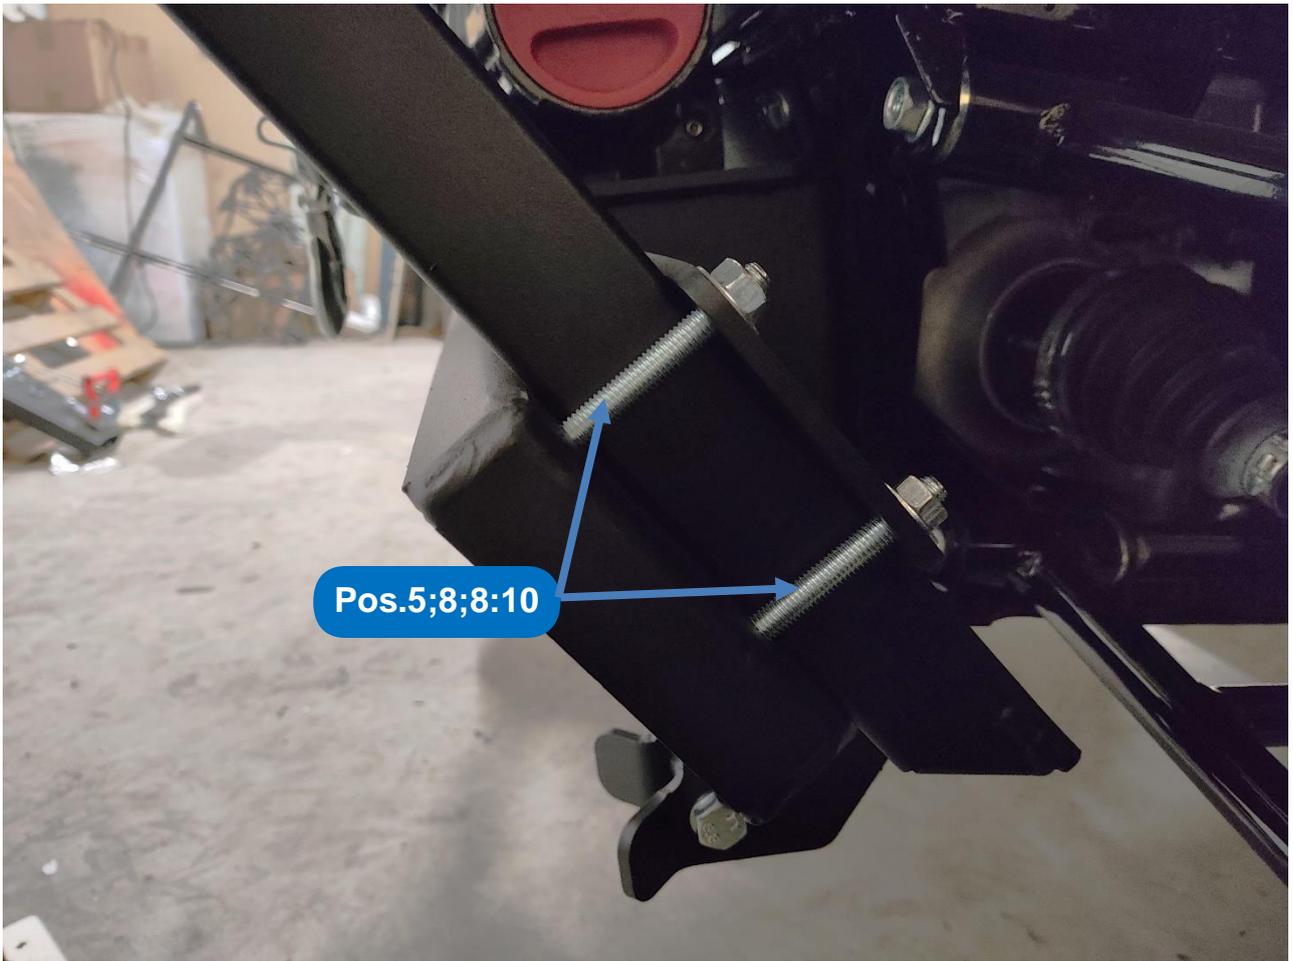

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

