



MID-MOUNT ADAPTER

AODES

Workcross 650 / 1000

Code 03.15700

Version 25062024



DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/lkWTdn97

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION



Pos.	Description	Code	Amount
1	Adapter	03.15701K	1
2	Connecting plate	03.4003	2
3	Distance bush	20.6261	2
4	Pin 10x40	14.003	2
5	Cotter pin 2mm DIN 11024	OT.07.01.010	2
6	Bolt M8x40 DIN933	OT.02.02.220	2
7	Bolt M8x90 DIN931	OT.02.01.018	4
8	Washer Ø8/20 SFS3738	OT.04.03.030	12
9	Nyloc nut M8 DIN985	OT.03.02.040	6

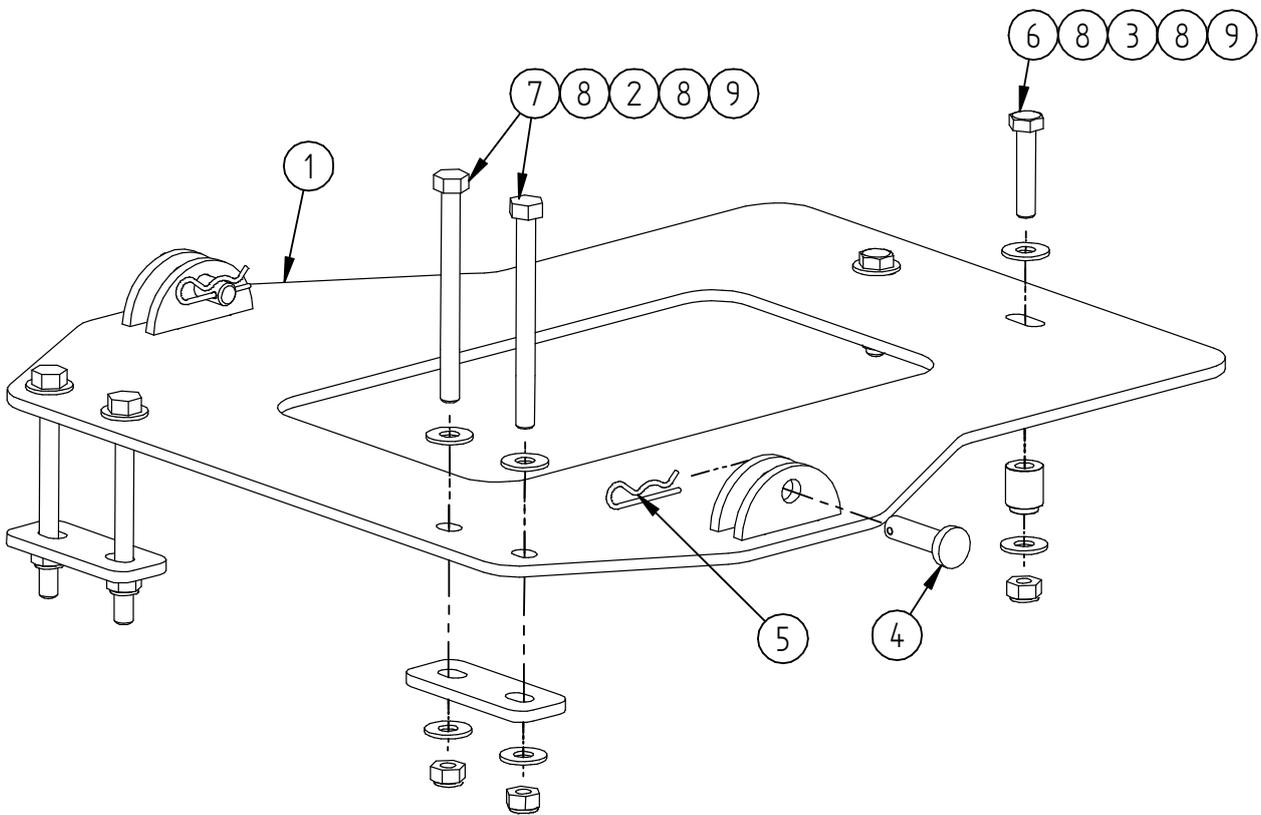



FITTING INSTRUCTIONS

Step 1 Remove original plastic or drill holes to places where adapter will mount.

Step 2 Install rear part of adapter (Pos.1). For fastening use M8x40 bolts (Pos.6), Ø8/20 washers (Pos.8), distance bushes (Pos.3), M8 nyloc nuts (Pos.9). Distance bushes have small step on one side, step goes towards frame into the slot.
NB! Do not tighten bolts!

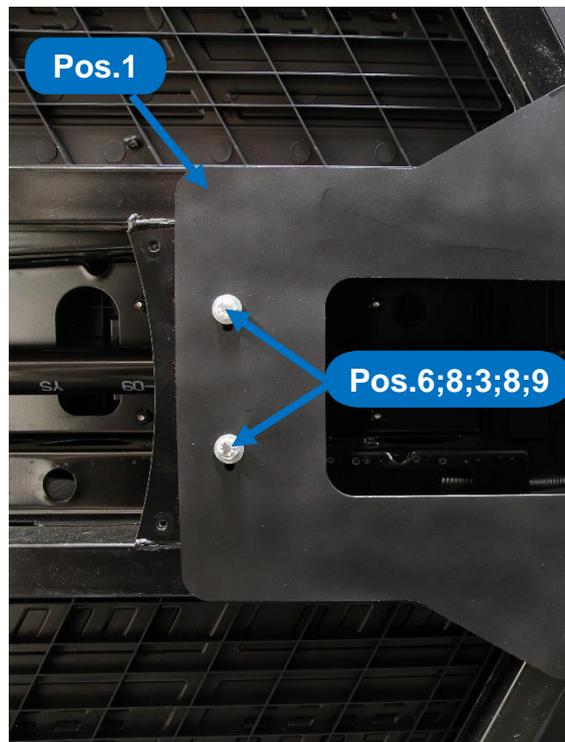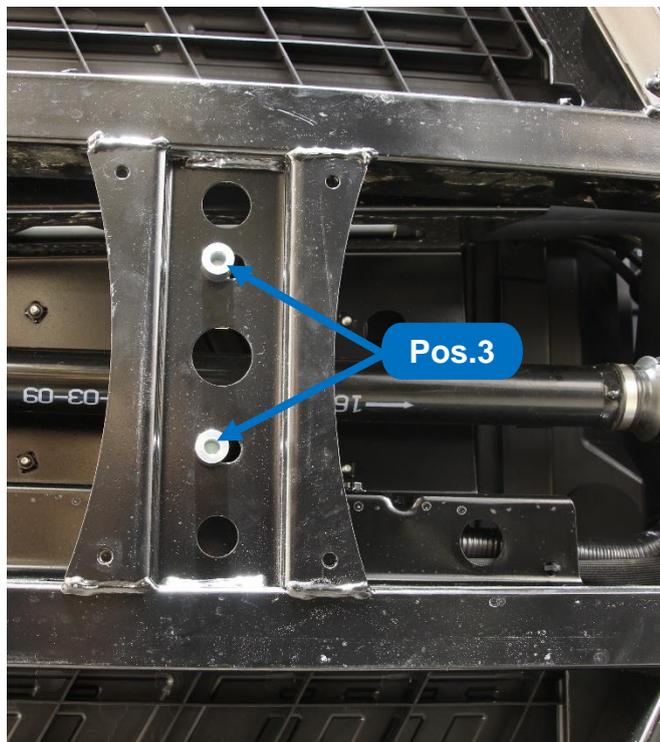

Step 3 Install front part of adapter (Pos.1). For fastening use M8x90 bolts (Pos.7), Ø8/20 washers (Pos.8), connecting plate (Pos.2), M8 nyloc nuts (Pos.9).
NB! Tighten all bolts!

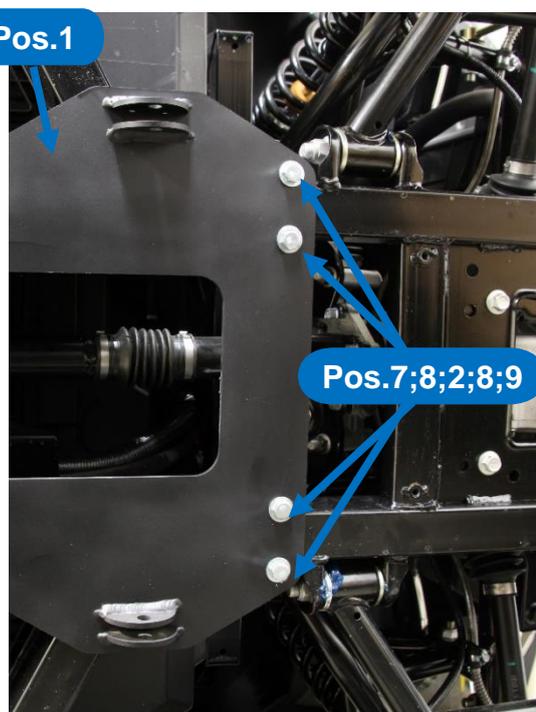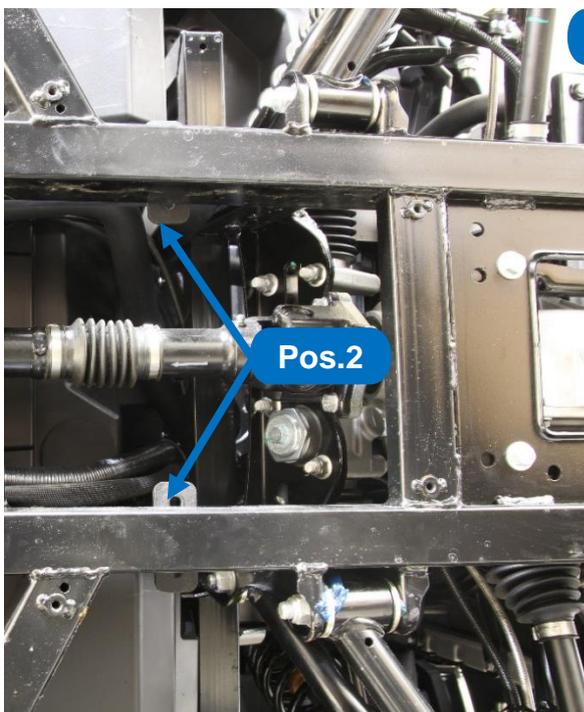

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

