


IRON BALTIC

FRONT MOUNT ADAPTER

CAN AM Maverick Trail

Code 03.16100

Version 09012024

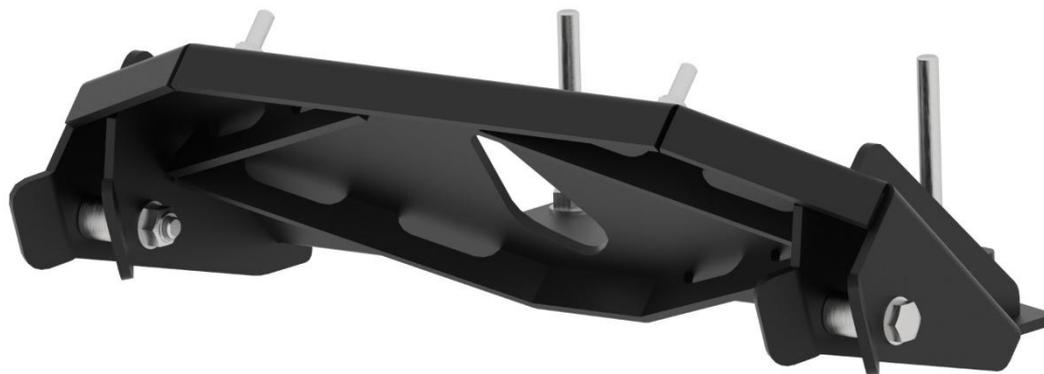

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


MULTILINGUAL MANUAL



code.ironbaltic.com/u/EZHcq6lk

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.16101K	1
2	Bush 28 mm	03.10605	2
3	Bolt M8x45 DIN933	OT.02.02.230	2
4	Bolt M10x55 DIN933	OT.02.02.342	2
5	Bolt M10x100 DIN931	OT.02.01.052	2
6	Washer Ø8/20 SFS3738	OT.04.03.030	4
7	Washer M10 DIN125	OT.04.01.040	8
8	Nyloc nut M8 DIN985	OT.03.02.040	2
9	Nyloc nut M10 DIN985	OT.03.02.050	4

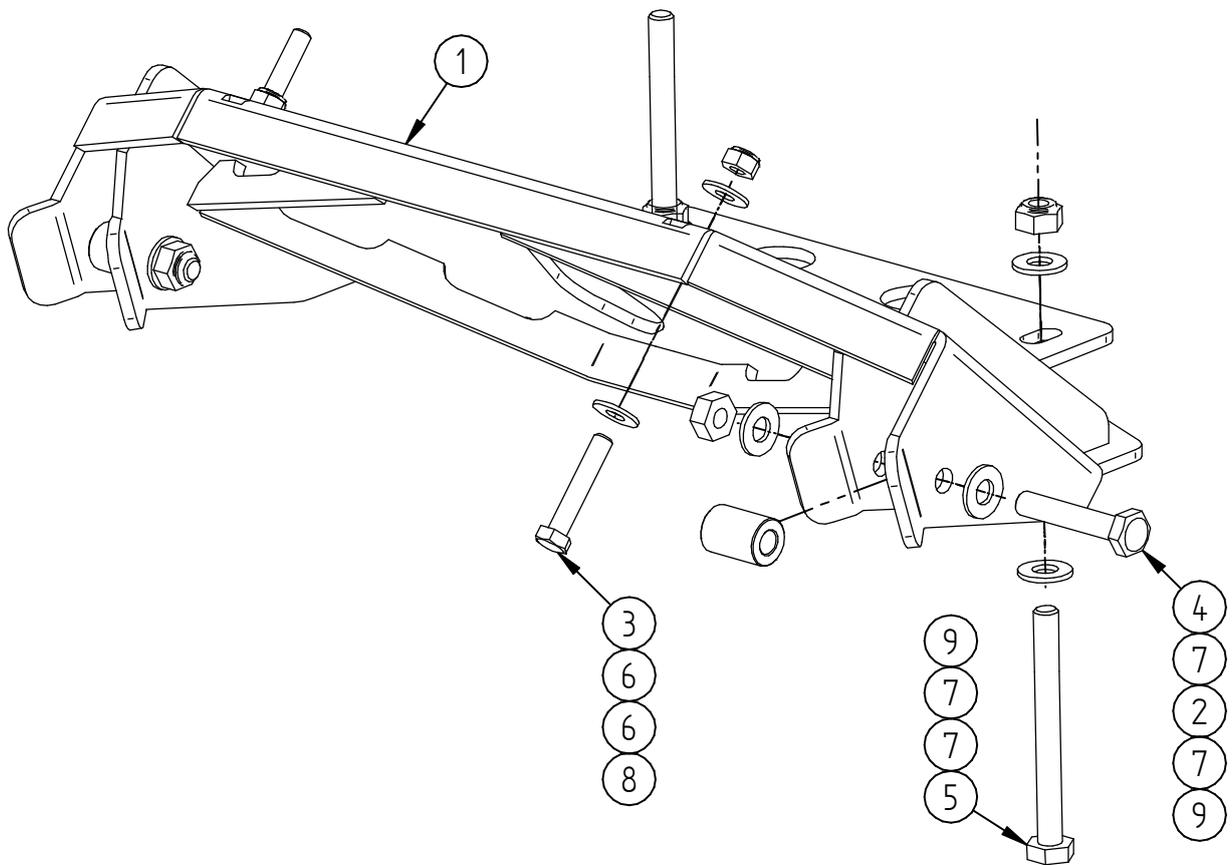

NB! Designing the adapter, original/factory tires were taken into consideration!

Front: 26x8.00-12 and rear: 26x9.00-12.




TOOLS REQUIRED FOR INSTALLATION:

- Spanner 13mm
- Spanner 17mm
- Socket wrench 13mm
- Socket wrench 17mm

FITTING INSTRUCTIONS


Step 1

Remove original plastic or drill holes to places where adapter will mount. If using an Iron Baltic skid plate, remove front cover plate and mounting bolts as shown in the picture.

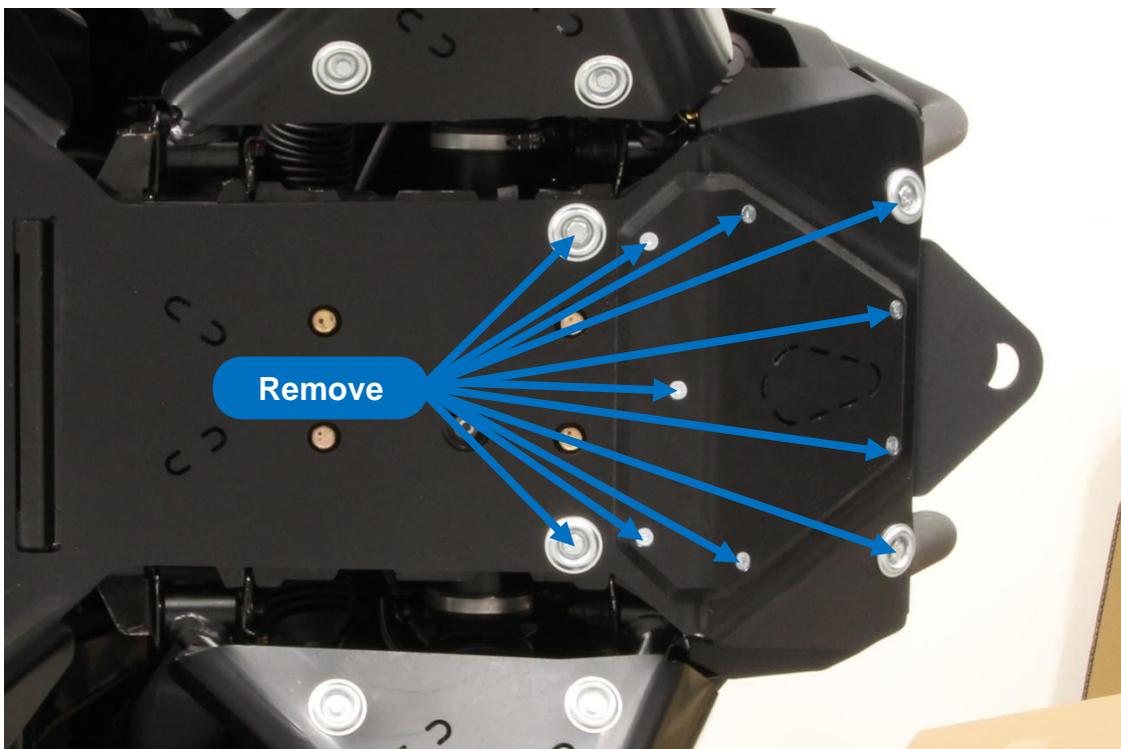


Step 2

Install adapter (Pos.1). For fastening use M8x45 bolts (Pos.3), M10x100 bolts (Pos.5), Ø8/20 washers (Pos.6), M10 washers (Pos.7), M8 nyloc nuts (Pos.8) and M10 nyloc nut (Pos.9).

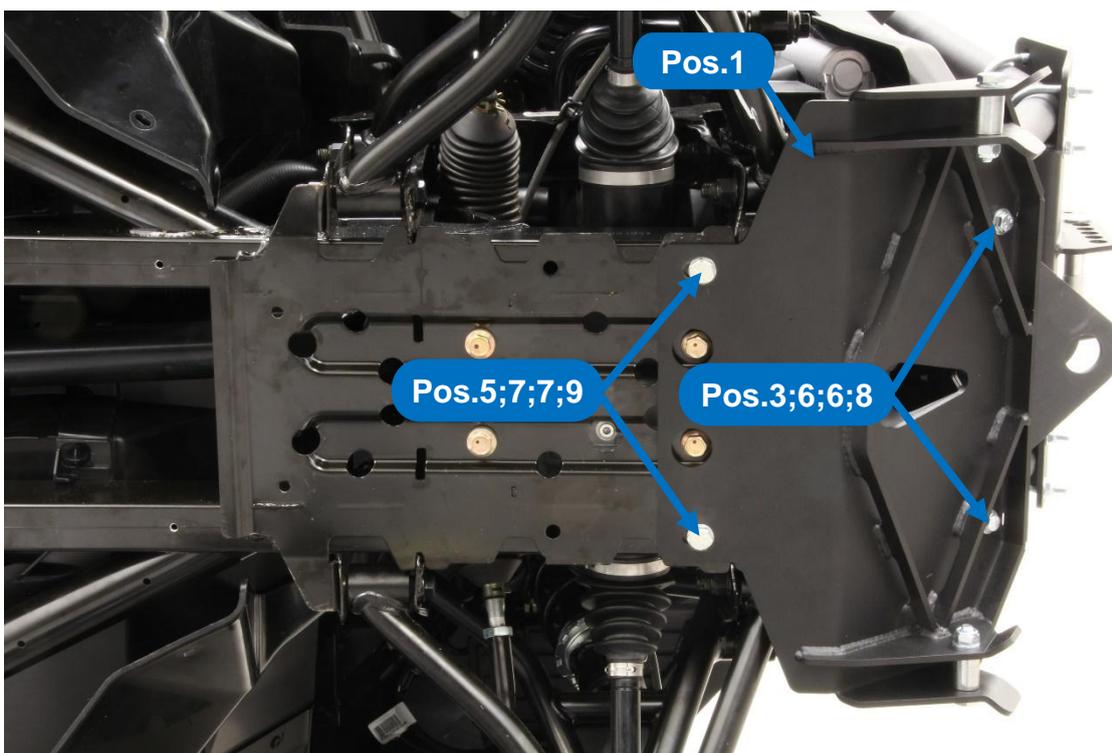

Step 3

Install bushes (Pos.2) on the adapter (Pos.1). For fastening use M10x55 bolts (Pos.5), M10 washers (Pos.7) and M10 nyloc nuts (Pos.9)

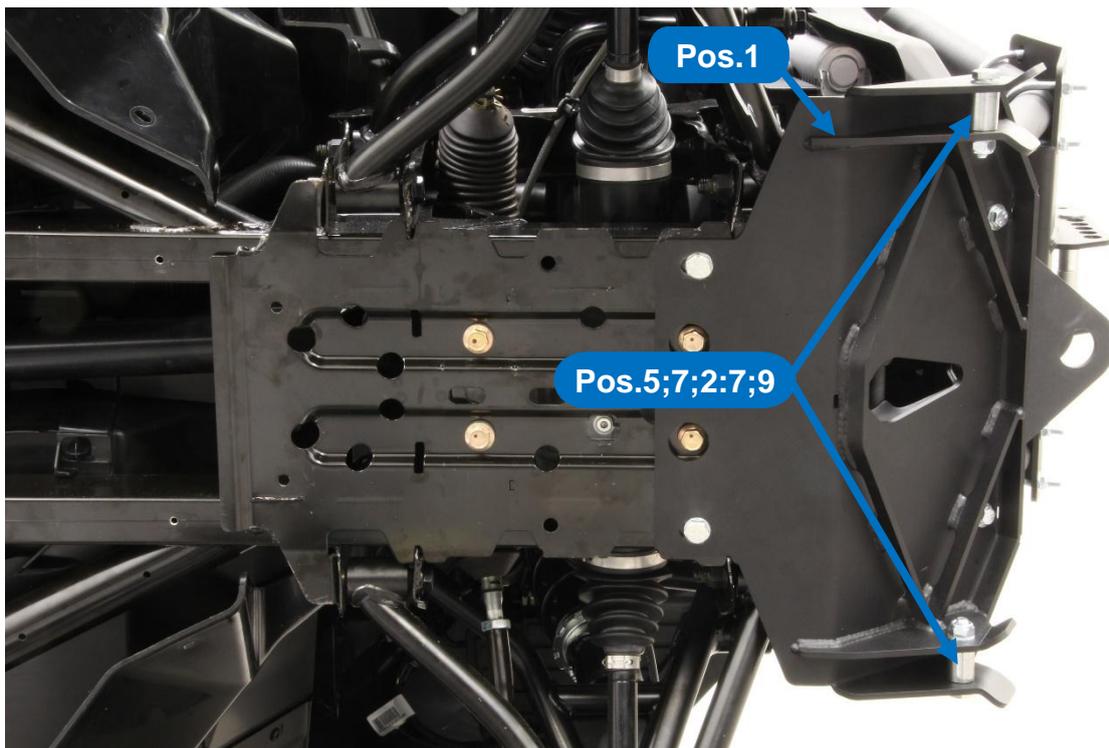

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

