

MID-MOUNT ADAPTER

CFMOTO

U10 PRO (2025+)

Code 03.16200

Version 12122024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com


MULTILINGUAL MANUAL



code.ironbaltic.com/u/1uVqlUQP

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.16201K	1
2	Installation bracket	03.16202	2
3	Bracket with bushes	03.16203K	1
4	Pin Ø10x40	14.003	2
5	Cotter pin 2mm DIN 11024	OT.07.01.010	2
6	Bolt M8x25 DIN933	OT.02.02.190	4
7	Bolt M8x80 DIN931	OT.02.01.017	2
8	Bolt M8x90 DIN931	OT.02.01.018	2
9	Washer Ø8/20 SFS3738	OT.04.03.030	6

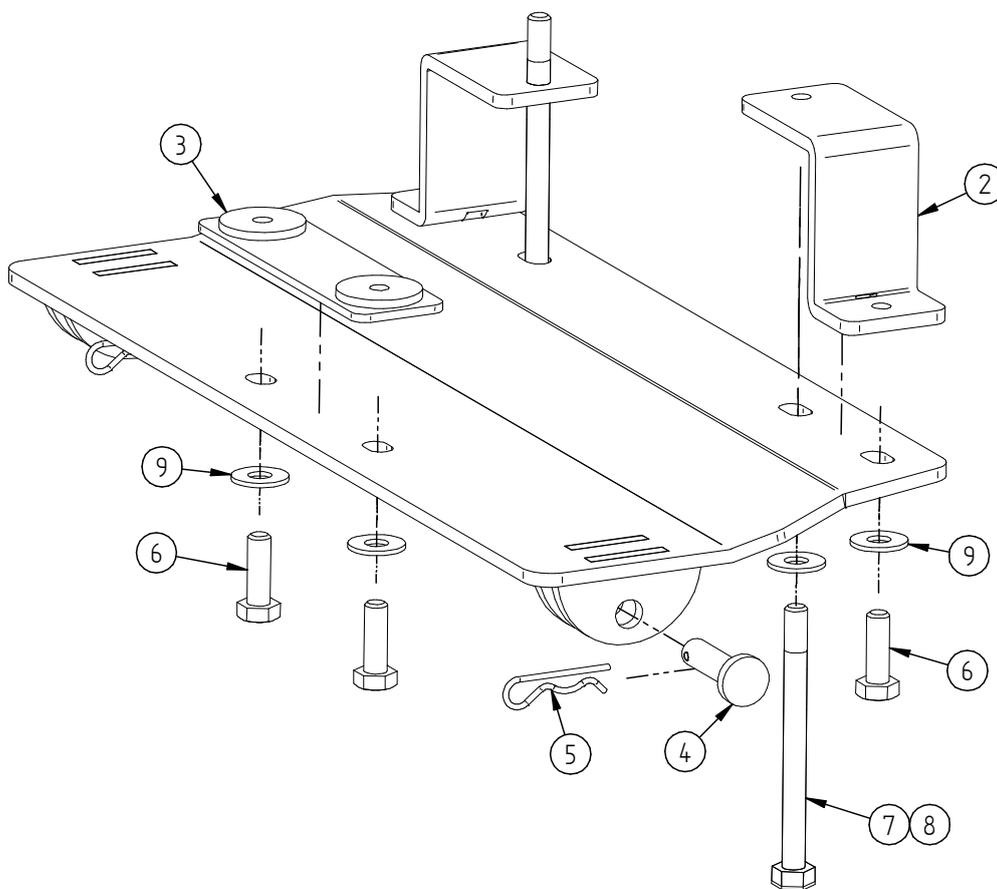

TOOLS REQUIRED FOR INSTALLATION:



- Socket wrench 13mm



NB!

Designing the adapter, original/factory tires were taken into consideration:
front: 29x9.00-14 and rear: 29x11.00-14

FITTING INSTRUCTIONS

Step 1


Remove original plastic or drill holes to places where adapter will mount.
If installing with Iron Baltic skid plate, then remove temporarily middle part of skid plate to place brackets in place.




Step 2

Install adapter (Pos.1).

For fastening use installation bracket (Pos.2), bracket with bushes (Pos.3), M8x25 bolts (Pos.6), M8x80 (Pos.7) or M8x90 (Pos.8) bolts, Ø8/20 washers (Pos.9). Make sure that brackets don't damage brake lines or coolant hoses!

NB! If installing adapter without or with aluminium skid plate, use M8x80 bolts! If using IronBaltic PLASTIC skid plate then use M8x90 bolts!

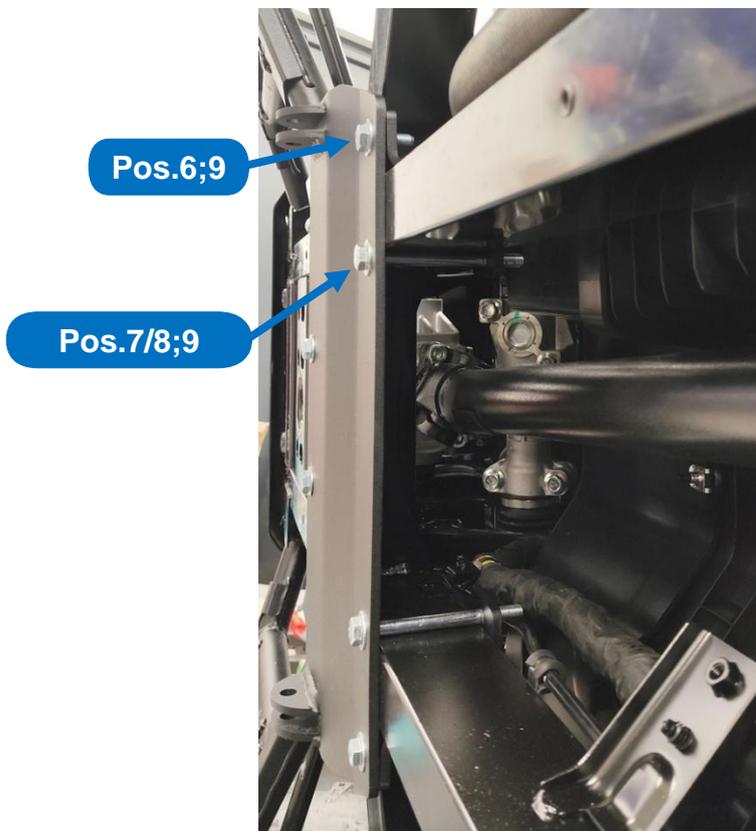

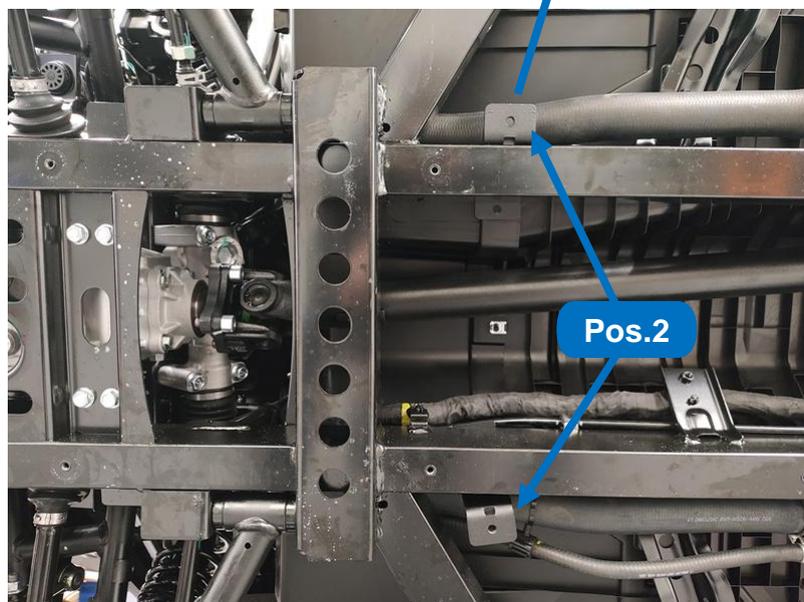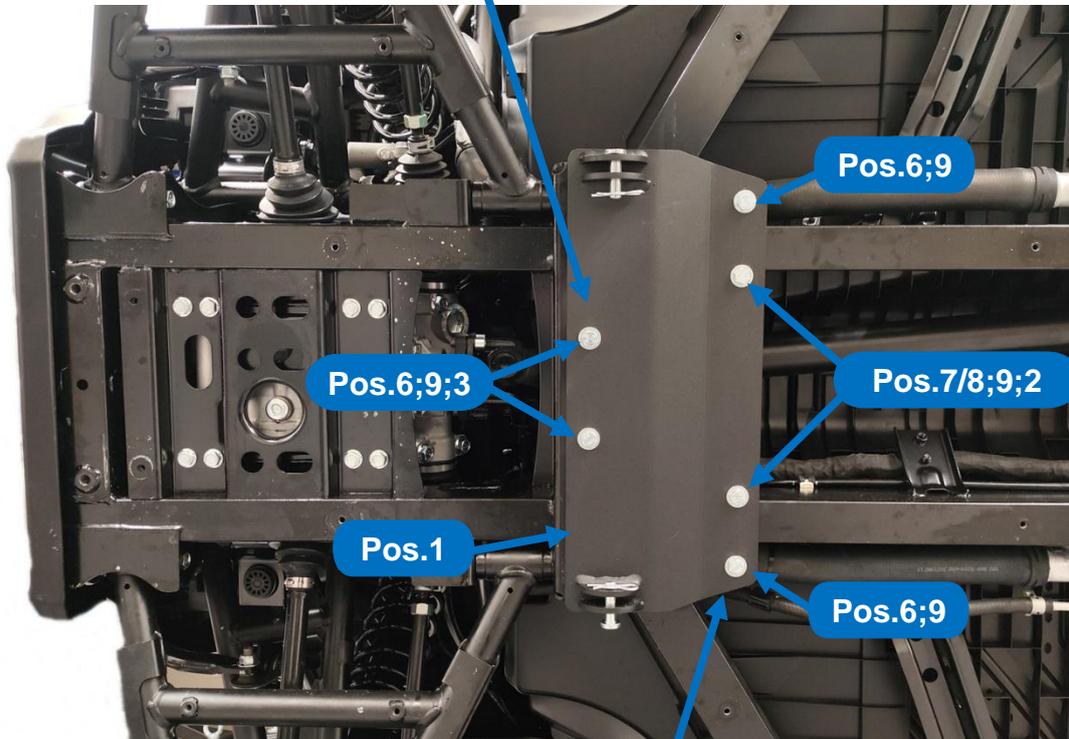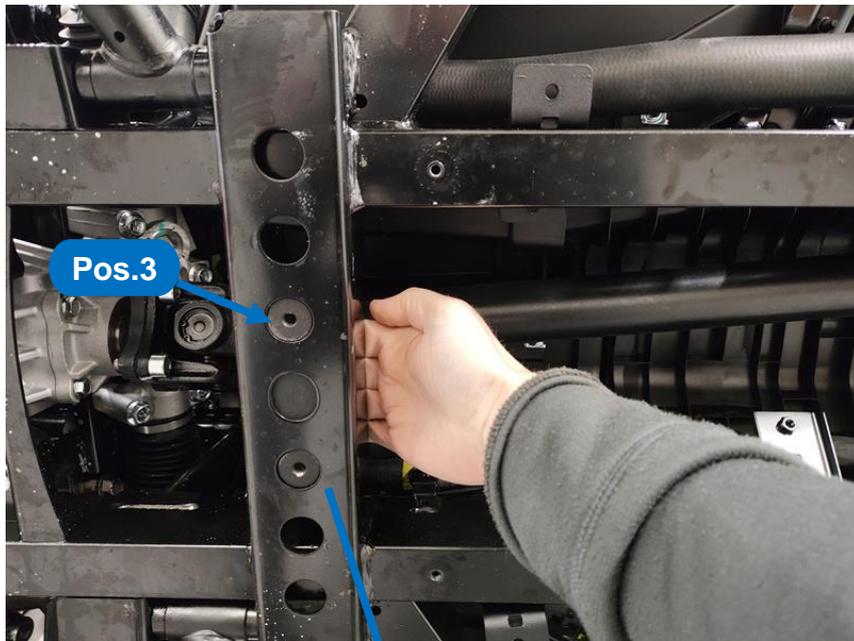

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld

